


▶ 1 Camera features
3 Attach strap
4 Load batteries
5 Load film pack
7 Remove empty film pack
8 Take photo
10 Take distance photo
11 Tips
Image too dark (p.11)
Image too light (p.11)
Image too dark due to back lighting (p.12)
13 Precautions
16 One-year Limited Warranty
Register your mio (p.16)

Camera features

| Next ▶ *1 of 2*

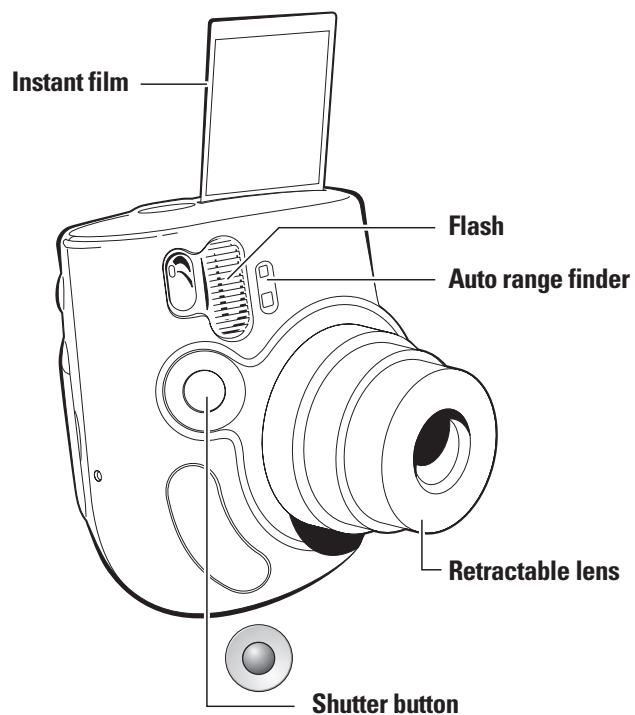

Camera features

◀ Back | Next ▶

2 of 2

1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)


Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

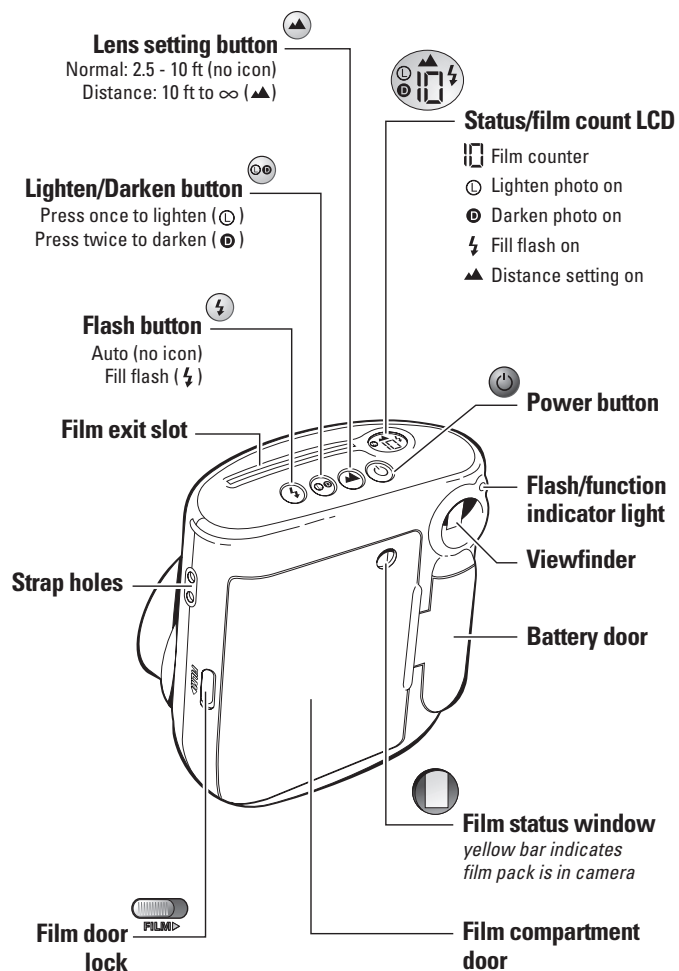

1 Camera features

3 **Attach strap**

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 **One-year Limited Warranty**

Register your mio (p.16)

Attach strap

◀ Back | Next ▶

1 of 1

1 Push small loop through strap holes.



2 Pull wide end of strap through small loop.



1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

Load batteries

◀ Back | Next ▶

1 of 1


This camera uses two 3V CR2 batteries.

CAUTION: *DO NOT mix old or new batteries. DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.*

1 Open the battery compartment door.



2 Insert batteries as shown.

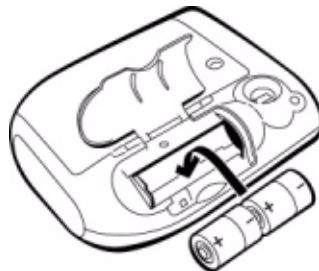

1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)


Image too dark due
to back lighting (p.12)


13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

Load film pack

1 Unlock  and open the film compartment door.

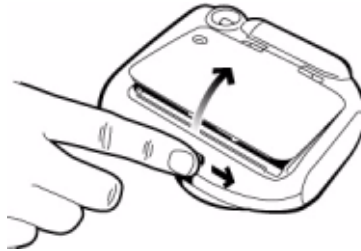

2 Insert the film pack.



Hold the film pack by the edges. Do not press on the center of the film pack. Insert the film pack so that the yellow mark on the film pack aligns with the corresponding mark inside the film compartment.

Close the film compartment door.

◀ Back | Next ▶

1 of 2



Use with
Polaroid mio
instant film

Load film pack

◀ Back | Next ▶

2 of 2

1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty


Register your mio (p.16)

3 Press the Power button .



The camera lens extends; the flash/function light blinks once. The status LCD shows a dash.



4 Press the Shutter button  to eject the film cover. When the film cover has been ejected, you are ready to take pictures.

CAUTION: DO NOT pull on the film cover.

The film counter on the status LCD shows 10.



1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions


16 One-year Limited Warranty

Register your mio (p.16)

Remove empty film pack

◀ Back | Next ▶

1 of 1

When the film counter shows  open film compartment door and remove the empty film pack.

CAUTION: *DO NOT* open film compartment door with film remaining in film pack.



1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

Take photo

◀ Back | Next ▶

1 of 2

1 Press the Power button .




The camera lens extends; the flash/function light blinks once.

The status LCD shows the number of photos remaining in the film pack.



2 Aim.

Stand between 2.5 feet and 10 feet from your subject. Frame your subject in the viewfinder.

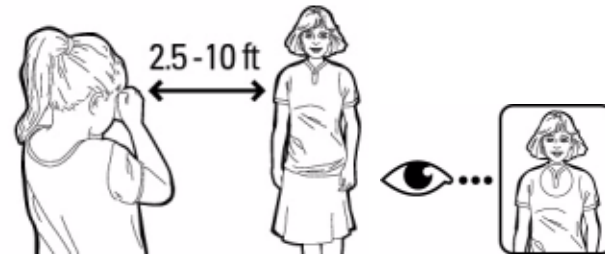

Take photo

◀ Back | Next ▶

1 of 2

1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

3 Press the Shutter button  to take the picture.

The photo ejects automatically.

CAUTION: *DO NOT pull on the photo.*

- For **vertical** pictures, hold camera as shown.



- For **horizontal** pictures, hold camera as shown with flash on top.



1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

► 10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions


16 One-year Limited Warranty

Register your mio (p.16)

Take distance photo

◀ Back | Next ▶

1 of 1

Press the distance button  to adjust lens for pictures beyond 10 ft.

The distance symbol appears in the status LCD.



1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

- Image too dark (p.11)

- Image too light (p.11)

Image too dark due
to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty


Register your mio (p.16)

Tips

◀ Back | Next ▶

1 of 2

If image is **too dark**, press the Lighten/Darken button once. The Lighten symbol (Ⓐ) appears in the status LCD.

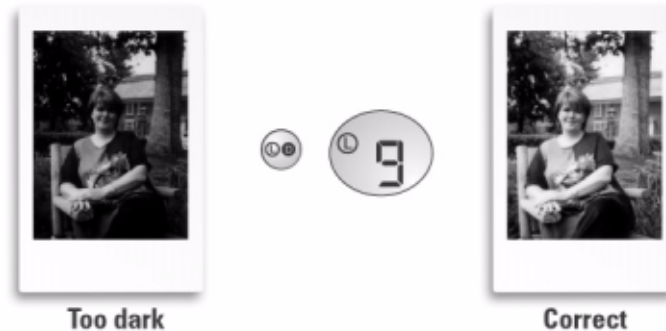

If image is **too light**, press the Lighten/Darken button twice. The Darken symbol (Ⓑ) appears in the status LCD.




Tips

◀ Back | Next ▶

2 of 2

If image is too dark due to back lighting, press the Fill Flash button. The Fill Flash symbol (⚡) appears in the status LCD.

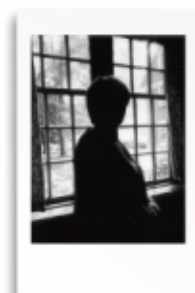

Light behind
subject



Correct

1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

- Image too dark due to back lighting (p.12)

13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

1	Camera features
3	Attach strap
4	Load batteries
5	Load film pack
7	Remove empty film pack
8	Take photo
10	Take distance photo
11	Tips
	Image too dark (p.11)
	Image too light (p.11)
	Image too dark due to back lighting (p.12)
13	Precautions
16	One-year Limited Warranty
	Register your mio (p.16)

Precautions

◀ Back | Next ▶

1 of 3

- **DO NOT** pull film from camera.



- **DO NOT** lay camera down on extended lens. Camera will turn off and lens will retract after 5 minutes.



Precautions

◀ Back | Next ▶

2 of 3

- **DO NOT cut film.**



- **DO NOT bend or fold developing film.**



1 Camera features

3 Attach strap

4 Load batteries

5 Load film pack

7 Remove empty film pack

8 Take photo

10 Take distance photo

11 Tips

Image too dark (p.11)

Image too light (p.11)

Image too dark due
to back lighting (p.12)

▶ 13 Precautions

16 One-year Limited Warranty

Register your mio (p.16)

1	Camera features
3	Attach strap
4	Load batteries
5	Load film pack
7	Remove empty film pack
8	Take photo
10	Take distance photo
11	Tips
	Image too dark (p.11)
	Image too light (p.11)
	Image too dark due to back lighting (p.12)
13	Precautions
16	One-year Limited Warranty
	Register your mio (p.16)

Precautions

◀ Back | Next ▶

3 of 3

Caution: This camera is battery operated. To avoid electrical shock, do not expose to or immerse in water or other fluids, disassemble, or operate if dropped or damaged. Contact a Polaroid Service Center for repair information.

Film Caution: This process uses a caustic paste. Avoid contacting skin, eyes or mouth with the paste and keep it away from children and animals. **If you get some paste on your skin, wipe it off immediately and wash with water to avoid an alkali burn. If eye or mouth contact occurs, quickly wash the area with plenty of water and see a doctor.** Do not cut or take apart photos. Keep discarded materials away from children, animals, clothing, and furniture.

1	Camera features
3	Attach strap
4	Load batteries
5	Load film pack
7	Remove empty film pack
8	Take photo
10	Take distance photo
11	Tips
	Image too dark (p.11)
	Image too light (p.11)
	Image too dark due to back lighting (p.12)
13	Precautions
16	One-year Limited Warranty
	● Register your mio (p.16)

One-year Limited Warranty ◀ Back |

1 of 1

Polaroid will, at our option, repair or replace any camera found defective in manufacture within the warranty period. The warranty period is determined by the date of camera purchase. Keep the receipt as proof of purchase. Otherwise, the warranty period is determined by the date of manufacture. To take advantage of the warranty, the camera must be returned to, and repaired by, one of the Polaroid Service Centers. **This warranty does not apply to damage caused by accident, misuse or tampering, and excludes all consequential damages except in jurisdictions not allowing such exclusions or limitations.**

For customer service or to register your mio visit us online at www.polaroid.com/mio or call 1-800-343-5000 from anywhere in the U.S.A.

Film and accessories also available.

