 


1

 
Opening and Closing the Camera

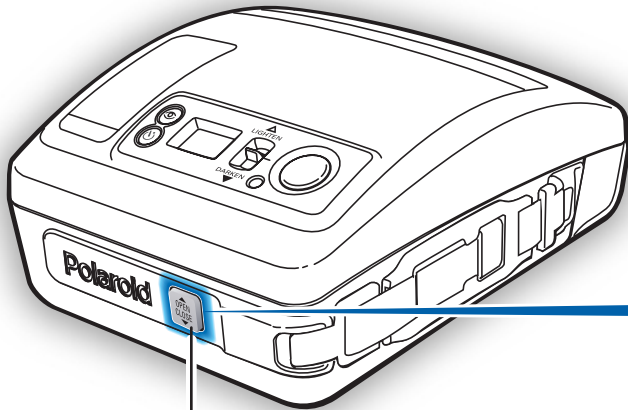


OPEN/CLOSE button



DO NOT force the camera open or closed. Damage to the camera may occur.

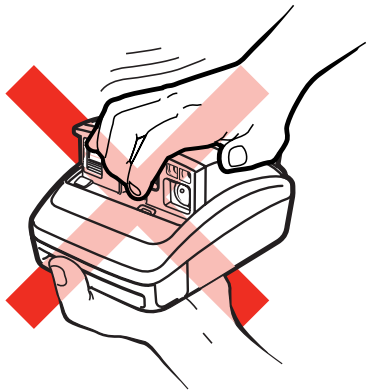


To open the camera

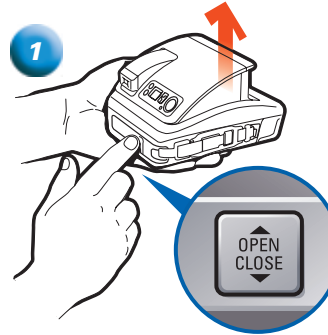 


Hold camera as shown. Press the OPEN/CLOSE button. The camera opens automatically.

 To close the camera

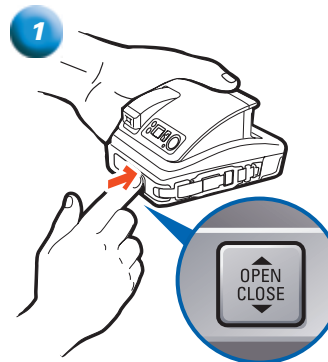


 Hold camera as shown. Press and hold the OPEN/CLOSE button

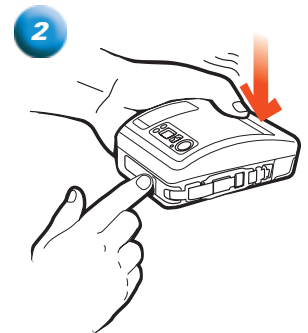


Press down on the camera as shown to close camera.

 2 Loading and Unloading the Film

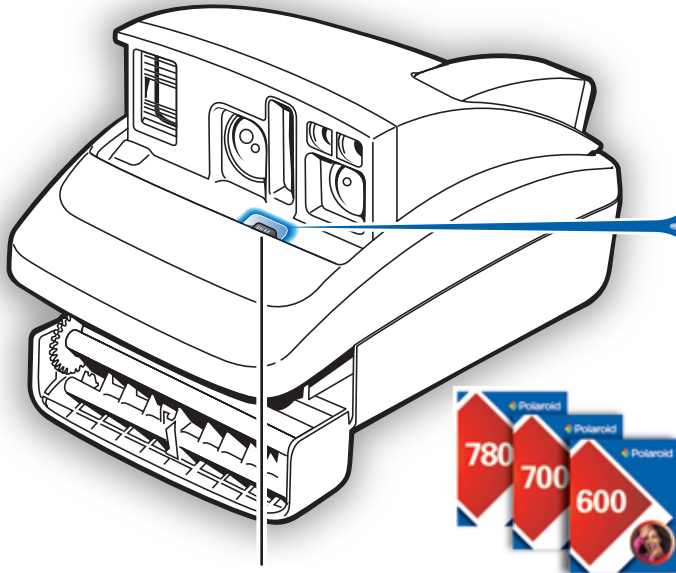

Film door release button

 Use Polaroid film

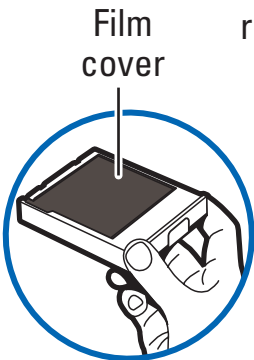

! DO NOT touch the film cover. Hold film by the edges as shown.



Tab

! DO NOT remove the tab. Use this tab to remove empty film pack.

***** The film pack contains a battery that powers the camera.

To load film

- 1 Press the film door release button to open the film door.
- 2 Hold film by the edges and insert the film pack as shown.
- 3 Close the film door. Film cover ejects automatically.

The film counter shows 10.

 
To unload empty film pack

The film counter shows 0 when the film pack is empty.

- 1 Press the film door release button to open the film door.
- 2 Pull the tab to remove the empty film pack.

3

Taking Pictures

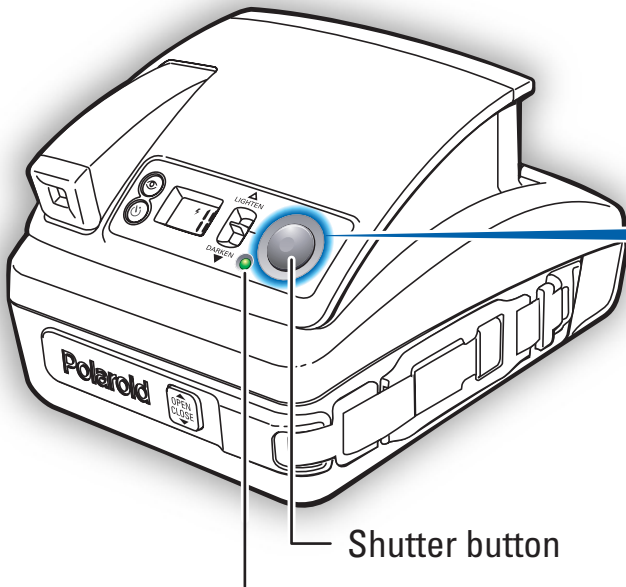


Shutter button

Flash Ready light

A steady green light indicates that the flash is ready. If green light is off and camera shuts off, lightly touch the shutter button or close and reopen camera to turn on flash.




 DO NOT pull picture from the camera.

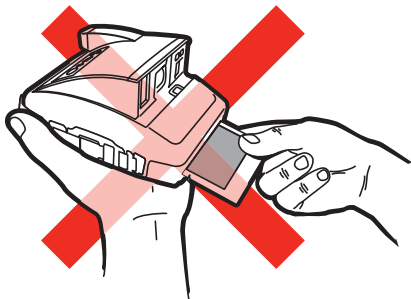

*** Refer to *Guide to Better Pictures* on page 5 for more information.**

 To take pictures

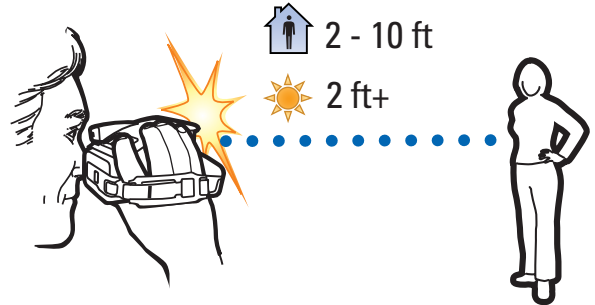

Frame your subject in the viewfinder. Press the shutter button. The picture automatically ejects from the front of the camera.

 


For indoor pictures, stand between 2 feet (about arms length) to 10 feet from the subject. The flash range is 10 feet.



For outdoor pictures, stand at least 2 feet (about arms length) from your subject. There is no distance limit for outdoor pictures.





To take close-up pictures

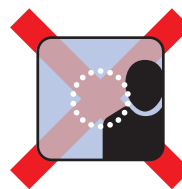


Center the subject in the viewfinder. If subject is not centered the camera's range finder can not focus and the picture will be blurry.

4

    Other Features

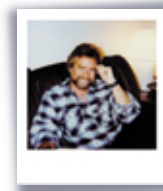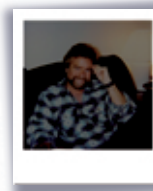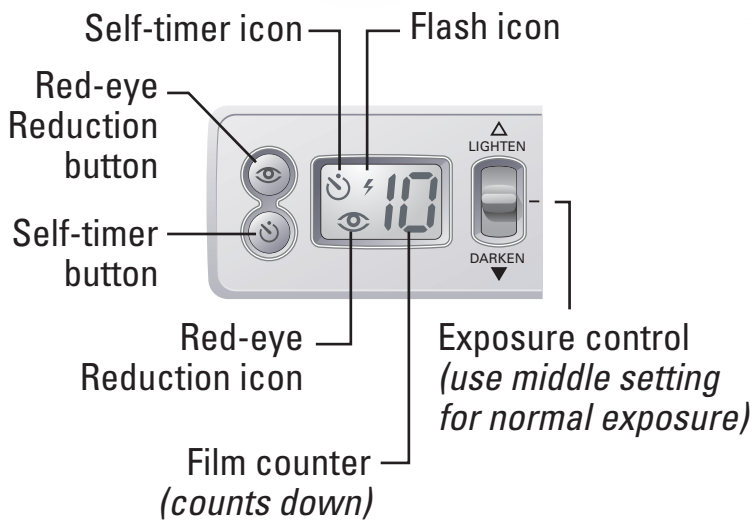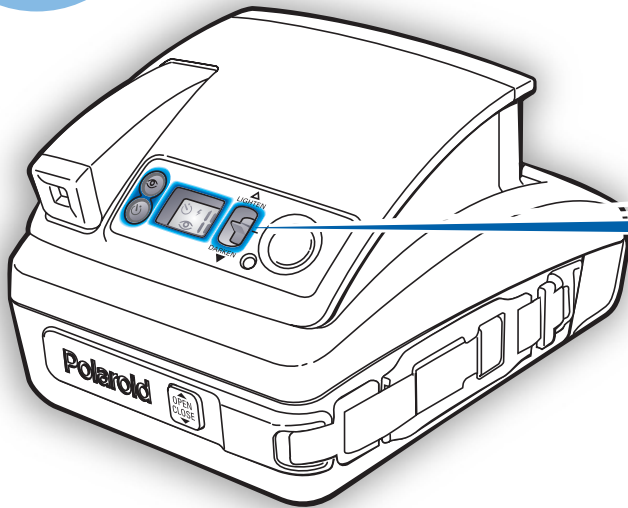

 To lighten a dark picture, slide the exposure control to the LIGHTEN position.

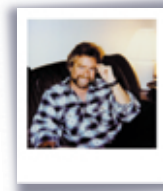

To darken a light picture, slide the exposure control to the DARKEN position.

 
⚡ Flash (⚡) always fires for best pictures. Steady green light indicates flash is ready. If green light goes off and camera shuts off, lightly touch shutter button (ⓘ) or close and reopen camera to turn flash on.

👁️ Minimize the “red-eye” effect in your photos. Press (👁️) button briefly until red-eye reduction (👁️) icon appears. Hold camera steady, flash is delayed for one second. Use indoors in very low light.

⌚ Self-timer. Place camera on flat surface. Press (⌚) button briefly to select self-timer (⌚). With self-timer selected, press shutter button (ⓘ). The self-timer (⌚) and red light (next to the lens) will blink. The camera waits for 12 seconds and then takes picture. To cancel self-timer, press (⌚) button again.

Guide to Better Pictures

Indoor Pictures (beyond flash range)

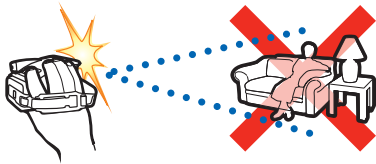

10 ft+

Do not stand further than 10 feet (beyond flash range) from your subject.

 
Indoor Pictures (within flash range)



2 - 10 ft


Stand at least 2 feet (about arms length) from your subject and no further than 10 feet (beyond flash range) from your subject.

Outdoor Pictures (sun behind subject)

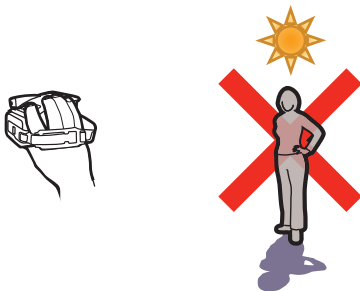


Do not take picture with the sun directly behind your subject.

 Outdoor Pictures (sun away from subject)

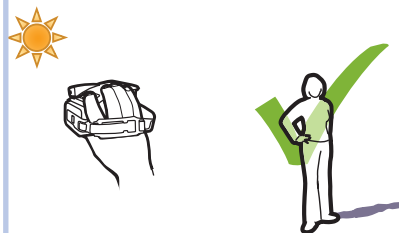


Take picture with the sun away from your subject.

 Developing Pictures

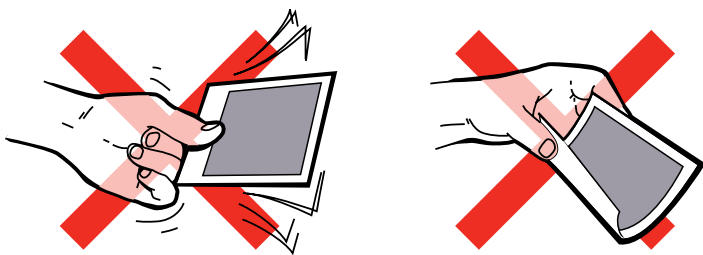

Do not shake or bend developing pictures.

 
Cold Temperatures

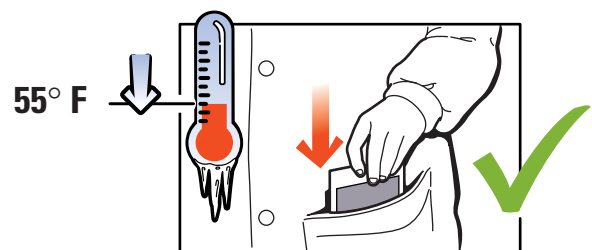

If temperature is below 55° F place developing picture in warm location such as your pocket.


Camera Maintenance

 Spots and Banding on Picture

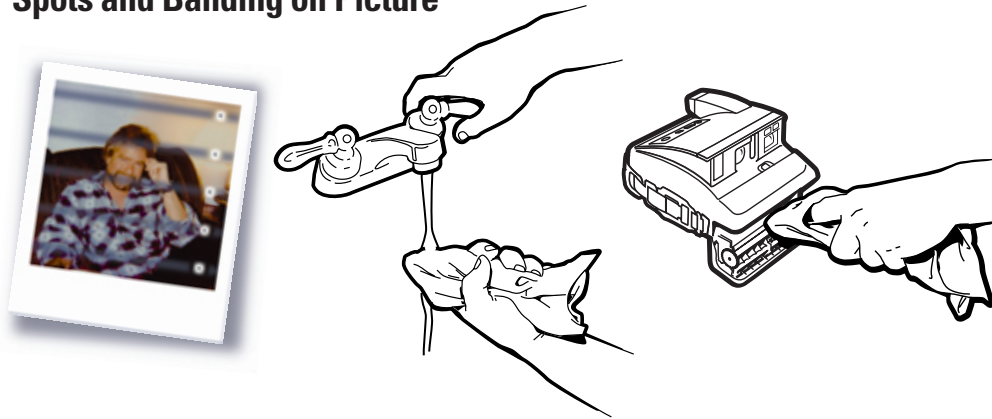

If spots or banding appear on photos, camera may have dirty developer rollers. To clean developer rollers dampen clean cloth with tap water. Open film door and thoroughly clean rollers. if film is in camera, clean rollers in dimly lit area.

 Cleaning Lens

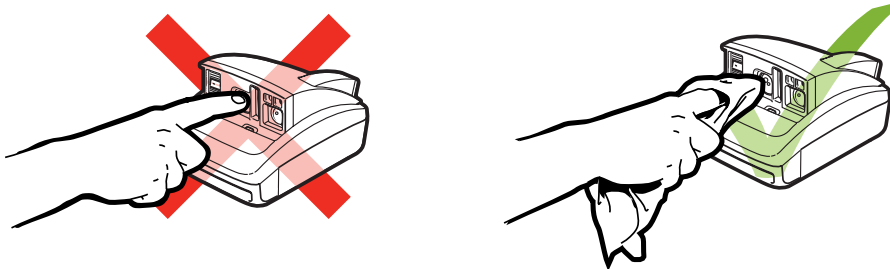

Do not touch lens. Clean camera lens with a soft, lint-free cloth.

Lifetime Limited Warranty (original purchaser only).

Polaroid will, at our option, repair or replace any camera found defective in manufacture within the warranty period, provided that the camera is returned to a Polaroid dealer or office. The warranty period is determined by the date of camera purchase. To verify the warranty period, keep the receipt as proof of purchase. Otherwise, the warranty period is determined by the date of manufacture. This warranty does not apply to damage caused by accident, misuse or tampering with the camera, and a charge will be made for such repairs. **This warranty excludes all consequential damages, except in jurisdictions not allowing such exclusions or limitations. Warranty may vary according to applicable local law.**

Caution

This camera is battery operated. Closely supervise children when camera is operated by them or used in their presence. **To avoid electrical shock, camera should not be exposed to or immersed in water or other fluids, disassembled or operated if dropped or damaged. Contact a Polaroid Service Center for repair information.**