


# WARNING!

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 
 
The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN


**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

## Remote Control

1. Open / Close
2. Play / Pause
3. Stop
4. Forward Skip
5. Backward skip
6. Forward Scan
7. Backward Scan
8. Program
9. Random
10. Repeat
11. Volume Up
12. Volume Down
13. Disc 1
14. Disc 2
15. Disc 3

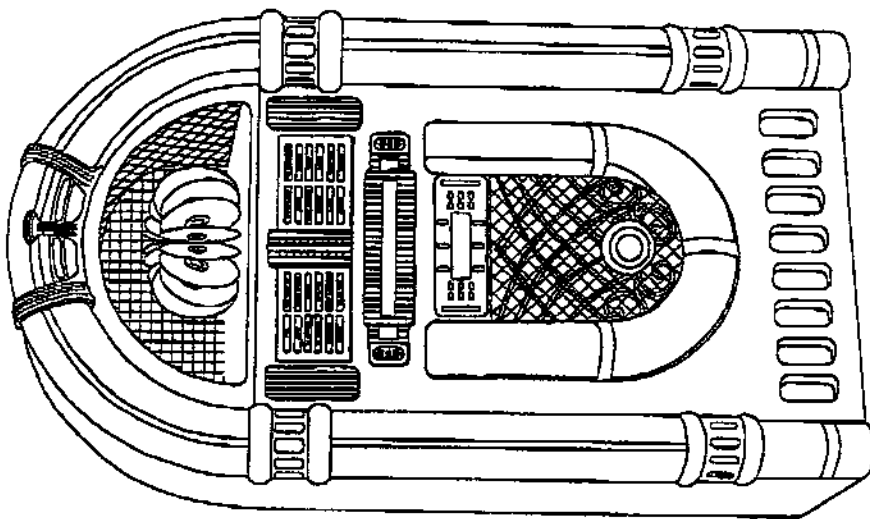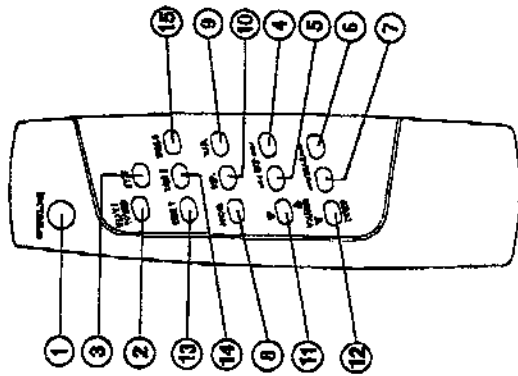

# ART NO. 543.403 INSTRUCTION MANUAL

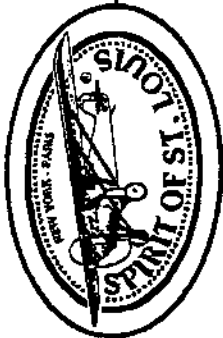 

619 2

CONFIRM NETWORK

WARNING!

### Location of the Function Button

1. CD Function Knob
2. Am / Fm / Fm ST
3. Volume Down / Up
4. Tone Low / Hi
5. Power On / Off
6. Light On / Off
7. Stop
8. Tuning
9. Open / Close
10. Play / Pause
11. Forward Skip
12. Backward Skip
13. Forward Scan
14. Backward Scan
15. Program
16. Repeat
17. Disc Skip
18. Random
19. Intro
20. Power Connection Plug
21. Stage Rotation
22. Ext Antenna

### Power Source

Unwind the AC power cord at the back of the unit and connect it the plug (20) to the power outlet.

### Radio Operation

Turn the unit on by switching the Power ON / OFF (5) to ON position. Switch the function knob to RADIO / CD (1). Select the desired sound level by turning the VOLUME CONTROL (3). It is commended to use the remote control to adjust the digital volume level.

Select the Wave band by switch AM / FM / FM ST. (2). Turn the TUNING (8) to select desired broadcast station.

 
To turn the radio off by switching the RADIO / CD (1). To turn the unit off by switching the ON / OFF (5) to OFF position.

The neon light must be off for AM reception. Press the STAGE ROTATION (21) to set the disc tray on the stage 1 motion.

### CD Operation

After the power is switched on, select the TUNER / CD (1) for CD operation. The LCD display will show the function indicators (in common with remote function) according to the command: disc number, track number, minute an second, intro, random, memory, repeat, calendar, forward and backward skip forward and backward scan, play / pause and stop.

Press the OPEN / CLOSE (9), to release the drawer, then insert CD onto the tray and press CLOSE (9) again. In the tray open condition, the function o

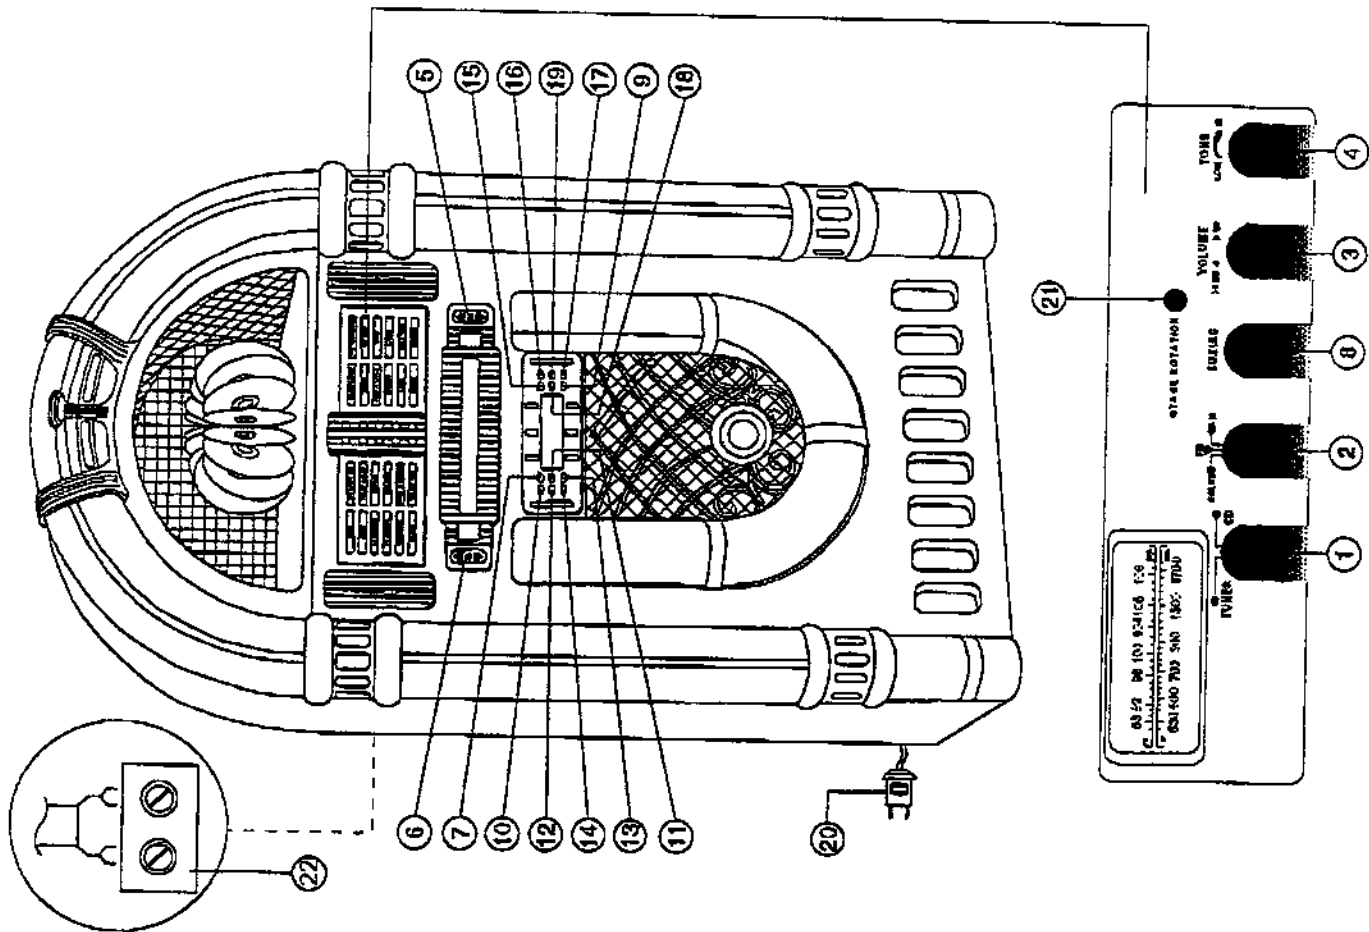

R 719

# IMPORTANT SAFEGUARDS

PLEASE READ CAREFULLY ALL THE FOLLOWING IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR EQUIPMENT.

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.



12. Power Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. Protective Attachment Plug - The appliance is equipped with a attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

14. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.

15. Power Lines - An outdoor antenna should be located away from power lines.

16. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

17. Object and Liquid Entry - Care should be taken so that objects, not fall and liquids are not spilled into the enclosure through openings.

18. Damage Requiring Service - The appliance should be serviced by a qualified service personnel when:

- A. The power-supply cord of the plug has been damaged;
  - B. Objects have fallen, or liquid has been spilled into the appliance or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibit a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
19. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

+852 2694 9391

Press **PLAY / PAUSE** ( 10 ) to start the continuous play of disc 1, 2 and 3 according to the way the discs are set in the tray. Play Indicator **▷** current playing disc **DISC** and track a **number** will shown on display. Also, the elapsed time of the track is shown in the time display section.

Press the **FORWARD SKIP** ( 12 ) to go forward to the next track on the same disc.

Press the **BACKWARD SKIP** ( 11 ) to go backward to the previous track on the same disc.

Press the **DISC SKIP** ( 17 ) to select among the 3 disc in the tray. The selected disc number will shown on display under **DISC**.

For forward and backward scan, are only effective during play / pause mode. Press the **FORWARD SCAN** ( 14 ) to search forward. During the search, the calender indicates flashing track number. **12345** .....  
Press the **BACKWARD SCAN** ( 13 ) to search backward.  
To stop the scanning, release the **FORWARD SCAN** ( 14 ) or **BACKWARD SCAN** ( 13 ).

To set program, press the **PROGRAM** ( 15 ) in the normal stop condition.

Make disc selection by pressing the **DISC SKIP** ( 17 ).

Make track selection by press the **FORWARD/BACKWARD SKIP** ( 12 ) ( 11 ).

Press program ( 15 ) after each track selection to install.

**MEMORY** will shown on display.

The calender will show the record of selected tracks.

This program can registered up to 32 tracks. The display will show **FULL** once the memory is full.

To cancel the selection, press **STOP** ( 7 ) to delete the mode and **MEMORY** display.

Press **PLAY / PAUSE** ( 10 ) to start the program.

Use forward scan or backward scan to search track. The current playing disc and track number will show on the calender.

To stop the program play, press **STOP** ( 7 ) and the current mode will retain.

Addition and correction of the program can be made by pressing the

**PROGRAM** ( 15 ) in a stop condition. Select program number, change or input selection, then press **PROGRAM** ( 15 ).

To erase program, press program ( 8 ) then stop.

To set random mode, press **RANDOM** ( 18 ) in a stop condition. **RANDOM** will shown on display accordingly. Then press **PLAY / PAUSE** ( 10 ) to start the play. The sequence of the track playing will rearrange among discs in the tray.

When press the **RANDOM** ( 18 ) again will switch off the function and return to original mode.

Press **REPEAT** ( 16 ) in either play or stop mode to set the function. **ONE DISC** and **ALL DISC** will shown on display for selection. To repeat track, select **ONE**.

To repeat disc, select **DISC**.

To repeat all disc, select **ALL DISC**.

When press stop during play, the repeat mode will delete.

The function of intro is to play the first 10 second of each track. Press **INTRO** ( 19 ) to set the mode and **PLAY / PAUSE** ( 10 ) to start.

**INTRO** will shown on display.

For program intro, which is perform the intro play according to the program selection.

Start the program play and press **INTRO** ( 19 ).

To stop the CD operation, Press **STOP** ( 7 ).

## ANTENNA

For FM reception, 30Ω ANT is provided. External the wire until the reception is clear.

**DO NOT: Move the unit around when the unit is operating**

: Press **Open / Close** when the unit is operating

: Leave any disc in the disc drawer tray when relocating the unit

: Leave the power on for longer than 18 hours

## Specification

Frequency Range : Fm 87.5 - 108 MHz

Am 525 - 1710 KHZ

Power Consumption: 95 W

Power Source : AC 120 V / 60 HZ

Antenna : External antenna for Fm

built in ferrite bar for Am

: 6½" dynamic type x 2

2" dynamic type x 2

Weight : 44.5 kg

\* DESIGN AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

Imported by: POLYCONCEPT USA, INC.

63 Jefferson Street,

Stamford, CT 06902

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.