

# Operating Instructions

## PlayCaller-PCx1000

### General

The PlayCaller-PCx1000 is a full duplex wireless intercom that allows users to communicate simultaneously. A properly charged battery will insure optimum performance. See Charging instructions.

### System Operation

All PlayCaller transceivers utilize a solid state membrane switch assembly. To operate the system adjust the switches as follows:

#### **1. Power up the radios**

The red button labeled Power/Batt is the "on/off" switch.

Power/Batt LED colors indicate:

Green: Power on

Red Flashing: Battery low

#### **2. Adjust Volume**

Headset volume is controlled by the center buttons on the transceiver.

LED's indicate volume level.

#### **3. Select Channel**

Select either channel 1 or 2.

Red LED indicates operating channel.

#### **4. Microphone on/off button**

Amber LED indicates headset microphone is live.

### Headset Adjustment

To guard against outside noise from entering the System, Porta Phone headsets are fitted with special noise canceling microphones. For optimum performance the microphone should be positioned 1/2 inch from the user's mouth.

### Battery Charging

The headset jack located on the side of the PCx-1000 transceiver is also the battery charge jack.

Plug the wall charger (supplied) into the headset jack.

Charge the battery for 4 hours.

Battery charge status is indicated by Power/Batt LED

Amber - Charging

Green - Fully Charged

*Note:* To prevent damage to the battery or charger the battery charger will turn off automatically when the battery is fully charged.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.