


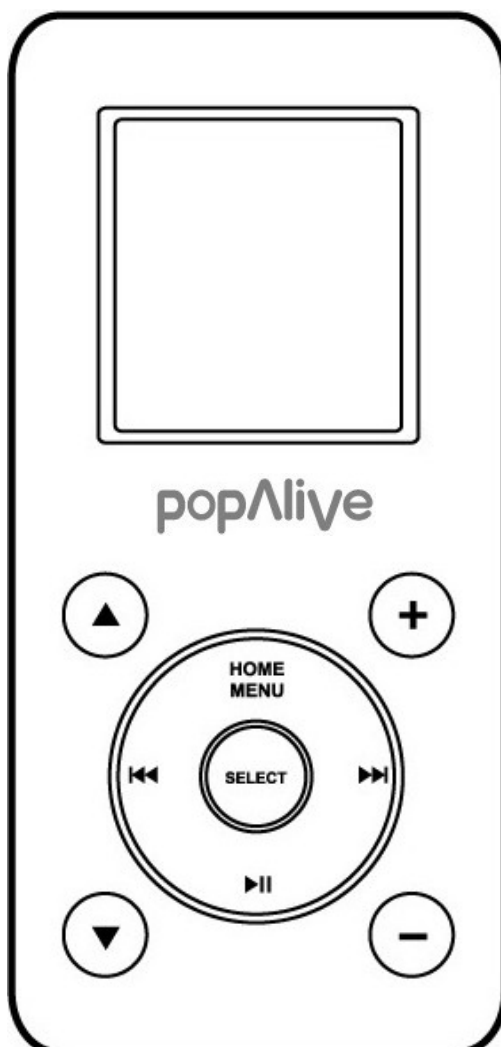

REMOTE & DOCK

Quick Start Guide & Limited Warranty Statement




* Apple iPod sold separately

Alive
STYLE POWERED



Using the controls (Popalive Remote)

Front view

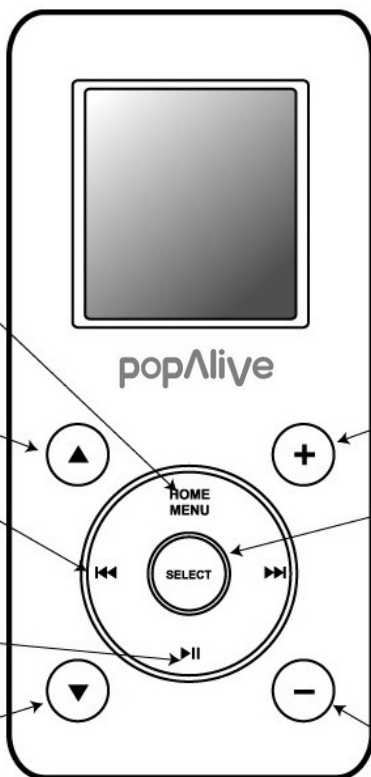

Home/Menu button

Up button

Previous/Rewind button

Play/Pause button

Down button

popAlive

HOME MENU

SELECT

 
Volume Up button

Select button


Reset

Volume Down button

Docking connector port



Rear view

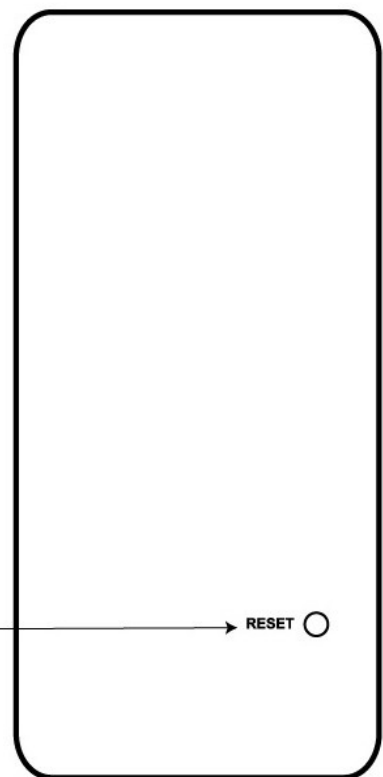


Bottom view

* Images are not to scale




Using the controls (Popalive Dock)

Rear view

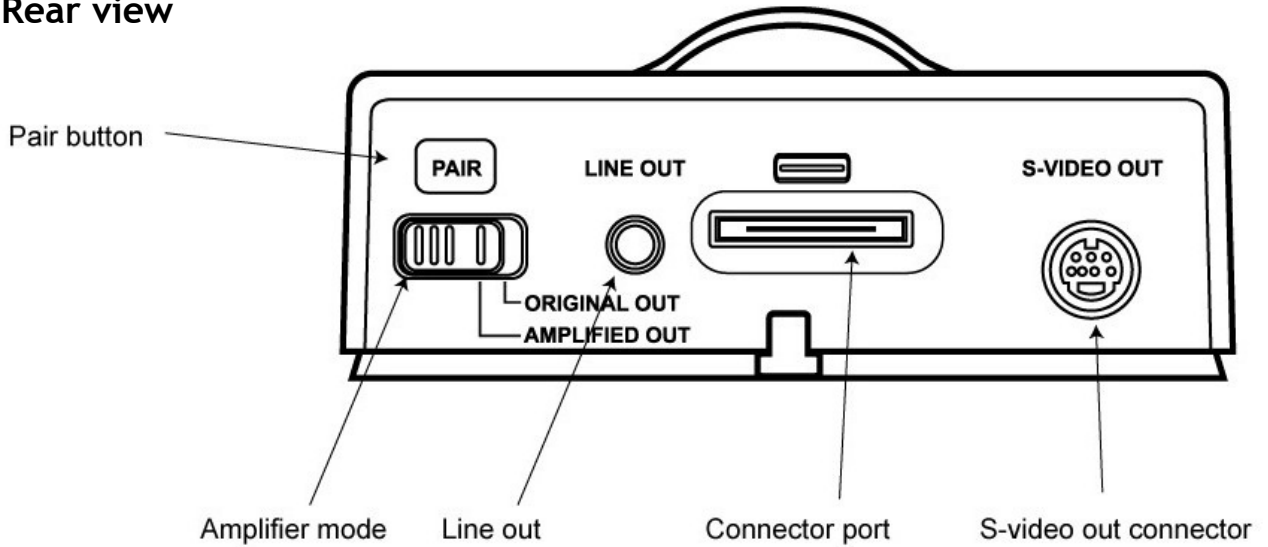

Top view

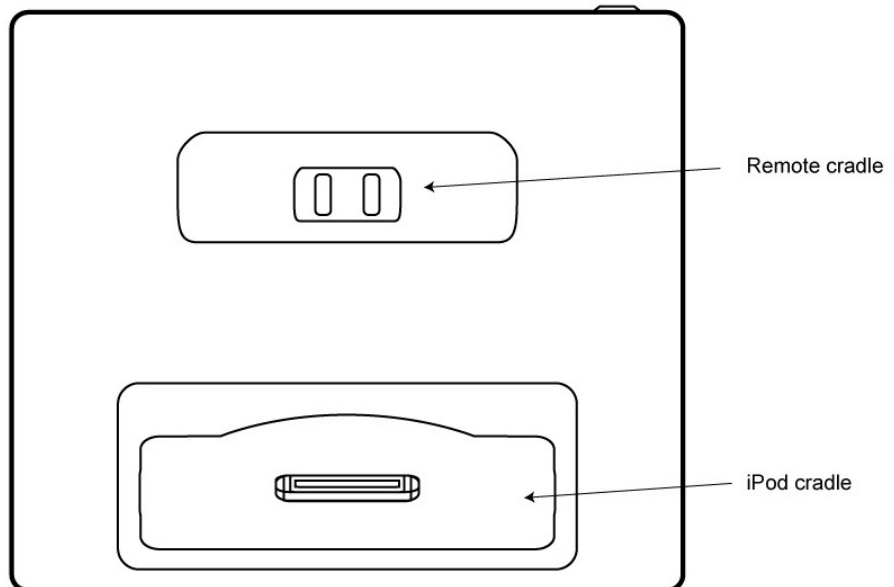


* Images are not to scale




Using the controls (Popalive Dock)

Bottom view

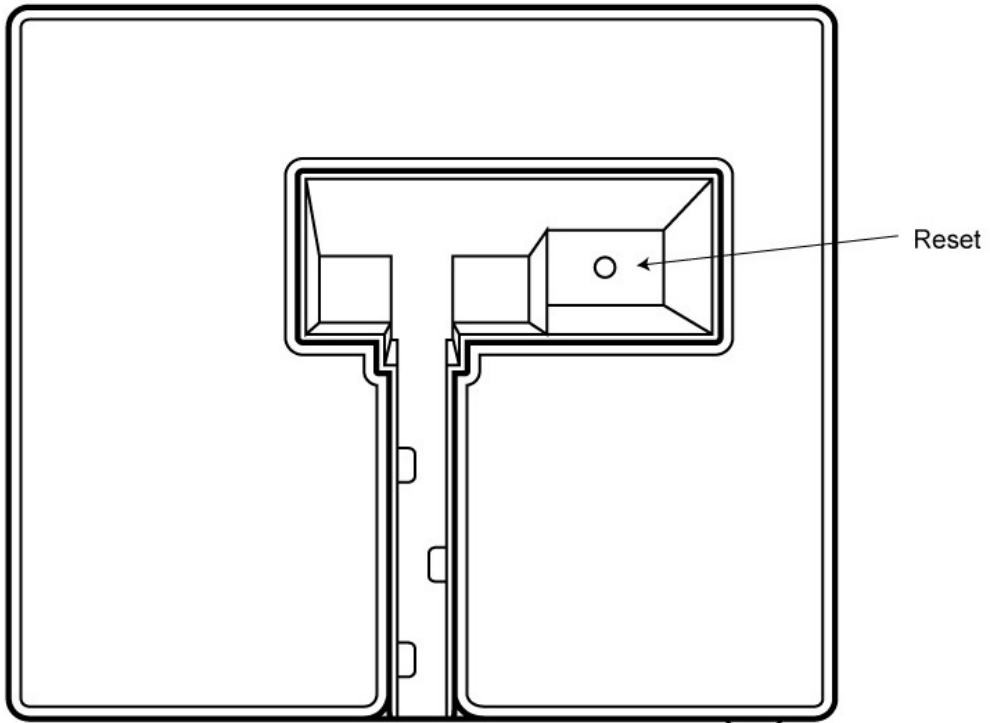

* Images are not to scale

Connectivity

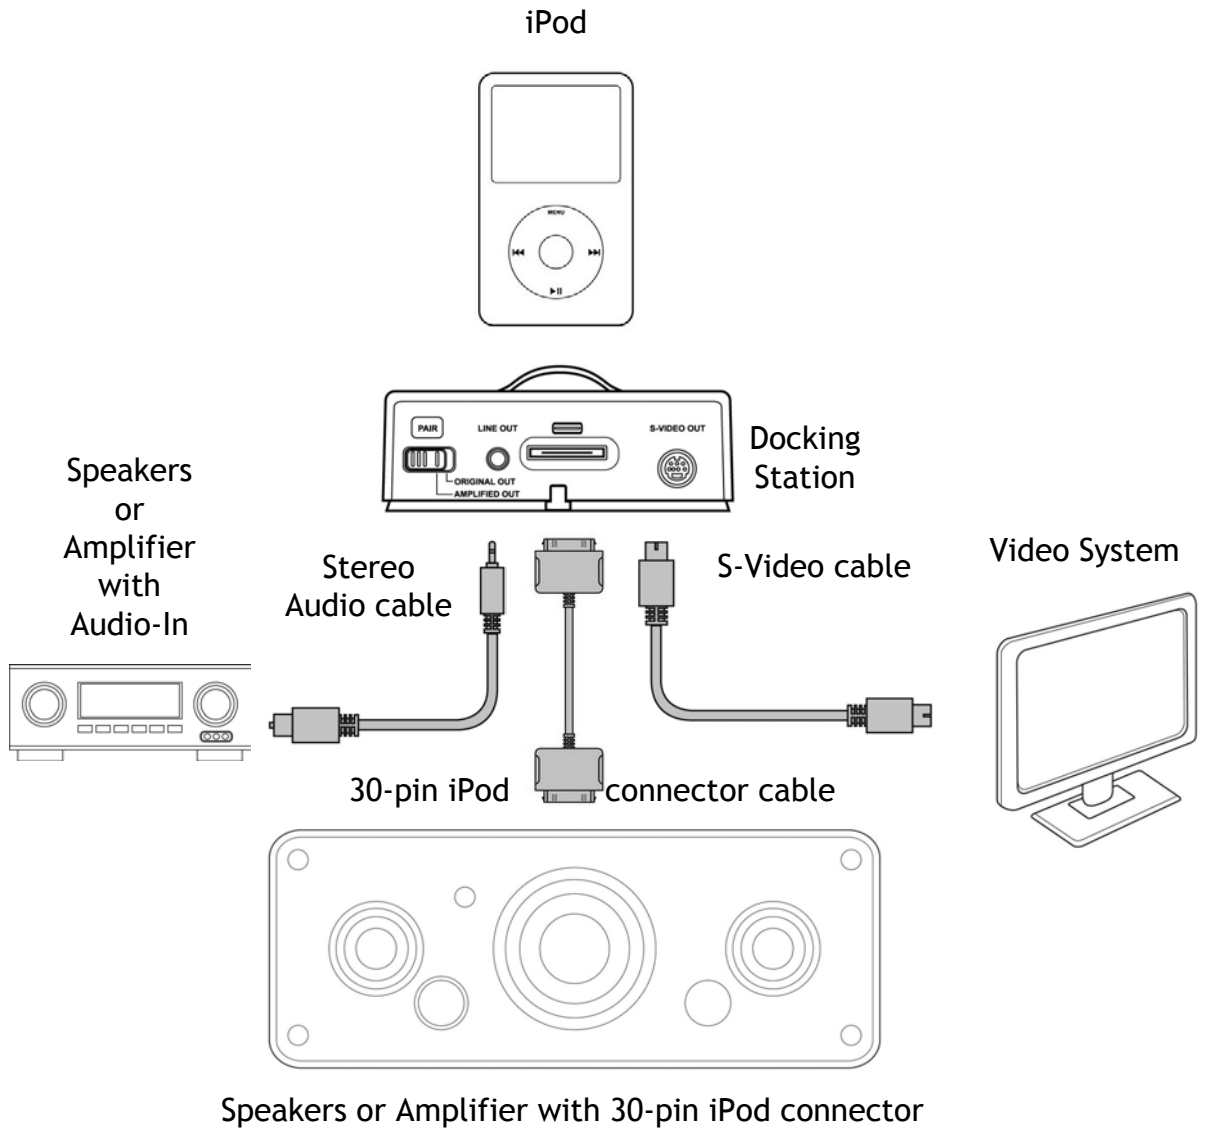


* Apple iPod, speakers, amplifier, video system, S- video cable & audio cables are sold separately.

* Images are not to scale


Packing List

- Popalive Remote
- Popalive Dock
- 30-pin iPod connector cable
- Quick Start Guide & Limited Warranty Statement
- 6 dock adapters for different iPods


Identification Number on Adapter	5	6	7	8	9	10
iPod Model Supported	iPod (Click Wheel) 40GB	iPod with color display 20 & 30GB	iPod with color display 40 & 60GB	iPod nano 1, 2 & 4GB	Fifth Gen. iPod 30GB	Fifth Gen. iPod 60& 80Gb

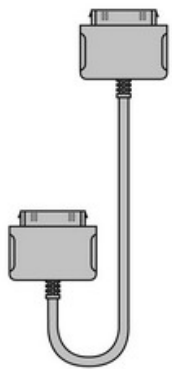

Cable

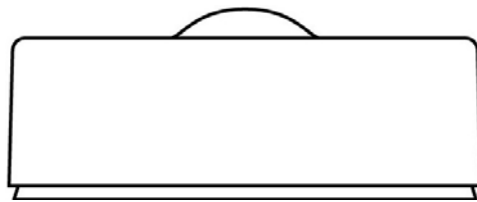


Popalive Dock

 

X 6

Dock adaptor

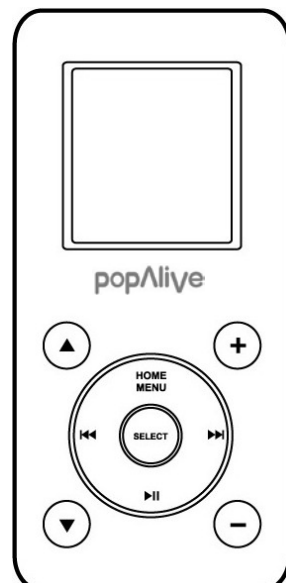

Popalive Remote

* Images are not to scale

* Apple iPod is sold separately

Getting Started

1. Battery charging for Popalive Remote

- i. Connect the Popalive Dock to an electrical outlet using an iPod Power Adaptor or a stereo or speakers with 30-pin iPod connector and place your iPod in the Popalive Dock to charge the battery;
- ii. Place the Popalive Remote in the Popalive Dock. The recommended first charging time for Popalive Remote is 12 hours.

Note - The low battery indicator on the Popalive Remote display will appear when the battery level is very low.

2. Pairing (IMPORTANT)


- i. Press Select button and choose “Preference” then “Pairing”;
- ii. Press “PAIR” button on the Popalive Dock;
- iii. If the pairing process is successful, “The pairing’s succeeded” will be displayed. “The pairing’s failed” will be displayed in case of failure. Please retry the process.

Getting Started

3. Insert the suitable dock adapter and connect your iPod to the Popalive Dock.
4. Playing music with a stereo or speakers if it has 30-pin iPod connector

You can connect the Popalive Dock to a stereo or speakers with 30-pin iPod connector using the cable that came with your Popalive Dock to play music from your iPod and charge the battery.

- i. Connect the female side of the cable jets to the 30-pin iPod connector;
- ii. Lay the cable in the ditch to fix its position;
- iii. Connect the other jet to the Popalive Dock;
- iv. Control playback from a distance using the Popalive Remote.

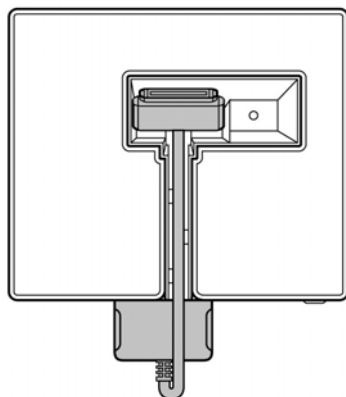

Getting Started

5. Playing music with a stereo or speakers if it has audio line in only
 - i. Connect the Popalive Dock to an electrical outlet using an iPod Power Adaptor or an USB cable with 30-pin iPod connector;
 - ii. Connect the Popalive Dock to a stereo or speakers using an iPod AV Cable or a stereo audio cable to play music from your iPod;
 - iii. Control playback from a distance using the Popalive Remote.

6. Select Amplifier Mode (Important)
 - i. Amplified out: the amplifier of Popalive Dock will increase the amplitude of your iPod music. Volume up and down can be controlled by Popalive Remote;
 - ii. Original out: the amplifier of Popalive Dock WILL NOT increase the amplitude of your iPod music. It will use the audio setting of your amplifier, stereo or speakers. Volume up and down CANNOT be controlled by Popalive Remote.

Getting Started

7. To play music by the Popalive remote
Usually refer to the operation of your iPod 5G device unless;
 - a. It does not support Podcasts and Audio books in Music category;
 - b. It does not support Navigation to Photos, Videos, Extras, Settings, Shuffle Songs.
 - i. In song playback screen, no playback progress, ratings, photos and lyrics information will be shown.

8. Playing video/photo on a TV or other video device
 - i. Connect Popalive Dock to a TV or other video device using a S-video Cable & a stereo audio cable (for video only) to play video/photo from your iPod;
 - ii. Press Select button and choose “Other”;
 - iii. Control playback according to the menu on iPod display using the Popalive Remote or iPod click wheel;
 - iv. To get back to Music Navigation, long press Home/Menu button.

Getting Started

9. Releasing the iPod from connection (Important)
 - i. Press Select button and choose “Eject” before remove your iPod from Popalive Dock;
 - ii. Press Menu & Center button both at the same time to reset your iPod when it hangs after use.

10. Please redo the pairing process for any hardware change.

General Operation

Operation

Method

- Change user interface language
 - Press “Select” button. Select “Preference” and “Language”
- Change backlight timeout
 - Press “Select” button. Select “Preference” and “Backlight timeout”
- Change “Sleep Mode”
 - Press “Select” button. Select “Preference” and “Sleep Mode”
- Volume Up while playing music
 - Press “Volume Up” button
- Volume Down while playing music
 - Press “Volume Down” button
- Choose a menu item
 - Press “Up” and “Down” button to scroll to the item and then press the “Select” button

General Operation

Operation

Method

- Go back to the previous menu
 - o Press “Menu” button
- Go back to the main menu
 - o Hold “Menu” button
- Play a song
 - o Select the song & press the “Select” or “Play” button
- Play all the songs in a list
 - o Select the list title (an album title or the title of a play list) and press Play/Pause
- Skip to the next song
 - o Press “Forward” button
- Start a song over
 - o Press “Rewind” button

* Apple iPod, speakers, amplifier, video system, S- video cable & audio cables are sold separately.

Alive
STYLE POWERED

General Operation

Operation

Method

- | | | |
|---|---|--|
| • Sync iPod and charge the battery | o | Connect the Popalive Dock to your computer with the cable that came with your iPod, then place your iPod in it |
| • Play video/photo by the Popalive Remote | o | Choose “Preference”, then select “Others” |
| • Reset Popalive Remote | o | Press the reset hole with a pin |
| • If Popalive Remote and iPod batteries are being charged and nothing happens | o | Connect Popalive Dock to a high-power USB on your computer or <u>an iPod power adaptor</u> (recommended) |

* If the battery level of iPod and Popalive Remote are in very low or empty, please DON'T do iPod playback while charging.

LIMITED WARRANTY:

Alive-Style warrants to the original end user ("Consumer") that the new POPALIVE Remote will be free from defects in workmanship and materials, under normal use, for twelve (12) months from the original date of purchase, except the Battery and other accessories warranted under normal use for six (6) months, and the product is not assignable or transferable to any subsequent purchaser / end user. The limited warranty extends to only to Consumers who purchase POPALIVE Remote from authorized channels. During the limited warranty period, Alive-Style would repair or replace, at Alive-Style's discretion, any defective Product or parts with new or factory rebuilt replacement parts, and return the Product to the Consumer in working condition. No charge will be made to the consumer for either parts or labor in repairing or replacing the product within the limited warranty period under normal usage conditions. All replaced parts or equipment shall become the sole property of Alive-Style

The external housing and cosmetic parts shall be free of defects at the time of shipment and therefore shall not be covered under these limited warranty terms. Repaired products would be warranted for the balance of the original warranty. Upon request from Alive-Style or its authorized service center, the consumer must provide original purchase receipt or any other relevant information as proof of the date and place of purchase. All transportation, delivery and handling charges incurred in the transport of the product to Alive-Style and its authorized service center shall be borne by the consumer. All transportation, delivery and handling charges incurred in the transport of the product to the Consumer shall be borne by Alive-Style.

Exclusions:

The consumer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:

- (a) Product is subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, exposure to excessive temperatures or other such harsh environmental conditions, unauthorized modifications, unauthorized connections, unauthorized repair including but not limited to use of authorized spare parts in repairs, misuse, neglect, abuse, accident, alteration, improper installation, spills of foods, or liquids, maladjustments of customer controls, acts of God, or other acts which are beyond reasonable control of Alive-Style, including deficiencies of consumable parts such as fuses and breakage or damages, unless caused directly by defects in materials or workmanship, and normal wear and tear of the product.
- (b) Unstable Radio Performance caused by interference from other radio devices.
- (c) The product seal and Serial number has been tampered with, removed, defaced or altered, in any manner.

The Consumer will be billed for any parts or labor charges not covered by this limited warranty. The Consumer shall be responsible for expenses related to reinstallation of the product. If the product is returned to Alive-Style after the expiration of the warranty period, Alive-Style shall rightfully apply all services policies, to the Consumer accordingly.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE OR USE SHALL BE LIMITED TO THE DURATION OF THE FOREGOING WRITTEN WARRANTY, OTHERWISE, THE FOREGOING WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALIVE-STYLE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR A LOSS OF ANTICIPATED BENEFITS OR PROFITS, LOSS OR IMPAIRMENT OF PRIVACY OF CONVERSATIONS, WORK STOPPAGE OR LOSS OR IMPAIRMENT OF DATA ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT.

The benefits conferred by this limited warranty are in addition to all other rights and remedies under any applicable mandatory legislation as may be in force from country to country.

All warranty information, product features and specifications are subject to change without any prior notification.

Please send the following information to warranty@alive-style.com to start the warranty service of your device:

Your Name	Date of Purchase
Reseller Name	Model No.
Serial Number	

Please send an e-mail to service@alive-style.com for any technical issue.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2006 Alive Style

All right Reserved.

Images are not to scale.

Product may vary from that shown.

Specifications and features subject to change without notice.

iPod & other audio/video systems & accessories sold separately.

Other company and product names mentioned herein may be trademarks of their respective companies.