

Outdoor Motion-Sensing User's Manual

Introduction

Using Your Outdoor Motion-Sensing is a convenient way to detect some body is walking across. The Outdoor Motion-Sensing Light adapter will turns lights on when motion is detected, and the transmitter will active and send on signal only 1.5 sec. The light will stay on for 1 or 10 minutes after all motion has stopped and the transmitter will active and send off signal only 1.5 sec.

Motion Sensor Installation

Screw the Socket Adapter into the empty light socket and then screw light bulb into Socket Adapter.

Battery Installation

1. Remove battery cover from the bottom of the sensor housing by pushing open the sliding battery door.
2. Install one 9-Vlot alkaline battery into the battery compartment. Be sure the battery(+)and(-)terminals match (+)and(-) contacts on battery cap.
3. Replace battery cover.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.