



VIZIO

QUICK START GUIDE

All-in-One PC





Table of Contents

Package Contents	1
Getting Started	2
Getting to Know Your PC	
Front	6
Back	7
Back Ports	8
Side Ports	9
Wireless Keyboard	10
Wireless Touchpad	12
Display Remote	16
Subwoofer	17
Connecting an HDMI Device	18
Connecting a USB Device	20
Connecting a Bluetooth® Device	22
Troubleshooting	24
Notes	26
Limited Warranty	28
Regulatory Information	30
Greener Methods	31
Legal Notices	32




Package Contents



VIZIO All-In-One PC



Wireless Keyboard with Batteries

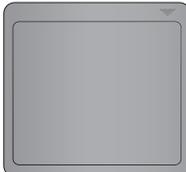

Wireless Touchpad with Batteries



Power Cable



Extension Cable for Subwoofer



This Quick Start Guide



Display Remote



Subwoofer


Getting Started

1




Insert the included AAA batteries into the Wireless Keyboard and Wireless Touchpad. Match the + and - symbols in the battery compartment.

2

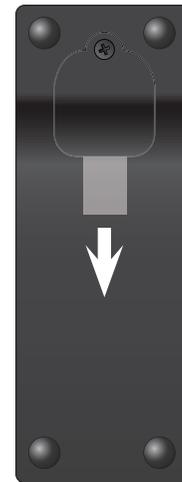

Remove the plastic tab from the back of the Display Remote. Location of plastic tab may differ from the illustration.

3

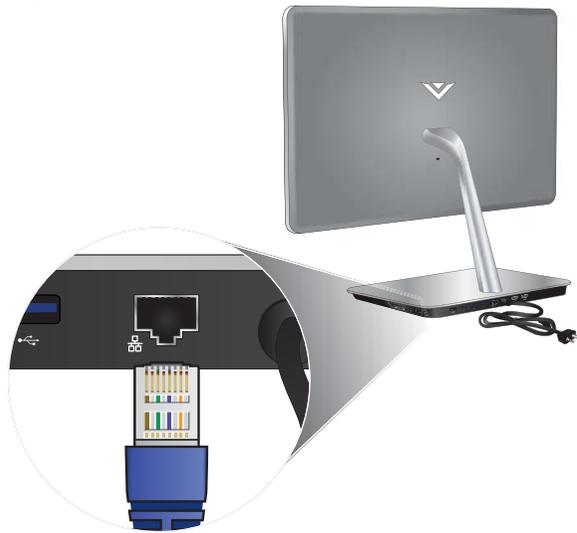

Connect an Ethernet cable* from your router or modem to the Ethernet port on the back of the PC. If you plan to connect to the internet wirelessly, you can skip this step.

*Sold separately

4



Connect the PC to the Subwoofer. You can use the included Extension Cable if you prefer to place the Subwoofer on the floor.

Getting Started

5



Connect the Power Cable to the Subwoofer, then plug into a grounded electrical outlet or power strip.


6



Gently press the Power button on the side of the PC.

Wait while the PC powers on for the first time.

7

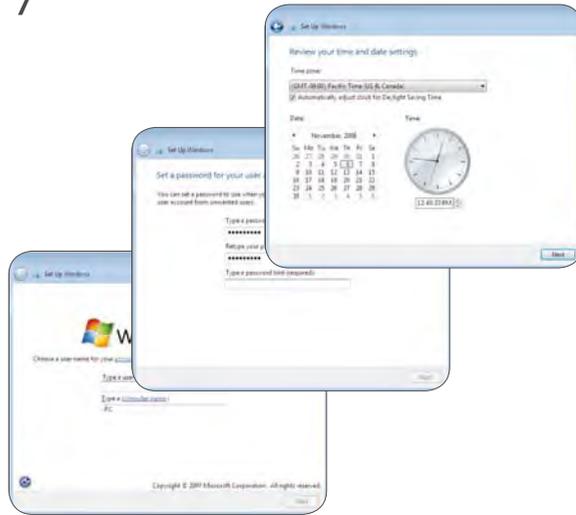

Follow the on-screen instructions to setup Windows.

If you are unable to type or use the Touchpad, see Troubleshooting on page 24.

8



Your PC is ready to use.

Save the product packaging. It can be used to ship the PC if servicing is needed.

Getting to Know Your PC



Front



To secure the PC to your desk, attach a standard Kensington® lock* here.


Subwoofer Cable

*Kensington® lock sold separately.

Back



Getting to Know Your PC

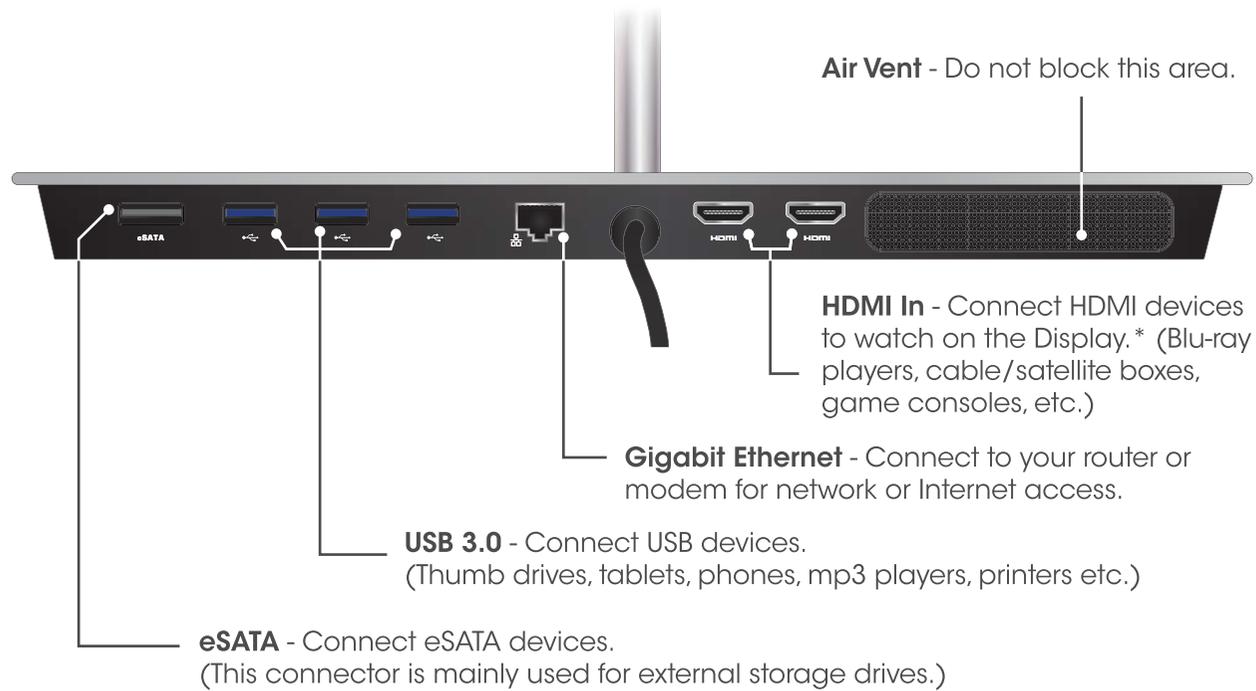

Back Ports

*The HDMI In port is not used for HDMI output. Does not support dual displays.

Air Vent - Do not block this area.



SD Card Reader - Insert standard-size SD cards.
(Commonly used in cameras and tablets.)

Headphone - Connect 3.5mm headphone jack.
This port can be used with headsets that have a microphone.


USB 3.0 - Connect USB devices.
(Thumb drives, tablets, phones, mp3 players, printers, etc.)

Power - Press to turn PC on or off.
When button is lit, PC is on.

Side Ports

Getting to Know Your PC

Insert new AAA batteries as needed.

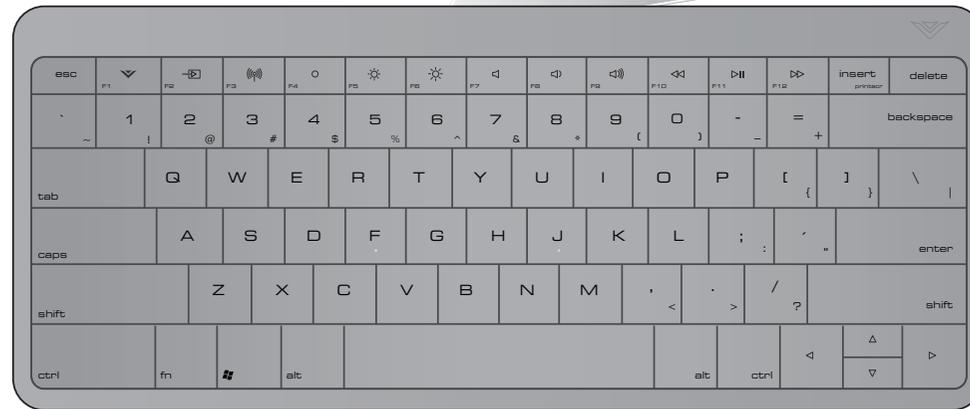

Wireless Keyboard



V Key - Launch VIZIO experience page. (Internet access required)



Mute - Turn speakers off or on.



Input - Cycle between PC, HDMI 1, and HDMI 2 inputs. The PC must be on to use this function key.



Volume Down - Decrease loudness of speakers.



Wireless - Turn the wireless on or off. This key affects both WiFi and Bluetooth.



Volume Up - Increase loudness of speakers.



Brightness Off - Turn brightness of Display completely off. Press again to return to previous setting.



Previous - When playing media, go to the last chapter or track.



Brightness Down - Decrease the brightness of the Display.



Play/Pause - When playing media, stop or resume playback.



Brightness Up - Increase the brightness of the Display.




Next - When playing media, advance to next chapter or track.



fn - Press and hold this key and one of the above keys to use F1, F2, F3, etc.

Wireless Keyboard - Function Keys

Getting to Know Your PC

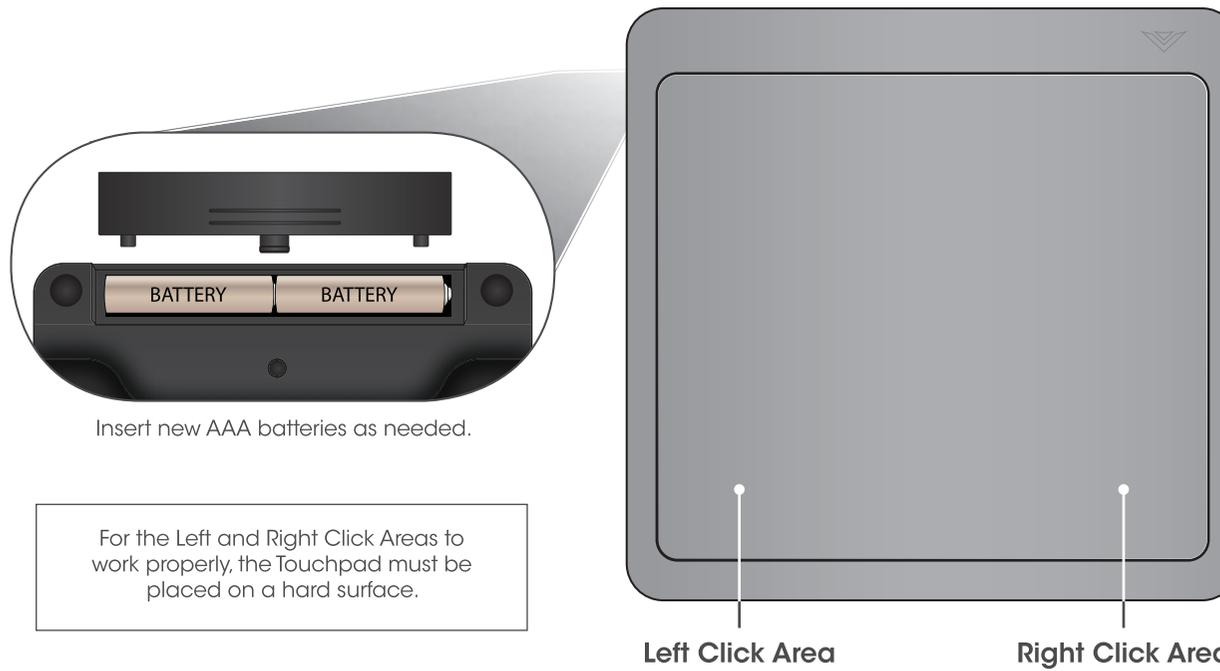


For the Left and Right Click Areas to work properly, the Touchpad must be placed on a hard surface.

Wireless Touchpad



To move the on-screen cursor, **gently slide** the tip of your finger across the Touchpad.

To select an item, **tap the Touchpad** or **press the Left Click Area**.

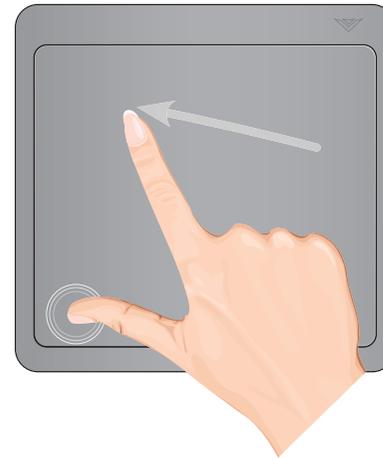


To drag an item, hold the **Left Click Area** with your thumb and **gently slide** the tip of your finger across the Touchpad.


Wireless Touchpad - Gestures



Getting to Know Your PC

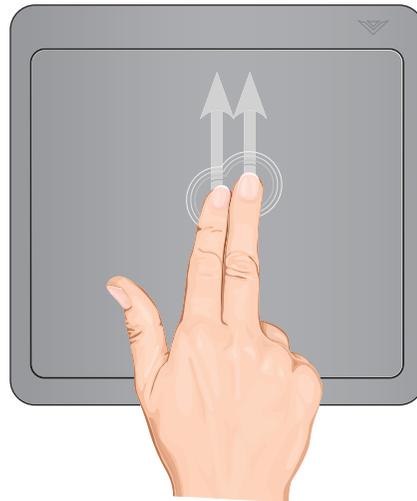


To scroll pages up/down, **gently slide** two fingers up/down the Touchpad.

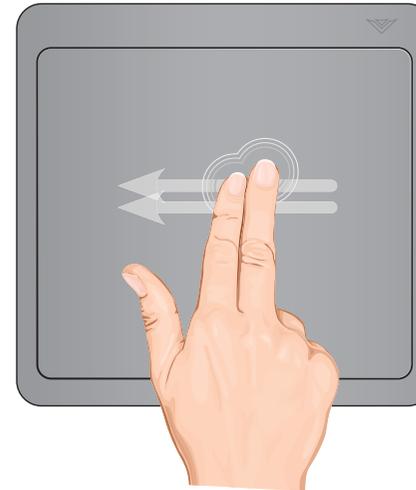


To scroll pages left/right, **gently slide** two fingers left/right across the Touchpad.

Wireless Touchpad - Gestures



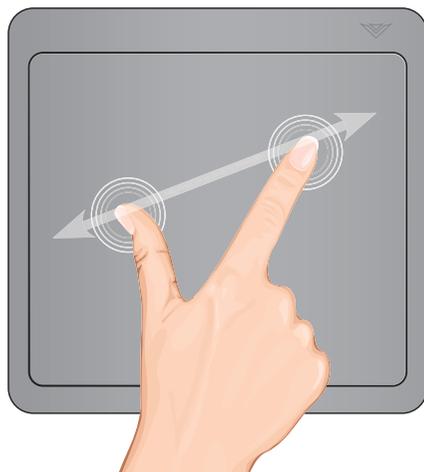

To zoom out, **gently spread** two fingers across the Touchpad.

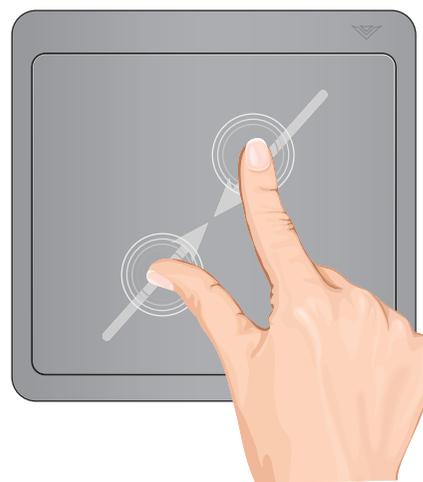

To zoom in, **gently pinch** two fingers together across the Touchpad.

Wireless Touchpad - Gestures

