



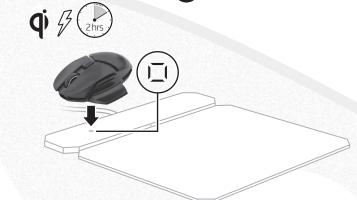


.....OR

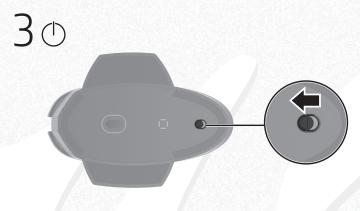

To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.



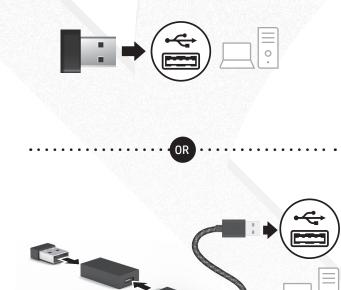

RMN/型號/型号: HSA-P006M + HSA-P006D

© Copyright 2019 HP Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2019

PRINTER: Replace this box with Printed- In (PI) atement(s) as per spec. NOTE: This box is simply a placeholder. PI tatement(s) do not have to fit inside the box but should be placed in this area.





D 2 To download the software, on your

Programmable forward button

page visited in a Web browser.

visited in a Web browser.

visited in a Web browser

(removable)

Battery light

charged.

charged.

60% charged.

White: Fully charged

Press to lower DPI setting.

Press to raise DPI setting

• Blue-violet: 400 DPI

Red-violet: 1200 DPI

• Orange: 2400 DPI

• Yellow: 3600 DPI

Green: 4800 DPI

Blue: 16000 DPI

select User Guides.

(removable)

• Red: 1600 DPI (default)

For more information about

BG 2 To download the software, on your

Programmable forward button

page visited in a Web browser.

visited in a Web browser.

visited in a Web browser.

(removable)

Battery light

charged.

charged.

60% charged.

White: Fully charged

Press to lower DPI setting.

Press to raise DPI setting.

Blue-violet: 400 DPI

Amber: Charging

· Red: Low charge

DPI down button

DPI up button

Programmable forward button

page visited in a Web browser.

Right-click programmable button

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

White: The mouse is more than 60%

• Amber: The mouse is between 40% and

• Red: The battery level is less than 40%

When the mouse is connected to power, the

light displays the battery charge level after

blinking white for 3 to 5 s to show that it

has been successfully connected to power.

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

6 Right thumb rest (removable)

Scroll wheel/Activity light

3 Left thumb rest (removable)

Microsoft Store Search for OMEN

Command Center, and then download

By default, press to return to the previous

Programmable back button (removable)

By default, press to go to the last page

Programmable back button (removable)

By default, press to go to the last page

By default, press to return to the previous

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product. Then

er, select **Start** and then selec

Violet: 800 DPI

Amber: Charging

· Red: Low charge

DPI down button

DPI up button

Programmable forward button

page visited in a Web browser.

Right-click programmable button

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3 to

5 s. If the light flashes red when the mouse

is active, the battery needs to be charged.

Amber: The mouse is between 40% and

• Red: The battery level is less than 40%

When the mouse is connected to power, the

light displays the battery charge level after

blinking white for 3 to 5 s to show that it

has been successfully connected to power.

• White: The mouse is more than 60%

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

6 Right thumb rest (removable)

Scroll wheel/Activity light

3 Left thumb rest (removable)

the app.

(removable)

omputer, select **Start** and then select

Command Center, and then download

By default, press to return to the previous

Programmable back button (removable)

By default, press to go to the last page


Programmable back button (removable)

By default, press to go to the last page

By default, press to return to the previous

Microsoft Store. Search for OMEN



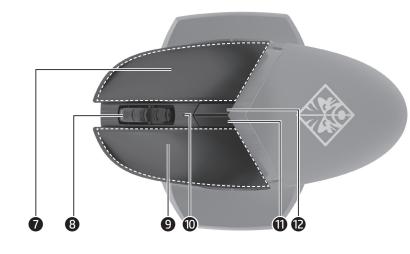

EN • Programmable forward button

By default, press to return to the previous page visited in a Web browser.

- Programmable back button (removable) By default, press to go to the last page visited in a Web browser. Left thumb rest (removable)
- Programmable back button (removable) By default, press to go to the last page
- visited in a Web browser. **6** Programmable forward button (removable)
- By default, press to return to the previous
- page visited in a Web browser. 6 Right thumb rest (removable) Right-click programmable button
- Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.
- Left-click programmable button Battery light
- When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60%
- charged. • Amber: The mouse is between 40% and
- 60% charged. • Red: The battery level is less than 40% charged. When the mouse is connected to power, the

light displays the battery charge level after

- blinking white for 3 to 5 s to show that it has been successfully connected to power. · White: Fully charged Amber: Charging
- Red: Low charge DPI down button
- Press to lower DPI setting. DPI up button Press to raise DPI setting.
- Blue-violet: 400 DPI · Violet: 800 DPI
- Red-violet: 1200 DPI • Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI • Green: 4800 DPI
- Blue: 16000 DPI For more information about programming the mouse, go to
- http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.
- **2** To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download the app.
- Programmable forward button
- page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page visited in a Web browser.

By default, press to return to the previous

- 3 Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page
- visited in a Web browser Programmable forward button (removable)
- By default, press to return to the previous page visited in a Web browser
- 6 Right thumb rest (removable)
- Right-click programmable button Scroll wheel/Activity light Press to use the programmed middle-
- click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button
- Battery light When the mouse is turned on, the light
- displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40%
- charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it

has been successfully connected to power.

- · White: Fully charged · Amber: Charging
- Red: Low charge DPI down button
- Press to lower DPI setting.
- DPI up button Press to raise DPI setting.
- Blue-violet: 400 DPI Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI

select User Guides.

 Green: 4800 DPI Blue: 16000 DPI

http://www.hp.com/support and follow

- Violet: 800 DPI Red-violet: 1200 DPI • Red: 1600 DPI (default) For more information about programming the mouse, go to
- Orange: 2400 DPI Yellow: 3600 DPI Green: 4800 DPI the instructions to find your product. Then

select User Guides.

 Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then

the app. Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page visited in a Web browser.

CS 2 To download the software, on your

computer, select **Start** and then select

Command Center, and then download

Microsoft Store. Search for OMEN

- Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page visited in a Web browser.
- Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser.
- 6 Right thumb rest (removable) • Right-click programmable button Scroll wheel/Activity light
- Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.
- Left-click programmable button Battery light
- When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40%
- charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged · Amber: Charging Red: Low charge
- DPI down button Press to lower DPI setting.
- @ DPI up button Press to raise DPI setting.
- Blue-violet: 400 DPI Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default) • Orange: 2400 DPI
- · Yellow: 3600 DPI Green: 4800 DPI Blue: 16000 DPI
- For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides

select **Start** and then sele

Microsoft Store. Search for OMEN Command Center, and then download Programmable forward button

DA 2 To download the software, on your

- (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable)
- By default, press to go to the last page visited in a Web browser. 3 Left thumb rest (removable)
- Programmable back button (removable) By default, press to go to the last page visited in a Web browser.
- Programmable forward button (removable) By default, press to return to the previous
- page visited in a Web browser. 6 Right thumb rest (removable) Right-click programmable button
- Scroll wheel/Activity light
- Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.
- Left-click programmable button Battery light
- When the mouse is turned on, the light displays the battery charge level for 3 to displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. is active, the battery needs to be charged. • White: The mouse is more than 60% charged.
 - Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40%
 - charged. When the mouse is connected to power, the
 - light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. White: Fully charged • Amber: Charging
 - Red: Low charge DPI down button Press to lower DPI setting.
 - DPI up button Press to raise DPI setting
 - Blue-violet: 400 DPI Violet: 800 DPI • Red-violet: 1200 DPI Red: 1600 DPI (default)
 - Orange: 2400 DPI Yellow: 3600 DPI • Green: 4800 DPI
 - Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides

- DE 2 To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download the app.
- Programmable forward button (removable) By default, press to return to the previous
- page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page visited in a Web browser.
- Programmable back button (removable) By default, press to go to the last page visited in a Web browser Programmable forward button

3 Left thumb rest (removable)

- (removable) By default, press to return to the previous page visited in a Web browser.
- 6 Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light
- Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.
- Left-click programmable button Battery light When the mouse is turned on the light
- displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40%
- charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. • White: Fully charged
- Amber: Charging Red: Low charge DPI down button
- Press to lower DPI setting. DPI up button
- Press to raise DPI setting • Blue-violet: 400 DPI
- Violet: 800 DPI Red-violet: 1200 DPI
- Red: 1600 DPI (default) Orange: 2400 DPI
- Yellow: 3600 DPI Green: 4800 DPI Blue: 16000 DPI
- For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

buter, select **Start** and then select

Microsoft Store. Search for OMEN Command Center, and then download Programmable forward button

ES 2 To download the software, on your

- (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page
- visited in a Web browser. 3 Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page
- visited in a Web browser Programmable forward button removable) By default, press to return to the previous
- page visited in a Web browser. **6** Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light
- Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button
- Battery light
- When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged. When the mouse is connected to power, the
- light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. White: Fully charged
- Amber: Charging Red: Low charge DPI down button
- Press to lower DPI setting. DPI up button Press to raise DPI setting.
- Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI • Red: 1600 DPI (default)
- Orange: 2400 DPI Yellow: 3600 DPI Green: 4800 DPI
- Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

- EL **2** To download the software, on your computer, select Start and then select Microsoft Store. Search for OMEN **Command Center**, and then download
- the app. Programmable forward button (removable)
- page visited in a Web browser. 2 Programmable back button (removable) By default, press to go to the last page

By default, press to return to the previous

- visited in a Web browser • Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page
- visited in a Web browser **6** Programmable forward button (removable)

By default, press to return to the previous

- page visited in a Web browser. 6 Right thumb rest (removable)
- Right-click programmable button Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app.
- Alternating colors: The mouse is active. Left-click programmable button
- Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60%
- charged. • Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged Amber: Charging Red: Low charge
- DPI down button Press to lower DPI setting. DPI up button
- Press to raise DPI setting.
- Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI
- Red: 1600 DPI (default) • Orange: 2400 DPI
- Yellow: 3600 DPI Green: 4800 DPI Blue: 16000 DPI
- For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.
- : select **Start** and then selec Microsoft Store. Search for OMEN Command Center, and then download

FR 2 To download the software, on your

- Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable)
- By default, press to go to the last page visited in a Web browser. • Left thumb rest (removable)
- Programmable back button (removable) By default, press to go to the last page visited in a Web browser. Programmable forward button
- By default, press to return to the previous page visited in a Web browser. **6** Right thumb rest (removable) Right-click programmable button

(removable)

- Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app.
- Alternating colors: The mouse is active. Left-click programmable button
- Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40%
- charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has heen successfully connected to power. White: Fully charged
- Red: Low charge DPI down button Press to lower DPI setting. DPI up button

Press to raise DPI setting.

Amber: Charging

 Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI • Red: 1600 DPI (default)

Orange: 2400 DPI

- Yellow: 3600 DPL Green: 4800 DPI Blue: 16000 DPI
- For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

- HR **2** To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN **Command Center**, and then download the app.
 - Programmable forward button (removable) By default, press to return to the previous

By default, press to go to the last page

By default, press to return to the previous

visited in a Web browser.

(removable)

Battery light

charged.

charged.

60% charged.

• White: Fully charged

Press to lower DPI setting.

Press to raise DPI setting.

• Blue-violet: 400 DPI

Red-violet: 1200 DPI

• Orange: 2400 DPI

Yellow: 3600 DPI

Green: 4800 DPI

Blue: 16000 DPI

select User Guides

the app.

(removable)

Red: 1600 DPI (default)

For more information about

IT **2** To download the software, on your

Microsoft Store. Search for OMEN

Programmable forward button

page visited in a Web browser

visited in a Web browser.

visited in a Web browser.

(removable)

Battery light

charged.

charged.

60% charged.

White: Fully charged

Press to lower DPI setting

Press to raise DPI setting.

Blue-violet: 400 DPI

Red-violet: 1200 DPI

Orange: 2400 DPI

Yellow: 3600 DPI

Green: 4800 DPI

Blue: 16000 DPI

select User Guides

Red: 1600 DPI (default)

For more information about

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product. Then

Violet: 800 DPI

Amber: Charging

Red: Low charge

DPI down button

© DPI up button

6 Programmable forward button

page visited in a Web browser.

Right-click programmable button

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3 to

5 s. If the light flashes red when the mouse

is active, the battery needs to be charged.

Amber: The mouse is between 40% and

Red: The battery level is less than 40%

When the mouse is connected to power, the

light displays the battery charge level after

heen successfully connected to power.

blinking white for 3 to 5 s to show that it has

• White: The mouse is more than 60%

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

• Right thumb rest (removable)

Scroll wheel/Activity light

• Left thumb rest (removable)

Command Center, and then download

Programmable back button (removable)

By default, press to go to the last page

Programmable back button (removable)

By default, press to go to the last page

By default, press to return to the previous

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product. Then

r. select **Start** and then selec

Violet: 800 DPI

Amber: Charging

Red: Low charge

DPI down button

DPI up button

6 Programmable forward button

page visited in a Web browser

Right-click programmable button

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3 to

is active, the battery needs to be charged.

Amber: The mouse is between 40% and

• Red: The battery level is less than 40%

blinking white for 3 to 5 s to show that it has

been successfully connected to power.

• White: The mouse is more than 60%

5 s. If the light flashes red when the mouse

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

6 Right thumb rest (removable)

Scroll wheel/Activity light

- page visited in a Web browser Battery light Programmable back button (removable) By default, press to go to the last page visited in a Web browser.
- to 5 s. If the light flashes red when the • Left thumb rest (removable) mouse is active, the battery needs to Programmable back button (removable)
 - be charged. White: The mouse is more than 60% charged. • Amber: The mouse is between 40%

the app.

(removable)

(removable)

(removable)

(removable)

Programmable forward button

Programmable back button

visited in a Web browser.

Left thumb rest (removable)

Programmable back button

visited in a Web browser.

6 Programmable forward button

6 Right thumb rest (removable)

3 Scroll wheel/Activity light

By default, press to return to the

Right-click programmable button

Press to use the programmed middle

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

By default, press to return to the

previous page visited in a Web browser.

- and 60% charged. • Red: The battery level is less than 40% charged. When the mouse is connected to power the light displays the battery charge
- level after blinking white for 3 to 5 s to show that it has been successfully connected to power White: Fully charged

Press to lower DPI setting.

- Amber: Charging Red: Low charge DPI down button
 - DPI up button Press to raise DPI setting. Blue-violet: 400 DPI
 - Violet: 800 DPI · Red-violet: 1200 DPI
- Red: 1600 DPI (default) Orange: 2400 DPI Yellow: 3600 DPI
- Green: 4800 DPI When the mouse is connected to power, the Blue: 16000 DPI light displays the battery charge level after For more information about

programming the mouse, go to

- Then select **User Guides**.
- LV2 To download the software, on your HU 2 To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN
- **Command Center**, and then download the app. Programmable forward button
 - (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button
- (removable) By default, press to go to the last page visited in a Web browser. Seft thumb rest (removable)
- Programmable back button (removable) By default, press to go to the last page
- visited in a Web browser. Programmable forward button By default, press to return to the
- previous page visited in a Web browser. 6 Right thumb rest (removable) Right-click programmable button
- Scroll wheel/Activity light By default, press to return to the previous Press to use the programmed middleclick function. Tilt left or right to use
 - functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button Battery light
 - When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to
 - be charged. • White: The mouse is more than 60% charged Amber: The mouse is between 40%
 - and 60% charged. Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge

level after blinking white for 3 to 5 s

- to show that it has been successfully connected to power. White: Fully charged Amber: Charging
- **O** DPI down button Pre<mark>ss to</mark> lower DPI setting. P DPI up button Press to raise DPI setting.

Red: Low charge

- Blue-violet: 400 DPI Violet: 800 DPI • Red-violet: 1200 DPI Red: 1600 DPI (default)
- Orange: 2400 DPI Yellow: 3600 DPI Green: 4800 DPI • Blue: 16000 DPI
- For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

- computer, select **Start** and then select computer, select **Start** and then select Microsoft Store. Search for OMEN Microsoft Store. Search for OMEN Command Center, and then download Command Center, and then download the app.
 - Programmable forward button (removable)
 - By default, press to return to the previous page visited in a Web browser. Programmable back button
 - (removable) By default, press to go to the last page By default, press to go to the last page visited in a Web browser.
 - Seft thumb rest (removable) Programmable back button (removable)
 - By default, press to go to the last page By default, press to go to the last page visited in a Web browser.
 - Programmable forward button (removable)
 - By default, press to return to the
 - previous page visited in a Web browser. previous page visited in a Web browser. **6** Right thumb rest (removable) Right-click programmable button
 - Scroll wheel/Activity light Press to use the programmed middle
 - click function. Tilt left or right to use
 - functions programmed in the app. Alternating colors: The mouse is active. Alternating colors: The mouse is active Left-click programmable button
 - Battery light When the mouse is turned on, the light When the mouse is turned on, the light displays the battery charge level for 3 displays the battery charge level for 3
 - to 5 s. If the light flashes red when the mouse is active, the battery needs to
 - be charged. White: The mouse is more than 60% charged.
 - Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40% charged. When the mouse is connected to power
 - the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power White: Fully charged
 - Amber: Charging • Red: Low charge DPI down button Press to lower DPI setting. DPI up button
 - Press to raise DPI setting. Blue-violet: 400 DPI Violet: 800 DPI • Red-violet: 1200 DPI • Red: 1600 DPI (default)

Orange: 2400 DPI

• Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow http://www.hp.com/support and follow the instructions to find your product.

Then select User Guides.

- computer, select Start and then select Microsoft Store. Search for OMEN
- By default, press to return to the previous page visited in a Web browser

Programmable back button

By default, press to go to the last page visited in a Web browser S Left thumb rest (removable)

(removable)

- By default, press to go to the last page visited in a Web browser
- By default, press to return to the previous page visited in a Web browser. **6** Right thumb rest (removable) Right-click programmable button
- Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app.
- to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- charged. Amber: The mouse is between 40% and 60% charged.
- the light displays the battery charge level after blinking white for 3 to 5 s
- Amber: Charging Red: Low charge

DPI down button

Violet: 800 DPI

- Red-violet: 1200 DPI • Red: 1600 DPI (default) Orange: 2400 DPI
- Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow

Then select **User Guides**.

the instructions to find your product.



- Programmable back button (removable)
- Programmable forward buttor
- 3 Scroll wheel/Activity light
- Left-click programmable button Battery light When the mouse is turned on, the light displays the battery charge level for 3

Alternating colors: The mouse is active.

- White: The mouse is more than 60%
- Red: The battery level is less than 40% charged. When the mouse is connected to power,
- to show that it has been successfully connected to power. • White: Fully charged
- Press to lower DPI setting DPI up button Press to raise DPI setting. Blue-violet: 400 DPI
- Yellow: 3600 DPI Green: 4800 DPI

NL **2** To download the software, on your PL **2** To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN **Command Center**, and then download the app.

Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser.

Programmable back button (removable) By default, press to go to the last page

visited in a Web browser

Seft thumb rest (removable) Programmable back button (removable) By default, press to go to the last page

visited in a Web browser. Programmable forward button removable) By default, press to return to the previous page visited in a Web browser.

6 Right thumb rest (removable) 6 Right thumb rest (removable) Right-click programmable button Right-click programmable button Scroll wheel/Activity light Scroll wheel/Activity light Press to use the programmed middle click function. Tilt left or right to use functions programmed in the app.

Alternating colors: The mouse is active. Left-click programmable button Battery light

Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60%

charged. • Amber: The mouse is between 40% and 60% charged.

 Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. White: Fully charged Amber: Charging

 Red: Low charge DPI down button Press to lower DPI setting. @ DPI up button

Press to lower DPI setting. DPI up button Press to raise DPI setting Press to raise DPI setting. • Blue-violet: 400 DPI • Blue-violet: 400 DPI • Violet: 800 DPI Violet: 800 DPI • Red-violet: 1200 DPI Red-violet: 1200 DPI Red: 1600 DPI (default) Red: 1600 DPI (default) Orange: 2400 DPI Orange: 2400 DPI • Yellow: 3600 DPI Yellow: 3600 DPI Green: 4800 DPI Green: 4800 DPI • Blue: 16000 DPI Blue: 16000 DPI For more information about For more information about programming the mouse, go to programming the mouse, go to http://www.hp.com/support and follow http://www.hp.com/support and follow

NO 2 To download the software, on your P omputer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download the app. Programmable forward button

Then select User Guides

the instructions to find your product.

(removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page

visited in a Web browser Left thumb rest (removable) S Left thumb rest (removable) Programmable back button Programmable back button (removable)

By default, press to go to the last page visited in a Web browser. Programmable forward button By default, press to return to the Right thumb rest (removable)

By default, press to return to the previous page visited in a Web browser. previous page visited in a Web browser. • Right thumb rest (removable) • Right-click programmable button Right-click programmable button Scroll wheel/Activity light Scroll wheel/Activity light Press to use the programmed middle-Press to use the programmed middleclick function. Tilt left or right to use click function. Tilt left or right to use functions programmed in the app.

functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button

 Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.

• White: The mouse is more than 60% charged. • Amber: The mouse is between 40% and 60% charged.

 Red: The battery level is less than Red: The battery level is less than 40% charged. 40% charged. When the mouse is connected to When the mouse is connected to power, the light displays the battery power, the light displays the battery charge level after blinking white for charge level after blinking white for 3 to 5 s to show that it has been 3 to 5 s to show that it has been successfully connected to power. successfully connected to power. White: Fully charged White: Fully charged • Amber: Charging

 Amber: Charging Red: Low charge DPI down button

Press to lower DPI setting. P DPI up button

Press to raise DPI setting. • Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI Red: 1600 DPI (default) • Orange: 2400 DPI

 Yellow: 3600 DPI • Green: 4800 DPI Blue: 16000 DPI

• Green: 4800 DPI Blue: 16000 DPI For more information about For more information about programming the mouse, go to programming the mouse, go to http://www.hp.com/support and follow http://www.hp.com/support and follow the instructions to find your product. the instructions to find your product. Then select **User Guides**. Then select **User Guides**.

BR 2 To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN **Command Center**, and then download Programmable forward button

the app.

(removable)

(removable)

(removable)

(removable)

be charged.

charged

and 60% charged.

40% charged.

By default, press to return to the

Programmable back button

visited in a Web browser.

Seft thumb rest (removable)

Programmable back button

visited in a Web browser.

Programmable forward button

By default, press to return to the

previous page visited in a Web browser

By default, press to go to the last page

By default, press to go to the last page

previous page visited in a Web browser.

Press to use the programmed middle

click function. Tilt left or right to use

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3

to 5 s. If the light flashes red when the

mouse is active, the battery needs to

White: The mouse is more than 60%

• Amber: The mouse is between 40%

Red: The battery level is less than

When the mouse is connected to

power, the light displays the battery

charge level after blinking white for

the instructions to find your product.

computer, select **Start** and then select

Command Center, and then download

previous page visited in a Web browser.

By default, press to go to the last page

By default, press to go to the last page

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3

to 5 s. If the light flashes red when the

mouse is active, the battery needs to

• White: The mouse is more than 60%

• Amber: The mouse is between 40%

Left-click programmable button

Battery light

be charged.

charged.

and 60% charged.

· Red: Low charge

Press to lower DPI setting.

Press to raise DPI setting.

Blue-violet: 400 DPI

Red-violet: 1200 DPI

Orange: 2400 DPI

• Yellow: 3600 DPI

Red: 1600 DPI (default)

• Violet: 800 DPI

DPI down button

DPI up button

Then select User Guides.

the app.

(removable)

(removable)

(removable)

2 To download the software, on your

Microsoft Store. Search for OMEN

• Programmable forward button

Programmable back button

visited in a Web browser.

visited in a Web browser.

S Programmable forward button

By default, press to return to the

3 to 5 s to show that it has been

successfully connected to power

• White: Fully charged

• Amber: Charging

· Red: Low charge

DPI down button

functions programmed in the app.

Left-click programmable button

 Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable)

computer, select **Start** and then select

Command Center, and then download

Microsoft Store. Search for OMEN

the app.

By default, press to go to the last page visited in a Web browser. Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page

visited in a Web browser Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser

6 Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app.

Alternating colors: The mouse is active. Left-click programmable button Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.

charged. • Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power

White: The mouse is more than 60%

 White: Fully charged Amber: Charging Red: Low charge DPI down button Press to lower DPI setting.

DPI up button Press to raise DPI setting. • Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI Red: 1600 DPI (default) • Orange: 2400 DPI • Yellow: 3600 DPI Green: 4800 DPI Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow

the instructions to find your product. Then

2 To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download the app.

select User Guides.

Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page

visited in a Web browser 3 Left thumb rest (removable) Programmable back button (removable) visited in a Web browser

By default, press to go to the last page Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser

6 Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

 Left-click programmable button Battery light When the mouse is turned on, the light

displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60% charged. Amber: The mouse is between 40% and 60% charged.

• Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. · White: Fully charged Amher: Charging Red: Low charge DPI down button Press to lower DPI setting

 DPI up button Press to raise DPI setting. • Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI Red: 1600 DPI (default) Orange: 2400 DPI • Yellow: 3600 DPI Green: 4800 DPL Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

 Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40% charged.

RU 2 To download the software, on your

Programmable forward button

page visited in a Web browser

visited in a Web browser.

visited in a Web browser

(removable)

Battery light

charged.

9 Programmable forward button

page visited in a Web browser

Right-click programmable button

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3 to

5 s. If the light flashes red when the mouse

is active, the battery needs to be charged.

• White: The mouse is more than 60%

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

6 Right thumb rest (removable)

Scroll wheel/Activity light

Seft thumb rest (removable)

the app.

removable)

computer, select **Start** and then select

Command Center, and then download

By default, press to return to the previous

Programmable back button (removable)

By default, press to go to the last page

Programmable back button (removable)

By default, press to go to the last page

By default, press to return to the previous

Microsoft Store. Search for OMEN

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. White: Fully charged Amber: Charging Red: Low charge DPI down button

Press to lower DPI setting. DPI up button Press to raise DPI setting. Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI Red: 1600 DPI (default) • Orange: 2400 DPI

Yellow: 3600 DPI

• Green: 4800 DPI Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

2 To download the software, on your computer, select Start and then select Microsoft Store. Search for OMEN Command Center, and then download the app.

Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser Programmable back button (removable)

By default, press to go to the last page visited in a Web browser 3 Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page visited in a Web browser Programmable forward button

(removable) By default, press to return to the previous page visited in a Web browser. **6** Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light Press to use the programmed middle-

click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button

Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.

 White: The mouse is more than 60% charged. Amber: The mouse is between 40% and 60% charged.

• Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. White: Fully charged

· Amher: Charging Red: Low charge DPI down button Press to lower DPI setting DPI up button

Press to raise DPI setting. • Blue-violet: 400 DPI Violet: 800 DPI · Red-violet: 1200 DPI • Red: 1600 DPI (default) · Orange: 2400 DPI

• Yellow: 3600 DPI Green: 4800 DPI Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

SL **2** To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download the app.

(removable) By default, press to return to the previous page visited in a Web browser Programmable back button (removable) By default, press to go to the last page visited in a Web browser

Programmable forward button

• Left thumb rest (removable) 3 Left thumb rest (removable) Programmable back button (removable) Programmable back button (removable) By default, press to go to the last page By default, press to go to the last page visited in a Web browse visited in a Web browser Programmable forward button 9 Programmable forward button (removable) (removable)

By default, press to return to the previous page visited in a Web browser. **6** Right thumb rest (removable) Right-click programmable button 3 Scroll wheel/Activity light

Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button Battery light

When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60% charged. Amber: The mouse is between 40% and 60% charged.

• Red: The battery level is less than 40% charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.

• White: Fully charged Amber: Charging Red: Low charge DPI down button

Press to lower DPI setting. DPI up button Press to raise DPI setting • Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI

 Red: 1600 DPI (default) Orange: 2400 DPI Yellow: 3600 DPI Green: 4800 DP Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

FI 2 To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download the app.

Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser Programmable back button (removable)

By default, press to go to the last page visited in a Web browser

 Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page

visited in a Web browse Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser.

6 Right thumb rest (removable) • Right-click programmable button Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use

functions programmed in the app. Alternating colors: The mouse is active Left-click programmable button

Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60%

charged. • Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40%

charged. When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power. White: Fully charged Amber: Charging

• Red: Low charge DPI down button Press to lower DPI setting.

DPI up button Press to raise DPI setting. Blue-violet: 400 DPL Violet: 800 DPI • Red-violet: 1200 DPI • Red: 1600 DPI (default) Orange: 2400 DPI

 Yellow: 3600 DPI Green: 4800 DPI • Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

√2 To download the software, on your computer, select Start and then select Microsoft Store. Search for OMEN Command Center, and then download the app.

SR **2** To download the software, on your

Programmable forward button

page visited in a Web browser

visited in a Web browser.

the app.

(removable)

computer, select **Start** and then select

Command Center, and then download

By default, press to return to the previous

2 Programmable back button (removable)

By default, press to go to the last page

By default, press to return to the previous

page visited in a Web browser

• Right-click programmable button

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3 to

5 s. If the light flashes red when the mouse

is active, the battery needs to be charged.

• Amber: The mouse is between 40% and

• Red: The battery level is less than 40%

When the mouse is connected to power, the

light displays the battery charge level after

blinking white for 3 to 5 s to show that it

has been successfully connected to power.

• White: The mouse is more than 60%

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

6 Right thumb rest (removable)

Scroll wheel/Activity light

Battery light

charged.

charged.

60% charged

White: Fully charged

Press to lower DPI setting.

Press to raise DPI setting.

Blue-violet: 400 DPI

Red-violet: 1200 DPL

• Orange: 2400 DPI

• Yellow: 3600 DPI

Green: 4800 DPI

Blue: 16000 DPI

select User Guides.

Red: 1600 DPI (default)

For more information about

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product. Then

Violet: 800 DPI

Amber: Charging

Red: Low charge

DPI down button

DPI up button

Microsoft Store. Search for OMEN

Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser

2 Programmable back button (removable) By default, press to go to the last page visited in a Web browser

3 Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page visited in a Web browser.

Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser **6** Right thumb rest (removable) • Right-click programmable button

Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

60% charged.

charged.

DPI down button

Press to raise DPI setting.

Blue-violet: 400 DPI

• Red-violet: 1200 DPI

• Orange: 2400 DPI

Yellow: 3600 DPI

Green: 4800 DPI

• Blue: 16000 DPI

select User Guides.

• Red: 1600 DPI (default)

For more information about

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product. Then

Violet: 800 DPI

DPI up button

 Left-click programmable button Battery light When the mouse is turned on, the light

displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60% charged. charged.

 Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40% • Red: The battery level is less than 40%

charged. When the mouse is connected to power, the When the mouse is connected to power, the light displays the battery charge level after light displays the battery charge level after blinking white for 3 to 5 s to show that it blinking white for 3 to 5 s to show that it has been successfully connected to power. has been successfully connected to power. White: Fully charged • White: Fully charged Amber: Charging Amber: Charging Red: Low charge • Red: Low charge

DPI down button Press to lower DPI setting. Press to lower DPI setting.

DPI up button Press to raise DPI setting. • Blue-violet: 400 DPI Violet: 800 DPI • Red-violet: 1200 DPI

> Red: 1600 DPI (default) Orange: 2400 DPI • Yellow: 3600 DPI • Green: 4800 DPI • Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow

select User Guides.

the instructions to find your product. Then

TR **2** To download the software, on your computer, select Start and then select Microsoft Store. Search for OMEN Command Center, and then download the app.

TH **2** To download the software, on your

Programmable forward button

page visited in a Web browser

visited in a Web browser.

Seft thumb rest (removable)

visited in a Web browser

(removable)

Battery light

60% charged.

White: Fully charged

Press to lower DPI setting

Press to raise DPI setting.

Blue-violet: 400 DPI

Red-violet: 1200 DPI

· Orange: 2400 DPI

Yellow: 3600 DP

• Green: 4800 DPI

• Blue: 16000 DPI

select User Guides.

• Red: 1600 DPI (default)

For more information about

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product. Then

Violet: 800 DPI

• Amber: Charging

• Red: Low charge

DPI down button

DPI up button

charged.

9 Programmable forward button

page visited in a Web browser.

Right-click programmable button

Press to use the programmed middle-

click function. Tilt left or right to use

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3 to

is active, the battery needs to be charged.

• Amber: The mouse is between 40% and

Red: The battery level is less than 40%

light displays the battery charge level after

blinking white for 3 to 5 s to show that it

has been successfully connected to power

• White: The mouse is more than 60%

functions programmed in the app.

Left-click programmable button

6 Right thumb rest (removable)

Scroll wheel/Activity light

(removable)

computer, select **Start** and then select

Command Center, and then download

By default, press to return to the previous

Programmable back button (removable)

By default, press to go to the last page

Programmable back button (removable)

By default, press to go to the last page

By default, press to return to the previous

Microsoft Store. Search for OMEN

 Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser.

Programmable back button (removable) By default, press to go to the last page visited in a Web browser.

Left thumb rest (removable) Programmable back button (removable) By default, press to go to the last page visited in a Web browser

9 Programmable forward button (removable) By default, press to return to the previous page visited in a Web browser **6** Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light

Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app.

Alternating colors: The mouse is active. Left-click programmable button Battery light When the mouse is turned on, the light

displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60%

charged. Amber: The mouse is between 40% and

60% charged. charged.

When the mouse is connected to power, the light displays the battery charge level after

blinking white for 3 to 5 s to show that it has been successfully connected to power. • White: Fully charged Amber: Charging Red: Low charge

DPI up button Press to raise DPI setting. Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI

Red: 1600 DPI (default)

Orange: 2400 DPI

Yellow: 3600 DPI

• Green: 4800 DPI Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

UK **2** To download the software, on your KO 2 To download the software, on your TW 2 To download the software, on your computer, select **Start** and then select Microsoft Store. Search for OMEN Command Center, and then download

the app.

(removable)

(removable)

(removable)

(removable)

Battery light

be charged.

charged.

and 60% charged.

· White: Fully charged

Press to lower DPI setting.

Press to raise DPI setting.

• Blue-violet: 400 DPI

• Red-violet: 1200 DPI

Orange: 2400 DPI

• Yellow: 3600 DPI

Green: 4800 DP

Blue: 16000 DPI

the app.

(removable)

(removable)

(removable)

Red: 1600 DPI (default)

For more information about

Then select User Guides.

CN 2 To download the software, on your

• Programmable forward button

Programmable back button

visited in a Web browser

Programmable back button

visited in a Web browser.

6 Programmable forward button

6 Right thumb rest (removable)

Scroll wheel/Activity light

Battery light

be charged.

By default, press to return to the

Right-click programmable button

3 Left thumb rest (removable)

By default, press to return to the

programming the mouse, go to

the instructions to find your product.

computer, select **Start** and then select

Command Center, and then download

previous page visited in a Web browser

By default, press to go to the last page

By default, press to go to the last page

previous page visited in a Web browser

Press to use the programmed middle-

Alternating colors: The mouse is active.

When the mouse is turned on, the light

displays the battery charge level for 3

to 5 s. If the light flashes red when the

mouse is active, the battery needs to

charge level after blinking white for

3 to 5 s to show that it has been

click function. Tilt left or right to use

functions programmed in the app.

Left-click programmable button

Microsoft Store. Search for OMEN

• Violet: 800 DPI

• Amber: Charging

· Red: Low charge

DPI down button

DPI up button

40% charged.

Programmable forward button

Programmable back button

visited in a Web browser

Seft thumb rest (removable)

Programmable back button

visited in a Web browser.

Programmable forward button

6 Right thumb rest (removable)

Scroll wheel/Activity light

By default, press to return to the

Right-click programmable button

Press to use the programmed middle

click function. Tilt left or right to use

When the mouse is turned on, the light

displays the battery charge level for 3

mouse is active, the battery needs to

White: The mouse is more than 60%

Red: The battery level is less than

When the mouse is connected to

power, the light displays the battery

charge level after blinking white for

3 to 5 s to show that it has been

successfully connected to power.

functions programmed in the app.

Left-click programmable button

By default, press to return to the

previous page visited in a Web browser

By default, press to go to the last page

By default, press to go to the last page

(removable) By default, press to return to the previous page visited in a Web browser Programmable back button (removable)

• Programmable forward button

By default, press to go to the last page visited in a Web browser. Seft thumb rest (removable)

Programmable back button (removable) By default, press to go to the last page visited in a Web browse • Programmable forward button

removable) By default, press to return to the previous page visited in a Web browser 6 Right thumb rest (removable)

3 Scroll wheel/Activity light Press to use the programmed middleclick function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

Right-click programmable button

 Left-click programmable button Battery light When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60%

• Amber: The mouse is between 40% and 60% charged. Red: The battery level is less than 40% charged. When the mouse is connected to power, the

charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power White: Fully charged Amber: Charging · Red: Low charge

 DPI down button Press to lower DPI setting.

DPI up button Press to raise DPI setting Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI • Red: 1600 DPI (default)

 Orange: 2400 DPI Yellow: 3600 DPI • Green: 4800 DPI Blue: 16000 DPI For more information about

programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select User Guides.

2 To download the software, on your

Microsoft Store. Search for OMEN

Command Center, and then download the app. Programmable forward button removable)

computer, select Start and then select

By default, press to return to the previous page visited in a Web browser. Programmable back button (removable) By default, press to go to the last page visited in a Web browser

3 Left thumb rest (removable) Programmable back button (removable)

By default, press to go to the last page visited in a Web browser Programmable forward button (removable)

By default, press to return to the previous page visited in a Web browser **6** Right thumb rest (removable) Right-click programmable button Scroll wheel/Activity light Press to use the programmed middle-

click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active. Left-click programmable button Battery light

When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. • White: The mouse is more than 60%

Amber: The mouse is between 40% and

Red: The battery level is less than 40%

• White: The mouse is more than 60% charged. • Amber: The mouse is between 40% and 60% charged. • Red: The battery level is less than 40% charged. DPI down button When the mouse is connected to Press to lower DPI setting. power, the light displays the battery

> successfully connected to power. White: Fully charged Amber: Charging Red: Low charge DPI down button Press to lower DPI setting. DPI up button

> > Press to raise DPI setting. Blue-violet: 400 DPI Violet: 800 DPI Red-violet: 1200 DPI Red: 1600 DPI (default) Orange: 2400 DPI • Yellow: 3600 DPI • Green: 4800 DPI

> > > Blue: 16000 DPI

For more information about

Then select User Guides.

programming the mouse, go to

http://www.hp.com/support and follow

the instructions to find your product.

computer, select **Start** and then select computer, select **Start** and then select Microsoft Store. Search for OMEN Microsoft Store. Search for OMEN Command Center, and then download **Command Center**, and then download the app. Programmable forward button

(removable) By default, press to return to the

previous page visited in a Web browser Programmable back button (removable) By default, press to go to the last page visited in a Web browser.

Seft thumb rest (removable) Programmable back button (removable) By default, press to go to the last page visited in a Web browser.

Programmable forward button

(removable) By default, press to return to the previous page visited in a Web browser. previous page visited in a Web browser. 6 Right thumb rest (removable) Right-click programmable button

Scroll wheel/Activity light Press to use the programmed middle click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active. Alternating colors: The mouse is active Left-click programmable button

Battery light

displays the battery charge level for 3 to 5 s. If the light flashes red when the to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged. White: The mouse is more than 60% charged.

When the mouse is turned on, the light

• Amber: The mouse is between 40% • Amber: The mouse is between 40% and 60% charged. Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power • White: Fully charged

• Amber: Charging Red: Low charge DPI down button Press to lower DPI setting **©** DPI up button Press to raise DPI setting. • Blue-violet: 400 DPI

Violet: 800 DPI

 Red-violet: 1200 DPI • Red: 1600 DPI (default) Orange: 2400 DPI Yellow: 3600 DPI • Green: 4800 DPI • Blue: 16000 DPI For more information about programming the mouse, go to http://www.hp.com/support and follow http://www.hp.com/support and follow the instructions to find your product.

Then select User Guides.