

Dell[™] Ultra Violet Touch Mouse (online user's manual)

Features: Dell[™] Ultra Violet Touch Mouse

- Dell[™] Ultra Violet Touch Mouse Front View
- Dell[™] Ultra Violet Touch Mouse Rear View

Dell™ Ultra Violet Touch Mouse Front View



No.	Description
1	Left Mouse Click
2	Touch Scroll
3	Right Mouse Click
4	 Battery Indicator Amber (blinks): Low Battery Amber (solid): Battery Charging White (solid): Charging Complete

Dell[™] Ultra Violet Touch Mouse Rear View



No.	Description
1	USB port cover
2	Optical Sensor
3	Power Button and Indicator - White (solid): Power on - Blue (blinks): In Pairing mode

Setup: Dell[™] Ultra Violet Touch Mouse

- Charging Dell[™] Ultra Violet Touch Mouse
- Installing Dell[™] WM713 Wireless Touch Mouse Software
- Pairing Dell[™] Ultra Violet Touch Mouse
- Configuring Dell[™] Ultra Violet Touch Mouse Settings

Charging Dell[™] Ultra Violet Touch Mouse

Before using this touch mouse for the first time, you need to charge using the USB cable. Normal charge is approximately 4 hours.

1. Open the USB port cover.



2. Connect one end of the USB cable to the mini USB port of the mouse.



3. Connect the other end of the USB cable to the notebook or computer.



- The *Amber LED* lights up while the battery is charging.
- The *White LED* lights up when the battery is fully charged. Once the USB cable is unplugged, the *White LED* is turned off.

Installing Dell[™] WM713 Wireless Touch Mouse Software

To customize the touch mouse settings, you need to install the Wireless Touch Mouse software into your notebook or computer.

- Insert the supplied software CD into your CD-ROM drive. The software installation file should load automatically.
 If it does not, click Start > Run, enter the path of your CD-ROM drive (D: for example) and browse for the setup.exe file. Double-click the file to load the installation file.
- 2. Click Next to continue.

B Dell WM713 Wireless Touch Mouse - InstallShield Wizard					
	Welcome to the InstallShield Wizard for Dell WM713 Wireless Touch Mouse				
The InstallShield(R) Wizard will install Dell WM713 Wireless Touch Mouse on your computer. To continue, dick Next.					
	WARNING: This program is protected by copyright law and international treaties.				
	< Back Next > Cancel				

3. Specify the location to install the software and click **Next**.

岗 Dell WM	713 Wireless Touch Mouse - InstallShield Wizard
Destinati Click Nex	on Folder kt to install to this folder, or click Change to install to a different folder.
	Install Dell WM713 Wireless Touch Mouse to: C: \Program Files (x86) \Dell \Dell WM713 Wireless Touch Mouse \ Change
InstallShield –	< Back Next > Cancel

4. Click Install to begin installation.



5. The software installation may take a while to complete.

波 Dell WM	713 Wireless Touch Mouse - InstallShield Wizard
Installing The prog	pell WM713 Wireless Touch Mouse gram features you selected are being installed.
1 P	Please wait while the InstallShield Wizard installs Dell WM713 Wireless Touch Mouse. This may take several minutes.
	Status:
	Copying new files
InstallShield -	
	< Back Next > Cancel

6. Click **Finish** to complete the installation.



7. Click **Yes** to reboot your computer system.

Bell WM713 Wireless Touch Mouse Installer Informat						
You must restart your system for the configuration changes made to Dell WM713 Wireless Touch Mouse to take effect. Click Yes to restart now or No if you plan to restart later.						
	Yes	No				

Pairing Dell[™] Ultra Violet Touch Mouse

The touch mouse needs to be paired and connected to your notebook or computer before it can be used.

1. Click Start > Dell WM713 Wireless Touch Mouse to launch the software.



<Windows 7>



<Windows 8>

2. Click General Settings.

Settings		
General Settings Pointer speed, battery level and more.	Battery level: 100%	
Scroll Settings Scrolling and panning.	Pointer speed	
1 Finger Gestures Edge swipes and more.	Restore Settings	
2 Finger Gestures Gestures to arrange windows.	Bluetooth Pairing Par other Dell Bluetooth input devices with this computer.	
	User Manual Download the user manual online.	

3. Press and hold the **Power** button for three seconds.

The *Blue LED* (on the **Power** button) blinks, indicating the touch mouse is in pairing mode.



4. Click Bluetooth Pairing.

The detected devices appear on the screen.

G	💇 Add a de	vice			x
	Select a d Windows wil	evice to add to this computer I continue to look for new devices and	r d display th	em here.	
		, HP298CC4 (HP Officejet 6700) Web Services Printer; Scanner; Fax		NPI05D325 (HP LaserJet P4015) Web Services Printer	•
		NPI867688 (HP LaserJet P2055dn) Web Services Printer		"imac"的 iMac G5 Bluetooth Desktop computer	E
		NPI0EFAE3 (HP LaserJet P4015) Web Services Printer	Ĩ	Dell Bluetooth Mouse Bluetooth Mouse	
	ala	HP-4015-96 (HP LaserJet P4015) Web Services	- Þ	PTSGI-ARC-A UPnP	-
	What if Winc	lows doesn't find my device?			
				Next	Cancel

5. Click **Dell Bluetooth Mouse** and click **Nex**t to continue.

٩	💇 Add a de	vice			×
	Select a d Windows wi	evice to add to this computer	d display th	iem here.	
		, HP298CC4 (HP Officejet 6700) Web Services Printer; Scanner; Fax	Ĩ	Dell Bluetooth Mouse Bluetooth Mouse	
	-	NPI867688 (HP LaserJet P2055dn) Web Services Printer	-	NPI8C66E8 (HP LaserJet P2055x) Web Services Printer	Ш
		, HP-4015-96 (HP LaserJet P4015) Web Services Printer		"imac"的 iMac G5 Bluetooth Desktop computer	
	ded	NPI05D325 (HP LaserJet P4015) Web Services		PTSGI-ARC-A UPnP	-
	<u>What if Wind</u>	dows doesn't find my device?		Next	Cancel

6. Click **Close** to complete the pairing connection.



Configuring Dell™ Ultra Violet Touch Mouse Settings

You can specify functions for each button, set touch scroll speed, and configure other preferences settings via *Dell™ WM713 Wireless Touch Mouse* software.

- 1. Click Start > Dell WM713 Wireless Touch Mouse to launch the software.
- To customize the setting, click the respective option and change the settings.
 For example, customizing *Up Swipe* action: Click **Up swipe** and then select one of the available options.

General Settings Pointer speed, battery level and more.	Up swipe Show desktop	
Scroll Settings Scrolling and panning.	Down swipe Min windows	
1 Finger Gestures Edge swipes and more.		
2 Finger Gestures Gestures to arrange windows.		
		Placeholder animation

<Select setting item>

Constant Constant			
General Settings Pointer speed, battery level and more.	⊕ Up swipe		
Scroll Settings	Snow desktop	Win+D	
Scrolling and panning.	Nothing	wm+Up	
1 Finger Gestures Edge swipes and more.	0		
2 Finger Gestures			
Clearan car to rainainger with LOWs.			Placeholder animation

<Adjust setting>

See the following table for all available functions/settings, and to which buttons they can be assigned.

Settings	Gesture	Options	Attributes	Windows 7	Windows 8
General Settings		Battery	%	\checkmark	\checkmark
	-	Pointer	1-100	\checkmark	\checkmark
		speed			
		Mouse use	Left-handed	~	~
	•		Right-handed	~	~
Scroll Settings		Scroll	On/Off	\checkmark	\checkmark
		Scroll inertia	On/Off	\checkmark	\checkmark
		Scroll speed	1-100	\checkmark	\checkmark
		Pan	On/Off	\checkmark	\checkmark
		Pan inertia	On/Off	\checkmark	\checkmark
		Pan speed	1-100	\checkmark	\checkmark
1 Finger Gestures		Left edge	App Switching	×	\checkmark
		swipe	Recent Apps	×	\checkmark
	• •		Back	\checkmark	×
			Forward	\checkmark	\checkmark
			Nothing	\checkmark	\checkmark
		Right edge swipe	Windows Charms	×	\checkmark
			Back	\checkmark	\checkmark
			Forward	\checkmark	×
	8		Nothing	\checkmark	\checkmark
		Swipe to left	Windows Charms	×	~
			Back	\checkmark	\checkmark
			Forward	\checkmark	×
			Nothing	\checkmark	\checkmark
		Swipe to	App Switching	×	\checkmark
		right	Recent Apps	×	\checkmark
		-	Back	\checkmark	×
			Forward	\checkmark	\checkmark
			Nothing	\checkmark	~

Settings	Gesture	Options	Attributes	Windows 7	Windows 8
2 Finger Gestures		Up swipe	Search	×	\checkmark
			Max windows	\checkmark	\checkmark
			Show desktop	\checkmark	\checkmark
			Nothing	\checkmark	\checkmark
		Down swipe	Show desktop	\checkmark	\checkmark
			Min windows	\checkmark	\checkmark
			Windows Start	×	\checkmark
			Show desktop	\checkmark	\checkmark

Troubleshooting: Dell[™] Ultra Violet Touch Mouse

If you have problems with your mouse:

- Check if the mouse battery level is low.
- Check if the mouse is turned on.
- Check if the USB receiver is plugged into a computer USB port. Remove and insert the USB receiver again.
- Check if the USB receiver is securely connected to the computer USB port. A loose connection may cause the mouse to malfunction.
- If you still have a problem, use another USB port or restart your computer.
- Only use the mouse on a clean, flat, non-slippery surface in order to ensure smooth and accurate cursor action.
- Check the computer system requirements to make sure that your system is compatible.
- For further assistance with any other questions you may have, please contact our customer service or your dealer for technical support.

Specifications: Dell[™] Ultra Violet Touch Mouse

General

- Electrical
- Physical Characteristic
 - Environmental
- Bluetooth 3.0 Wireless

General

Manufacturer	Primax Electronics Co., Ltd.
Model number	WM713
Connection type	Bluetooth 3.0
Supported Operating Systems	${\tt Microsoft} \ensuremath{{\mathbb R}}$ Windows $\ensuremath{{\mathbb R}}$ 7 SP1 or later , Windows 8

Electrical

Battery life 1 months before low battery indicator LED is triggered

Battery Lithium-ion (embedded)

Physical Characteristic

Height	24.90 mm
Width	58.4 mm
Length	108.10 mm
Weight	118 g

Environmental

Operating temperature	0 °C to 40 °C
Storage temperature	-40 °C to 65 °C
Operating humidity	90%max Relative Humidity, non condensing
Storage humidity	90%max Relative Humidity, non condensing

Bluetooth 3.0 Wireless

Radio transmission	The baseband transmit data is GFSK Modulated in the 2.4GHz ISM band
Range	10m radio range. No performance degradation up to max radio range (10m).