



Indoor Multi-Effects Light Show Power Stand

Model: RCSTMI3

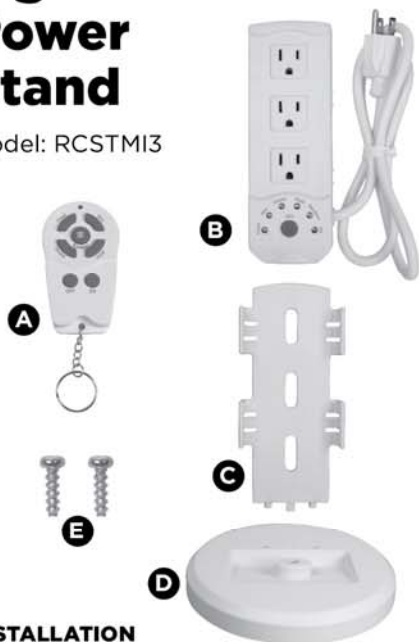

INSTALLATION INSTRUCTIONS

1. Connect the two pieces of the stand together using the 2 screws (E) to secure the bracket (C) to the base (D) as shown.

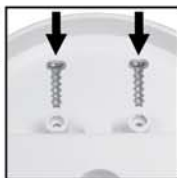

2. Mount the Power Center (B) to the stand with the outlets facing front, aligning the hole in the bottom of the Power Center to the peg on the base. Push the Power Center into the bracket so that it "snaps" into place.



3. Make sure there is power to the outlet then plug the fully assembled Power Stand into a 3-wire grounded indoor outlet. Then plug light strings into each outlet on the Power Stand. The LED indicator light on the wireless remote control (A) is lit when the Power Stand is powered on.

PROGRAMMING INSTRUCTIONS

Program the desired lighting effect from the wireless remote control or from the push-button on the unit. By activating one of the following commands on the unit or from the wireless remote control, the lights will do one of the following:

- Flash = all light strings flash on/off rapidly and simultaneously
- Dim = all light strings dim then brighten simultaneously
- Chase = light strings flash on/off in sequence by light string
- Fade = light strings dim then brighten in sequence by light string
- Random Mode = light strings run through all 4 basic effects randomly
- On = all lights are on

For full benefit of the effects, plugging light strings into all three outlets is recommended.

If there are any problems in getting the remote control to work properly, stop and read the helpful tips section of these instructions.

If you continue to experience any problems, please contact Technical Support toll free at 1-888-445-9955.

BATTERY REPLACEMENT

Use a Phillips Head screw driver to remove the screw on the battery compartment. Pull out the battery holder to replace one CR2032 3V Button Cell Battery. Insert CR2032 3V Button Cell Battery with the "+" side up, and then re-insert the battery holder and reinstall the screw. Dispose of the old battery in compliance with all applicable laws. Contact your local solid waste authority for detailed information.

WARNING: DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

HELPFUL TIPS

- Make sure the receiver is plugged into a working AC outlet.
- Make sure the receiver and connected equipment are on.
- Make sure the remote control ON button is pushed.
- Make sure the CR2032, 3V battery in the remote control is still functioning.

USE & CARE INSTRUCTIONS

- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the power supply cord or on any wire.
- Unplug the product when not in use.
- To avoid risk of fire, burns or electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light strings.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.
- Read and follow all instructions on the product or provided with the product.

SAFETY INFORMATION & SPECIFICATIONS

This is a "GROUNDED" device. The male plug contains a ground pin and is only intended for use with a three-pronged grounded outlet.



This device is for use with a 120VAC power source.

120VAC / 60Hz

Do not attach a device that exceeds the unit ratings:

8A / 1000W Tungsten (Maximum total load)

2.67A / 333W Tungsten (Each outlet)

3FT 16/3 AWG SJT Vinyl Power Cord



WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

FCC REGULATORY STATEMENT

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.