

3pk Indoor Remote Control with Single Keychain Transmitter

3 Single grounded outlet receivers

Specifications:

Rated:120VAC/60Hz/8A/960W Resistive
5A/600W Tungsten
500VA Electronic Ballast

Battery: CR2032 lithium battery (included)

Frequency: 315 MHz

INSTRUCTIONS:

- 1 Plug the receiver into a 120VAC electrical outlet.
- 2 Plug your electrical device(s) into the receiver. Make sure that your electrical device is powered ON.
- 3 Use the buttons on the Remote Control to turn your device(s) ON and OFF.

COMMAND1 TRANSMITTER PAIRING:

Note: Your Command1 Transmitter and Receiver contained in this package are pre-programmed and ready to use. Command1 Pairing is only required for using additional transmitters.

This unit is equipped with patented Command1 technology. All Stanley indoor and outdoor transmitters bearing the Command1 logo have the ability to be paired with all Stanley indoor and outdoor receivers. Please follow the directions below to pair a transmitter to your receiver.

- 1 Locate the power [ON/OFF] button on the receiver.
- 2 Press and hold the power button for 3 seconds. The LED power indicator will begin to flash slowly.
- 3 On your transmitter, (LED indicator still flashing slowly) press the [ON] button, wait 2 seconds, and then press the [OFF] button. The LED indicator will now stop flashing.
- 4 You have successfully paired the transmitter to your receiver.


RESETTING THE UNIT

You can reset and remove all paired transmitters on your receiver by doing the following:

- 1 Press and hold the receiver's ON/OFF button for 3 seconds. The LED indicator will begin to flash slowly. Continue to hold for an additional 3 seconds. The LED indicator will now begin to flash rapidly. Release the ON/OFF button for 1 second and press once again to confirm reset. The LED indicator should now be OFF.
- 2 Your unit has now been reset and does not have any paired transmitters. (Note: After reset, pairing is required to use the transmitter shipped in this package.)

BATTERY INFORMATION AND REPLACEMENT:

The Remote Control uses a 3 volt CR2032 lithium battery. To replace, pull battery tray tab located at the bottom of the transmitter. Insert a new CR2032 lithium battery, making sure to match up the + and - polarity markings. Slide the cover back in. To test, press the ON or OFF buttons to make sure the LED lights up. Do not dispose of batteries in fire. Batteries may explode or leak.

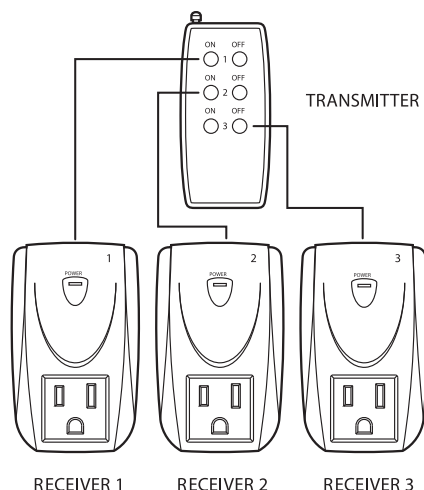

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1 Reorient or relocate the receiving antenna.
- 2 Increase the separation between the equipment and receiver.
- 3 Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- 4 Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

DO NOT splice, repair, or modify. Unplug when not in use. Fully insert plug. DO NOT use damaged remote sets. Inspect periodically. Use within the electrical rating marked on the remote set. DO NOT plug in more than a total of 960 watts in this remote set. If watts are not marked on appliance, multiply ampere rating (on nameplate) by 120 to determine equivalent watts. Add determined watts for each plugged-in appliance or lamp (sum of watts on bulbs) to find total watts being used. Operating temperature range 0°C (32°F) to 45°C (113°F).

- Only use the batteries specified and be sure to match the + and - polarity markings.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be used for a long time.
- Do not dispose of batteries if fire. Batteries may explode or leak. As with all small items, these batteries should be kept away from children. If swallowed, seek medical attention immediately.

**This item is a Radio Frequency device (RF), and as such the range of the remote control is dependent on many factors. Actual operational distance will vary based on walls and line of sight obstructions, and other nearby electronic devices.

THREE YEAR LIMITED WARRANTY:

If within the first year from date of purchase, this unit fails due to a defect, exchange where purchased, or ship it prepaid with proof of purchase to THE NCC, 140 58th Street, P.O. Box 67, Brooklyn, New York 11220. Units that fail to operate during the second or third year from date of purchase must be shipped prepaid with proof of purchase to THE NCC. We will replace unit. This guarantee excludes normal wear and tear and damage resulting from accident, alteration, or misuse. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

NOTE: If you are experiencing interference between 2 devices, please follow the instructions below:

CHANNEL SELECTOR:

The back of your transmitter is equipped with a channel selector switch to prevent interference between devices around your home. To prevent interruption between 2 devices, set your transmitter to an alternate channel. Transmitter channel codes are as follows: A, B, C, D.

Location: Peel off the sticker located above the word "channel" on the back of the transmitter to expose the channel selector switch.

Be aware that every time a channel is changed Command1 Transmitter Pairing is required. See Transmitter Pairing instructions.

Problem	Solution
The receiver doesn't turn on	Make sure the AC power cord is securely plugged into an AC power outlet. Unplug the unit for a moment, and then plug it back in again. Check the outlet by plugging in another device.
The transmitter doesn't work	Make sure the battery is fresh. Stand closer to the receiver. The range should be up to 80ft. Doors or walls will reduce the effective range.

SAVE THESE INSTRUCTIONS!

Customer Service Assistance: Toll Free 1-800-730-3707

Hours of Operation: 10AM to 6PM, EST, Monday - Friday

Stanley and the Stanley logo are registered trademarks of Stanley Black & Decker, Inc., or one of its affiliates, and are used under license. Manufactured and distributed by: The NCC Brooklyn, NY 11220 • www.thencc.com • © 2014 The NCC

Made in China