

Wireless Key Finder Instruction

Product Introduction:

This key finder includes two parts. One is the Transmitter, the other is the Receiver. The Transmitter has button on the face and upon pressing the button on it, the lost item which attached by the Receiver will beep and light flash. Then you can find the lost items easily.

Operation Direction:

1. Remove batteries and plastic sheet from Transmitter and Receiver.
2. Insert battery back into Transmitter
3. Now insert battery into the Receiver ; Please check whether this Receiver will beep and its light flash with beep's rhythm.If it beep and light flash,it stands electricity has been led into the Receiver well.
4. Press Button on Transmitter **during 20 seconds** upon finishing Step 3. Please check whether Receiver beeps twice and light falshes twice,too.If yes, it stands Receiver has been programmed with Button on Transmitter. And this Button will control and help find the Receiver.
5. Since the Receiver is programmed with the Button well. Please hold and press the Button for several seconds until the Receiver beeps and flash.(**This procession, please press the button without release until Receiver beeps. As in order to save power consumption, all Receivers work intermittently. That Receiver is supplied with power per 4 seconds. So sometimes when you press the button, but the Receiver doesn't work due to its stand-by time**)
6. Test configuration by pressing and holding button. It should beep continuously. This means all are correct.
7. If it doesn't work please make sure that you had followed the 6 steps above.

Trouble Shooting

1. Receiver doesn't beep. Try replacing battery then press the button on Transmitter for around 5 seconds until Receiver beeps.
2. Receiver constantly beeps. This is a low battery warning- battery needs replacement.
3. The sticking rubber sheet doesn't work. Lightly dampen rubber sheet and it will work better.

Specifications

Voltage: 12V (transmitter) 3V (receiver)

Batteries: 27A ,12V for Transmitter, CR2032 ,3V for Receiver

Remote Distance: 25-30 meters

Sound Volume :85-90 dB

Frequency: 433.92 MHz

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.