

True Wireless Earphone

TWS Series

THE MANUAL

 
1 HOW TO CONNECT

Support V4.2 or above versions of Bluetooth devices

1. Pairing the Earbuds
- a. Turn off the earbuds.
  - b. Press both earbuds power button at the same time and hold the power button for about 8 seconds until the Bluetooth light indicator flashes between blue and red alternatively, you can hear a voice message, double-click the left earbud's button, you can hear "Searching...", then left and right Headset began to automatically match, match the shell after the success of the left to hear the channel prompt.
  - c. The above steps to do once, the machine will automatically match in the future.

2. Connect to a bluetooth device
- a. Press and hold the power button for 4 seconds until the bluetooth light indicator flashing, after hear the channel prompt and prepare to pairing.
  - b. Select "S6tws" or box label model from the list of Bluetooth devices in your mobile phone.

When the device is connected to the headset only one headset has sound, It means the machine pairing is not successful, please refer to the first step to re-operation



 
2 HOW TO WEAR



 
**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 


- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation.

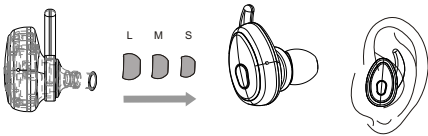Choose your own ear cap

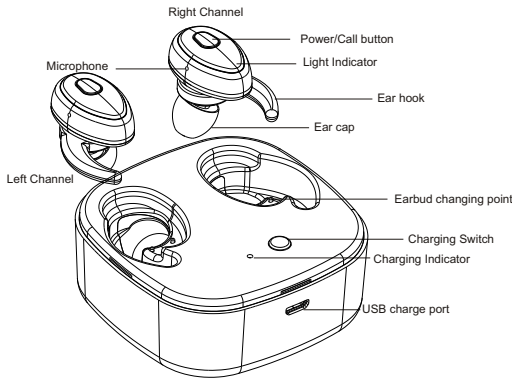

3 HOW TO USE



Button functions	
Button	Function
 or 	<ul style="list-style-type: none"><li>• Press and hold the call button for 4 seconds to turn the earphones on or off.</li><li>• Press the call button to answer or end a call.</li><li>• When there is an incoming call, press and hold the call button 2 seconds to reject the call.</li><li>• When standby, Press twice in succession to redial the last call.</li><li>• During music playback, short press to pause or play the music.</li><li>• In the shutdown state, press and hold the button for 6-8 seconds to force into the pairing mode.</li></ul>
	<ul style="list-style-type: none"><li>• Press the button charging indicator on start to charge the earbuds, press twice charging indicator off stop to charge the earbuds.</li><li>• In general, the headset is placed inside the box, Earbuds will automatically charged.</li></ul>

- When the headset is fully charged, the headset light changes from red to blue

Charging of earphones

The earphones are equipped with a built-in rechargeable battery which is not removable. When using the device for the first time, ensure that the battery is fully charged.

Connect a charging cable to the charge port of the earphones, and plug the cable into a standard USB 5V outlet. During charging, the light indicator will flashes. When the device is fully charged, the indicator will turn red. Then unplug the travel charging cable from the USB power outlet and the charging box.

- ☒ Use only charging adapter approved by authentication. Unapproved or non-standard USB 5V outlet may result in damaging the earphones, or explosion under extreme conditions, and will void the product warrant.
- Repeated charging and discharging of the earphones will decrease the battery performance over time. This is normal for any rechargeable battery.
- Do not make or receive calls during charging. To answer a call, always unplug the charging cable first.
- To conserve energy, if not using, unplug the travel charging cable from the earphones. Because the travel charger does not have a power button, please unplug the travel charging cable from the socket before disconnecting from the power source. During usage, the travel charging cable should be kept close to the socket.

When the earphones battery level is low  
The headphones will repeat a "battery level low, please recharge" voice message, and at same time, the light indicator will blink red. If the headphones are out of power during a call, the call is automatically transferred back to the phone.