

Transmitter Instructions

Introduction

Plug in (Plug in any audio device to the Transmitter).

Transmit (Transmitter uses FM frequencies to wireless broadcast up to 20 ft).

Tune in (Tune into the Transmitter with the Radio loud speaker, Car radio or any radio).

Transmitter

Channel 1: 88.5MHz

Channel 2: 89.5MHz

Using the Transmitter

Slid Channel OFF/CH1/CH2

Plug Audio cord into jack

Connect Audio cord to Audio device: MP3 play, DVD, etc.

FCC NOTICE

1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.