

Bluetooth Garden Speaker

NV-03345



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting started

- Remove the Bluetooth speaker & accessories from the box.
- Remove all packaging from the Bluetooth speaker.
- Retain instructions for future reference
- Place the packaging inside the box to either store or dispose of safely.

In the Package

- Bluetooth Garden Speaker
- AUX Cable
- USB Charging Cord
- Remote Control
- Instruction Manual

Features

- Enjoy music wirelessly
- Connect via Bluetooth or AUX in.
- Every time the speaker is turned on, it connects to last connected device automatically
- Built-in rechargeable battery
- Clear sound with bass effect
- Music listening time 8 to 10 hours

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

Do not put objects into any of the openings.

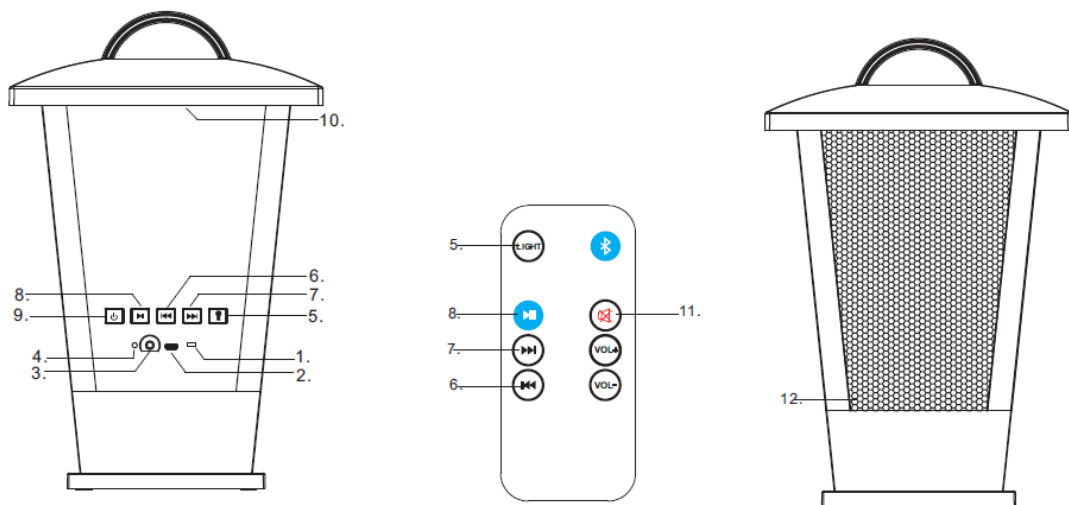
Keep the unit free from dust, lint etc.





Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This product is not a toy.

Description of Parts



1	ON/OFF switch
2	Micro USB charging slot
3	Line in 3.5mm jack
4	LED Indicator
5	LED light switch
6	 button: Decrease Volume & Previous track
7	 button: Increase Volume & Next track
8	 button : Pause and Restart music
9	 button :Power button & Repair bluetooth
10	LED light
11	"MUTE" function
12	Receiver of remote

INSTRUCTIONS FOR USE

Charging Instructions

The speaker comes with a built in rechargeable battery. Before using it for the first time it is recommended you charge the battery fully.

Connect the USB cable to a computer USB port and the Micro USB plug to the charging slot of the speaker(2). The Red LED illuminates(4) while the speaker is being charged. It takes around 3-4 hours for the unit to fully charge. When the battery is fully charged the red LED will turn off. When the battery is low, the Speaker will emits twice beep tones every 30 seconds. When this occurs, please charge the speaker.

Turning on/off the speaker

There is an on/off switch at the back of the speaker. You can turn on/off the speaker with this switch. In order to save power, put the switch to off position when the speaker is not in use.

Pairing the speaker with Bluetooth devices (phone or music device)

Switch on the speaker(1), and short press the Power button(9), the LED indicator will flash. Place the speaker and Bluetooth device (phone or music device) so that they are no further than 3 feet apart;

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the speaker "**BT SPEAKER**" from the list of available Bluetooth devices.

If required, enter the password '0000' to confirm & finalize pairing.

Once paired successfully, the blue LED indicator will bright.

You can now start to use the speaker.

If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device please long press Power button(9) to search for the new device.

Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your device's user manual for further information.


Function Summary





Listening to Music

Once the speakers are paired with your device you can stream music wirelessly through the speaker. Select the track you wish to listen to and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information.

Control Function

If your Bluetooth device supports AVCRP (Audio/Video Remote Control Profile) you can use the Bluetooth speakers to perform basic remote functions once paired while listening to music. The functions in the below table may differ depending on your device. Please refer to your device's user manual for further information.

Function	Operation	Button
Previous track	Playing music	A short press on the  button once

Decrease Volume	Playing music	A long press on the  button once
Next track	Playing music	A short press on the  button once
Increase Volume	Playing music	A long press on the  button once
Pause and Restart	Playing music	A short press on the  button once

An indication tone will alert you when the volume is adjusted to the maximum level.

Please note that your Bluetooth device must support AVCRP (Audio/Video Remote Control Profile) in order to operate the above functions.

AUX cable

You may also connect any device with headphone socket using the 3.5mm AUX cable(included), Connect this cable to your headphone socket of your device and to the AUX input(3).

Use your media device's music controls to control the music and volume. The volume control will work on the remote control and the button on back of Garden Speaker, but the rest will not function when using Garden Speakers as a wired speaker.

Note: When connect AUX cable, the BT mode will disconnect

LED light

Switch on the speaker.

You can short press the LED light button(5), the LED light will bright, and short press this button again, the LED light will turn off.

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tones maybe vary depending on your mobile phone.
- When the volume is adjusted to max, you will hear an indication tone.

LED indicator

Please refer to the below tables for a list of the LED statuses while using the speaker.

LED Indication

LED indicator	Status of the speakers
Red LED	Charging
Red LED turns off	Charging Completed
Blue LED flashes quickly	Pairing mode

Tone Indication

Indication tone	Status of the speakers
Emits short tones	Enter pairing mode
Emits tones twice every 30 seconds	Low Battery Power

Care and Maintenance

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the speaker in a fire as it will result in an explosion.
- Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.
- Don't let the speaker fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the speaker as this can damage the speaker or cause injury.

Specifications

Bluetooth specification	Bluetooth V3.0
Bluetooth profiles	HSP, HFP, A2DP and AVRCP
Operating distance	33 Feet, Class II
Working time	Music: 8 to 10 hours
LED light work time	10 hours
Standby time	28 hours
Charging input voltage	DC5V---1000mA
Charging time	About 5-6 hours
Dimensions	200 x 180 x 300mm
Weight	1100g

Note: Battery life & charging time may vary based on usage & types of devices used.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.