



Waggin' Whitetail™ Instruction Manual

Model No.62606

(Includes: Decoy Housing, Tail, Remote, Lanyard, Hardware, Strap & Batteries)



PLEASE READ CAREFULLY BEFORE USE

IMPORTANT

For your protection, please carefully read these warnings, precautions and safety/operating instructions completely before operating this product. Follow these instructions closely and keep this manual for future reference.

WARNING

To reduce the risk of fire, electrical shock or product damage/failure,

- Do not expose unit with the battery door open to rain, moisture, dripping or splashing. Do not open or close the battery door with wet hand. Completely wipe off water on unit and door before opening.

- Do not lay product on moist ground or submerge in water.

- DO NOT OPEN CASE HOUSING. UNINSULATED, 'DANGEROUS VOLTAGE' WITHIN PRODUCTS ENCLOSURE. DO NOT REMOVE HOUSING COVER. THERE ARE NO USER - SERVICEABLE PARTS INSIDE, REFER SERVICING TO PRIMOS® CUSTOMER SERVICE.

- Only use batteries as specified in this user manual and install according to correct polarization. Failure to follow may result in leaking or exploding batteries, damage to product, fire or personal injury. Do not handle damaged or leaking batteries.

- Do not expose to extreme heat. Do not leave product and/or batteries exposed in direct sunlight inside a vehicle, or other contained environment for a long period of time.

WARNING

Primos decoys are so accurate you might attract other hunters, as well as game. The user of this product assumes all risk of injury in association with the use of this product.

MODIFICATION WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty of this equipment.

OPERATING TEMPERATURE

- Recommended storage temperature range -10°F to 140°F

- Recommended operating temperature range 20°F to 120°F

WARNING

To avoid possible product damage and/or injury, NEVER INSTALL DIFFERENT TYPES OF BATTERIES in the product at the same time. Failure to follow may result in leaking or exploding batteries, damage to product, fire or personal injury. Do not handle damaged or leaking batteries.

BATTERY INSTALLATION (1 L1028 (A23) & 2 AA Batteries Not Included).

Remote	Remove battery cover and install 1 L1028 or A23 12V battery following polarity instructions in battery compartment. Reinstall battery cover and tighten with screw driver or coin.
Decoy Housing	Remove battery cover and install 2 AA batteries following polarity instructions in battery compartment. Reinstall battery cover and tighten with screw driver or coin.

OPERATION INSTRUCTIONS

IMPORTANT NOTE: Check your local and state hunting laws for legal and recommended use of electronic motion decoys.

Attach tail to decoy housing so tail is pointed down. Turn power on both decoy housing and remote before using.

NOTE: Remote control buttons are designed to activate command when button is completely pressed down on the remote.

	<p>TWITCH MOTION [Located in center of remote] – Produces short single tail twitch motion. Motion gives approaching deer confidence to continue their approach. Note: When signal is sent LED activates.</p> <p>WAG MOTION [Located toward bottom of remote] – Produces single tail wagging motion. Motion gives distant deer confidence all is well to move in closer. Note: When signal is sent LED activates.</p>
	<p>POWER BUTTON – Standard ON/OFF functionality</p> <p>RED LED LIGHT IN BUTTON – Indicates power is on.</p>

.ATTACHING WAGGIN' WHITETAIL™ TO DEER DECOY (DEER DECOY NOT INCLUDED).

NOTE: Primos does not recommend transporting Waggin' Whitetail™ attached to decoy in and out of field. Remove Waggin' Whitetail™ and transport separately.

<ol style="list-style-type: none">1. Using included decoy hole pattern, attach 4 screws to deer decoy so bolt head stands off decoy approximately 3/8 inch.2. Attach motor housing by aligning holes with 4 bolts and sliding housing down so housing is locked into slots. <i>Note: May need to adjust bolt height depending on deer decoy design.</i>	
--	--

.ATTACHING WAGGIN' WHITETAIL™ TO TREE OR POST.

<ol style="list-style-type: none">1. Thread strap thru 2 slots on decoy housing.2. Wrap strap around tree / post and connect buckles together. Pull strap thru buckle to secure to tree / post.	
--	--

. WAGGIN' WHITETAIL™ PLACEMENT .

Place decoy within 40 yards of your location. *Hunting Tip: Keeping decoy within 25 yards allows for closer shots.*

IMPORTANT NOTE: If decoy is placed at long distances, on the ground, in thick cover, in under brush, or has obstructions between remote and decoy always check remote function with decoy. If remote does not operate decoy, decrease decoy distance.

. CARING FOR YOUR WAGGIN' WHITETAIL™ .

Your caller contains sensitive electronic components that can be permanently damaged if exposed to excessive shock or vibration. To minimize the risk of damage to your unit, avoid dropping your unit and operating it in high-shock and high-vibration environments.

- Do not store your unit where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.
- Do not expose to prolonged exposure to moisture. This can cause this unit to malfunction.

- Never use a hard or sharp object to operate this unit or damage may result.

Cleaning the Unit:

The Waggin' Whitetail™ Decoy is constructed of high-quality materials and does not require user maintenance other than cleaning. Clean the outer casings using a cloth dampened with a mild detergent solution, and then wipe dry and allow to air dry.

Avoid chemical cleaners and solvents that can damage plastic components or faux fur tail.

Caution: The decoy is water resistant - not waterproof.

. TROUBLE SHOOTING .

Check batteries in decoy and remote control if decoy is not functioning properly.

Remote is not controlling decoy properly. Move remote closer to decoy until remote properly controls decoy.

If decoy continues to function incorrectly, call Customer Service at 601-879-9323 or email service@primos.com.

. FCC STATEMENT .

Changes not expressly approved by Primos could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an output on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product complies with FCC OET Bulletin 65 radiation exposure limits set forth for an uncontrolled environment. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

. IC STATEMENT .

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

. ONE YEAR SERVICE GUARANTEE .

1 YEAR LIMITED WARRANTY

Terms: You MUST keep a receipt for “Proof of Purchase” for any warranty claims on your product. More details below.

Please contact the Primos® Customer Service Team with any comments, questions, problems or return requests. Call (601) 879-9323 or email service@primos.com.

RETURN THIS PRODUCT TO PRIMOS® HUNTING
DO NOT SEND BACK TO THE STORE

604 First Street, Flora, MS 39071 • Office 601-879-9323 • Orders 1-800-523-2395 • Fax 601-879-9324 •
primos.com

In the event warranty service is needed, please contact Primos® Customer Service to obtain a Return Merchandise Authorization (RMA) number. Once you have secured a RMA number, you will be required to:

1. Write RMA number in large / visible print on outside of package.
2. Remove batteries from product and pack in well-padded or highly protective box. Primos® will NOT be responsible for damage incurred in returning product for repair / replacement.
3. Include Proof of Purchase. ANY ITEM RETURNED WITHOUT PROOF OF PURCHASE WILL NOT BE ACCEPTED.
4. Send product prepaid to: Primos® Hunting, Customer Service Department, 604 First Street, Flora, MS 39071.

For warranty or service information, email service@primos.com or call Customer Service at (601) 879-9323.

. DISCLAIMERS .

Primos® makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, or for damages resulting from the use of the information contained therein. Primos® reserves the right to alter the features and contents of this publication, hardware or software without obligation or advance notice.

Warranty does not extend to any accessories used with this product.

Primos® is not responsible if you use this product for illegal purposes.

Primos® shall not be obligated to perform preventative maintenance, installation, deinstallation, or maintenance.

The illustrations in this manual are for instructional purposes only and may not represent actual product exactly.

Printed in China