

PREMIUM PHOTO PAPER: GLOSSY

To achieve optimum image results – please read instructions prior to printing

Printworks Premium Photo Paper allows you to print high quality photos from your inkjet printer. The bright, glossy finish gives excellent contrast and produces sharp, photo quality images from digital cameras, CD's, scanners, the Internet and more.

PRODUCT HANDLING AND STORAGE

Always handle photo paper carefully. To avoid getting fingerprints on the printable surface, always handle the paper by the edges.

- Keep paper away from moisture and high humidity.
- To extend the life of your prints, do **not** expose printed or unprinted paper to bright lights or direct sunlight for long periods of time as ultra-violet rays have damaging effects on **any** photo paper.

Step 1: Capture your image

- Use a digital camera, scanner, CD or the Internet to capture an image and load into your computer.

Step 2: Manipulate your image

- You can enhance images using any software program that handles graphics. You may need to adjust for color, brightness and size to achieve optimal results ...follow instructions of your software program.

Step 3: Print your image

 
 
- Select "Print" and "Name" of printer being used
- Select "Properties"
- Select "Paper Size" you are using and "Borderless" if desired
- **Printer Settings** – Select printer settings from the chart below:

CANON	Printer Model	Cartridge	Color/Print/Mode/Graphics	Paper Type	Print Quality	Advanced (Customize) (Other)
	8200	Standard	Super Photo	Photo Paper Pro		Advanced Tab - Print Quality: Drag slider bar
	S300, S330	Standard	Default	Plain Paper		
	S400, S450	Standard	Default	Plain Paper	Default	
	S500, S520, S530, S530D	Standard	Photo	Glossy Photo Paper	Custom	Advanced>Diffusion, Image & Photo Optimizer, Whole page
	S600, S630, Pixma iP4000, iP6000D	Photo	High	Glossy Photo Paper	High	Effects>Auto, Image & Photo Optimizer
	S800	Standard	Photo	Plain Paper	Custom	Manual>Intensity +10, Brightness>Light
	S900, S9000	Photo	Custom	Plain Paper	Custom	Advanced>Fine, Diffusion, Color Adjustment>Intensity +10, Effects>Image & Photo Optimizer, Apply Whole Page
	bjc-85	Standard	Super Photo	Glossy Photo Paper	Custom	Advanced>Fine, Image & Photo Optimizer Apply Whole Page, Effects> +10 Intensity
	I900D	Standard	High	Photo Paper Plus Glossy	High	
	I320, S750	Standard	Custom	Glossy Photo Paper	Custom	Intensity+10, Effects>Image & Photo Optimizer Pro, Apply Whole Page
	I450, I470D	Standard	Auto	Glossy Photo Paper	Custom	Intensity+10, Brightness-Normal, Effects>Image & Photo Optimizer Pro, Apply Whole Page
	I550	Standard	Custom	Photo Paper Plus Glossy	Custom	Image & Photo Optimizer Pro, Apply Whole Page
	I850	Standard	Photo	Photo Paper Plus Glossy	Custom	Image & Photo Optimizer Pro, Apply Whole Page
	I950	Standard	Fine	Plain Paper	Custom	
	I960	Standard	High	Photo Paper Plus Glossy	High	
	MP730	Standard	Photo	Photo Paper Pro	Custom	Level 1, Check Diffusion
DELL	Printer Model	Cartridge	Paper Type	Print Quality	Advanced (Customize) (Other)	
	A940	Color	Photo/Glossy	Best	Default	

EPSON	Printer Model	Paper Type	Mode		
	C60	Matte Paper – Heavy Wt.	Advanced> Photo-1440 dpi, High Speed-Off, Edge Smoothing ON		
	C62	Premium Glossy Photo Paper	Best Photo, Advanced> High Speed Off		
	C64, C84, CX5400, CX6400	DURABrite Glossy Photo Paper	Best Photo, Advanced>High Speed-Off, Turn Off PhotoEnhanced		
	C80	Premium Glossy Photo Paper	Advanced> Photo-1440 dpi		
	C82	Plain Paper	Best Photo, Advanced> High Speed Off		
	R200	Glossy Photo Paper	Best Photo, Advanced>High Speed-Off, Turn Off PhotoEnhanced		
	R800	Premium Glossy Photo Paper	Best Photo, Advanced>High Speed-Off, Turn Off PhotoEnhanced		
	780, 785, 890, 980, 1280, 1290	Premium Glossy Photo Paper	Best Photo, Advanced> High Speed Off, Turn Off PhotoEnhanced4		
	820	Photo Quality Ink Jet Paper	Best Photo, Advanced> High Speed-Off, Turn Off PhotoEnhanced		
	825	Photo Quality Ink Jet Paper	Best Photo, Advanced> High Speed-Off, Turn Off PhotoEnhanced		
	925	Plain Paper	Advanced> Color Controls> Gamma 1.5, Brightness +6, Saturation -2		
	960	Premium Glossy Photo Paper	Best Photo, Advanced> Photo-1440 dpi, High Speed Off,		
	2100, 2200	Plain Paper	Advanced> Photo-720 dpi, High Speed Off, PhotoEnhanced4		
HEWLETT PACKARD	Printer Model	Paper Type	Print Quality		
	100, 130, 145, 230, 245, D5160	HP Photo Papers	Best		
	660 Series, 690 Series	Glossy Paper	Best		
	720 Series	Deluxe Photo Paper	Best		
	850 Series	Premium Ink Jet Paper	Best		
	870, 880, 890, 895, 2000	Premium Photo Paper	Best		
	920c, 1315, 7260, psd2175, Psc2410, psc2510	Other Photo Papers	Best		
	930c, 932c, 970c, 1100c, 1220c, 2200, 6127	HP Premium Plus Photo Paper, Glossy	Best		
	940c, 950c, 960c, 990c, 2230, cp1160	HP Premium Plus Photo Paper, Glossy	Best		
	Psc1210, 3320, 3420, 3425, 4110	Photo Paper	Best		
	1215, 1218, 1315, 7130	HP Premium Photo Paper	Best		
	3820, 6110, 7110	HP Premium Plus Photo Paper, Glossy	Best		
	5550, 5650, 7150, 7350, 7960, 9300, psc2110	HP Premium Plus Photo Paper, Glossy	Best		
	6110	HP Premium Plus Photo Paper, Glossy	Best		
	7550, psc2210	HP Premium Plus Photo Paper, Glossy	Normal		
	7660, 7760, 7960	HP Premium Plus Photo Paper, Glossy	Best		
LEXMARK	Printer Model	Cartridge	Paper Type	HP Premium Plus Photo Paper, Glossy	Advanced Settings
	5700, 5770, Z51	Standard/Photo	Glossy/Photo Paper	High 1200 dpi	Default
	P707, Z54	Color	Photo/Glossy	Best	Default
	X75, Z23, Z25, Z33, Z35, Z45, Z55, Z65, Z65P	Color	Photo/Glossy	Best	Default
	X1150, X5150, X605	Color	Photo/Glossy	Best	Default
	Z22	Color/Photo	Glossy/Photo Paper	High 1200 dpi	Default
	Z42, Z43	Color/Photo	Glossy/Photo Paper	Maximum 2400 dpi	Default
	Z52, Z53	Color	Glossy/Photo Paper	Maximum 2400 dpi	Default
	Z705	Color/Photo	Photo/Glossy	Best	Default

-for brands and models not in table, refer to your printer manual for instructions on settings for glossy photo papers or visit our website for the most up-to-date settings: www.myprintworks.com

- **Test Print** – We suggest first printing the image on a plain piece of paper to ensure desired size and location of image. Note: Image quality will not be as good when printed on plain paper.
- **Load Media** – Load a single sheet of Premium Photo Paper into your printer according to your printer type (See below). Image is to be printed on glossy or shiny side of the paper. Although some printers may allow stack feeding, **we recommend single sheet feeding.**

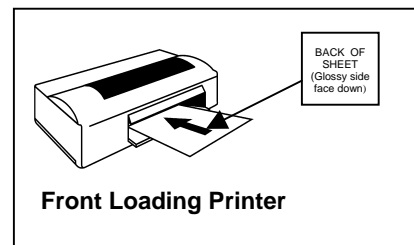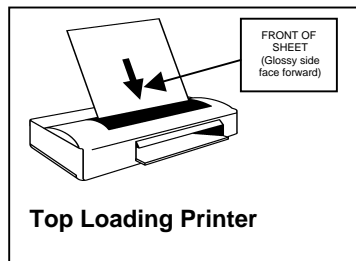

- Let sheet dry for 15-20 minutes before handling to ensure it has dried thoroughly. Allow 24hrs. before placing in frame or album.
- For additional information or assistance: www.myprintworks.com or e-mail us at printworks@pariscorp.com



Capture those special moments forever with Printworks Premium Photo 4 x 6. The small size is ideal for printing and sharing your favorite photographs, and fits in standard photo albums and frames.

The high gloss finish creates photo rich snapshots with vibrant colors and crisp details. The heavyweight paper feels just like traditional photos.

 
 
Instructions: For best results, read and follow all instructions before proceeding.

Printing Your Image

Printworks Photo papers are compatible with most color inkjet printers.

Test Print: We recommend first printing the image on a plain piece of paper to ensure desired size and location of image. Note: Image quality will not be as good when printed on plain papers.

Load Media: Printworks Premium Photo 4 x 6 has a printable and non-printable side. Load a single sheet of paper into your printer according to your printer type. (Refer to below diagrams) The image is to be printed on the glossy or coated side of paper. Although some printers may allow stack feeding, **we recommend single sheet feeding.**

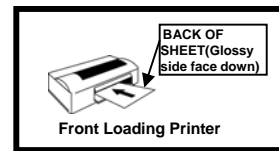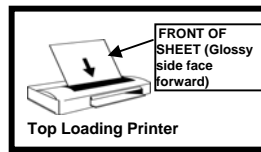

PRINTER SETTINGS

Printworks Premium Photo 4 x 6 is compatible with most inkjet printers. Select printer settings from the chart below:

	Media Type	Print Quality	Paper Size	Other
HEWLETT PACKARD 600, 700, 800, 900, 1000, 1200, 2000 SERIES	HP Premium Photo Paper Glossy	Best	Borderless 4X6	--
HEWLETT PACKARD Photo Smart P1000, P1100, P1200, P1300 SERIES	HP Premium Photo Paper Glossy	Best	Borderless 4X6	--
CANON S200, S300, S400, S500, S600, S800 SERIES	Photo Paper Pro	Fine (Custom: Set)	4x6 Orientation: Landscape Check Borderless Printing	--
CANON S600, S630, Pixma IP4000, IP6000D SERIES	Glossy Photo	High	4x6 Orientation: Landscape Check Borderless Printing	Effects> Auto, Image & Photo Optimizer
EPSON 400, 600, 700, 800 & 900	Premium Glossy Photo Paper	Mode: Custom Custom Settings: Advanced Print Quality: Best Photo High Speed: Off	Borderless 4X6	--
EPSON STYLUS PHOTO 700, 800, 900, 1200 & 2200, R200 & R380 SERIES	Premium Glossy Photo Paper	Mode: Custom Custom Settings: Advanced Print Quality: Best Photo Turn Off Photo Enhanced High Speed: Off	Borderless 4X6	--
LEXMARK 5000, 7000 & Z SERIES	Glossy Photo Paper	High	Customize: 4x6 Orientation: Landscape	Natural Color

-for brands and models not shown above, refer to your printer manual for instructions on settings for glossy photo papers or visit our website for the most up-to-date settings: www.myprintworks.com

