# **Product Introduction**

EF—6630 LCD FM transmitter, a high quality product that adopted advanced PLL technology, stable frequency, crisp sound, has 200 transmitting channel.

Unique streamline appearance, smart, user-friendly. When you travel outside or stay at home with it, beautiful music will always surround you, with royal enjoyment.

### **Function Introduction**

- 1. Searching-channel Function, The button UP and DOWN, searching and fixing available transmitting channel between 88.1~107.9MH<sub>Z</sub>:
- 2. E-switch Function, with delayed function of starting or shutting after a second.
- 3. Lighting-indication Function, the LED will shut off automatically after a few seconds to save energy.
- 4. Not need battery and car power, operate power from Ipode)
- 5. Memory Function, when restarting, the unit can memorize your last channel used before.

### **Technical Parameter**

1. Working Conditions:

Environment Temperature :  $-10 \sim +60 ^{\circ}\text{C}$ ,

## 2. Major technical Specs:

Working Voltage: 3V;

Working Current: 50mA±5mA;

Working Channel: 88.1~107.9M

Receiving Distance: About 5 meters

### **Installation Instruction and Caution**

1. Avoid high temperature, humidity and dust, and avoid using chemical solution to clean the unit, please clean it with soft-wet

wipe.

### Operation Instruction:

- 1, connect to its DC jack into ipod jack.
- Insert the audio connector into the audio output or earphone jack of MP3、CD、MD、IPOD player.
- 3. Play the ipod music to start it.
- 4. Press the searching channel button"↑"or"↓"to search your favorite channel. If you keep on pressing the button, the channel will skip fast.
- 5、 "88.1 When the channel indicates "88.1 MH<sub>Z</sub>", if you press the button "\pm",it will skip to "107.9MH<sub>Z</sub>".but the channel will not be stable untill a few seconds, and vice versa.
- 6. When you fix a channel, turn on your MP3. CD. MD. IPOD player, and then tune your radio channel to match the channel of the unit, you will hear the music played from your player.
- 7. If you hear noisy or unclear sound from radio, please switch the channel to another one, which had better is not occupied by the local station.