

**PRO-FORM®**


# Air Walker™

NO IMPACT TOTAL BODY WORKOUT

Model No. PPMC77751

Serial No. \_\_\_\_\_

Write the serial number in the space above for reference.

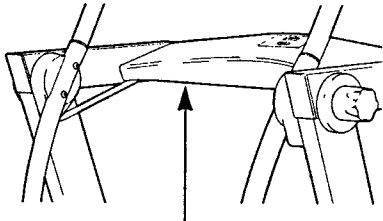

Serial Number Decal (under console)

## QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or find that there are missing or damaged parts, we will guarantee you complete satisfaction through direct assistance from our factory.

TO AVOID UNNECESSARY DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge to you.

CUSTOMER HOT LINE:

**1-800-999-3756**


Mon.-Fri., 6 a.m.-6 p.m. MST

## CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

PATENT PENDING

RELEASED TO  
FEB 20  
MANUFACTURING

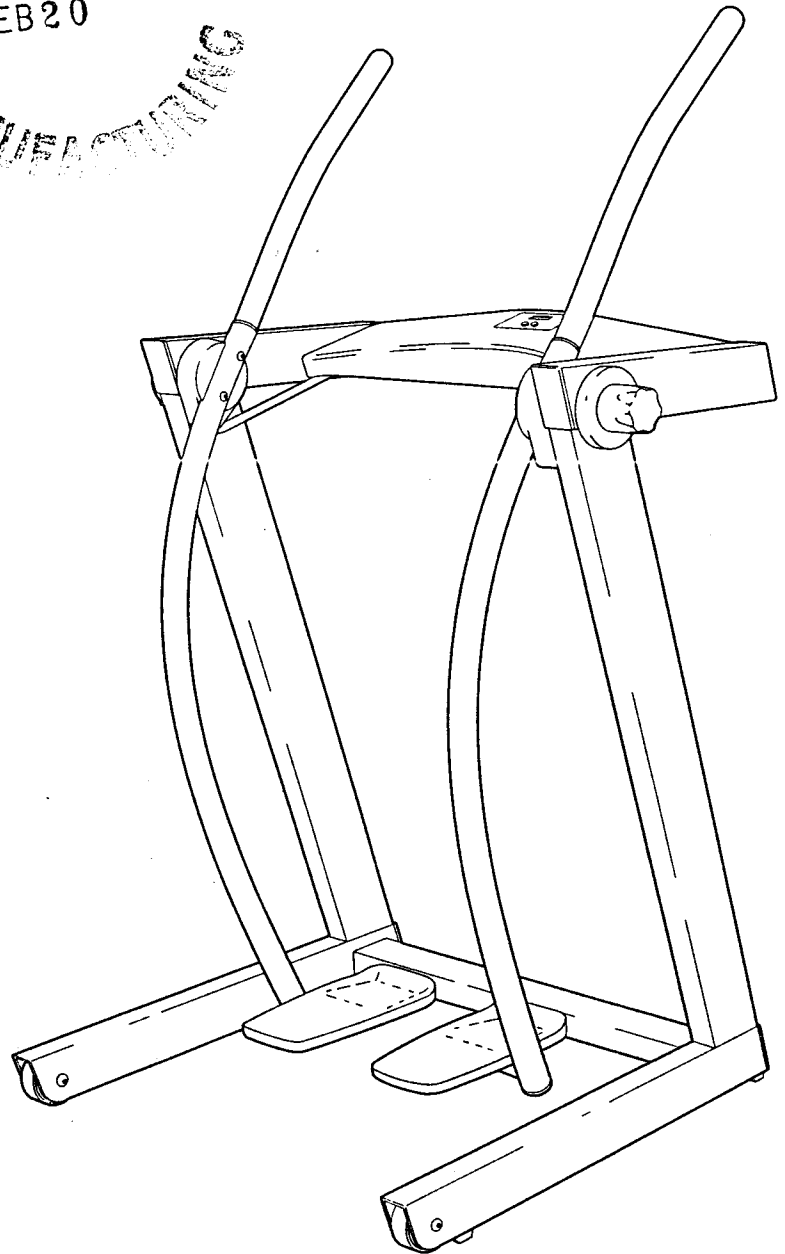

# USER'S MANUAL

# TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	2
BEFORE YOU BEGIN	3
ASSEMBLY	4
OPERATION AND MAINTENANCE	7
CONDITIONING GUIDELINES	9
PART LIST	10
EXPLODED DRAWING	11
ORDERING REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

RELEASED  
FEB 2  
MANUAL

## IMPORTANT PRECAUTIONS

**WARNING:** To reduce the risk of serious injury, read the following important precautions before using the AIR WALKER.

1. It is the responsibility of the owner to ensure that all users of the AIR WALKER are adequately informed of all precautions.
2. Read all instructions in this manual before using the AIR WALKER.
3. Use the AIR WALKER only on a level surface. Cover the floor beneath the AIR WALKER to protect the floor or carpet.
4. Be sure that there are no obstacles in front of or behind the AIR WALKER.
5. Inspect and tighten all parts regularly. Replace any worn parts immediately. Replace the link arms at least annually (the link arms are shown in the drawing on page 3).
6. Keep hands and feet away from moving parts.
7. Keep small children and pets away from the AIR WALKER at all times.
8. Do not wear loose clothing that could become caught on the AIR WALKER. Always wear athletic shoes for foot protection when exercising.
9. When you are getting onto and off the AIR WALKER, always tighten the resistance knobs, hold the handles firmly, and be sure that your body weight is centered directly over the foot pedals.
10. Use the AIR WALKER only as described in this manual.
11. If you feel pain or dizziness while exercising, stop immediately and begin cooling down.

**WARNING:** Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


# BEFORE YOU BEGIN

Thank you for selecting the innovative PROFORM® AIR WALKER. The AIR WALKER blends advanced engineering with contemporary styling to provide a no-impact, total body workout in the comfort of your own home.

For your benefit, read this manual carefully before using the PROFORM® AIR WALKER. If you have additional questions, please call our Customer Service Department toll-free at 1-800-999-3756, Monday

through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is PFMC77751. The serial number can be found on a decal attached to the AIR WALKER (see the front cover of this manual).

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

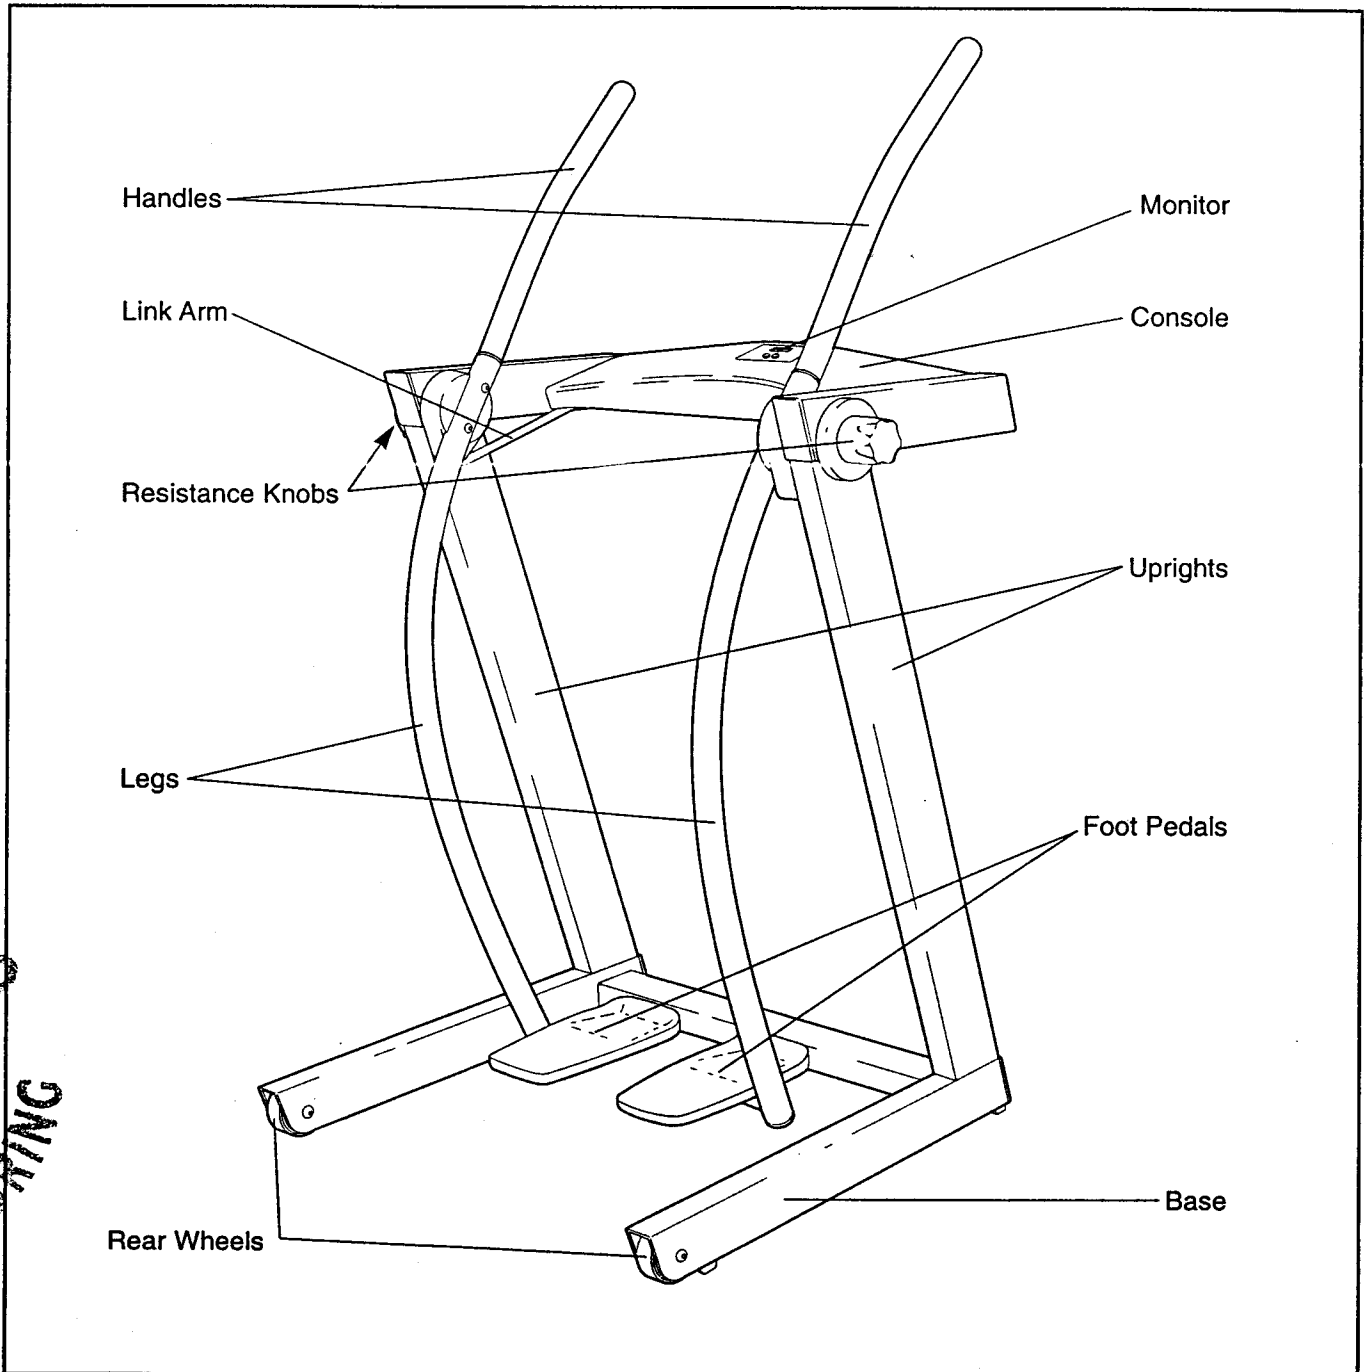



# ASSEMBLY






**Before beginning assembly, carefully read the following information and instructions:**

- Place all parts of the AIR WALKER in a cleared area and remove the packing materials; do not dispose of the packing materials until assembly is completed.
- Use the drawings in the box below to identify the small hardware used in assembly.

- Read each assembly step before you begin.
- Make sure that all parts are oriented as shown in the drawings. Tighten all parts as you assemble them, unless instructed to do otherwise.

**The following tools are required for assembly:**

- The included 7/32" allen wrench 
- Your own phillips screwdriver 

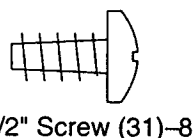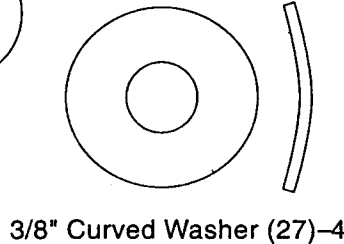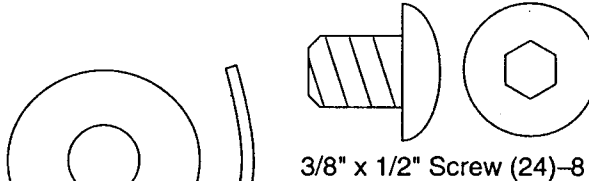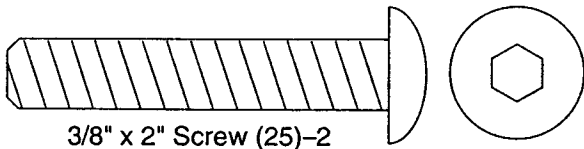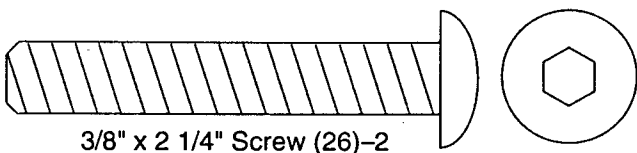


1. Before beginning assembly, be sure that you have read and understand the information in the box above.

Attach the Left Upright (3) to the Base (1) with two 3/8" x 1/2" Screws (24). **Do not tighten the Screws yet. Note: The Left and Right Uprights are marked with "Left" and "Right" decals for identification.**

Attach the Right Upright (4) to the Base (1) in the same manner.

2. Attach the Top Frame (2) to the Left and Right Uprights (3 and 4) with four 3/8" x 1/2" Screws (24).

Tighten the eight 3/8" x 1/2" Screws (24) used in steps 1 and 2.

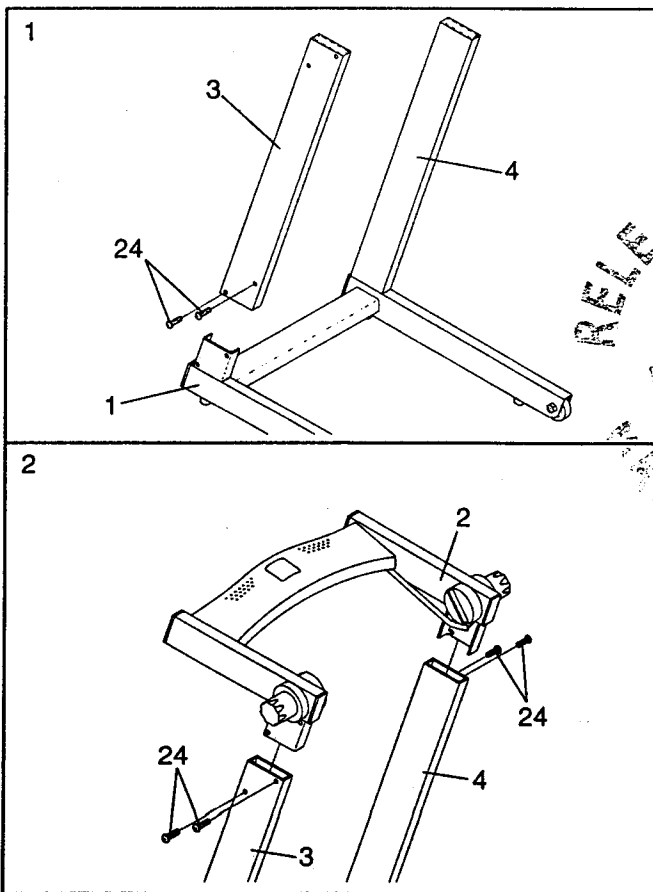

RELEASE  
FEB 20

3. Install two "AA" batteries (not included) in the Monitor (39). Alkaline batteries are recommended. **Be sure that the negative (-) ends of the batteries are touching the springs.**

Plug the Reed Switch Wire (44) into the Monitor (39).

See the inset drawing. Insert any excess wire into the Console (40). Snap the Monitor (39) into the Console. **Be careful not to pinch the wire between the Monitor and the Console.**

4. See the lower inset drawing. Attach a Pedal (28) to the Right Leg (7) with four #8 x 1/2" Screws (31).

See the upper inset drawing. Be sure that a Plastic Sleeve (41) is firmly inserted into the Right Leg (7). Insert the Right Handle (11) into the Right Leg. **Note: The Right and Left Handles are marked with "Right" and "Left" decals for identification. Be sure that you have the Right Handle.**




Slide a 3/8" Curved Washer (27) onto a 3/8" x 2" Screw (25). Insert the Screw into the upper hole in the Right Leg (7) and the Right Handle (11).

Slide a 3/8" Curved Washer (27) onto a 3/8" x 2 1/4" Screw (26). Insert the Screw into the lower hole in the Right Leg (7) and the Right Handle (11). **Note: The Screws must be inserted from the side shown.**

5. Refer to drawing A. Find the Right Hub Cover (19). The Right Hub Cover can be identified by the angle of the slot and the location of the cutout in the lower edge.

Refer to drawing A. Find one of the Leg Saddles (55). Place the Leg Saddle on a flat surface to identify the top and bottom ends (see the inset drawing).

Refer to drawing B. Insert the Leg Saddle (55) into the Right Hub Cover (19) from the back as shown.

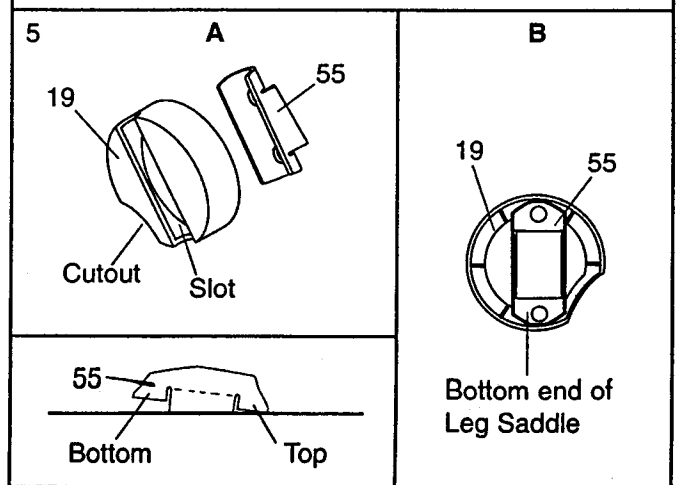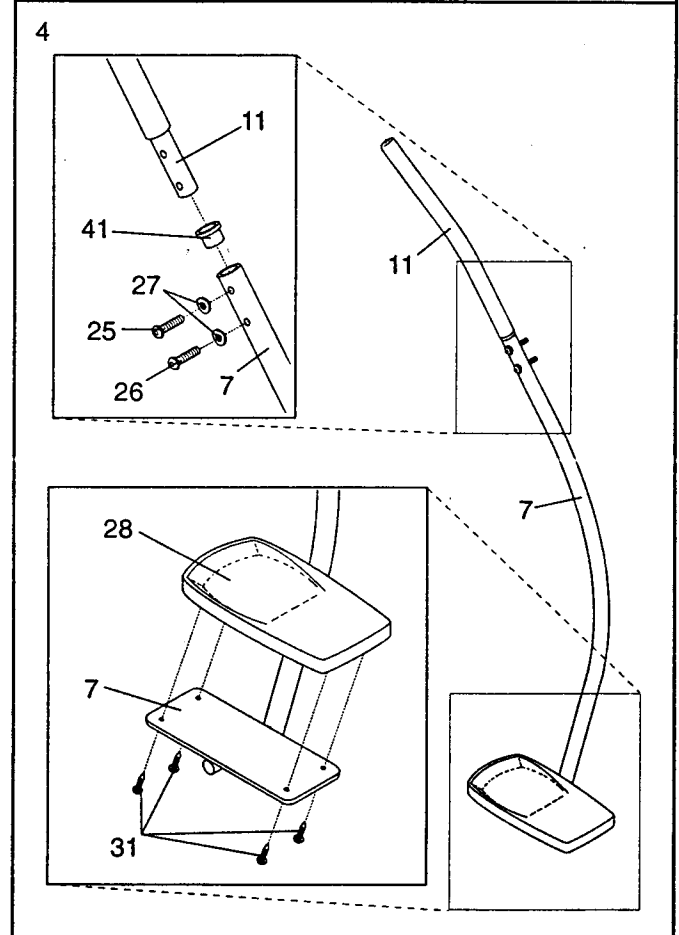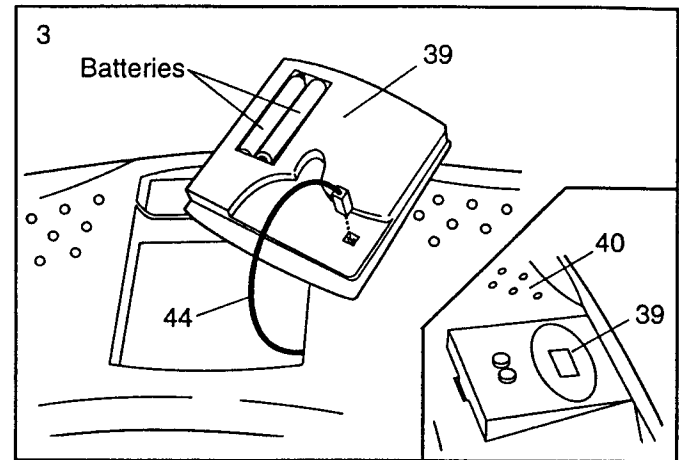


6. Hold the Leg Saddle (55) and the Right Hub Cover (19) against the Right Pivot Plate (20). Make sure that the holes in the Leg Saddle are aligned with the holes in the Right Pivot Plate, and slide the Right Hub Cover over the Right Pivot Plate.

Hold the Right Leg (7) against the Right Hub Cover (19). Using the included 7/32" allen wrench, thread the 3/8" x 2" Screw (25) two full turns into the Right Pivot Plate (20). Next, thread the 3/8" x 2 1/4" Screw (26) two full turns into the Right Pivot Plate. Fully tighten the 3/8" x 2" Screw (25), and then fully tighten the 3/8" x 2 1/4" Screw (26).

Repeat assembly step 4 to assemble the Left Leg (6) and the Left Handle (10).

Repeat assembly steps 5 and 6 to attach the Left Leg (6) and the Left Hub Cover (22).

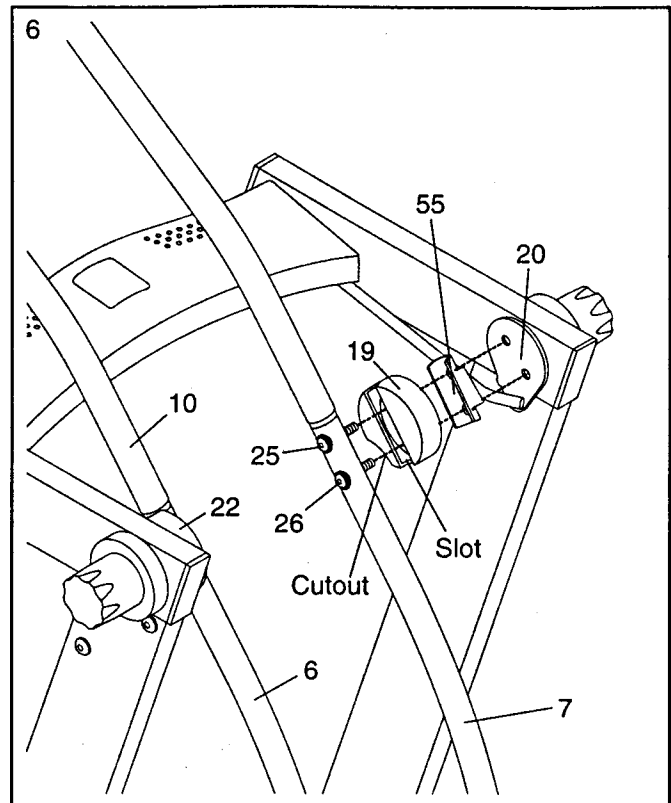

RELEASED TO  
FEB 20  
MANUFACTURING

# OPERATION AND MAINTENANCE

**CAUTION:** When you are getting onto and off the AIR WALKER, always tighten the resistance knobs, hold the handles firmly, and be sure that your body weight is centered directly over the pedals.

## EXERCISING ON THE AIR WALKER


The proper form for exercising on the AIR WALKER is similar to walking—move one leg forward as you move the other leg back. **Never attempt to move both legs in the same direction—you could be injured, or the AIR WALKER could be damaged.**

For a full body workout, hold the handles as you walk, moving your arms and legs in motion with the handles and pedals. To vary the effect on your muscles, change your stance on the AIR WALKER. For example, you can change the position of your hands on the handles, or you can bend your legs slightly instead of keeping them straight.

For a lower body workout, rest your hands on the edge of the console for balance as you walk on the pedals. **Note: Do not lean on the console. It is not designed to support your body weight.**

## RESISTANCE ADJUSTMENT

To vary the intensity of your workout, the resistance of the AIR WALKER can be changed. To increase the resistance, turn both resistance knobs clockwise. To decrease the resistance, turn the resistance knobs counterclockwise.

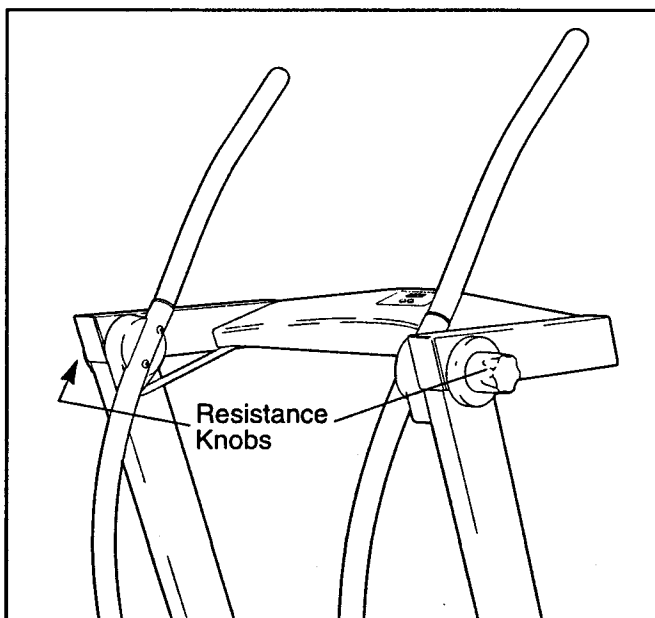

## ELECTRONIC MONITOR MODES

The simple-to-operate electronic monitor offers five different modes to provide instant exercise feedback. The five modes are described below:

**Reps/min**—Displays the number of repetitions you are performing per minute.


**Reps**—Displays the total number of repetitions you have completed, up to "999." The display will then reset to "0" and continue counting.

**Calories**—Displays the approximate number of Calories you have burned. Note: If the resistance is near the highest or lowest setting, the actual number of Calories you have burned will be slightly higher or lower than the number displayed.

**Scan All**—Displays the reps/min, reps, calories, and time modes, for approximately 5 seconds each, in a repeating cycle.

**Time**—Displays the length of time you have exercised. Note: If you stop exercising for ten seconds or longer, the time mode will pause until you resume.

## DIAGRAM OF THE ELECTRONIC MONITOR

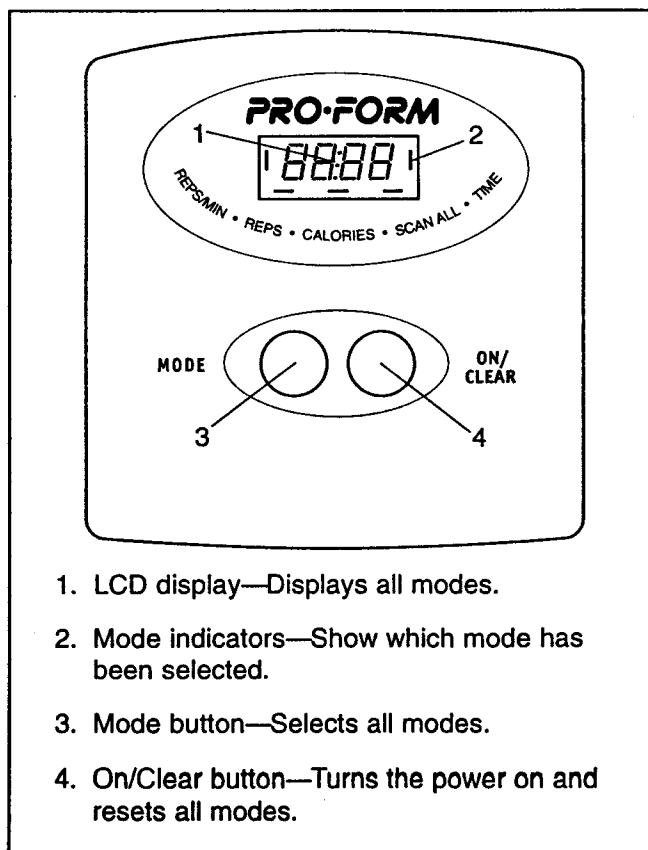

1. LCD display—Displays all modes.
2. Mode indicators—Show which mode has been selected.
3. Mode button—Selects all modes.
4. On/Clear button—Turns the power on and resets all modes.

## OPERATING THE ELECTRONIC MONITOR

1. To turn on the power, press the on/clear button or simply begin exercising on the AIR WALKER. The entire display will appear for two seconds. The electronic monitor will then be ready for operation.
2. Select one of the five modes:

Scan all mode—When the power is turned on, the scan all mode will be selected automatically. The scan all mode can also be selected by repeatedly pressing the mode button. One mode indicator will show that the scan all mode has been selected, and a second mode indicator will show which mode is currently displayed.

Reps/min, reps, calories, and time modes—These modes can be individually selected by repeatedly pressing the mode button. The mode indicators will show which mode has been selected. (Make sure that the scan all mode is not selected.) The modes will be selected in the following order: reps/min, reps, calories, scan all, time.

3. **The monitor has an auto-off feature to turn off the power.** If the pedals are not moved and the monitor buttons are not pressed for four minutes, the power will turn off automatically in order to conserve the batteries.

To reset the monitor, press the on/clear button.


## MAINTENANCE

The AIR WALKER can be cleaned with a soft, damp cloth. Keep liquids away from the electronic monitor. Keep the monitor out of direct sunlight or the LCD display may be damaged. Remove the batteries when storing the AIR WALKER.

Inspect and tighten all parts regularly. Replace any worn parts immediately. Replace the link arms at least annually (the link arms are shown in the drawing on page 3). To order replacement parts, see the back cover of this manual.

## REPLACING THE BATTERIES

If the display of the electronic monitor becomes dim, the two "AA" batteries should be replaced. Alkaline batteries are recommended.

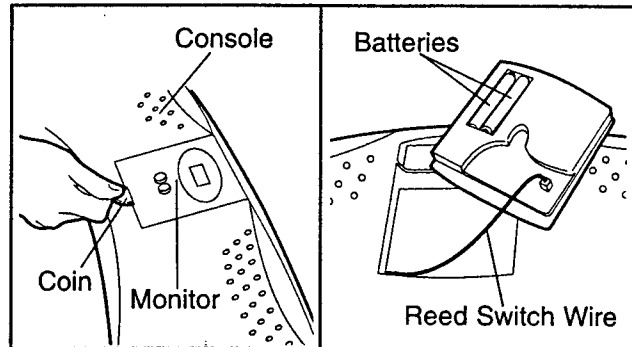

To remove the monitor from the console, gently pry up the monitor with a coin as shown above. Remove the two old batteries from the monitor, and insert two new batteries. Be sure that the negative (-) ends of the batteries are touching the springs.

Be sure that the reed switch wire is plugged into the monitor. Insert any excess wire into the console. Reinsert the monitor into the console. Be careful not to pinch the wire between the console and the monitor.

RELEASED TO  
FEB 20  
MANUFACTURE



# CONDITIONING GUIDELINES

The following guidelines will help you to plan your exercise program. Remember that proper nutrition and adequate rest are essential for successful results.

**WARNING:** Before beginning this or any exercise program, consult your physician. This is especially important for individuals over the age of 35 or individuals with pre-existing health problems.

## WHY EXERCISE?

Exercise has proven essential for good health and general well-being. Regular participation in a well-rounded exercise program helps to develop a stronger and more efficient heart, improved respiratory function, increased stamina and endurance, better weight management and body fat control, increased ability to deal with stress, and greater self-esteem and confidence.


## EXERCISE INTENSITY

To maximize the benefits of exercising, it is important to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. For effective aerobic exercise, your heart rate should be maintained at a level between 70% and 85% of your maximum heart rate as you exercise. This is known as your training zone. You can find your training zone in the table below. Training zones are listed according to age and physical condition. During the first few months of your exercise program,

AGE	TRAINING ZONE (BEATS / MIN.)	
	UNCONDITIONED	CONDITIONED
20	138-167	133-162
25	136-166	132-160
30	135-164	130-158
35	134-162	129-156
40	132-161	127-155
45	131-159	125-153
50	129-156	124-150
55	127-155	122-149
60	126-153	121-147
65	125-151	119-145
70	123-150	118-144
75	122-147	117-142
80	120-146	115-140
85	118-144	114-139

keep your heart rate near the low end of your training zone as you exercise. After a few months of regular exercise, your heart rate can be increased gradually until it is near the middle of your training zone as you exercise.

To measure your heart rate, stop exercising and place two fingers on your wrist. Take a six-second heartbeat count, and multiply the result by ten to find your heart rate. (A six-second count is used because your heart rate drops quickly when you stop exercising.) If your heart rate is too high, decrease the intensity of your exercise. If your heart rate is too low, increase the intensity of your exercise.

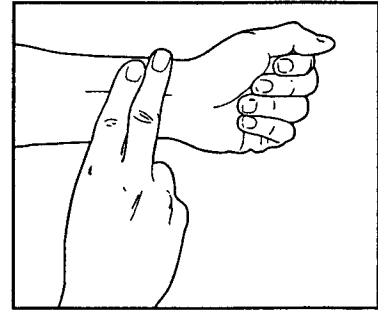

## WORKOUT GUIDELINES

A well-rounded workout includes the following three phases:

**A warm-up phase**, lasting 5 to 10 minutes. Begin with slow, controlled stretches, and progress to more rhythmic stretches. This will increase the body temperature, heart rate, and circulation in preparation for strenuous exercise.

**A cardiovascular phase**, including 20 to 30 minutes of exercising with your heart rate in your training zone.

**A cool-down phase**, consisting of 5 to 10 minutes of stretching. Thorough stretching offsets muscle contractions and other problems caused when you stop exercising suddenly. Stretching for increased flexibility is often most effective during this phase. This phase should leave you relaxed and comfortably tired.

To maintain or improve your condition, complete three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Find the best time of day for your workouts, and then stick with it.

Remember, the key to success is to make exercise a regular and enjoyable part of your everyday life.

# PART LIST—Model No. PFMC77751

R0296A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Base	31	8	#8 x 1/2" Screw
2	1	Top Frame	32	1	1/2" x 2" Bolt
3	1	Left Upright	33	2	Pivot Bushing
4	1	Right Upright	34	1	1/2" Nylon Jam Nut
5	1	Rocker Arm	35	2	1" Plastic Washer
6	1	Left Leg	36	6	1 1/2" x 3" Endcap
7	1	Right Leg	37	4	Rubber Foot
8	1	Left Link Arm	38	4	#8 x 1/2" Metal Screw
9	1	Right Link Arm	39	1	Monitor
10	1	Left Handle	40	1	Console
11	1	Right Handle	41	2	Plastic Sleeve
12	8	3/8" Nylon Jam Nut	42	2	Foam Grip
13	2	Resistance Housing	43	1	#8 x 3/8" Screw
14	2	Resistance Sleeve	44	1	Reed Switch Wire
15	2	Friction Cone	45	2	Resistance Cover
16	4	1/2" Thrust Washer	46	2	Resistance Knob
17	2	1/2" Thrust Bearing	47	6	3/8" x 2" Carriage Bolt
18	2	17/32 Plastic Washer	48	1	Magnet
19	1	Right Hub Cover	49	2	#4 x 3/8" Screw
20	1	Right Pivot Plate	50	4	3/8" x 5/8" Lock Washer
21	2	Pivot Sleeve	51	1	Retainer
22	1	Left Hub Cover	52	1	Magnetic Concentrator
23	1	Left Pivot Bracket	53	6	#8 x 3/4" Metal Screw
24	8	3/8" x 1/2" Screw	54*	1	Console Assembly
25	2	3/8" x 2" Screw	55	2	Leg Saddle
26	2	3/8" x 2 1/4" Screw	#	1	User's Manual
27	4	3/8" Curved Washer	#	1	7/32" Allen Wrench
28	2	Pedal			
29	2	3/8" x 1 3/4" Bolt			
30	2	Wheel			


\* Includes all parts shown in the box  
 # These parts are not illustrated

Note: Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

RELEASE  
 FE  
 MAN

# EXPLODED DRAWING—Model No. PPMC77751

R0296A

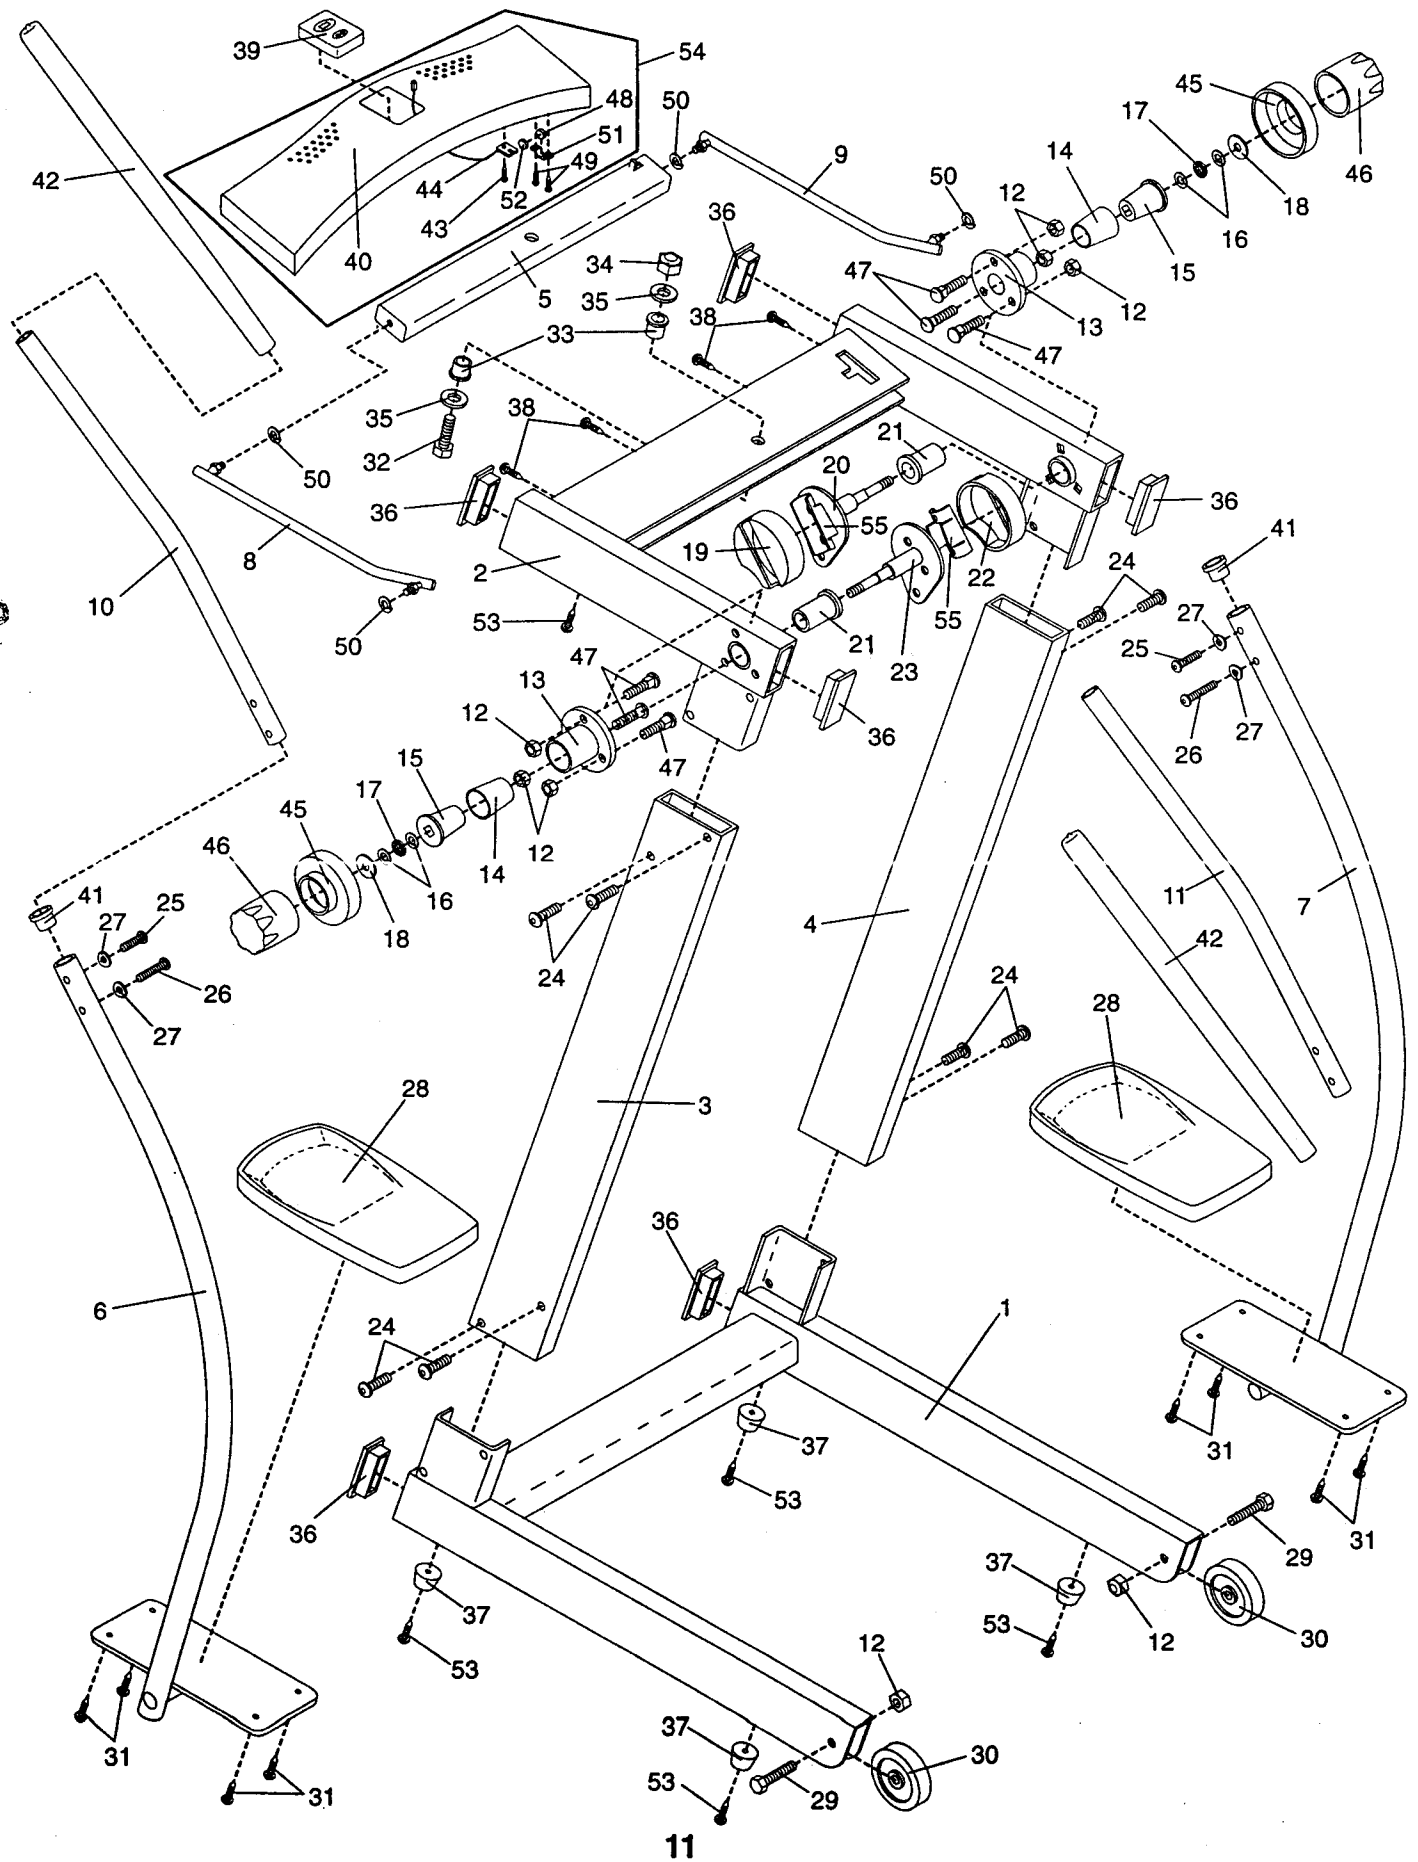

# ORDERING REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information:

- The MODEL NUMBER of the product (PFMC77751).
- The NAME of the product (PROFORM® AIR WALKER).
- The SERIAL NUMBER of the product (see the front cover of this manual).
- The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST on page 10 of this manual).

## LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by ICON at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center, to products used for commercial or rental purposes, or to products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

**ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813**