

# TABLE OF CONTENTS

<b>Caution To Users . . . . .</b>	vii
-----------------------------------	-----

## **Chapter I: Introduction**

<b>1.1 About This Manual . . . . .</b>	3
<b>1.2 Text Conventions . . . . .</b>	4
<b>1.3 About The 9150 . . . . .</b>	4
1.3.1 Base Station Functions . . . . .	6
1.3.2 Mini-Controller Functions . . . . .	6
1.3.3 Access Point Functions . . . . .	6
<b>1.4 Radio Options . . . . .</b>	7
<b>1.5 Radio Protocols . . . . .</b>	7
1.5.1 Adaptive Polling/Contention Protocol . . . . .	8
1.5.2 Wlan Protocol . . . . .	8
1.5.3 IEEE 802.11 Protocol . . . . .	10
1.5.3.1 Inter-Access Point Protocol (IAPP) . . . . .	11

## **Chapter 2: Installation Requirements**

<b>2.1 Choosing The Right Location . . . . .</b>	15
2.1.1 Environment . . . . .	15
2.1.2 Maintenance . . . . .	16
2.1.3 Power And Antenna Cables . . . . .	16
<b>2.2 Connecting To External Devices . . . . .</b>	17
2.2.1 Ports . . . . .	17
2.2.2 Status Indicators (LEDs) . . . . .	18
2.2.3 Preparing For LAN Installation . . . . .	18
2.2.3.1 Ethernet . . . . .	19
2.2.3.2 Token Ring . . . . .	19
2.2.4 Preparing For Serial Installation . . . . .	20
2.2.5 Connecting A Video Display Terminal . . . . .	21
<b>2.3 Changing The Configuration With A Web Browser . . . . .</b>	21

## Chapter 3: 9150 Main Configuration

3.1	Configuration Main Menu . . . . .	25
3.2	Configuring The IP Address . . . . .	25
3.3	Accessing The Menus . . . . .	27
3.4	General Configuration Options . . . . .	29
3.4.1	Interfaces . . . . .	30
3.4.1.1	Onboard Ethernet . . . . .	30
3.4.1.2	Slot n: Token-Ring . . . . .	32
3.4.1.3	Slot n: PC Card Radio . . . . .	34
3.4.2	Users . . . . .	34
3.4.3	SNMP . . . . .	35
3.4.3.1	System Parameters . . . . .	36
3.4.3.2	SNMP Communities . . . . .	36
3.4.3.3	Trap Receivers . . . . .	36
3.4.4	TCP/IP Parameters . . . . .	36
3.4.4.1	Host Table . . . . .	37
3.4.4.2	Bootp . . . . .	38
3.4.4.3	DNS . . . . .	39
3.4.5	Serial Ports Parameters . . . . .	40
3.4.5.1	Console Port . . . . .	40
3.4.5.2	Serial Port . . . . .	40
3.5	Access Point/Base Station Configurations . . . . .	41
3.6	Miscellaneous Commands . . . . .	42
3.6.1	System Info . . . . .	42
3.6.2	Reboot Unit . . . . .	43

## Chapter 4: Base Station Configuration

4.1	Overview . . . . .	47
4.2	Interfaces . . . . .	49
4.2.1	TekLAN Parameters . . . . .	49
4.2.1.1	Radio . . . . .	50
4.2.1.2	Wireless LAN Parameters . . . . .	52
4.2.2	Narrow Band Radio Parameters . . . . .	53
4.2.2.1	Polling Protocol Parameters . . . . .	56
4.2.2.2	Radio Parameters . . . . .	59
4.2.2.3	Radio Channels . . . . .	60
4.2.2.4	TRX7370 Radio Card Parameters . . . . .	60

4.3	Hosts . . . . .	63
4.4	Main Host Menu . . . . .	65
4.4.1	General Host Options . . . . .	66
4.4.2	9010 / TCP/IP . . . . .	67
4.4.2.1	Emulation Options . . . . .	67
4.4.2.2	Protocol Options And Function Key Mappings . . . . .	68
4.4.3	9010 / Serial . . . . .	68
4.4.3.1	Emulation Options . . . . .	69
4.4.3.2	Protocol Options: Serial Line . . . . .	69
4.4.3.3	Protocol Options: 9010 Protocol . . . . .	70
4.4.3.4	Function Key Mappings . . . . .	70
4.5	Base Stations . . . . .	71
4.6	Radio Link Features . . . . .	72

## Chapter 5: Mini-Controller Configuration

5.1	Overview . . . . .	77
5.2	Hosts . . . . .	80
5.3	Main Host Menu . . . . .	82
5.3.1	General Options . . . . .	83
5.3.2	9010 Emulations . . . . .	84
5.3.3	3274/Telnet . . . . .	84
5.3.3.1	Emulation Options . . . . .	84
5.3.3.2	Protocol Options . . . . .	95
5.3.3.3	Function Key Mappings . . . . .	98
5.3.4	5250/Telnet . . . . .	99
5.3.4.1	Emulation Options . . . . .	99
5.3.4.2	Protocol Options . . . . .	110
5.3.4.3	Function Key Mappings . . . . .	112
5.3.5	ANSI/Telnet . . . . .	113
5.3.5.1	Emulation Options . . . . .	113
5.3.5.2	Protocol Options . . . . .	116
5.3.5.3	Function Key Mappings . . . . .	121

## Chapter 6: Access Point Configuration

6.1	Overview . . . . .	125
6.2	Interfaces . . . . .	126
6.2.1	IEEE 802.11 (Frequency Hopping Radio Parameters) . . .	126

## *Contents*

6.2.2	IEEE 802.11 (Direct Sequence Radio Parameters) . . . . .	128
6.3	MAC Bridge Parameters . . . . .	129
6.3.1	General Configuration . . . . .	131
6.3.2	Address Filters: MAC Address . . . . .	132
6.3.3	Protocol Filters . . . . .	133
6.3.3.1	Ethernet II Filters . . . . .	136
6.3.3.2	LLC Filters . . . . .	137
6.3.3.3	SNAP Filters . . . . .	138
6.3.3.4	Storm Detection . . . . .	139
6.4	Mobility Configuration . . . . .	140
6.4.1	IAPP Parameters . . . . .	142

## Chapter 7: Specifications

7.1	Specifications For The 9150 Wireless Gateway . . . . .	145
7.1.1	PC Card Radios . . . . .	145
7.1.2	Power Requirements . . . . .	146
7.1.3	Physical Description . . . . .	146
7.1.4	Processor And Memory . . . . .	147
7.1.5	Environmental Requirements . . . . .	147
7.1.6	Network Interfaces . . . . .	147
7.1.7	SLIM Cards . . . . .	147
7.1.8	Approvals . . . . .	147

## Appendices

### Appendix A: Port Pinouts And Cable Diagrams

A.1	Console Port . . . . .	A-1
A.2	RS-232 Plus Port (SLIM Card) . . . . .	A-1
A.3	RS-232/Current Loop Port (SLIM Card) . . . . .	A-2
A.4	DA15 Connector Pinout (10Base5 Ethernet) . . . . .	A-3
A.5	RJ-45 Connector Pinouts (10Base-T Ethernet) . . . . .	A-4
A.6	Token Ring Dsub9 Connector . . . . .	A-5
A.7	Serial Cable Descriptions . . . . .	A-6

### Appendix B: MAC Bridge Protocol Filters and OUIs

B.1	Ethernet II Types (RFC 1700) . . . . .	B-1
-----	--	-----

B.1.1 Listing by Description . . . . .	B-1
B.1.2 Listing By Type (Hexadecimal) . . . . .	B-8
B.2 DSAP/SSAP Types . . . . .	B-14
B.3 OUI Values . . . . .	B-15
<b>Index . . . . .</b>	<b>I</b>

