


RUN CAPACITOR

START CAPACITOR

LINE POWER
FROM TWO POLE
FUDED SWITCH OR
CIRCUIT BREAKER,
AND OTHER CONTROL
IF USED.

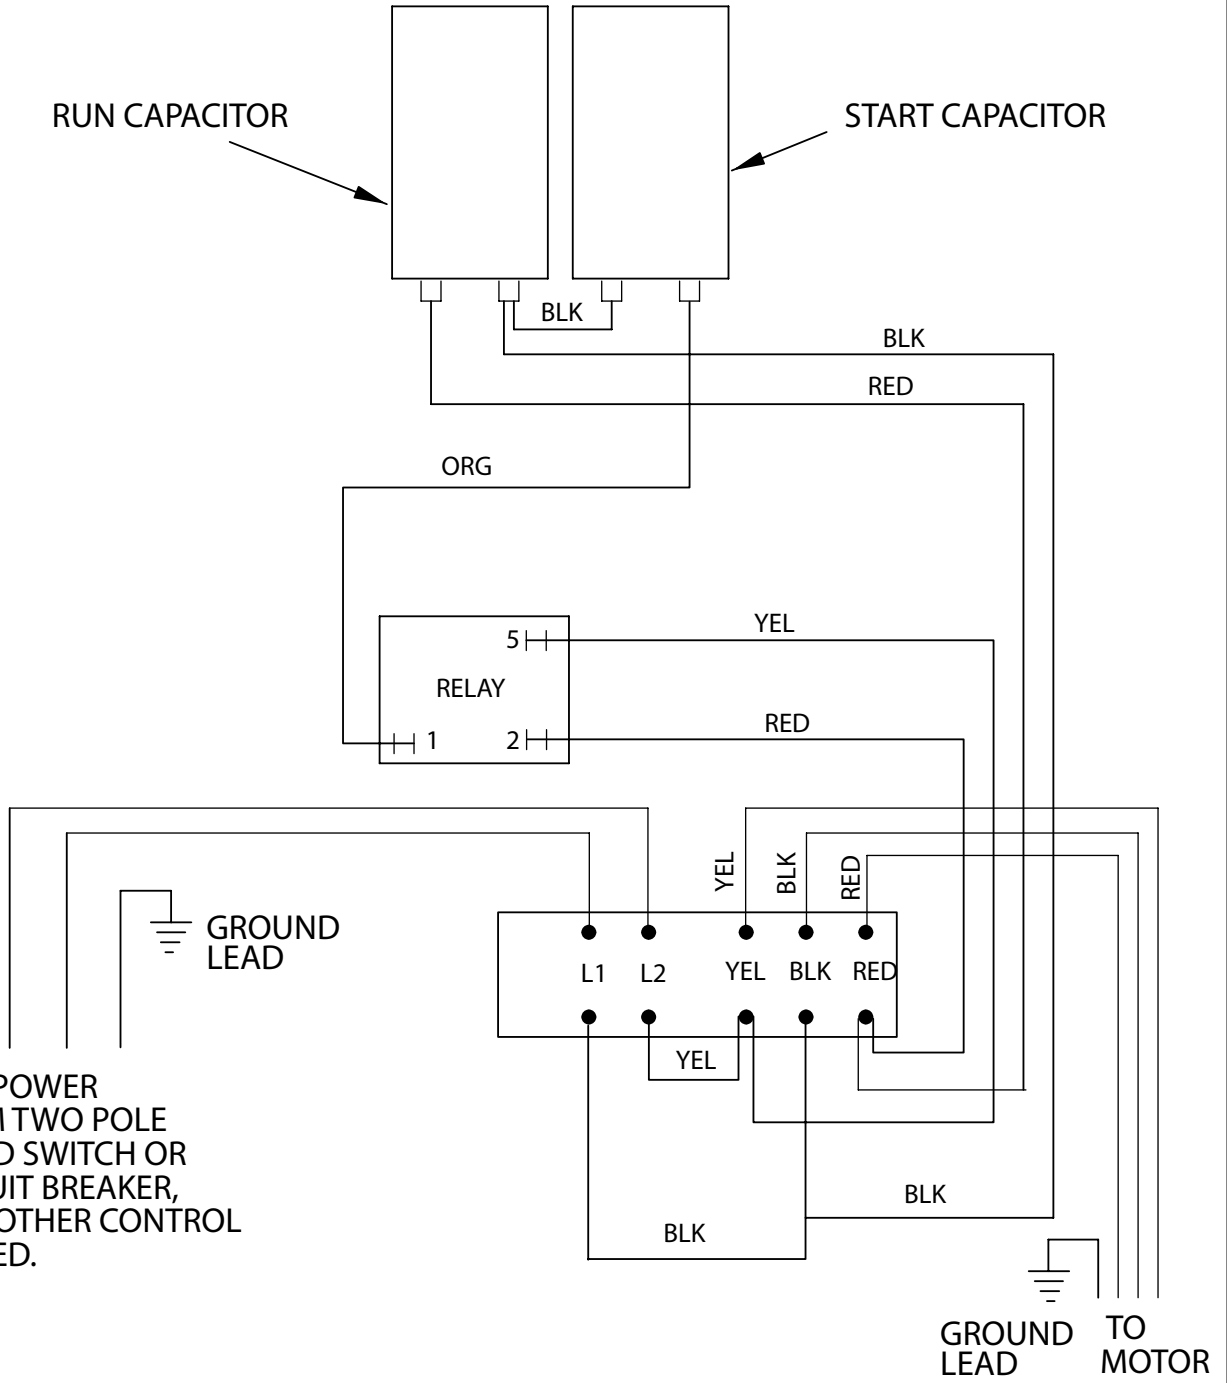

GROUND LEAD TO MOTOR