

PYRAMAT

WIRELESS

PM440-W

2.4ghz WIRELESS SOUND ROCKER



OWNER'S MANUAL

**Read and understand this entire manual before using!
For assistance contact Pyramat. DO NOT RETURN TO STORE.**

Item Number:
10175213 Blue
10175202 Black

Federal Communications Commission Requirements

Warning: 'CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE WITH THE FCC'S RULES (THE FCC' GRANTEE') COULD VOID THE USER'S AUER'S AUTHORITY TO OPERATE THE EQUIPMENT'.

Note: This equipment has been tested and found to comply with the limits for a Class B digital devices, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses an can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on. the user is encouraged to try to correct the interference by one or more of the following measures:

- 1、 Reorient or relocate the receiving antenna.
- 2、 Increase the separation between the equipment and receiver.
- 3、 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4、 Consult the dealer or an experienced radio/TV technical for help.

THIS DEVICE COMPLIES WITH PARTS 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1)THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE,AND (2)THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREDD OPERATION.

Congratulations on the purchase of your Pyramat PM440-W Wireless Sound Rocker. The Sound Rocker is a comfortable, rockable chair that delivers a powerful audio experience designed to intensify your enjoyment of games, movies, music and more. To ensure the best results, please read this manual completely before operating your Sound Rocker, and retain it for future reference.

CONTENTS

Safety Warnings	1
Before You Begin.....	2
Features.....	2
Set-Up.....	3
Wireless Connection Methods	4
Wireless Transmitter Set-up	5
Direct Connection Methods	6-7
Troubleshooting Guide.....	8
Warranty	9

SAFETY WARNINGS

⚠ WARNING: The Pyramat Sound Rocker is intended for indoor use only. TO REDUCE THE RISK OF FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- Do not expose to direct sunlight or extreme temperatures.
- Adult supervision is required for set-up.
- Use only with the supplied power adapter. The power adapter is not a toy.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Excessive use of audio equipment at high volume may lead to hearing loss. Listen responsibly and use common sense.
- Children under 13 should not use this product without parental supervision.
- DO NOT wash or soak the Sound Rocker with water. If cover becomes wet, disconnect power immediately and don't use until totally dry.
- To avoid injury or death from electrical shock, NEVER open the electrical cabinet or remove the cover.

 
The Sound Rocker is compatible with:

- All gaming consoles (including Xbox 360 and Playstation 3)
- MP3 players
- TVs, DVDs, VCRs
- Portable gaming devices (including Nintendo DS, Nintendo DS Lite, and PSP)

Need Help? Visit our website at www.pyramat.com, send an e-mail to service@pyramat.com or call toll-free at **877-591-1012**.

BEFORE YOU BEGIN


Remove the foam separators from the Sound Rocker and take unit out of box. Check to make sure you have all the parts shown below and that all items are in good condition.

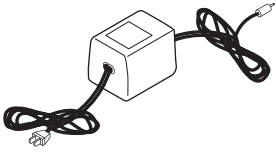

11 ft. 12-volt AC power adapter



 
11 ft. red and white RCA audio cable



RCA to mini audio cable



 (2) RCA audio cable extenders

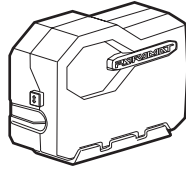


Wireless transmitter


CAUTION: Keep fingers clear of the folding seam when opening the unit.

Note: Replacement cables and mini adapters can be purchased at your local audio accessory dealer.

 
FEATURES

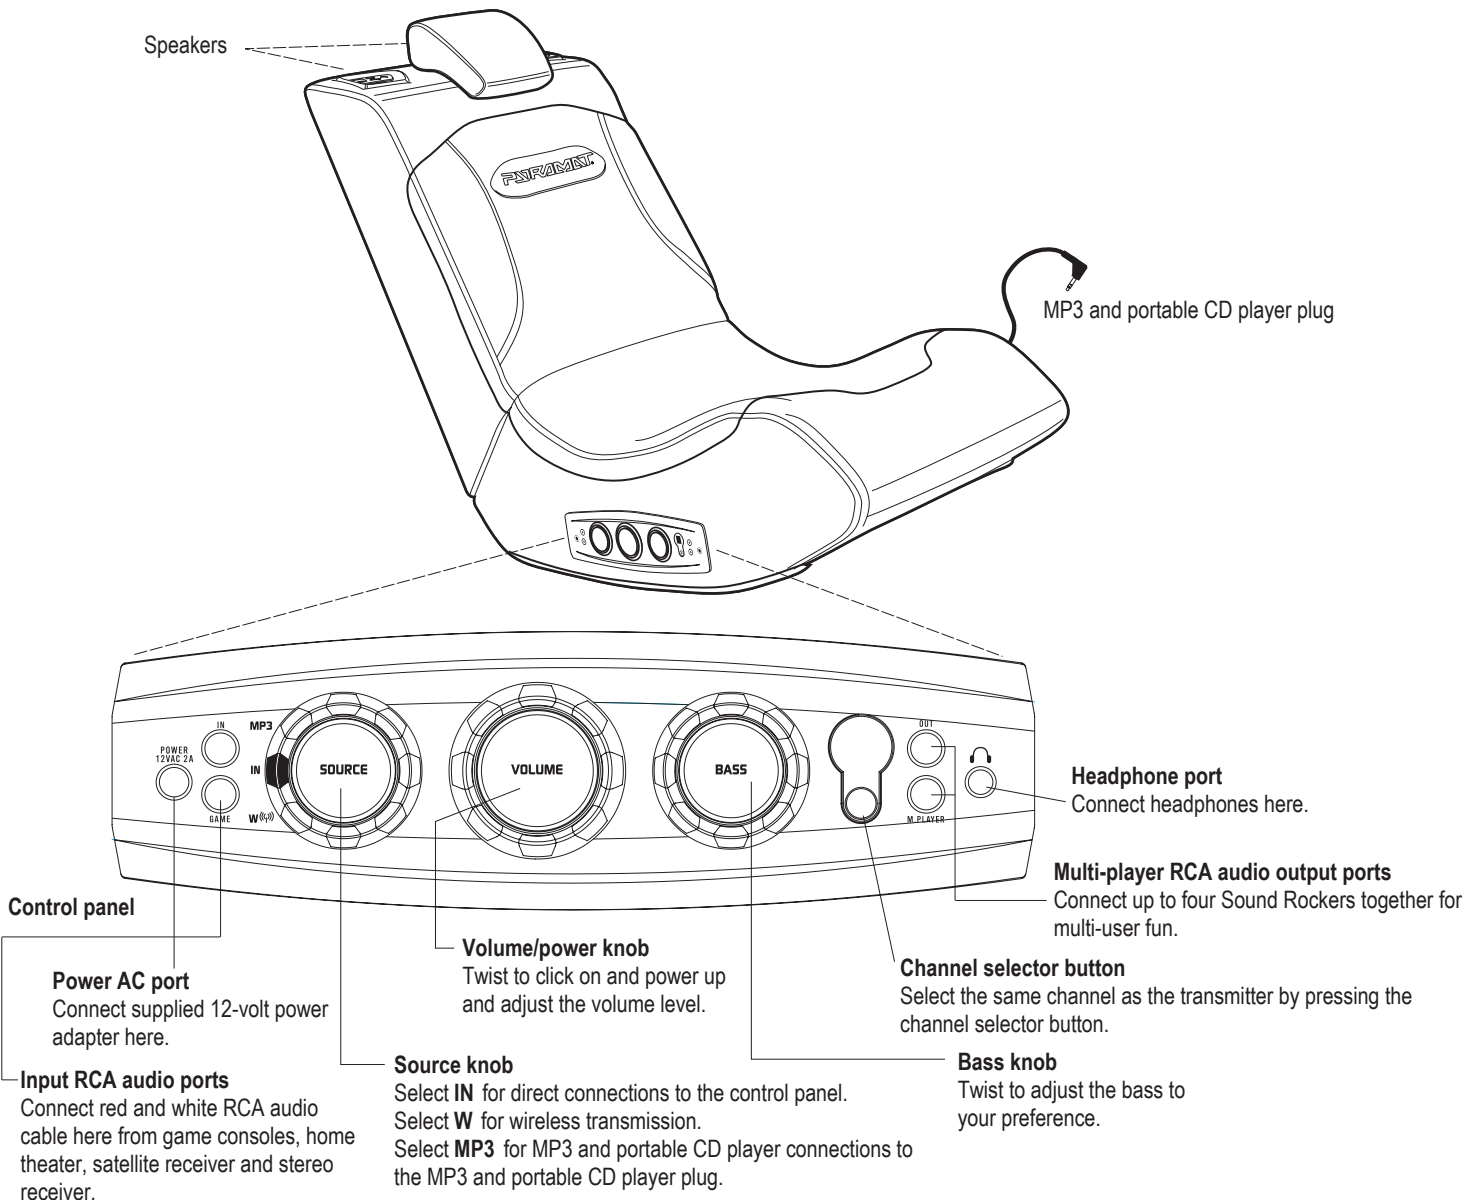


SET-UP

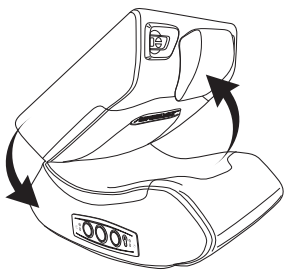 

 1 Unfold the top portion of the Sound Rocker until the backrest is flush with the seat portion.

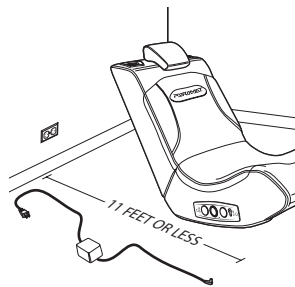


 2 Place the Sound Rocker so that the control panel is less than 11 ft./3.5 meters from the power source.

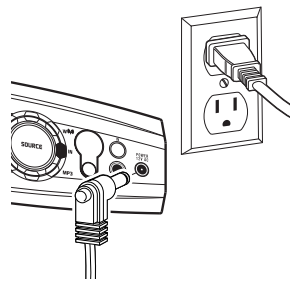

3 Connect the 12-volt AC power adapter to the electrical outlet and then to the power AC port on the control panel.

 ! CAUTION: Keep fingers clear of the folding seam when folding or unfolding the rocker.

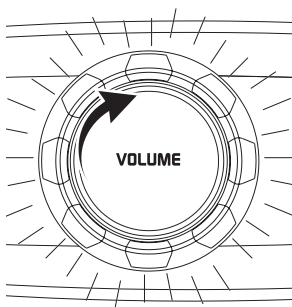

4 Twist the volume knob on the control panel to click on the power.

WIRELESS CONNECTION METHODS

 
Video Game Console Connection

XBOX 360™, PLAYSTATION 2™, PLAYSTATION 3™, GAMECUBE™ AND OTHERS


There are four types of audio/video cables that come with video game consoles:




1. Standard AV/RCA Cable
(red, white–audio; yellow–video)

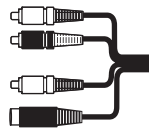

 
2. S-Video AV/RCA Cable
(red, white–audio; yellow, black–S-video)

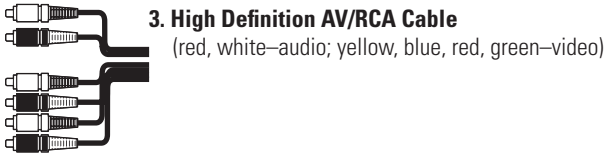

 3. High Definition AV/RCA Cable
(red, white–audio; yellow, blue, red, green–video)



 4. Coaxial Connection
(single black cable)
If you have this cable, you need to purchase the RCA audio cable from the console manufacturer. Or, you can connect the Sound Rocker through an intermediary audio source such as a TV, DVD, VCR, etc. (see below).

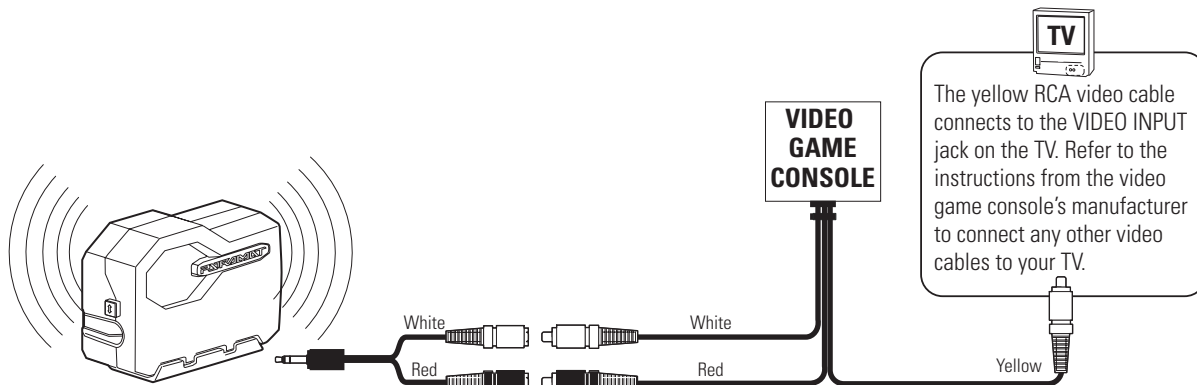

1 RCA Audio Cable Connection

For standard AV/RCA Cable, S-Video AV/RCA Cable and High Definition AV/RCA Cable

Connect the supplied RCA to mini audio cable to the red and white audio cable from the video game console. Follow the instructions from the video game console's manufacturer to connect the yellow video cable to your television.

 
OR

1 Coaxial Cable Connection

If your video game console has a coaxial cable instead of an RCA audio cable, then use the instructions provided by the video game console's manufacturer to hook up the video game console through an intermediary device (such as a TV, DVD, VCR, satellite receiver, etc.). Your intermediary device must have both a coaxial input jack (the standard jack for cable TV) and an RCA audio output jack, or you can purchase an RCA replacement cable directly from the console manufacturer. Then follow the audio/video device connection instructions below to connect your Sound Rocker.

Audio/Video Device Connection


TV, DVD PLAYER, VCR, SATELLITE RECEIVER, STEREO

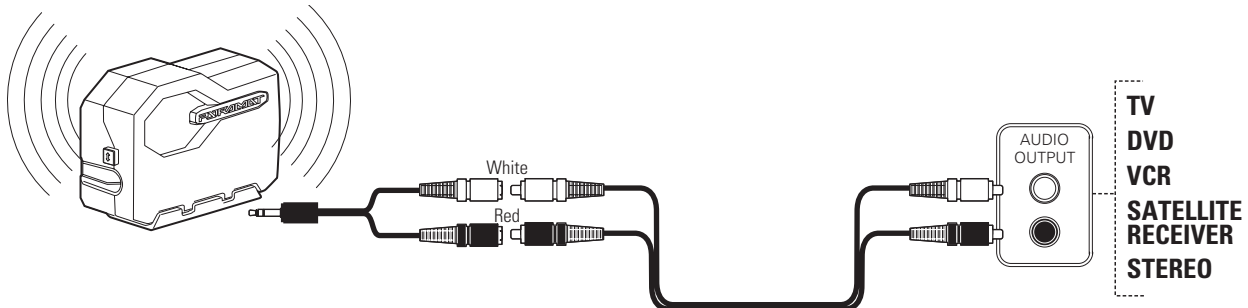


1 Connect the supplied RCA to mini audio cable to the red and white RCA audio cable included with your Sound Rocker. Connect the other end of the RCA audio cable into the red and white AUDIO OUTPUT connection on your audio/video device. Connect the RCA to mini cable into the wireless transmitter.

Note: Connection must be made to an AUDIO OUTPUT source. The red and white audio connections on the front of most devices are AUDIO INPUT. SOUND WILL NOT PLAY FROM AN AUDIO INPUT SOURCE.

 
WIRELESS TRANSMITTER SET-UP

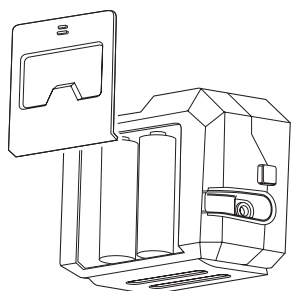

 1 Remove the casing and insert 2 AA batteries (batteries not included).

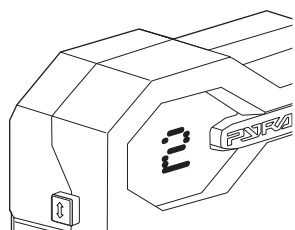


 2 Plug the RCA to mini audio cable into the wireless transmitter.

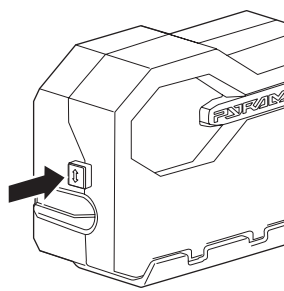


3 Turn on the power switch at the back of the transmitter.

 ! WARNING: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

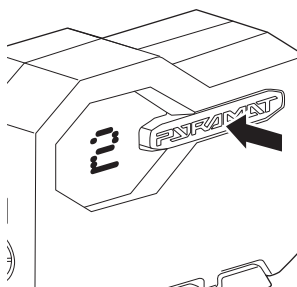


 4 Press the Pyramat button to select the desired transmitter channel: Eight channels are available for the best quality reception. If you experience static or poor reception, try another channel.

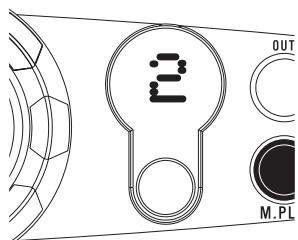


5 Select the same channel as the transmitter on the Sound Rocker's control panel by pressing the channel button. Example: 1-1, 2-2, etc. To add multiple Sound Rockers, simply select the same channel.

 Note: Both the transmitter and control panel must be on the same channel to hear sound.

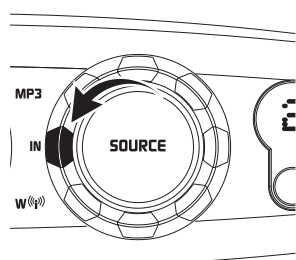

 6 Turn the source knob on the control panel to W.

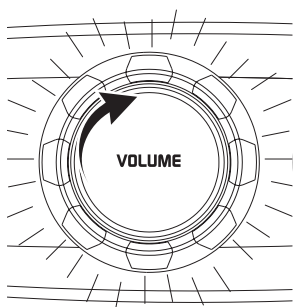

7 Twist the volume knob on the control panel to click on the power.

Eight channel frequency
 2.40225GHZ
 2.40325GHZ
 2.40425GHZ
 2.40525GHZ
 2.40625GHZ
 2.40725GHZ
 2.40825GHZ
 2.40925GHZ

DIRECT CONNECTION METHODS

If you experience static or poor reception from your wireless connection in your location, you may need to select one of the direct connection methods below to ensure the best possible sound quality.

 
Video Game Console Connection

XBOX 360™, PLAYSTATION 2™, PLAYSTATION 3™, GAMECUBE™ AND OTHERS


There are four types of audio/video cables that come with video game consoles:




1. Standard AV/RCA Cable
(red, white–audio; yellow–video)

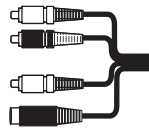

 
2. S-Video AV/RCA Cable
(red, white–audio; yellow, black–S-video)

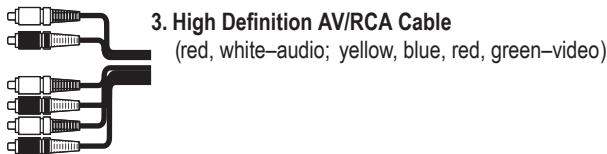

 3. High Definition AV/RCA Cable
(red, white–audio; yellow, blue, red, green–video)



 4. Coaxial Connection
(single black cable)
If you have this cable, you need to purchase the RCA audio cable from the console manufacturer. Or, you can connect the Sound Rocker through an intermediary audio source such as a TV, DVD, VCR, etc. (see below).

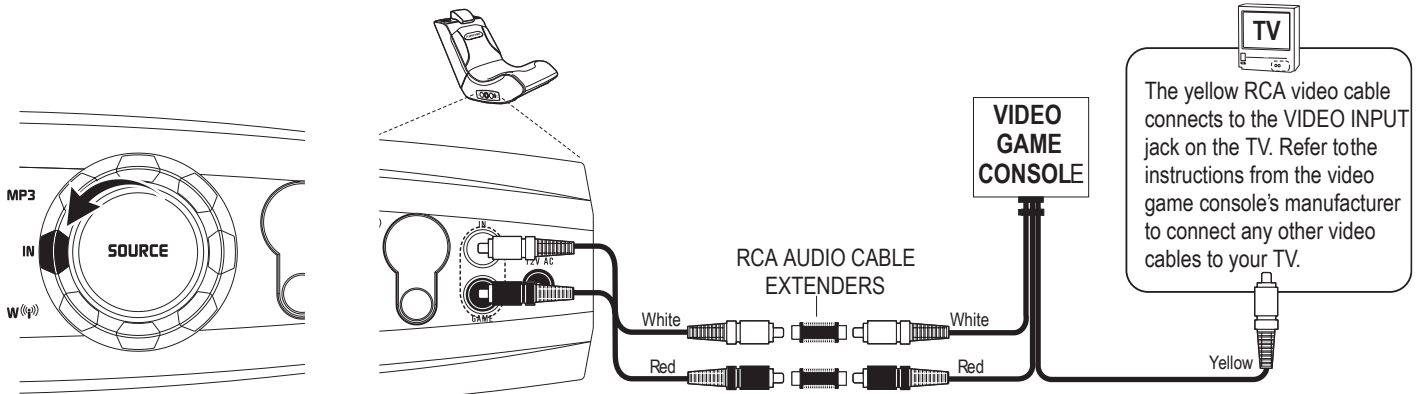

1 Turn the source knob on the control panel to IN. Proceed to the connection method for your video game console.

2 RCA Audio Cable Connection

For standard AV/RCA Cable, S-Video AV/RCA Cable and High Definition AV/RCA Cable
Connect the RCA audio cable extenders to the red and white audio cable from the video game console. Connect the supplied RCA audio cable to the video game console's red and white audio cables and plug into the input jacks on the Sound Rocker. Follow the instructions from the video game console's manufacturer to connect the video cable to your television.

 
OR

2 Coaxial Cable Connection

If your video game console has a coaxial cable instead of an RCA audio cable, then use the instructions provided by the video game console's manufacturer to hook up the video game console through an intermediary device (such as a TV, DVD, VCR, satellite receiver, etc.). Your intermediary device must have both a coaxial input jack (the standard jack for cable TV) and an RCA audio output jack, or you can purchase an RCA replacement cable directly from the console manufacturer. Then follow the audio/video device connection instructions below to connect your Sound Rocker.

Audio/Video Device Connection

TV, DVD PLAYER, VCR, SATELLITE RECEIVER, STEREO

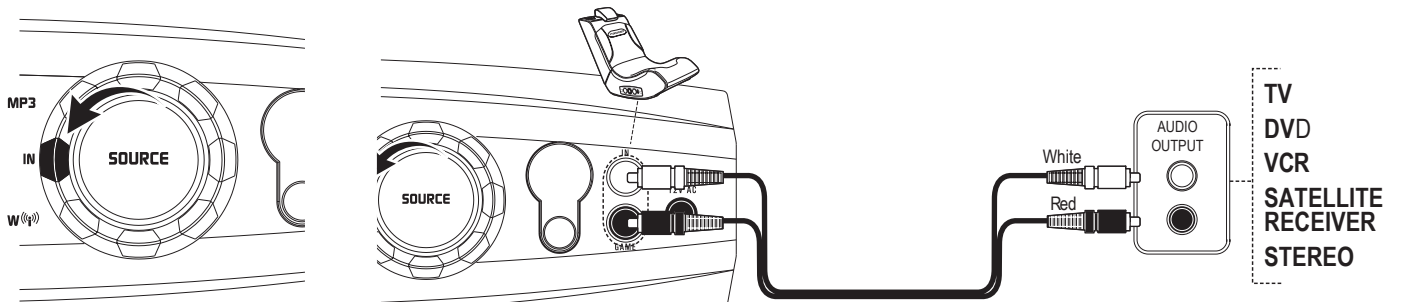

1 Turn the source knob on the control panel to IN.

 
2 Connect the supplied RCA audio cable from the red and white input jacks on the Sound Rocker to the red and white AUDIO OUTPUT connection on your audio/video device.

Note: Connection must be made to an AUDIO OUTPUT source. The red and white audio connections on the front of most devices are AUDIO INPUT. SOUND WILL NOT PLAY FROM AN AUDIO INPUT SOURCE.

DIRECT CONNECTION METHODS


Multi-User Connection

CONNECT UP TO FOUR SOUND ROCKERS TOGETHER FOR MULTI-USER FUN!

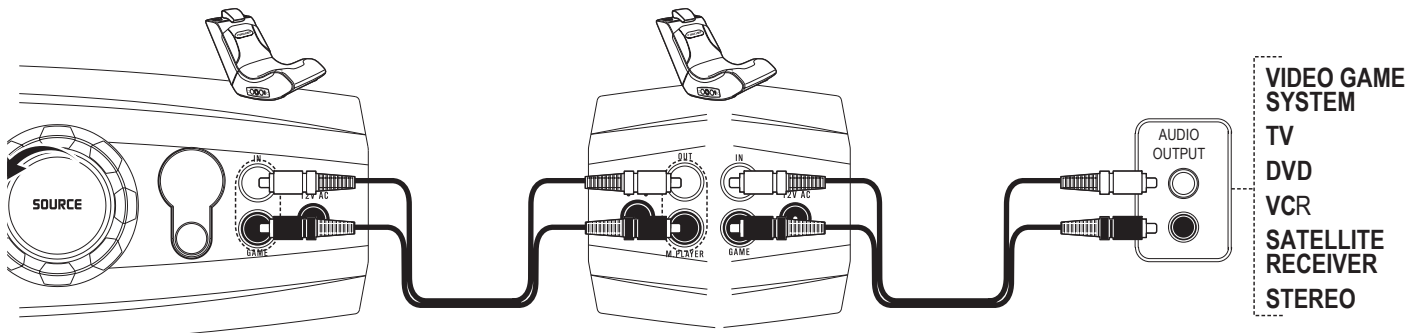


1 After connecting one Sound Rocker to an audio/video device, you can connect additional Sound Rockers together. Connect the supplied RCA audio cable to the multi-player connection on the first Sound Rocker and then to the input connection on the second Sound Rocker. Repeat to add more Sound Rockers.

 Portable Audio Device Connection

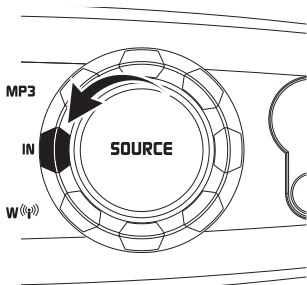

 
1 Turn the source knob on the control panel to MP3.

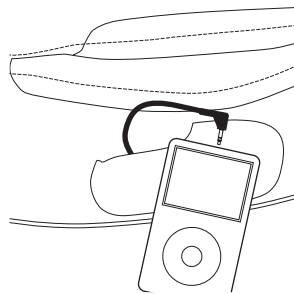


2 Connect the player to the Sound Rocker with the cord inside the pocket.

CAUTION: Power off all audio/video devices prior to proceeding with the Sound Rocker connection method.

 Handheld Game Device Connection

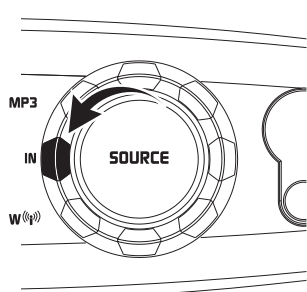

 1 Turn the source knob on the control panel to IN.

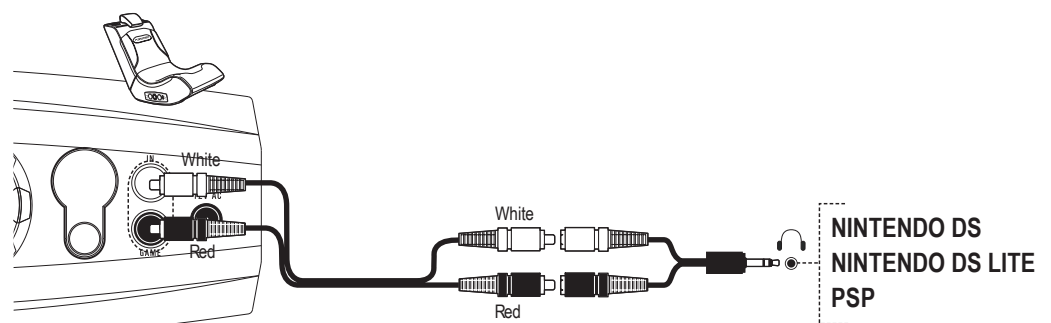

2 Connect the supplied RCA audio cable from the red and white input jacks on the control panel to the red and white RCA to mini cable and into the headphone jack on your handheld game device.

Note: If your handheld gaming device does not have a headphone jack it is not compatible with the Sound Rocker

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Unable to hear sound.	The RCA audio cables are not connected properly.	Check the connection on your audio/video device. The RCA cables should be connected to the AUDIO OUTPUT jacks. Check the connection on your rocker. The RCA cables (red and white) must be in the AUDIO INPUT ports.
	Transmitter and/or Sound Rocker power is not on.	Check to make sure transmitter power is on and the power knob on the Sound Rocker is on with the volume turned up.
	Different channels are selected on the transmitter and control panel.	Check to make sure that both the wireless channel on the transmitter and the control panel are on the same: 1-1, 2-2, etc.
	The source knob on the control panel is in the wrong position.	Turn knob to W (wireless) or IN (direct connection) for video games and audio/video devices. Turn knob to MP3 for MP3 and portable CD players. See page 2 for the correct knob position for the device you are playing.
Transmitter power light does not light up.	The batteries are old or not installed properly.	Check to make sure the batteries in the transmitter are working. Power light on the transmitter should be on when batteries are installed correctly and have a full charge.
Static is interfering with the sound.	Radio wave interference.	Try switching both the transmitter and the control panel to another channel. If you have tried all three channels and are still hearing interference, your location has too many radio waves and the Sound Rocker will need to be plugged in directly through the RCA cables.
Sound Rocker does not turn on.	The AC power adapter is disconnected from the electrical outlet or the electrical outlet has no power.	Check the plug on the AC power adapter. When properly connected with the volume knob on, the logo on the back of the rocker will illuminate. If the Sound Rocker still doesn't power up, try another electrical outlet.
Unable to connect to the gaming console.	Your video game console has a coaxial cable instead of an RCA audio cable.	Use the instructions provided by the video game console's manufacturer to hook up the video game console to an intermediary device (such as a TV, DVD, VCR, satellite receiver, etc.). Your intermediary device must have both a coaxial input jack (the standard jack for cable TV) and an RCA audio output jack. Purchase an RCA replacement cable directly from the console manufacturer.
	The yellow RCA video cable is not connected properly.	The yellow RCA video cable connects to the VIDEO INPUT jack on the TV. Refer to the instructions from the video game console's manufacturer to connect any other video cables to your TV.
Sound only plays from one speaker.	The RCA audio cables are not connected properly.	Check that all RCA audio connections are correct—red to red, white to white.
	Audio/video device has a single MONO audio output (a common problem when connecting to an older TV or VCR).	If your audio source is mono only, as found mainly on older model TVs and VCRs, an RCA "Y" adaptor (1 male to 2 male, not included) is needed to send the signal to both Pyramat speakers. Please note: the use of this type of adaptor will not produce a true stereo sound. For optimal performance, it is recommended that you connect your Sound Rocker to stereo outputs only.
Sound Rocker plays sound from one source but not another.	The source knob on the control panel is in the wrong position.	Turn knob to W (wireless) or IN (direct connection) for video games and audio/video devices. Turn knob to MP3 for MP3 and portable CD players. See page 2 for the correct knob position for the device you are playing.
	The RCA audio cables are not connected properly.	Check that all RCA audio connections are correct—red to red, white to white.
Missing or broken cables or mini adapters.		Replace items immediately. Replacement cables and mini adapters can be purchased at your local audio accessory dealer.
Missing or broken power adapter.		Replace immediately with an authorized Pyramat power adapter. Do not use the unit until the damaged power adapter has been replaced.

Need Help? Visit our website at www.pyramat.com, send an e-mail to service@pyramat.com or call toll-free at **877-591-1012**.

PM440-W Wireless Sound Rocker Limited Warranty

Pyramat warranties this product and any included accessories against defects in material and workmanship for a period of 90 days from the date of first consumer purchase. This warranty is enforceable only by the original purchaser. ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE.

This warranty covers all defects in materials and workmanship, but DOES NOT COVER the following:

1. Damage, deterioration or malfunction resulting from:

a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this manual.

b. Any shipment of the product (claims must be presented to the carrier).

c. Repair, attempted repair or modification by anyone other than the Pyramat Service Center.

2. Any unit which has been altered or on which the serial number has been defaced, modified or removed.

3. Any unit used for industrial or commercial purposes.

4. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries).

5. Customer installation, set-up, adjustments or signal reception problems.

Pyramat will repair or replace (at its discretion) units covered by this warranty, without charge to the consumer for labor or materials. CONSUMER IS RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND ANY INITIAL SHIPPING CHARGES. However, we will pay the return shipping charges to any destination within the United States if repairs are covered by the warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PYRAMAT SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

TO OBTAIN WARRANTY SERVICE

For service assistance, product information, or to locate the dealer nearest you, please call or write:

Pyramat Service Center
877-591-1012
service@pyramat.com

For further information on how to order accessories for this product or other Pyramat products, please visit our website at **www.pyramat.com**.

IMPORTANT

For your records, save your original sales receipt with this manual and write the serial number here.



**If you have problems with your Sound Rocker,
DO NOT RETURN TO STORE.
Follow instructions in this manual.
Failure to follow these instructions may damage
your Sound Rocker and void your warranty.**

Need Help? Visit our website at www.pyramat.com, send an e-mail to service@pyramat.com or call toll-free at **877-591-1012**.