

# User Manual



Bluetooth speaker

F9

Please read the user manual carefully before using the device


## Specifications:

Product name: Wake up lighting speaker  
 Charging input: DC5V=1A  
 Battery: 3.7V  
 Charging time: about 3 hours  
 Speaker unite:4Ω 3W  
 Lighting power:1.6W  
 Frequency range:50Hz-20KHz  
 Distortion:<0.5%  
 SNR:≥65dB  
 Material:ABS、PC  
 Products size:136X125X58.6 mm


## Button explanation:

ON/OFF	Power switch (left and right move)	M	Mode
▶	Play/Pause Radio station search	RESET	Reset
⌚	Clock set	🔔	Alarm clock set
⏮	Previous song/Previous radio station		
⏭	Next song/Next radio station		
+	Volume increase Time and alarm clock adjustment increase		
-	Volume decrease Time and alarm clock adjustment decrease		

## Key function indication

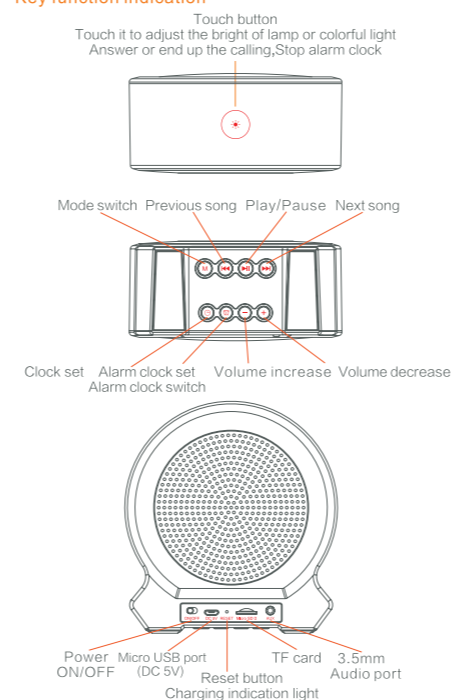

## Display screen function explanation

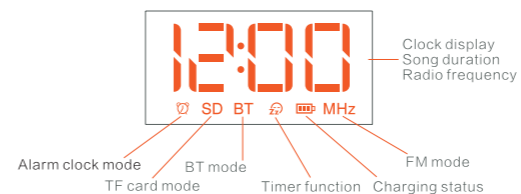

## Charging

Please make sure the speaker is fully charged for using first time. When the light on the display flashing and voice prompt saying "low battery, please charge", then please charge the device in time when the power is low.  
 Connect the USB cable and power adaptor (cell phone charging adaptor and other usb output 5v adaptor is suggested to charge the devices) to charge the device, plug and play.  
 The charge indicator light will be on while charging, when it is fully charged, it will be off.

## ON/OFF Switch

Move the ON/OFF switch to the "ON", the device will be open, move to "OFF", the device will be off.

## Reset

When there is no reaction of the key operation such as lamp or bluetooth play, press the "RESET" on the side with a small sharp needle to release. Restart the system and resume normal operation.

## Clock setting

Click the clock setting button "⌚" on the bottom to activate the clock settings. The display will flash indicating the current option being set in the clock: hour and minute setting in order, press "+" "-" button to set the right hour numbers, press to stop the the hour setting and move to minute setting automatically, press "+" "-" button to set the right minute numbers, then press the "⌚" to finish and exit the setting.



## Alarm clock setting

Click the alarm setting button "🔔" at the bottom to activate the alarm setting. The alarm icon will be on and flash. Press the "+" "-" button to adjust the desired alarm clock hours, click "🔔" to confirm. Jump to the minute setting and press "+" "-" button to adjust the number of minutes required alarm, click "🔔" button to confirm. Then alarm clock selection: 1,2,3,4 kinds of ringtones(The forth ringtones is default the last song of TF card), select a good ringtone click "🔔" to confirm exit. Setting completed. The alarm symbol "🔔" will light on the display after the setting is completed. If you want to cancel the alarm clock, please Long press the alarm clock button, the alarm symbol "🔔" will shut down. When the alarm clock rings, touch the top touch key or press any key to stop the alarm.



## Timer Function

Press the "M" button to timer function, timer mode will be 20 minute, 40 minute and 60 minute, press "⏮" "⏭" to chose the wanted minute. The speaker will turn off itself when set time is finished. Timer function is for the sleep of speaker intelligently, please switch on the open button on the bottom to turn on the speaker if needed.



## Mode Choose

Click the mode button from the bottom in order to switch BT mode, TF card mode, FM mode, timer function, Clock mode. When inserted 3.5mm audio in cable, the speaker self identified and automatically switch to audio in input mode.

## Clock Mode

If the machine without use the speaker function in the status of long standby. This mode can be selected only when the clock alarm function is used. If the TF card is not inserted in the speaker after power on, the default is the clock mode. If in other modes, the mode button "M" at the bottom can be switched to the clock mode.

## BT Mode:

### BT paring and connection

Turn on the speaker and press the "M" button to BT mode, there will be voice prompt saying "BT mode, waiting for connection" and "BT" flash when in BT statues, it is time only when it is ready for connection and connection will be successful.

- Step 1: Open the BT setting on your phone or tablet and click "search device". iPhones will search for BT devices automatically.
- Step 2: When you find the mode "F9" on you screen display, click and pairing.
- Step 3: Enter "0000" and click OK if there's a prompt that requires you to enter a password.
- Step 4: The "BT" on the speaker will stop flashing and light on when paring is successful with you devices.

## connection notification:

- 1.If the speaker has been connected with BT devices before, it will connect with the last BT device automatically once it is turned on.
- 2.Other phones or tablets can not be connected with the speaker when the speaker is being connected with a phone or tablet.
- 3.The phone or tablet can not be connected with the speaker if it is connected with other BT devices. You should turn off your BT connection and connect your phone with the speaker again.

## Music Playing

Open the player device when the connection is successful. Click to play music, and the speaker will play the music. You can operate the bottom buttons on the speaker to control the player

- Short press "▶||" to play/pause .  
 Press "⏮" button to previous song.  
 Press "⏭" button to next song.  
 Press and hold "+" to increase volume.  
 Press and hold "-" to decrease volume.

## Hands free Call

Answer and hang up the phone:  
 There will be an alert sound from the speaker when there is a phone call. Click "📞" to answer the phone, and click again to hang up the phone.

## TF Card Mode

Insert the TF card when the speaker is turned on. Press the "M" button to TF card mode or the speaker will enter itself into the TF card mode when inserting the TF card. It can play the music (MP3/WMA format) from your TF card. You can operate the player with the buttons under the BT speaker:

- Short press "▶||" to play/pause .  
 Press "⏮" button to previous song.  
 Press "⏭" button to next song.  
 Press and hold "+" to increase volume.  
 Press and hold "-" to decrease volume.

## FM radio function

Press the "M" button to FM mode, the display will show the frequency of the radio played, long press "▶||" button to search the radio automatically, please do not press any button during the search, the radio will be numbered and stored.

- Long press "▶||" button to search the radio.  
 Press "⏮" button to previous radio.  
 Press "⏭" button to next radio.  
 Press and hold "+" to increase volume.  
 Press and hold "-" to decrease volume.

## AUX in audio input mode

When inserted 3.5mm audio in cable, the speaker self identified and automatically switch to audio in input mode.

## Table lamp application

Open the table lamp with the touch of your finger on the top touch button "📞" when the device is open, there are second grade warm light and colorful light. Touch by touch is low light, high light, orange, dark blue, green, pink, light blue, color breathing light, music rhythm light (the light will dance with the music when playing music). Click again to turn off.

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Frequently Asked Questions

### Unsuccessful pairing and connection repeatedly

1. Check the speaker and make sure it is in the searching state or reboot the speaker.
2. Connection is difficult when there are too many BT devices nearby. Turn off other BT devices.
3. Turn off the BT device that was connected with the BT speaker last time, and reconnect the speaker.

### Muted or distorted sound

1. Check the volume of your phone or the speaker, and adjust the volume.
2. The battery is low. Please charge it.

### Choppy music play

1. Check if the device is beyond the effective connection distance.
2. Check if there is any obstacle between the speaker and your device.

### The indicator not shining in BT mode

1. The battery is low. Please charge it.
2. Please reboot the speaker.

## Precautions

1. Please store and use the product in room temperature environment.
2. Do not expose this product in rain or wet conditions.
3. Do not drop or bump this product.
4. Do not disassemble, repair, or modify the product in private.
5. Please use the power charge with rated voltage for the speaker.
6. It may cause hearing damage if playing music in high volume for a long time. Avoiding excessively high volume when playing music for a long time.
7. Disassemble this product will invalidate the warranty.