

# **Tablet MID**

## **MODEL No.: B7916H3**

**For all respected users:**

**Thank you for choosing China's high-quality brand tablet PC.**

### **Important Declaration**

1. Before using the tablet PC, please read all information provided by us first so that you can use this product correctly. Please make sure that you have read this manual carefully before using this product.
2. Our company reserves the copyright of this manual, any random duplication or interpretation of the full or partial manual is forbidden in commercial activities.
3. The information covered in this manual is all based on the latest information when compiling the manual, and products are subject to change without notice for further improvement. We are not committed to any mistakes or incidences caused by the manual. For additional product information, visit the company's web site.

4. When using this product, please make backup for the data by yourself and this company will just be responsible for the product's hardware itself, and will not undertake any responsibility for any loss or damage of personal data and information due to wrong operations of hardware.

#### **Precautions**

This manual includes important information on safety precautions and proper usage of this product. To prevent any accident, please make sure that you have read this manual carefully before using this product.

- Do not keep this product in a place with a high temperature, humidity or too much dust. Especially do not place this product in a car with all windows closed in summer, and keep out direct sunlight.
- Avoid dropping or shocking this product heavily and avoid shaking the TFT display violently, otherwise, the TFT display may be damaged or cannot play correctly.
- Please choose a suitable volume. Avoid excessively high volume when using a headset. If you feel any ear noise, please decrease the volume or stop using.

- Do not break the connection suddenly when this product is conducting formatting, uploading or downloading operations, otherwise there may be program errors.
- This company will not undertake any responsibility for any memory loss due to product damage, repairing or other reasons.
- Do not disassemble this product by yourself and do not clean the surface of this product with alcohol, thinner or benzene.
- Do not use this product in a place where the using of electronic device is prohibited, such as on a plane.
- Do not use this product while driving a car or walking on the street, otherwise traffic accident may occur.
- ※ This Company reserves the right to make any improvement on this product. No further notice will be provided on any variation on the specification and design of this product!
- ★ (This product has no water-proof function)

## Content

Important Declaration.....	1
Precautions.....	2
Main Functions.....	8
Appearance and Buttons.....	11
Chapter 1. Quick Start.....	13
1-1. Power ON/OFF/Lock/Unlock.....	14
1-2 Battery and Charge.....	15
1-3. Computer Connection & File Transfer.....	16
1-4. The using of touch screen.....	18
1-5. G-Sensor.....	19
1-6. Solve problem of machine run slowly.....	19
1-7. Text Entry.....	20
Chapter 2.Main Interface/Icons.....	21
2-1. Main Interface Function.....	21
2-2. Main Interface Introduction.....	22
2-3. Add/Move/Delete Desktop Icon.....	24
2-4. Shortcut Key.....	25
Chapter 3. Program Installation.....	27

Chapter 4. Internet.....	30
4-1. Internet Setting.....	31
4-2. 3G Connection.....	32
4-3. Ethernet Setting.....	32
4-4. 2G Connection.....	38
4-5. Webpage Browser.....	38
4-5.1. Book Mark Manager.....	39
4-5.2 Open new window.....	41
4-5.3 Change Your Browser Homepag.....	42
4-5.4 Setting of Browser.....	42
4-5.5 E-mail.....;	42
4-5.6 E-mail Setting Guide.....	43
<b>4-5.7. Receiving and Sending E-mail.....</b>	<b>44</b>
<b>4-5.8. Delete E-mail Account.....</b>	<b>44</b>
<b>4-5.9. Instant Message.....</b>	<b>45</b>
Chapter 5 Main Interface Operation.....	45
5-1. Music .....	45
5-2. Video.....	48
5-3. Photo.....	51
5-4. Camera.....	53

5-5. Recording.....	54
5-6. Calculator.....	55
5-7. Clock and Alarm.....	55
5-8. File Manager.....	57
Chapter 6. OTG Function.....	58
Chapter 7. External USB Keyboard and Mouse.....	59
Chapter 8. TF Card.....	59
Chapter 9. Basic Setting.....	61

**Main Functions:**

- 7" HD TFT capacitive touch screen, resolution 800\*480.
- Support built-in 0.3 Mega front camera (optional)
- Support built-in microphone recording function
- Support external USB mouse, keyboard, etc;
- Support HDMI; 2160P,3D Vide(all-digital multimedia connector)output,make your high HD TV set show the effect of cinema level
- Support OTG function, support U-disc, portable hard disc by OTG to transfer data. (While connecting to portable hard disc, DC power must be connected to supply power for the

product; otherwise the tablet PC will get crashed due to insufficient power supply)

- Multiple network access to the Internet. Supporting Wi-Fi/3G/2G, you can enjoy the internet life anywhere, anytime.

- Gravity sensor (G-sensor), in addition to the horizontal, vertical screen switch, you can also install various software to extent this function, such as turning the text, switching songs, and funny games, etc.

- With Google Android intelligent operating system, abundant software extension function, you can you're your personalized space with apks by yourself.

- Supporting apk installation and application, abundant software can be downloaded and installed from Android Market in your MID or from your PC to download from the Internet.

- With this product, you can easily have business and entertainment via abundant applications, such as E-Mail, word, website browsing, news, instant messaging, financial, blog, games online, video online, stock market , weather report ,

mobile TV, maps, fun software, etc.

- Supporting MP3, M4A, WMA, APE, FLAC, AAC, MID, WAV, AMR, OGG, etc.

- Supporting full HD video decoding (2160P, 1080P, 720P, 480P); video formats: MKV, AVI, RM/RMVB, WMV, 3GP, MOV, MP4, ASF, MPG, DAT, VOB, FLV, etc.

- Supporting JPG, JPEG, BMP, PNG, etc. formats image browsing..

- Supporting TF Card, with capacity up to 128MB-32GB.

- Personalized settings-freely adjustable brightness, key tone on or off, changing wallpaper and so on.

- Supporting multi-languages.

- More functions could be added by Firmware updating







## Appearance and Buttons

### Front:


Definition:





1. "V-": volume down
2. "V+": volume up
3. "⏻": Power Button-long press this button to turn On/Off the player, short press this button to lock screen in order to avoid operation error.

4. Front camera (optional);Support 0.3 Mega pixel with photograph and camera function.
5. “”: press this button to open the current interface menu by the menu button, as same as other icon “” , press this button could unlock the lock of screen;
6. “”: abbreviation: Home button, gently click the button can return to the main function interface from any interface; long click the button to open the recent implementation of the application window;
7. “” : backspace key, clicking the button to return to the previous step;
8. MIC Recording Jack: microphone
9. Earphone Jack
- 10.HDMI Port; HD output interface
11. USB Port: Mini USB 5 Pin data cable supports external U-disc, MP3, MP4, wired mouse, etc
12. DC charging port: external 5 V 2 A DC charger (2.5 MM diameter plug) interface
13. TF card slot
14. 3G card slot

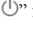
## Chapter 1. Quick Start

1-1. Power On/Off and unlock: at the status of power off, long press “

Energy-saving and locking mode: at the process of using,

system will automatically enter energy-saving mode, press “” to wake up the screen, system will enter unlocking mode in one second, slip “” to unlock.

**Notes:** At the status of energy saving mode, the main operation won't stop, only LCD screen will be off, showing black screen. Music or film continues playing.

**Power Off:** At the status of using, press “” for 5 seconds, the screen will show power off option. Select “Power off” option, confirm your choice and system will automatically turn off. Select “Cancel” to cancel power off operation.

**Notes:** At the status of low-power, it will have warning voice; connect the DC adapter and begin to charge, it will automatically turn off. If the product cannot boot, please check the battery.

## **1-2. Battery and Charge**

Battery should be charged for 8 to 12 hours for the first time in order to make sure battery with enough power.

Please use charger approved by our company for charging.

Before charging, insert the miniport of the adaptor into DC jack and the other side into power socket. Then the device is being

charged, the battery icon will show the charging status. Please don't disconnect the charger until device is fully charged.

Battery icon will show whether it is fully charged.

Please note the following precautions for protecting lithium battery

- a. Don't charge in high temperature environment (like under direct sunshine)
- b. Lithium battery doesn't need to discharge. User can charge the battery when there is still power left.
- c. While charging, it is normal that both charger and device will heat up

### **1-3. Computer Connection & File Transfer**

Connecting the product to the computer with USB cable, the top status bar will show USB has connected. The product's default is charging for USB connection mode. If connecting external mobile hard disk, you need to pull automatic running list at the top status, then can see "USB connected" option. Click the option, show USB status switch interface; according

to the note icon on the right bottom “Open USB storage equipment”, switch into USB storage status. At this time the users can access the external hard disk. At the status of USB storage, click the icon again to disconnect USB and recover to charge mode. USB storage mode system will limit the users’ access to the local disk reference application. Disconnecting USB storage mode, it will recover normal status, same as the following picture:.





#### **1-4. Use of Touch Screen**

There are various operation methods. You can view the main screen, menu and application program.

##### **1-4-1. Click**

When you want to use screen keyboard input or select the application program in the main interface, it can be realized just use the fingers or stylus to click.

##### **1-4-2. Press**

When you want to open one available option or shortcut and main application in the main interface, just press the option is ok.

##### **1-4-3. Quick sway or sway**

Quick sway or sway with your finger or stylus to make the

vertical or horizontal drag fast action.

#### **1-4-4. Drag**

Before dragging, please use your finger or stylus to press, until get to the wanted location.

#### **1-5. G-Sensor**

The product has the function of G-sensor. After opening the function in the setting (default is open), rotating the machine into 90 degree, the screen will realize horizontal and vertical screen switching automatically.

Besides screen switching, it can support more function, such as turning the text, switching music and funny games.

#### **1-6. Solve problem of running slowly**

After using the product for some time, although the used applications have been shut down but they are still at work at background, and that will make the system run slowly. Therefore, you need to end these programs in Advanced Task Manager to let the product run smoothly.

#### **1-7. Text Entry**

When you start application or select the text edit box to enter the text or number, the screen key board will appear. The



keyboard has the following input to select:

- Android keyboard
- Google Pinyin IME

#### 1-7-1. Select IME

According to the preview setting of the product, Android keyboard will appear when you input the words.

1. In the main interface press the menu key, and then click the setting.

2. Click language & input

3. In the language & input area, the product will list the installed IME.

4. Tick it after selecting the IME you need.

Android Keyboard Panel



Chapter 2: Main Interface Function/Icon

2-1: Main interface function icon definition



Icon	Definition	Icon	Definition
	Google Search		Setting
	Back		Function Module Menu
	Back to main interface from any interface		Camera



	System current time		Battery
	WIFI signal		Menu
	New device found		Setting Menu
Icon	Definition	Icon	Definition

2-2. Main Interface

Long press power to turn on, the screen is locked after power on; slip unlock key to unlock and enter the main interface as blow. In this interface, you can view the status, change wallpaper, add widgets, add program shortcut, start program, etc.




**2-2-1.** Status Bar: With a stylus slide down to read prompts in the status bar to open the notification bar and you can see today's date.

**2-2-2.** Menu: Press menu button “” or short press “” to open interface menu:

- Wallpaper: in this menu you can choose your favorite photos as main interface background.
- Manage Application Program: check all the programs in this device and you can remove all installed programs
- System Set: click to enter system setting menu interface directly.

### 2-3. Add, move or delete desk icon


In the main interface click  to enter function menu list, display applications in all webpages. Press and hold to drag the icon to copy it to current desk, such as setting shortcuts on the desk.



You can delete the icon which is added to main interface, press and hold the icon which you are going to delete, at this time



there is a sign X on the top, just drag this icon to X to delete.

**2-4.** Shortcut: click  to show all function icons as below:

This window shows all the function icons, click any icon to enter correspond interface, see following definition:



apk program installer: you can install new apks, manage installed apks. Please refer to (3. Program Installation) for operation method.



: Sending/Receiving Emails



Browser: click to enter Internet interface to browse webpage



Calendar: Check the calendar and setting



Calculator Icon: click this icon to use the calculator.



Alarm Clock: clock icon, click this icon to set alarm



: Play music. Please refer to (5-1 Music) for operating method.



: Video player icon or photo browser: click this icon to play video and view photo. Please refer to (5-2 Video) for operating

method.



: Webpage research



Camera: please refer to (5-4 Camera) for operating

method.



: Enter recording interface. Please refer to (5-5 Recording)

for operating method.



File Manager: check all the file types and content.



Advanced task manager: manage applications and remove. When the player runs slow, this function will stop some unused applications in order to solve the problem of running slow.



Setting icon, click this icon to enter system setting interface.

### **Chapter 3. Application Installation**

This device can install apk( Android Package) freely, you can get third-party application program which is suitable for this Android system from Android Market and Internet and you can install the apks into this player.

First open “Setting/Application Program”, select after

“unknown sources”.

**3-1-1.** Program achieves method:

Method 1: Download from the website and copy the applications into the TF card and insert into the product.

Method 2: Through the “Android Market” of the product to download the application program into the TF card.

**3-2-2.** Program Install:

Method 1: Click the main interface shortcut key, select “apk installer” then select “Installer” to enter the SD card sub-menu, select install application, pop up install option , click “Install”. Finish it according to the guide.

Method 2 :Click the main interface shortcut key, select “ES files browser” to enter the SD card sub-menu, select install application , the install method is same as the ”Method 1”

**Notes:** In the website, all files are .apk suffix in the third-party program.

**3-3-3.** Program Uninstall:

Click the main interface shortcut key, select “apk installer”, and select “Manager” to enter apk list, click the wanted-to-uninstall



25



#### 4-1-1. WI-FI Connection

Click the main interface shortcut, select “Internet connects manager”, click “WIFI setting”, enter WIFI setting interface, select the “WI-FI” and turns it on.

After WIFI opened, it will automatically search for the wireless Internet, and show in the list, click the wireless Internet , enter the password interface, input the password and connect it, seconds later it will connect to the wireless Internet automatically.

⚠ When open the WIFI, it will add about 1/4 power consumption to the player. When not using the WIFI, please turn it off to extend the using time of the player.

#### **4-2. 3G Connection**

“Setting / Wi-Fi and Network”, select “Mobile Network” and the system will connect to the network automatically.

Connection completed, you can use 3G.

⚠ Before connecting 3G, please close Wi-Fi.

⚠ Before connecting 3G, please make sure the product is with enough power or connected to DC charger charging. Since 3G will consume more power (add about 1/3 more), If you don't use 3G, unplug the dongle to save power to extend battery life.

#### **4-3. Ethernet Setting:**

Use cable Ethernet card (USB-RJ45) connecting to Internet

instruction

There are two requirements as below to use USB-RJ45 connecting to Internet:

1. ADSL account and password are set up correctly on router.
2. USB-RJ45 network card is the model which this device can support (usually netcard which supports Android system is suitable for this device).

Models supported are listed below:

AX88772/AX88772a/AX88772B/AX88178/AX88760/QF970  
0/SR9600/MCS7830/MCS7832/MCS7730

Steps for Internet Connection:

First connect network cable to USB Ethernet card, then use the OTG cable which is for this device to insert into USB Ethernet card and the other end into USB port of this device.



**Notes:**

1. First close WIFI network, only one could be used, otherwise there will be conflict.
2. This device will automatically detect USB Ethernet card and switch on the "Ethernet", there will be a network icon in the status column at this time.
3. Hold on for moment, this device will try to connect to Internet automatically, if the router, the DHCP service is

already open and the netgate, DNS and relevant setting have been made, then it will connect to Internet automatically.(Ethernet card function must be selected already)

4. If this device fails to connect, usually the reason is something is wrong with setting in router. You can set the parameters in this device as follows:

a. Enter setting/Ethernet setting, select and open Ethernet.

Enter configuration information, choose "static IP setting, enter static IP setting interface (default is automatic acquiring IP, usually automatic acquiring IP is OK for all, but some companies'router will use specified IP, not allowing automatic acquiring IP, it depends on router setting, static IP needs to be used at this time.)

b. There is no need to fill in the Ethernet card device and physical address. Player will detect automatically after connecting Ethernet successfully.

In the IP address column enter the IP address, usually default is 192.168.1.1xx.

c. in "subnet mask", enter network segmentmask, default is 255.255.255.0

The image shows a network configuration window with the following fields and values:

Field	Value
IP地址	192.168.1.220
子网掩码	255.255.255.0
DNS服务器	202.96.134.133
默认网关	192.168.1.1

At the bottom of the window, there are two buttons: "保存" (Save) on the left and "取消" (Cancel) on the right.

- d. In the "DNS server", enter your local network service provider's DNS server IP, for example, Shenzhen DNS server IP is 202.96.134.133, different location has different DNS server IP, if you don't know, you can search by Google.
- e. Fill gateway in the "default gateway", the general default is 192.168.1.1 (you can check the router's manual). It must be set to the same as the router; otherwise connection will be shown, but cannot connect to the Ethernet.
- f. Finally, click the lower right corner of the "Save" button,

select Save, the system will automatically connect after saving, then you can use the Ethernet.

5. Close the Ethernet, click the hook in the back of “Ethernet”, you can turn off the Ethernet connection.

6. Unplug the OTG cable.

**Attention:**

1. If you don't know about router settings and the DHCP service, please consult the router manufacturer, point-of-service, network service providers (or ask network management, network experts, etc.), or find relevant information by yourself. Our company does not support this kind of service and support.

2. If you do not use Ethernet, please unplug the OTG cable and Ethernet card, otherwise the player will continue to consume power.

**4-4. 2G Connection**

Firstly insert the SIM card into the SIM slot.

Enter Setting/Wireless and Network, choose more, then choose Mobile networks. Check Module Power & Use only 2G



networks. Then choose Network Operators, the system will connect the network automatically.

#### 4-5. Webpage browser

Set up the network according to the method of 2-1 chapters, you can use the browser to browse web pages. .

Click shortcuts in the main interface, select the "browser" into the browser interface, click the "Menu" button, pop-up browser settings menu; Click "Start" pop-up address bar, enter the URL to be determined. Open a Web page; slide your finger up and down the screen to view other parts of the page. Drag web pages, the bottom of the browser will appear zoom button; you can click it to browse the Web.



#### 4-5.1. Bookmark manager

##### ●Setting bookmark

In the browsing interface, if you want to add the current address to bookmark. Click “Menu” to select “Bookmark”, then click “Add bookmark”. Click “Yes” to confirm.

##### ●Open bookmark

In the interface of browser, click “Menu” to select “Bookmark”, select the bookmark which you want and open the webpage.

##### ●Edit bookmark

In the interface of browser, click “Menu” to select “Bookmark”, click and press bookmark to open the menu option. Select the bookmark which you like to edit, select “Edit bookmark” to edit it, and click “Yes” to confirm.

Set up the network according to the method of 2-1 chapters, you can use the browser to browse web pages. .

Click shortcuts in the main interface, select the "browser" into the browser interface, click the "Menu" button, pop-up browser settings menu; Click "Start" pop-up address bar, enter the URL to be determined. Open a Web page; slide your finger up and down the screen to view other parts of the page. Drag web

pages, the bottom of the browser will appear zoom button; you can click it to browse the Web.

#### **4-5.2. Open new window**

##### **●Open new browser window**

In the interface of browser, click “Menu”, select “New window” to open a new browser window.

##### **●Switching the browser window**

In the browser window, click the “Menu” and click “window” to open a new browser window..

#### **4-5.3. Change your browser homepage**

In the interface of browser, click “Menu” and pop up browser setting menu, click “More” and then click “Setting”, click “Setting homepage” in the setting interface, then enter URL, click “Yes” to save it.

#### **4-5.4. Setting of browser**

In the interface of browser, click “Menu” and click “More”, then click “Setting” to set browser.

#### **4-5.5. E-mail**

You can receive and send E-Mail with this player. There are

E-Mail setting guide in the application program, it can add POP3 OR IMAP E-Mail account of normal WEB E-Mail server (Such as Yahoo, Gmail, Hotmail).

Notes: Before setting E-Mail guide, please ensure your Internet is working and the device time is right.



#### 4-5.6. E-mail Setting Guide

Click shortcut icon in the main interface, an E-Mail setting guide will appear to help your setting.

Click the button “Next”, input your E-Mail address and password of your E-Mail account. Click the button “Next”; select your E-Mail form, POP3 or IMAP. Click the button “Next”, to check whether the E-Mail sending and receiving servers can be used or not, input account name and sending E-Mail name, click “Finish”. If E-Mail is available, it will enter

your inbox automatically.

#### **4-5.7. Receiving and Sending E-mail**

Click shortcut key in the main interface, select icon “E-mail” to enter inbox, it will refresh new E-Mail automatically, click it to read.

In the inbox, click “Menu”, click “Writing” to enter writing new E-Mail interface. Input the receiver’s E-Mail, subject and information in the receiver’s field; if you want to add attachment, click “Menu” to pop up the menu option, click “Add attachment” to select the attachment. Then click “Send” to send the E-Mail.

**Notes:** If you have more than one account, and hope to send E-Mail using one specific account, click and choose the account name and write the E-Mail.

#### **4-5.8. Delete E-mail Account**

You can delete the POP3 OR IMAP E-Mail account from your E-Mail program.

Click shortcut icon in the main interface, select “E-Mail” icon to enter your inbox, click “Menu”, then click “Account”, choose the account you want to delete , then it will pop-up the

menu list, click “Delete account” , then click “Yes” to delete.

#### 4-5.9. Instant Message

You can send instant messages with friends through the built-in “Google Talk” or “Mobile QQ” or other apks.

### Chapter 5. Operating Details of Main Interface

#### 5-1.Music

Select the icon of “music”, enter music list, to select the music which you want to play, as picture shows below:



Click the icons of the upper-left corner, pop-up the options of

album, artist, song, playlist and genre.



Click the music files into the music player directly:

“⏮️/⏭️”: Select previous / next song, rewind / fast-forward;

click the progress bar directly can also fast rewind / fast forward.

“⏮️/⏭️”: Play/Pause the music;





“🎲”: Random playing

“🔄”: Repeat All







“🔄”: Repeat one

## 5-2.Video


Select video playing icon, click to enter video files list, long

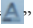
press video files to pop up a  in the video list, and click  to delete the video files. Click  to pop up “information details”, you can see the details here. Select video to enter video playing interface. Click  to play video.

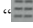


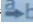
“  ”: Volume Increase / Decrease  
“  ”: Select last/next video, fast backwards/fast forwards in the current video; click Progress Bar directly can realize fast backwards/fast forwards function.  
“  ”: Play/Pause video;

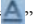



Click “” Return to previous menu;

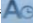
“”: Subtitles switch, paddling the progress bar, designated to the left subtitles switched on, the plan to the right subtitle switch off, click OK to confirm; (Note: the subtitle file must match the video)


“”: Subtitle list of options (Note: the subtitle file must match the video)

“”: Subtitle encoding options (Note: the subtitle file must match the video)

“”: Subtitle colors , choose the needed color, click to confirm (Note: the subtitle file must match the video)


“”: Select the subtitle font size. Paddling the progress bar to select the font size, click OK to confirm; (Note: the subtitle file must match the video)


“”: The subtitle delay options, paddling the progress bar to select the subtitle delay time, click OK to confirm; (Note: the subtitle file must match the video)

“”: The track selection - Mandarin, Japanese, Cantonese; (Note: Video files have a variety of tracks to choose)

“”: The zoom mode selection---full-screen (screen ratio),

the original size, 4/3, 16/9, click OK to confirm;

“”: 3D mode selection;




“”: Return to the previous menu level;


#### **5-2-1. HDMI output**

When you use HDMI output, insert HDMI output cable plug of the machine, the other end to plug in the TV's.

Note: when you use the HDMI function, do not insert and draw the HDMI line frequently.

#### **5-3. Photo browser**

Click the icon  in the main interface in to the photo browser list, long press video files to pop up a  in the video list, and click  to delete the video files.

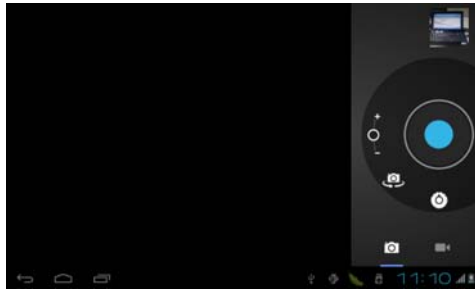 
Click “X cancel” to cancel the option. Select a picture file, view the interface in full-screen picture, click on the upper right corner of the screen brings up the Settings menu. Click  bring up sub-menu: slide show, edit, rotate Left, rotate Right, trim photos for more information.




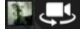
- “◀▶” : Select pictures;
- “🔍🔍” : ☒ Expand / shrink the current picture;
- “☀” : Brightness setting
- “🔄🔄” : Rotation around the picture
- “▶” : Enter the auto-surf picture mode;
- “✕” : Enter the picture settings; you can set a picture as your desktop in this setting menu, you can also do some setting of slide show.
- “↶” : Return previous menu;

#### 5-4. Camera


Select camera icon, enter camera mode.





**5-4-1. Self-time photos**

At the status of self-times photos, click “” to take the picture. The picture will automatic Jpg. picture, and saved into DCIM/Camera menu, the files will named by year month day hour minutes second. Click the icon “” transfer front/back camera.to browser all the photos. Click the icon

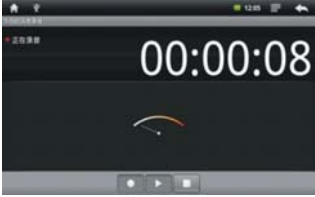



**5-4-2. Self-time videos**

At the status of self-time videos, click “” to enter record

mode, click  to begin record, after record, click  to save files, then back to camera status. The video will be saved to DCIM/Camera menu, the files will be named by year month day hour minutes second.  
Click “Home” key to go back to main interface.

### 5-5 Recording

Select recording icon, enter recording interface.

Click  to start recording. After recording, click  again and pop out to select whether to keep this recorder or not; at the same time, you can click  to play and click  to stop playing.



Select “Save” to keep this file or select “Cancel” not to save.  
Recording files will be saved at “recordingxxxxx.3gpp” format in Files Manager.

#### 5-6. Calculator

Click calculator icon  in main menu to use.



#### 5-7. Clock


Click clock icon  or the icon in main menu  to enter and set clock interface (as follows).



From the




interface  
mentioned  
above, click  
 to  
add or set  
clock.

In the alarm clock setting interface, click time shown to set  
time for alarm clock. And click icon  to close or open  
alarm clock.



5-8. File

## Manager

In main interface, click file manager icon  , select [TF Card] or [Local Disk], [Mobile Disk] to expand the drop-down folders and related files. Here you can copy, move, paste or rename files. Long press a single folder or file, the Edit dialog box will pop up with choices to delete, rename, copy, paste and send E-Mail.



## Chapter 6. OTG Function

This product has OTG function, It can support USB disk and some other devices like MP3, MP4, self-powered hard



disk, etc.

This product will automatically detect the USB device after connecting to it via OTG cable. And you can have access to the USB device files like the files on the player.

⚠ With low battery or DC charger not charging, please don't use OTG function, or the player may turn off automatically because of low power.

#### **Chapter 7. External USB Mouse/Keyboard Function**

After mouse connected, mouse pointer will appear on the screen. The left button is confirm button, the right button to return and the middle slider to slide up and down .

Note: Some keys cannot work on this player. And keyboard code will be revised as per the definition of Android system. We recommend a standard USB keyboard to be used.

#### **Chapter 8. Usage of TF Card**

This product comes with TF card slot. It supports reading the files in TF card. When using, inset the TF card to the product.

To drag out the TF card, push the TF card inside a little and release; TF card will pop out automatically and you can take it out. This product supports TF card from 1GB to 16GB.

Tips:

A. Please insert TF card to the card slot on the right correctly.


B. When TF card is working (such as reading, copying, etc.), please do not pull out the card or it will lead to data errors.

C. Avoid using the memory card in high temperature or high humidity environment.

D. Keep the memory card away from liquid or corrosive material.

Note: If you cannot take out the memory card, or it's stuck with other material or smudged and so on, you can use tweezers or other tools to pull it out slowly and carefully.

#### **Chapter 9. Basic Setting**

Click icon  to enter menu setting: Wireless & Networks, Sound, Display, Storage, Battery, Applications,



Accounts & sync, Location services, Security, Language & input, Backup & reset, Date & time, Accessibility, Developer options, about tablet. Press and hold the screen up or down to turn pages.

### 9-1. Wireless & Network Setting


Click Wireless & network in “Settings” menu to enter the interface (as follows).

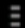

1. Wi-Fi: Click “ON” to open Wi-Fi.
2. Wi-Fi setting: Please refer to the operation of 2-1 Wi-Fi Setting.
3. Mobile networks: Click “More”, then “Mobile networks” and turn on Modem power. If Wi-Fi is on, there will pop up a dialog box to prompt that “Please turn off Wi-Fi first” and click “Yes”, Wi-Fi will shut down

automatically.

4. Mobile network settings: Click to set Data enabled, Data roaming, Access Point Names, Network operators, etc.

A. Data Traffic Enabled: Enable data access of mobile network

B. Data roaming: Tick  in this menu means roaming data services.

C. Access Point Names: Click “Access Point Names” to enter and click the icon  in the upper right corner of the screen or click  to pop up new APN information. You can follow the prompts step-by-step.

D. Network Operators: Click to select your access network operator.



Ethernet Settings: Please refer to the operation of 4-3 Ethernet Settings.

## 9-2. Sound & Display Setting

Click “Sound” in Settings Menu to enter the setting interface (as follows):



A: Volumes: Click here for all the volume settings.

B: Ringtone & Notifications: Click here to set Phone ringtone, Default notification, Vibration and ring.

C: System: Click here to set touch sound, notice sound, vibration on touch.

**9-3.** Click Display in Settings menu to enter the setting interface (as follows)



- A. Brightness: click here to adjust the brightness of this product.
- B. Wallpaper: Click here to set Live Wallpaper, Super-HD Player, Wallpapers.
- C. Screen Auto-rotation: Click here to open or close screen auto-rotation function.
- D. Sleep: Click here to adjust the time for automatic screen lock with choices of 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, 30 minutes.
- E. Font size: Click here to adjust the font size for the player.

F. Accelerometer coordinate system: Click here to set a special coordinate for some games.

G. Screen adaption: Click here to adjust the screen size for some games.

**9-4.** Storage: Click here to check the space for SD card or internal storage of the player, uninstall the SD card, format the



SD card.

**9-5.** Battery: click here to check battery usage.



9-6. Apps: Click here to set “whether to allow third-party applications to be installed”, “manage/delete the installed applications, view and manage running services.



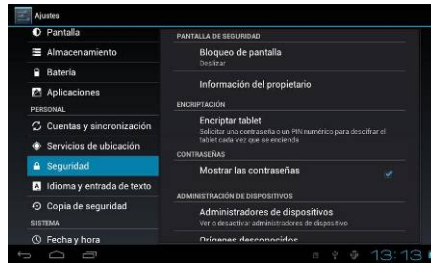 


**9-7.**Location services: Google's location service, Location & Google search



**9-8.** Location and Security:

You can set up device administration, screen lock and password visibility.



1: Unknown sources: Allow installation of non-Market applications.

A: Screen Unlock;

Click 【Set up screen lock】 to enter interface shown below:

A: None: Disable screen unlock security

B: Pattern: Draw pattern to unlock screen

C: PIN: Enter a numeric PIN to unlock screen

D: Password: Enter a password to unlock screen

**9-9. Language & Keyboard:** Set up languages & input keyboard



**9-10. Backup and Restore:** Set up “whether to show my

location, back up my data & Factory reset”.

A: Set Date;

Click **+** **-** to set up year, month, day, click **设置** to confirm.






B :  
Time

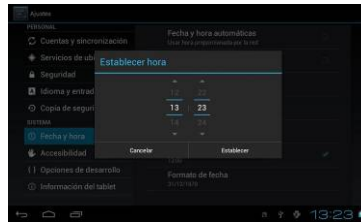 
Select your time zone and confirm.

Select  
Zone;



C: Set Time

Click   to set up hour, minute, for example: 10: 56,  
click  to confirm.



D: Set Date Format; Click the date format you prefer and confirm.

## 9-12. Accessibility

## 9-13. Developer Options



#### 9-14. About Tablet

You can check legal information, model number, Android version, Baseband version.



#### Chapter 10. Trouble Shooting

1. The tablet turns on slowly at first time

- After system update, factory restore, it takes about 2-3 minutes to install some pre-install applications at the first time, then starting time will be quicker.

2. Unable to connect WIFI or weak signal

- Ensure the Network is working properly.
- Ensure the user name and password is correct.

- Ensure the internal antenna is not blocked.
  - Ensure the tablet is within the proper distance of the Network and there is no wall or other obstructions between.
3. Unable to connect 3G or weak signal
- Ensure the 3G is connected to the tablet correctly and the SIM card with enough fees to access to the Internet.
  - Ensure the 3G is among the models supported by the tablet.
  - Ensure you are in an area that gets access to the signal
  - Check if the “Wireless and Network” is correctly set.
4. Indicator light does not turn on after 3G card is plugged in.
- Check connected properly, 3G card can work well, 3G connects successfully.
5. 3G card connection fails-it indicates failure or it stay at the same status all the time
- Check whether the 3G card is with enough fee.
  - Ensure you are in a location with stable and strong signal.
  - Close and restart the 3G

- Close 3G, and then plug OTG cable and re-plug in the cable and 3G card again correctly.

- Close 3G and restart the tablet

6. Fail to copy files

- Ensure the tablet is connected to the computer correctly.

- Ensure there is still disk space.

- Ensure the USB cable is functionally well.

7. No sound in the earphone

- Ensure that the volume is not set to 0.

- Check whether the headset is correctly connected and the wire is broken.

8. The system has some trouble

- When you install some third-party applications it may lead to some functional problems. You can restart the tablet or uninstall the applications.

9. Unable to set E-mail or use registration applications.

- Ensure your Network is working properly.

- Ensure the E-Mail account is correctly set.

- Ensure your system time is the same with the local time.

- Please run the “Advanced Task Manager” to stop some other

running applications.

10. The memory capacity is different from the nominal figure.

- Just like hard disk on computer, the capacity shown on the computer is usually less than the nominal capacity; this is due to different unit conversion used by computer and storage device manufacturers.

In computer, 1GB=1024MB, but storage device manufacturers use 1GB=1000MB as default. The actual capacity is not lessened.

- The OS of this tablet pre-installs some applications, games and the OS itself occupies some capacity. This is also one reason why the capacity that can be used for storage is less than the nominal figure.

#### 11. Specification

Dimension	193mm*122mm*13mm	
Display	7 inch HD TFT touch-screen display; resolution 800*480 pixels	
PC connection	High speed USB 2.0	
Configurati	CPU	Allwinner A10



on	Memory	8GB, 16GB, 32GB (Optional)
	TF card	128MB~32GB
	OS	Android 4.0
	Wifi	IEEE802.11b/g/n
	Battery	Lithium battery 3.7V
Power	DC Adapter	DC 5V, 1.5-2A
	Max earphone output	(L) 7mW+ (R) 7mW (32 ohm)
Audio Parameter	MP3 bit rate	32K bps - 320K bps
	WMA bit rate	16K bps - 320K bps
	Frequency response	20Hz 至 20KHz +/-3dB
	SNR	>=85dB
	Distortion degree	<0.6%
Music Formats	MP3, M4A, WMA, APE, FLAC, AAC, MID, WAV, AMR, OGG, etc	
Video Formats	Supporting Full HD video decoding (2160P, 1080P, 720P, 480P); Video formats: MKV, AVI, RM, RMVB, WMV, 3GP, MOV, MP4, AS	

	F,MPG,DAT,VOB,FLV, etc
Image Formats	JPG, JPEG, BMP, etc
Temperature	-30° ~ +50°C
Language	Traditional Chinese, Simplified Chinese, English, Multi-Languages supported
OS Supported	Windows2K/XP/Vista/Windows7/Linux2.4/MAC OS 10.4

FCC Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These

limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure and SAR Statements SAR Statement the (Tablet MID MODEL No.: B7916H3) has been tested for body-worn Specific Absorption Rate (SAR) compliance. The FCC has established detailed SAR requirements and has established that these requirements. RF Exposure Information The radio module has been evaluated under FCC Bulletin OET 65C (01-01) and found to be compliant to the requirements as set forth in CFR 47 Sections, 2.1093, and 15.247 (b) (4) addressing RF Exposure from

radio frequency devices. This model meets the applicable government requirements for exposure to radio frequency waves. The highest SAR level measured for this device was (1.191 w/kg).