


imogenstudio

+CAM
for the iPhone



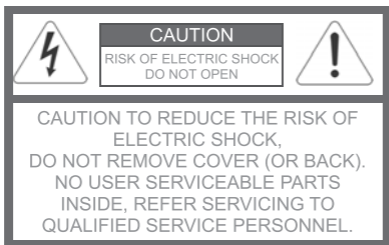

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Warning

To prevent Fire or Shock Hazards, Do Not Expose This PRODUCT to Rain or Moisture.

Apparatus shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the apparatus.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

+Cam Quick Start Guide

Regulatory Notices for USA

This equipment has been tested and found to comply with the limits for a digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.


The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

Camera Mounting

To mount the +Cam to a wall, unscrew the base of the camera and remove the metal plate.

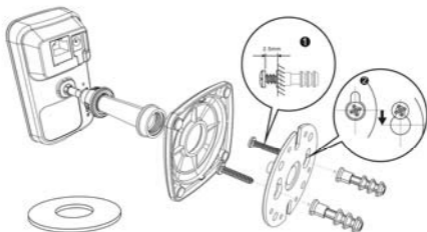

With the included screws and anchors, fasten the mounting bracket on to the wall. Then, reattach the base cover and screw the stand back on to the mounting bracket.

1. There's an App for That



To get started, download the Seedonk app from Apple's App store.

2. Connect the Camera



Plug the +Cam in to AC power with the supplied adapter before continuing.

3. Wi-Fi Setup Mode



Please make sure the “Wi-Fi Setup” switch on the back of the camera is set to ON.

3. Connect iPhone to +Cam



Go to Settings -> Wi-Fi on your iPhone and connect to the +Cam wireless network.

4. Launch Seedonk App

Once your iPhone establishes its connection to the +Cam, (usually takes around 30 seconds) launch the Seedonk App.



The Seedonk app will automatically detect your +Cam. When prompted, click 'Yes' to setup your camera.

4. Setup Wizard

Follow the instructions in the Camera Setup Wizard to complete installation.



5. Using Seedonk

Please enter your user name and password, created during the setup process, in the login window to access your +Cam.



6a. Seedonk Features – Main Window



6b. Seedonk Features – Camera Viewer



↑
Take a
Snapshot

↑
Record
a Video

Safety Information

Do not point the camera directly at the sun, else it will damage the image sensor.

Keep the camera away from heat to avoid electric shocks.

To prevent the chance of overheating and ruining the camera, do not cover/obstruct the ventilation holes at the top of the unit.

Keep the camera away from rain or moisture.

Do not attempt to open, dismantle, repair, or service the camera. Doing so may cause electric shocks and other hazards.

Any evidence of misuse, abuse, or tampering will void the Limited Warranty.

For More Information

To get the latest camera driver updates or to learn more about Imogen Studio products, please visit:

www.imogenstudio.com

To get software updates or to learn more about Seedonk, please visit:

www.seedonk.com

imogenstudio