

imogenstudio

+CAM Pro

for Intel Processor Android





This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Warning

To prevent Fire or Shock Hazards, Do Not Expose This PRODUCT to Rain or Moisture.

Apparatus shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the apparatus.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Regulatory Notices for USA

This equipment has been tested and found to comply with the limits for a digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Camera Mounting

To mount the +Cam Pro to a wall, unscrew the base of the camera and remove the metal plate.

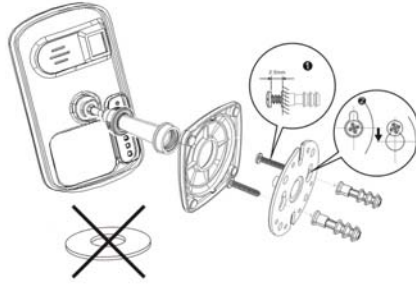

With the included screws and anchors, fasten the mounting bracket on to the wall. Then, reattached the base cover and screw the stand back on to the mounting bracket.

1. iSecurity+ App



To get started, download the iSecurity+ app from Apple's App store or the Google Play Store.

2. Connect to Power



Connect the +Cam Proto the AC power adapter, then plug your power cord into the electrical outlet.

 
3a. Wi-Fi Setup Mode



Please make sure the “Wi-Fi Setup” switch on the back of the camera is set to ON.

The “Wi-Fi Setup” indicator will glow green when the +Cam Pro is ready for setup. (This may take up to 2 minutes when the camera is first powered on.)

3b. Connect to +CamPro

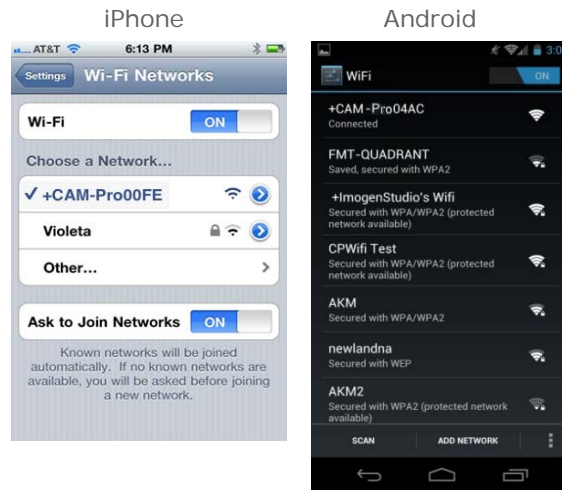

Go to Settings -> (Wireless & Networks for Android) Wi-Fi on your device and connect to the +Cam Pro network (denoted by "+CAM-Pro" plus the last 4 digits of its CAM ID, which can be found on the back of the camera).

4a. Launch iSecurity+ App

Once your device establishes its connection to the +Cam Pro, (usually takes around 30 seconds) launch the iSecurity+ App.



The iSecurity+ app will automatically detect your camera. When prompted, click 'Yes' to setup your camera.

4b. Setup Wizard

Follow the instructions in the Camera Setup Wizard to complete installation.

 


5. Using iSecurity+

Please enter your user name and password, created during the setup process, in the login window to access your +Cam Pro.




6a. iSecurity+ Features – Main Window

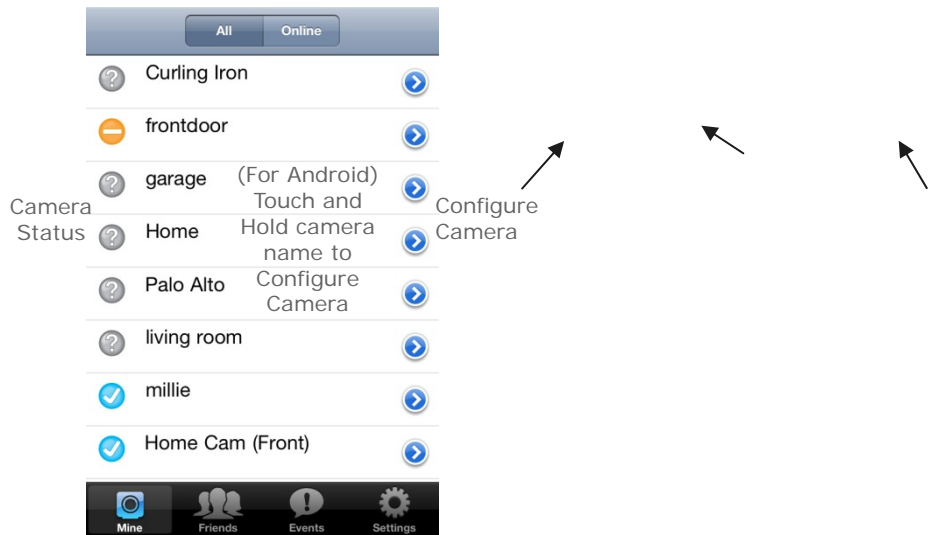

Friends' Cameras Recorded Events App Settings
imogenstudio 11

 6b. iSecurity+ Features – Camera Viewer

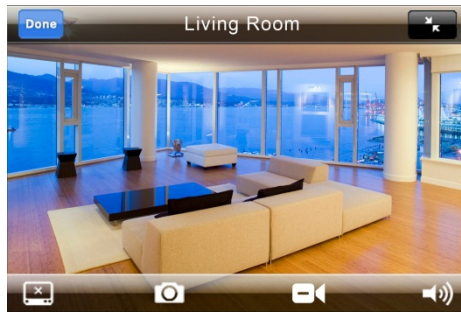

Take a
Snapshot

Audio Muting
Off/On

Audio-only
Mode

Record a
video clip



Safety Information

Do not point the camera directly at the sun, or else it will damage the image sensor.

Keep the camera away from heat to avoid electric shock.

Keep the camera away from rain and moisture.

Do not attempt to open, dismantle, repair, or service the camera. Doing so may cause electric shock and other hazards.

Any evidence of misuse, abuse, or tampering will void the Limited Warranty.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.

Troubleshooting



LED Status Indicators

Wi-Fi Setup

- Green:** Setup mode on
- Orange:** Setup mode initializing
- Light Off:** Setup mode off

Network

- Green:** Connected to iSecurity+
- Flashing Green:** Connected to the Internet
- Green:** Connected to local network
- Orange:** Connected to local network
- Flashing Orange:** Not connected to any network
- Orange:** Not connected to any network

Power

- Green:** Power On

For More Information

To get the latest camera driver updates or to learn more about Imogen Studio products, please visit: www.imogenstudio.com

To get the latest software updates or to learn more about Seedonk, please visit: www.seedonk.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

imogenstudio

Revised Dec.23, 2012
© ImogenStudio, 2012