 


**imogen**studio

**+CAM ROBOT-O HD**



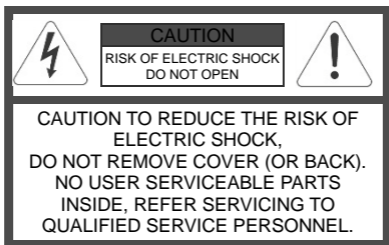

This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

### **Warning**

To prevent Fire or Shock Hazards, Do Not Expose This PRODUCT to Rain or Moisture.

Apparatus shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the apparatus.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

### **Regulatory Notices for USA**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## Camera Mounting

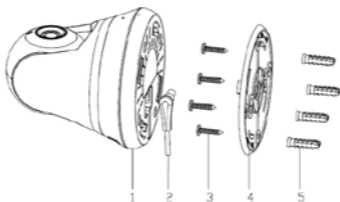

To mount the +CAM Robot-o HD to the wall, place the camera in a position to ensure the most comprehensive view for video monitoring.

Unscrew the base of the camera and remove the plate. The dots on the base of the camera indicate the location of the expansion bolts. Insert the expansion bolts into the drilled holes.

Use a screwdriver to tighten or loosen the screws and secure the +CAM Robot-o HD. Connect the device cables.

## 1. iSecurity+ App



To get started, download the iSecurity+ app from Apple's App store or the Google Play Store.

## 2. Connect to Power



Connect the +CAM Robot-o HD to the AC power adapter, then plug your power cord into the electrical outlet.

### 3a. Wi-Fi Setup Mode

 


The Setup button will glow the green.



The “Wi-Fi Setup” LEDs in the front of the cam will twinkle the green/orange alternatively and the +CAM Robot-o HD will rotate when the camera is ready for setup. (This may take up to 2 minutes when the camera is first powered on.)

## 3b. Connect device to +CAM Robot-o HD

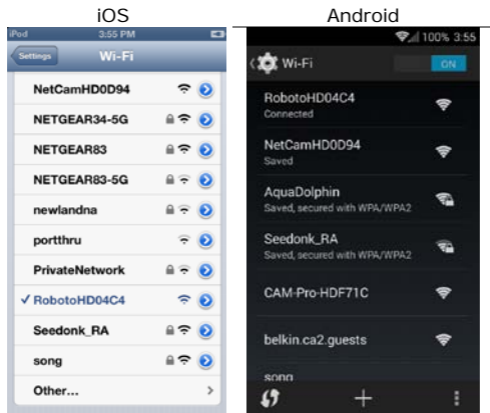

Go to your device's settings ->  
Under the Wi-Fi setting, connect to the  
RobotoHDXXXX (last 4 digits of Cam  
ID)network.

## 4a. Launch iSecurity+ App

Once your device establishes its connection to the +CAM Robot-o HD, (usually takes around 30 seconds,) launch the iSecurity+ App. If you don't see the pop up prompt, please close the app and re-launch it.

 


iSecurity+ app will automatically detect your camera. When prompted, click 'Yes' to setup your camera.



## 4b. Setup Wizard

Follow the instructions in the Camera Setup Wizard to complete installation.

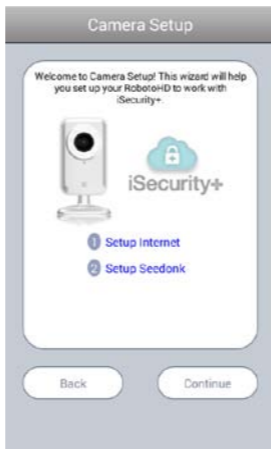

## 4c. Setup Wizard Final Step

 
Camera setup is complete. Press the reset/power button on the back of the camera to turn off Wi-Fi setup mode and to connect to your Wi-Fi network. Restart iSecurity+ and please log in again.



You can use your iOS/ Android devices to access the camera anywhere in the world. Make sure your phone has access to the internet via 3G, 4G or Wi-Fi for internet connection.


## 5. Using iSecurity+ & Main Features Window

Please enter your user name and password, created during the setup process to access your +CAM Robot-o HD.

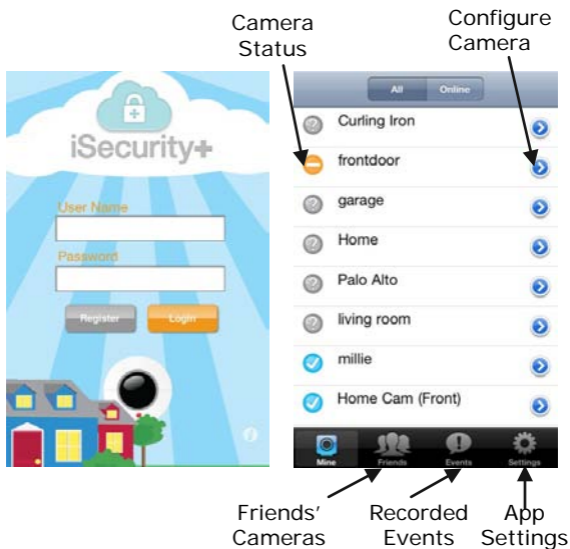

## 6. iSecurity+ Features – Camera Viewer

 Swipe directional controls to change the camera Pan & Tilt view.

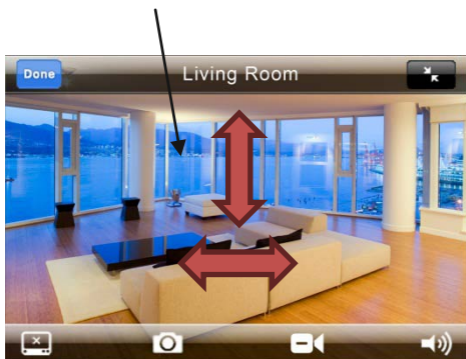

Audio-only  
Mode



Take a  
Snapshot



Record a  
video clip



Audio Muting  
Off/On

## 6a. Zoom Function

Zooming In - Touch the screen with two fingers and slide inward at an angle and the image will zoom in.



Zooming Out - Touch the screen with two fingers and slide outwards at an angle and it will enlarge the image.



## 6a. Audio Talkback



1. To use Audio Talkback, first press the Audio button to initiate sound to listen in.

2. Then press the Audio Talkback button and speak into your device, then let go for the audio to transfer to the camera's speaker.

## Safety Information

Do not point the camera directly at the sun, or else it will damage the image sensor.

Keep the camera away from heat to avoid electric shock.

Keep the camera away from rain and moisture.

Do not attempt to open, dismantle, repair, or service the camera. Doing so may cause electric shock and other hazards.

Any evidence of misuse, abuse, or tampering will void the Limited Warranty.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.

## Troubleshooting



### LED Status Indicators

#### During Wi-Fi Setup Mode

**Green:** Setup mode on

**Orange:** Setup mode initializing

**Light Off:** Setup mode off

#### During Normal Operation

**Green:** Connected to iSecurity+

**Orange:** Connected to local Network

**Flashing**

**Orange:** Not connected to any network





## Setup button

Press the button 5s, the camera will be reset;

Press button for more than 10s to reset factory default.

## For More Information

To get the latest camera driver updates or to learn more about Imogen Studio products, please visit:

[www.imogenstudio.com](http://www.imogenstudio.com)

To get the latest software updates or to learn more about Seedonk, please visit:

[www.isecurityplus.com](http://www.isecurityplus.com)

**imogen**studio

Revised May 5, 2014  
©ImogenStudio, 2014