

THANK YOU FOR USING OUR HAIER PRODUCT. THIS EASY-TO-USE MANUAL WILL GUIDE YOU IN GETTING THE BEST USE OF YOUR MICROWAVE OVEN. REMEMBER TO RECORD THE MODEL AND SERIAL NUMBER. THEY ARE AN A LABEL IN BACK OF THE MICROWAVE OVEN.

Model number

Serial number

Date of purchase

**Staple your receipt to your manual.**

**YOU WILL NEED IT TO OBTAIN WARRANTY SERVICE**

**NOTE: Any questions about the microwave oven, please contact us.**

### **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**

- a. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- b. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- c. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  1. door (bent),
  2. hinges and latches (broken or loosened),
  3. door seals and sealing surfaces.
- d. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## **LIMITED WARRANTY**

This warranty covers all defects in workmanship or materials for a period of:  
12 months for labor (carry-in only)  
12 months for parts (functional parts only)  
10 years for magnetron

The warranty commences on the date of item purchase. Customer must provide proof of purchase, brand, model, serial number and purchase date for verification prior to any warranty service being provided.

#### **Services to be Rendered**

The mechanical and electrical parts of the appliance that serve a functional purpose are covered for a period of 12 months. This includes all parts except finish and trim. There will be no charge to the purchaser for functional replacement parts and labor on any covered items during the initial 12-month period. Beyond this period, only the Magnetron is covered and labor is not provided and must be paid for by the customer.

Any mechanical or electrical part that proves to be defective in normal usage during the specified warranty period will be repaired or replaced at Haier's Discretion. If Haier determines repair is not necessary or replacement part is unavailable, the product will be exchanged with a refurbished or new product the same or similar to the original at Haier's discretion.

To contact the nearest authorized service center please call 1-877-337-3639 or visit [www.haieramerica.com](http://www.haieramerica.com).

#### **THIS WARRANTY COVERS APPLIANCES WITHIN THE CONTINENTAL UNITED STATES, PUERTO RICO AND CANADA. IT DOES NOT COVER THE FOLLOWING:**

Damages from improper installation.

Damages incurred during shipping.

Defects other than those due to manufacturing.

Damage from misuse, abuse, accident, alteration, lack of proper care and Maintenance or incorrect electrical current or voltage.

Damage from other than household use.

Damage from service by other than an authorized dealer or service center.

Decorative trims or replaceable light bulbs.

Labor, beyond the initial 12 months.

Refurbished product or unit purchased as/like new or second-hand.

**THE REMEDY PROVIDED IN THIS WARRANTY IS EXCLUSIVE AND IS GRANTED IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. PLEASE NOTE THAT SOME JURISDICTIONS MAY NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO SOME OF THE ABOVE EXCLUSIONS MAY NOT APPLY TO YOU. CHECK YOUR LOCAL LAWS FOR ANY RESTRICTIONS OR LIMITATIONS REGARDING THE EXCLUSION OF IMPLIED WARRANTIES.**

Haier America Trading L.L.C.

New York, NY 10018

1-877-337-3639

# TROUBLESHOOTING

## Questions and Answers:

Q. Accidentally running of microwave oven without any food in it. Is it damaged?

A. We do not recommend operating the microwave oven without any food, however, running the oven empty for a short time will not damage the oven.

Q. What if oven does not turn on?

A. Check the following:

- 1) Is the oven plugged in securely? Remove plug from the outlet, wait 10 seconds and reinsert.
- 2) Check circuit breaker or fuse. Reset circuit breaker or replace fuse if it is tripped or blown.

Q. Can the oven be used with the glass tray removed?

A. No. The glass tray must be positioned correctly in the oven before cooking.

Q. Why does warm air come from the oven vents and steam accumulates on the oven door?

A. This is due to heat being given off from food cooking in the oven cavity. The warm air is carried out of the oven by the airflow pattern in the oven. There are no microwaves in the air. The oven vents should never be blocked during cooking. During cooking time, steam is given off from the food. Most of the steam is removed from the oven by the air; which circulates in the oven cavity. However, some steam will condense on cooler surfaces such as the oven door. This is normal.

Q. My microwave causes interference on my TV. Is this Normal?

A. Some Radio and TV interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, blow dryers, etc. It does not indicate a problem with your oven.

Q. Can TV dinner trays be placed in the oven?

A. Only TV dinners labeled microwave safe are recommended for this oven. Make sure foil covers are removed from top of container.

# TABLE OF CONTENTS

<b>PRECAUTIONS</b>	1
<b>IMPORTANT SAFETY INSTRUCTIONS</b>	3
<b>UTENSILS GUIDE</b>	5
<b>INSTALLING MICROWAVE OVEN</b>	7
<b>GROUNDING INSTRUCTIONS</b>	8
<b>FEATURES OF MICROWAVE OVEN</b>	10
<b>BEFORE YOU CALL FOR SERVICE</b>	11
<b>OPERATING MICROWAVE OVEN</b>	12
<b>SPECIFICATIONS</b>	17
<b>PROPER MICROWAVE OVEN CARE AND CLEANING</b>	18
<b>FOOD FACTS IN MICROWAVE COOKING</b>	19
<b>LANGUAGE OF MICROWAVE OVEN</b>	20
<b>TROUBLESHOOTING</b>	21
<b>LIMITED WARRANTY</b>	22

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

**WARNING** - To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY** on page 1.
3. This appliance must be grounded. Connect only to properly grounded outlet. See **GROUNDING INSTRUCTIONS** on page 7.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers for - example, closed glass jars are able to explode and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual.  
Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when used by children.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel.  
Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surfaces.
14. Do not let cord hang over edge of table or counter.
15. When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergents applied with a sponge or soft cloth.
16. To reduce the risk of fire in the oven cavity:
  - a. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.

## LANGUAGE OF MICROWAVE OVEN

**Timings:** As a rough guide most foods will require approximately a quarter to one third conventional cooking time. If unsure, always under estimate the time needed, check the result and continue cooking if needed. When doubling a recipe, increase the cooking time by half and check the result.

**Covering :** Cover foods for the same reasons as in conventional cooking. This retains moisture, speeds up cooking and helps to tender the foods such as vegetables, casseroles and fish. Use a vented lid for foods with a high liquid boiling over. Roasting bags may be used to prevent splattering on the oven walls.

**Standing time:** Due to the heat penetration it is important to let cooked food wait a few minutes before serving.

**Stirring:** Food nearest the sides of the dish, cook faster than that at the center. Stirring will speed up its cooking time and ensure even cooking. Particularly sensitive foods, such as scrambled eggs and sauces, need frequent stirring during cooking.

**Arranging and Rearranging:** The food at the outer edges of the turntable or dish generally receives more microwave energy than that at the center, so place thicker or large portions of the food to the outer edge. Rearranging, like stirring, moves the food and ensure even cooking.

## FOOD FACTS IN MICROWAVE

**The quality of the food :** Poor quality ingredients are rarely improved by any method of cooking and this applies particularly to microwave cooking, as the process is so fast.

**Temperature:** The colder food before cooking. The longer will take to cook.

**Quantity:** The cooking time relates to the amount of food in the microwave oven. Do not overload the microwave. For very large quantities, it is better, and may be quicker, to cook in two or more batches.

**Density:** The more porous the food, the faster it will cook. All light airy cake mixture will cook faster than jacket potatoes.

**Size and shape:** Uniform shapes cook more evenly. In an irregular shape. Such as a leg or lamb. The thinner parts will cook faster than the thick part. The smaller the individual piece of food is (such as the vegetables in a soup) the quicker the cooking.

**Moisture:** There is very little evaporation in microwave cooking so foods can be cooked in the minimum water. Casseroles need about half the usual amount of stock; vegetables need only two or three tablespoons of water.

**Bones :** Meat and poultry bones conduct heat, therefore the areas around them will cook faster than the rest of meat. Insert a microwave meat thermometer into the thickest part of the flesh away from any bone for an accurate grading.

- c. If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- d. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- 17. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID
- 18. Use only thermometers which are specifically designed for use in microwave ovens.
- 19. Do not operate any heating or cooking appliance beneath this appliance.
- 20. Be certain the glass tray and roller ring are in place when you operate the oven.
- 21. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
- 22. Pierce foods with heavy skins such as potatoes, whole squash, apples and chestnuts before cooking.
- 23. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
- 24. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
- 25. Do not deep fry food in the microwave. It is difficult to control the fat which could cause a fire hazard.
- 26. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy. If there is any damage, do not operate the oven and contact your dealer or Haier authorized servicer.

## SAVE THESE INSTRUCTIONS

# WARNING !

## Arcing !

Arcing is the microwave term that is defined as “Sparks in the oven”

Arching is caused:

- 1.If metal, such as twist-ties poultry pins or gold-rimmed dishes.
- 2.If recycled paper towels containing small metal pieces being used in the microwave.
- 3.If foil paper is in the oven when the oven is use.

## Food !

- > Cooking time given in the cooking guide is approximate. Factors that may effect are the starting temperature, altitude, volume, size and shape of food, and container used. As you become familiar with the oven, you will be able to adjust for these factors.
- > Do not boil eggs in their shells. Pressure may build up and explode
- > Potatoes, apples, egg yolks and whole acorn squash are example of food with “NONPOROUS SKINS” These must be pierced before cooking to prevent bursting.
- > Popcorn must be popped in a microwave corn popper. Microwave popped the corn produces a lower yield than conventional popping.
- > DO NOT use oven for popcorn unless popped in a microwave approved popcorn container or unless it is commercially packaged and recommended for microwave ovens.
- > DO NOT use the oil unless specified by the manufacturer.
- > DO NOT attempt to deep fry in your oven.
- > DO NOT heat liquids in your microwave oven without the stirring.

# PROPER MICROWAVE OVEN CARE AND CLEANING

## Cleaning and Maintenance

### WARNING:

To avoid electric shock always unplug your microwave oven before leaning. Ignoring this warning may result in death or injury.

### CAUTION:

Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

### GENERAL:

Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your microwave oven. Rinse with clean warm water and dry with a soft cloth.

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads.

SOME of these chemicals may dissolve, damage and/or discolor your microwave oven. Keep the inside of the oven clean. When food spatters or liquid wipe with a damp cloth. To prevent damage to the operating parts inside the oven, care should be taken so water does not sweep into the ventilation openings.

Care should be taken in cleaning the touch control panel. If the control panel becomes soiled, open the oven door before cleaning. Wipe the panel with a cloth dampened slightly with water only. Dry with a soft cloth.

Do not scrub or use any sort of chemical cleaners. Close door and touch **PAUSE/STOP**. If steam accumulates inside or around the outside the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicate so malfunction of the unit.

The turntable and oven cavity floor should be cleaned regularly. Simply wipe the bottom surface of the oven and dry. The turntable may be washed in mild sudsy water or in the dishwasher.

# Specifications

## MWQ151TW / MWQ151TB

POWER SUPPLY	120V AC 60Hz SINGLE PHASE WITH GROUNDING
AC POWER REQUIRED	1600W
OUTPUT POWER (IEC Text Procedure)	1000W
FREQUENCY	2450MHz
CAPACITY OF OVEN CAVITY	1.1 Cu. Ft.
OUTER DIMENSION (H/W/D)	13.1x21.1x16.9 in.(334x535x428mm)
INTERIOR DIMENSION (H/W/D)	9.4x14.1x14.0 in.(238x357x356mm)
NET WEIGHT	APPROX: 16.5 kg
TIMER	Digital 99 minutes, 99seconds
POWER LEVELS	10 LEVEL

## MWQ1414TW / MWQ1414TB

POWER SUPPLY	120V AC 60Hz SINGLE PHASE WITH GROUNDING
AC POWER REQUIRED	1600W
OUTPUT POWER (IEC Text Procedure)	1000W
FREQUENCY	2450MHz
CAPACITY OF OVEN CAVITY	1.4 Cu. Ft.
OUTER DIMENSION H/W/D(INCH)	13.1x21.1x16.9 in.(322x557x472mm)
INTERIOR DIMENSION	10.2 x14.8 x15.7 in.(258x375x399mm)
NET WEIGHT	APPROX: 18.0 kg
TIMER	Digital 99 minutes, 99seconds
POWER LEVELS	10LEVEL

# UTENSILS GUIDE

This section lists which utensils can be used in the microwave, which ones have limited use for short periods, and which ones should not be used in the microwave.

## RECOMMENDED

**Microwave browning dish** - Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.

**Microwave plastic wrap** - Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.

**Paper towels and napkins** - Use for short-term heating and covering; these absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and could ignite.

**Glass and glass-ceramic bowls and dishes** - Use for heating or cooking.

**Paper plates and cups** - Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and could ignite.

**Wax paper** - Use as a cover to prevent spattering.

**Thermometers** - Use only those labeled "Microwave Safe" and follow all directions. Check the food in several places. Conventional thermometers may be used on microwave food once the food has been removed from the oven.

## LIMITED USE

**Plastic** - Use only if labeled "Microwave Safe". Other plastics can melt.

**Straw, wicker, and wood** - Use only for short-term heating, such as warming dinner rolls for a few seconds; baskets and bowls may be flammable. Ceramic, porcelain, and stoneware - Use these if they are labeled "Microwave Safe".

## NOT RECOMMENDED

**Glass jars and bottles** - Regular glass is too thin to be used in a microwave. It can shatter and cause damage and injury.

**Paper bags** - These are a fire hazard, except for popcorn bags that are designed for microwave use.

**Styrofoam plates and cups** - These can melt and leave an unhealthy residue on food.

**Plastic storage and food containers** - Containers such as margarine tubs can melt in the microwave.

**Metal utensils** - These can damage your oven. Remove all metal before cooking.

**Note:** Should you wish to check if a dish is safe for microwave, place the empty dish in the oven and microwave on **full power for 30 seconds**. a dish which becomes very hot should not be used.

# INSTALLING MICROWAVE OVEN

## Unpacking Microwave Oven

- 1)Unpack the oven, remove all packing material, and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify the dealer immediately if the unit is damaged. Do not install the oven if the unit is damaged.
- 2)Inspect and remove any remains of packing, tape or printed materials before powering the microwave oven.

## Placement Microwave Oven

- > The oven must be placed on a flat, stable surface.
- > The oven may possibly cause reception interference on the radios and/or televisions.
- > In order to eliminate or minimize interference to radio and televisions from the microwave oven, the oven should be plugged into a separate electrical socket. In addition, the oven should be physically as far away from the radios or televisions as possible.

## Proper Air Circulation

For proper operation, the oven must have sufficient air-flow. The following is recommended clearances around the oven:

Sides	.....	(50mm)
Top	.....	2" (25mm)
Back	.....	1" (25mm)
	.....	1"

## Electrical Requirement

- > Make sure there is suitable power outlet(120 Volt, 15 Amps Outlet) with proper grounding to power the microwave oven.
- > Avoid the use of three plug adapters or cutting off the third grounding prong in order to accommodate a two-plug outlet. This is a dangerous practice since it provides no effective grounding for the microwave and may result in shock hazard.
- > The electrical power cord must be kept dry and must be not pinched and crushed in any way.

Menu	Touch Times	Display
Defrost 3 Menu	Meat	1 de:f1
	Poultry	2 de:f2
	Fish	3 de:f3

**Note:** If you want to temporarily stop an **AUTOMATIC EXPRESS COOKING**, process, press the **PAUSE/STOP** pad once and then you can start the cooking by press **START**; or press the **PAUSE/STOP** pad twice to cancel the cooking program altogether, then the microwave oven return to the electrified state.

## **Child safety lock**

Press and Hold the **PAUSE/STOP** button for five seconds to lock the controls. and in the right of the display show **L**.

Press and Hold the **PAUSE/STOP** button A second time for five seconds to unlock the controls. it return to the enter state.

Note: To lock or unlock the child safety lock function the buzzer of the microwave oven will beeps two short ticks.

# GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING :** Improper use of the grounding plug can result in a risk of electric shock.

**Electrical Requirements:** The electrical requirements are a 120 volt 60 Hz, AC only, 15 amp. or more protected electrical supply. It is recommended that a separate circuit serving only this appliance be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. Should you only have a 2-prong outlet, have a qualified electrician install a correct wall receptacle. A 3-prong adapter may be purchased and used temporarily if local codes allow. Follow package directions. A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.

## Keep warm

Touch the pad, <sup>Enter/keep warm/time</sup> will indicator flash, set the time and touch **START** pad, the microwave begins to work and the time count down. <sup>keep warm</sup> indicator Light. When the cooking is finished, the buzzer of control panel will remind you with three short ticks, and the screen display **End**. It will return to the enter states automatic in 10 seconds.


## Reheat pad

This pad helps you to reheat vegetables fast. The oven will work for 5 minutes unless you touch **PAUSE/STOP** pad, you can reheat a plate of vegetables every a time During the cooking time the colon of the time flashing and the reheat indicator light. When the cooking is finished, the buzzer of control panel will remind you with three short ticks, and the display shows **End**. It will return to the enter states automatic in 10 seconds.

## Defrost 3 Menu


1. Touch the pad it shows <sup>Enter/defrost/kg</sup> indicator will flash, input the weight 0.2, then touch **START** pad the oven begins to work. When the cooking is finished, the buzzer of control panel will remind you with three short ticks, and the screen display **End**. It will return to the enter states automatic in 10 seconds

Note: the weight you input is the multiple of 100g, you can setup freely from 0.1kg to 3kg.

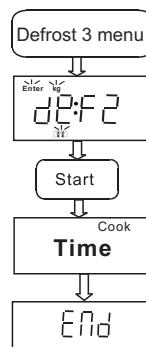


## POWER-SUPPLY CORD:

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
  - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - b. The extension cord must be a grounding-type 3-wire cord;
  - c. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

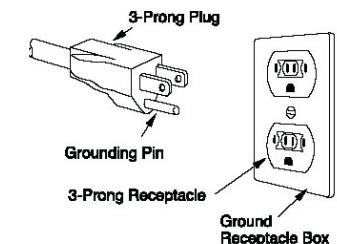

### Temporary Use

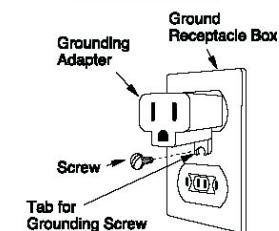

**Notes:** 1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.  
 2. Neither Haier nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

#### Radio or TV Interference :

Should there be any interference caused by the microwave oven to your radio or TV, check that the microwave oven is on a different electrical circuit, relocate the radio or TV as far away from the oven as feasible or check position and signal of receiving antenna


**Warning :** This product complies with Part 18 FCC rules. This product may cause interference with radios, cordless telephone, or devices that use a wireless remote control. If interference occurs, move the product away from the device or plug either into a different outlet, or move the product out of the sight with the remote control receiver.

The user that changes or modifications not expressly approval has been the part responsible for compliance could void the user's authority to operate the equipment.

For example: if you want to cook a baked potato for 150 g.  
 1.Put the potato in the proper container and place it in the oven.

2.Touch **BACKED POTATO** keypad Enter/g will indicator flash, touch the pad two times and the display the weight of 150,

3.Touch **Start**, cook indicator light. the time of 06:05 will cut down When the cooking is finished, the buzzer of control panel will remind you with three short ticks, and the screen display **End**. It will return to the enter states automatic in 10 seconds.

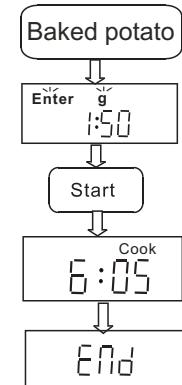


Menu	Touch Times	Weight/Quantity	Time
Baked Potato	1	100g	4'30"
	2	150g	6'05 "
	3	300g	10'05"
	4	450g	17'00"
Popcorn	1	90g	1'40"
	1	150g	2'00"
Vegetables	2	250g	3'20"
	3	350g	4'25"
	4	450g	5'55"
	1	250g	1'40"
Pizza	2	500g	2'05"
	3	1000g	3'10"
			1'05"

For example: if you want to cook Meat for 0.6 kg.

1.Put the Meat in the proper container and place it in the oven.

2.Touch **Meat** keypad Enter/kg will indicator flash, touch the pad three times and the display the weight of 0.6,

3.Touch **Start**, cook indicator light. The displays the time 11:00 cut down. When the cooking is finished, the buzzer of control panel will remind you with three short ticks, and the screen display **End**. It will return to the enter states automatic in 10 seconds.

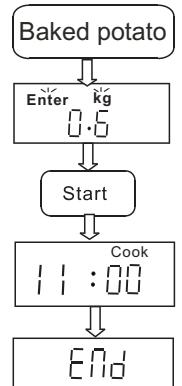

# FEATURES OF MICROWAVE OVEN

## POWER LEVEL

For your convenience, there are ten preset power levels programmed for different types of cooking.

**Note:** using lower power levels increases the cooking time which is recommended for foods such as cheese, milk and long slow of cooking of meats. Please refer to cooking guides and recipes for specific recommendations.

**For example:** suppose you want to cooking something for 5 minutes at 30% power level.

1. Enter the power level by touching **Power Level** 8 times.


The display shows 300 and **Enter/Cook/time/power level** indicator will flash.

2. Put cooking time 05:00.

3. Now touch **START** keypad, the oven start working and the time you setup will count down. Power level will indicator flash.

When the cooking is finished, The display shows **End**, the buzzer of control panel will remind you with three short alarms. Then it return to the enter states automatic in 10 seconds.

Or If you want to reenter start states, please touch **Pause/Stop** pad for 2 times.

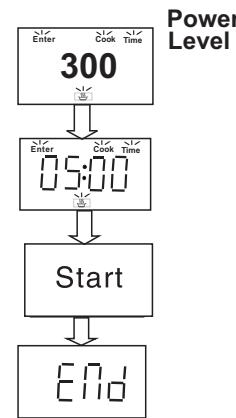

## Please see the chart below for power level:

Touch Times	1	2	3	4	5	6	7	8	9	10
Power Level (%)	100	90	80	70	60	50	40	30	20	10
Approximate Power(w)	1000	900	800	700	600	500	400	300	200	100

## Plus +30s

Press once for 30 seconds of cooking quickly at High Power , and the max time you can setup is 5 minutes .


## Automatic express cooking

These Menus allow you to cook or reheat many of your favorite foods by just touching the relevant keypad. For your convenience, the microwave is programmed with 12 one touch selection. The follow is part of automatic express cooking:

Beverage	Poultry	Meat
Popcorn	Vegetables	Pizza
Fish/Seafood	Frozen Dinner	Baked Potato


## Part Names

- 1 Door Safety Lock System
- 2 Oven Window
- 3 Oven Air Vent
- 4 Shaft
- 5 Roller Ring
- 6 Glass Tray
- 7 Control Panel
- 8 Pull Door Handle
- 9 shell

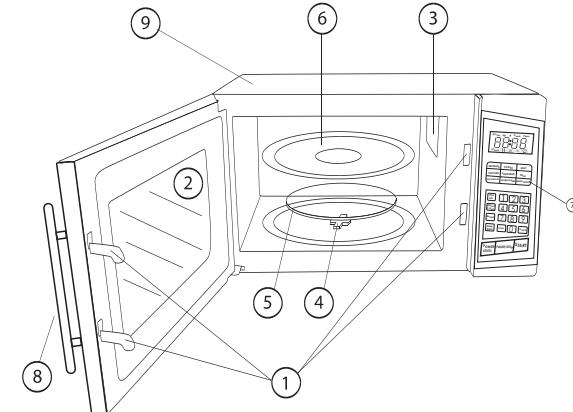


## Control Panel Buttons

MWQ151TW / MWQ151TB

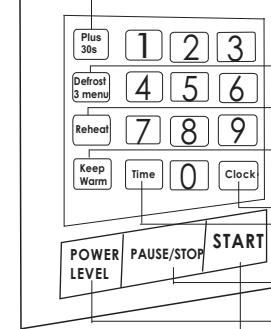

MWQ1414TW / MWQ1414TB

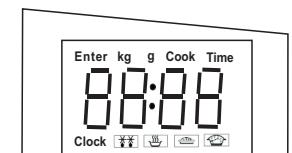

Page 13

Page 13

Page 15

Page 15

Page 15

Page 12

Page 12



Page 13

Page 12

# OPERATING MICROWAVE OVEN

## Visual Displays

Words around the display will light to indicate what function in progress  
Please see the following pages.

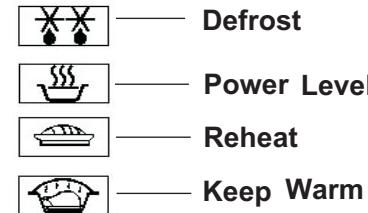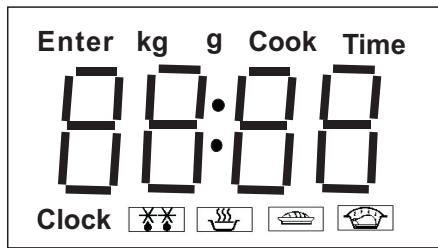

## BEFORE YOU CALL FOR SERVICE

**NOTE:** Do not remove protective film on exterior or Interior door window but the **POP**.

**Warning:** Please remove the protective housing film on the shell prior to your first use.

### If the oven fails to operate:

- Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the timer is set.
- Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.


**IF NONE OF THE ABOVE RECTIFY THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.**

Please read and fully understand the instructions before operating the Oven.

### Clock

The first time you plug the power cord into an outlet, the display shows **0** and the beep a short tick. At this point, you can set the clock. 11:00 AM for example, 1.Touch **Clock** pad, the display show the last time you setup, the colon and **Clock** indicator will flash. put correct time, 2.Touch **Clock** pad again, the colon continues flashing and the time will go on, the **Clock** indicator keeps light.

Note: Clock is 12 hour display, if you enter an incorrect time, The **PAUSE/STOP pad** will help you to cancel it, If you want to reenter start states, please touch **Pause/Stop** pad for 2 times.

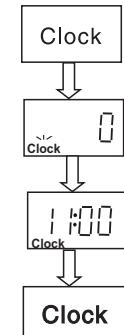

### PAUSE/STOP

This keypad allows you to do the following:

- Cancel any error programming you made.
- Cancel cooking time.
- Stop the oven for a short time during cooking.
- Return to the time of the day display.
- Cancel any program/selection you do not want during cooking.

NOTE: To pause a program press **PAUSE/STOP** pad a time


### START

Press this pad to start cooking.

### Time

You can preset time up to 99 minutes 99 second. You can always enter second after minute.

- Touch **Time** pad, 00:00 appear in the display, the colon and **Time** indicator will flash. setup the time.
- Touch **Time** again, the colon continues flashing and the **Time** indicator will light, the time will go on until 00:00. the buzzer of control panel will remind you with a long alarms. Then it return to the enter states automatic in 10 seconds

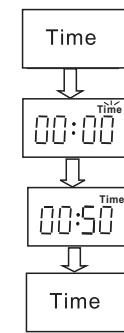

**Note:** If you want to reenter start states, please touch **Pause/Stop** pad for 2 times.

This has nothing to do with oven cooking time. Rather it is just a kitchen timer to simply remind you of how much time is left on the timer.