 
 



WHAT TO DO WITH YOUR NEW FOAM BRICK

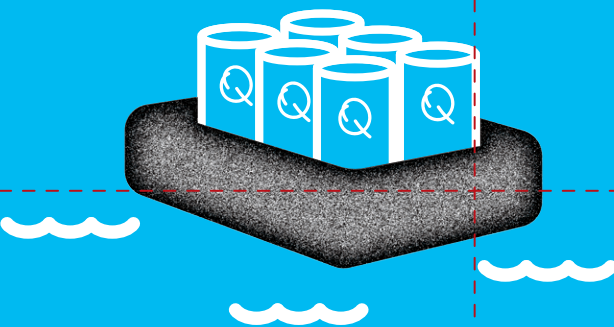


Beverage Barge

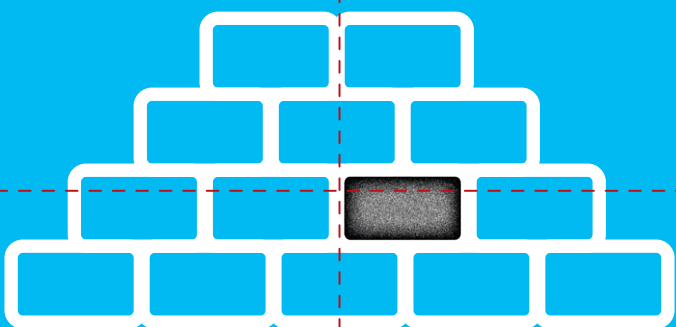

 
Igloo Patch

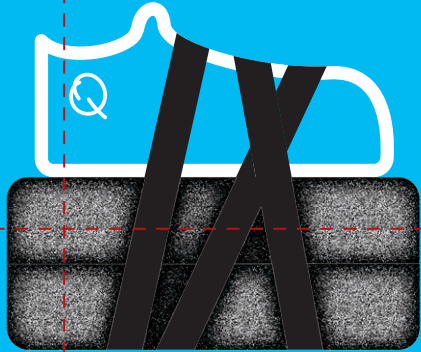


Vertical Optimization Device

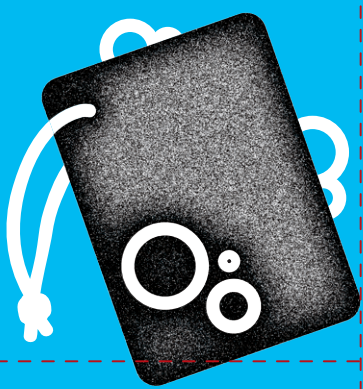


Goth Loofah

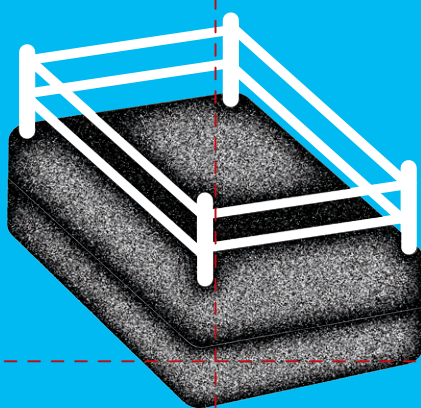


Hamster Wrestling Ring

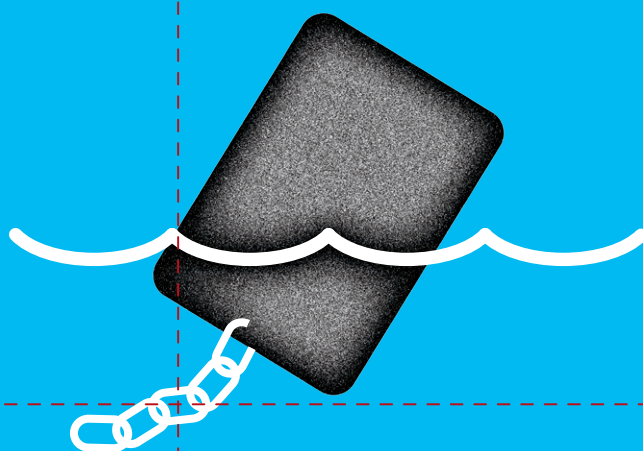

Horrible Boat Anchor

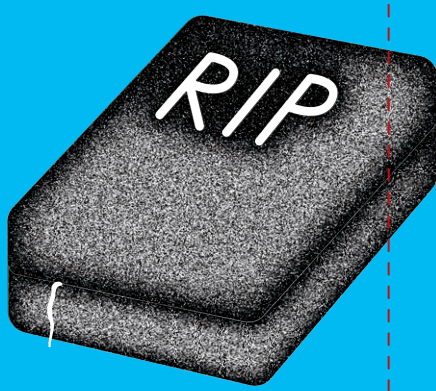


Pet Coffin

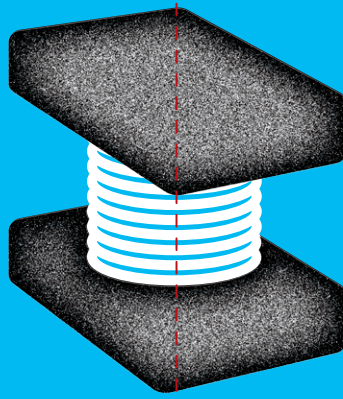


Tortilla Warmer




New Friend

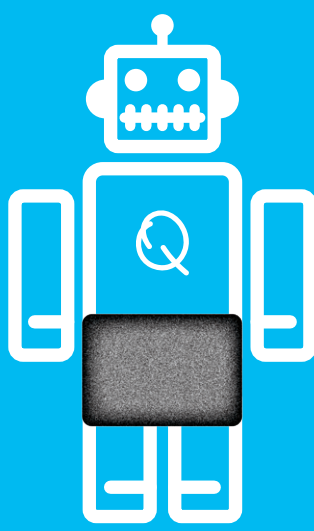

Robot Jockstrap

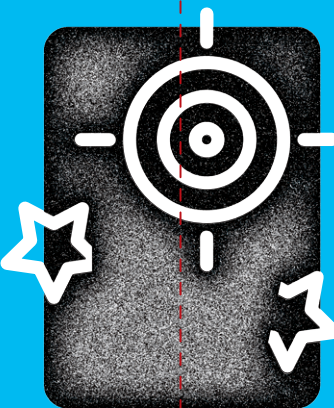

Ninja Dartboard

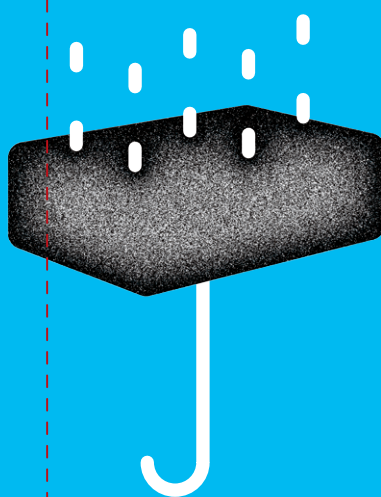

Emergency Umbrella

The foam brick you are holding is the end result of an indecisive creative director and two pushed deadlines. In a perfect world, you would be holding a custom-molded foam enclosure with a high-tech, heat-treated texture that mimics Beat Booster's sleek aesthetic. Basically, it was supposed to look really freaking cool. Instead, you got this weird foam brick. But in the interest of looking at the bright side and saving the world, please consider the above uses to give your weird foam brick a second life.

"This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body."

Quirky

PART # : R-INS-BEAT-BK01
STOCK : 128gsm W/F
FLAT DIMS : 328 x 525 mm

CUT
SCORE

ALSO TRY : 80gsm C2S, 128gsm C2S

Quirky

BEAT BOOSTER
wireless speaker
+ universal charging station



Beat Booster was invented by Phil Zumtobel, a graphic designer from Bregenz, Austria.

A former music producer, Phil is a big fan of old-school boomboxes. He wanted to bring the beats of the '80s into today's digital world. So he dreamed up Beat Booster, a portable speaker that connects to your mobile device and charges it at the same time. Thanks to Phil's invention, the beat definitely goes on!

Like all Quirky products, Beat Booster was invented and influenced by real people like you. Ordinary people with extraordinary imaginations submit ideas to Quirky every day, then we collaborate with our online community to make the best of those ideas a reality. When a product is sold, we share a cut of the revenue with all those who had an impact.

HOW QUIRKY WORKS

- 1 Submit your idea
 - 2 Help us decide
 - 3 Influence and earn
 - 4 We make it real
 - 5 The world prospers
- Submit your product idea to quirky.com

4111 influencers helped bring Phil's idea to life.



USING BEAT BOOSTER

- To turn on: press power button.
- To turn off: press and hold power button.
- To toggle play/pause: press play/pause button.
- To adjust volume: press +/- button. (16 volume levels)
- To check battery status while power is on: press power button.
- To operate speakerphone:
 - press play/pause button to answer an incoming call or end a call.
 - press and hold play/pause button to reject an incoming call
 - press and hold play/pause button while on a call to toggle mute/unmute.
 - press and hold play/pause button while on a call to toggle mute/unmute.
- Beat Booster will make a sound when the battery reaches 25% charge and 10% charge status.
- Beat Booster will automatically turn off if the battery becomes too hot during charge or if the battery reaches a critical low.


FEATURES AND FUNCTIONS

- 2.5" high-frequency drivers
- Adjustable body serves as a dock for phones, tablets, and music players
- Will fit Apple® 8-pin and Apple® 30-pin adapters, and USB to Micro-USB adapters
- Rechargeable battery enables listening on the go
- Wirelessly connects to Bluetooth® 4.0 devices for playback
- Auto power off after inactivity
- Speakerphone capability
- Wireless range up to 30 ft.
- 4-6 hours of continuous playback on fully-charged battery
- Voltage range 100-240V AC (50Hz-60Hz)
- Note: Audio playback time is significantly reduced when charging a device on battery power instead of connected AC power.

ALSO IN THE BOX:

- 2' auxiliary cable
- AC power adapter wall plug

Power button Bluetooth® button Play/Pause button Volume +/- button

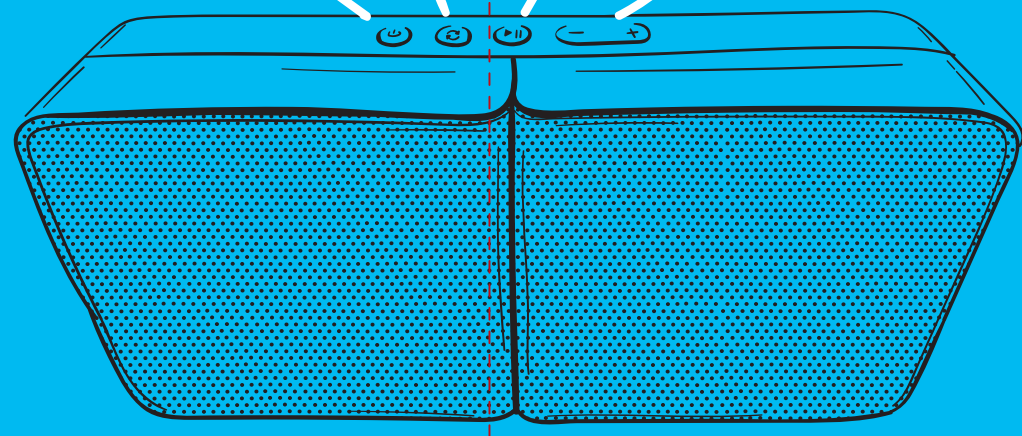

Inside rear compartment:

3.5mm line-in
USB output

CONNECTING TO YOUR BLUETOOTH® DEVICE

- 1 Turn on Bluetooth® from your device.
- 2 Press the power button on Beat Booster. You will hear a sound when it turns on.
- 3 Place your device in the speaker dock or within 30 ft of the speaker.
- 4 Press and hold the Bluetooth® button on Beat Booster until you hear a sound.
- 5 From your device, select "Beat Booster" from the list of Bluetooth® devices and wait for a confirmation sound from Beat Booster.
- 6 Once you hear the confirmation sound, Beat Booster is connected to your device. If Beat Booster does not connect, press and hold the Bluetooth® button to repeat the pairing process.
- 7 Once connected, you will be able to control music from your device wirelessly within a 30 ft. range.

CONNECTING TO A NON-BLUETOOTH® DEVICE

Use the included 3.5mm auxiliary cable to connect to your non-Bluetooth® device.

DOCKING YOUR DEVICE

- 1 Open the speakers wide enough to fit your device.
- 2 Open the back door and keep it nearby.
- 3 Connect the USB charging cable for your device into the USB port on the bottom right of the door opening.
- 4 Feed the charger head through the front of the device.
- 5 Position your device so that the charger can connect.
- 6 Coil any excess USB cord into the door opening.

- 7 Replace the back door so that your cords can be contained.
- 8 When you are done charging your device, you can pull the charger up into the holder above the docking station.

IMPORTANT SAFETY INFORMATION

Read all instructions and warnings prior to using Beat Booster. Failure to comply with instructions and warnings constitutes improper use of Beat Booster. Save all instructions. Quirky, Inc. is not responsible for improper use, which may result in personal injury or product damage. Quirky, Inc. is not responsible for any damages one may suffer as a result of use, intended or unintended.

Keep away from children.

CAUTION: RISK OF ELECTRIC SHOCK.

Do not expose device to liquid, moisture, humidity, or rain. Do not use the near a bathtub, sink, sauna, pool, or steam room. Do not place objects filled with water, such as a vase, on the device.

CAUTION: RISK OF FIRE OR EXPLOSION.

Do not expose to excessive heat such as sunshine, open flame or other heat sources. Do not dispose of device in fire, as explosion may occur. Lithium-ion batteries are flammable and can cause fire if misused or defective.

Do not block any ventilation openings.

Clean only with a dry cloth. Do not clean device while being charged.

Use only accessories and attachments as supplied and designated in the instructions.

Do not attempt to modify or disassemble device. There are no user-serviceable parts. Refer all servicing to qualified personnel. Unplug this device during lightning storms or when unused for long periods of time.

Store in a cool, dry place.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED ONE-YEAR WARRANTY

Quirky, Inc. ("Quirky") Original Purchase Product Warranty: Quirky warrants to the original purchaser ("Purchaser") of this Quirky product, for the period of one (1) year following the date on which Purchaser purchases the product, that the product shall be free of defects in design, assembly, material, or workmanship.

Quirky will refund or replace, at its option, any defective product free of charge. In order to qualify for this warranty, the Purchaser must provide the defective product and a copy of the original receipt of purchase to Quirky for inspection. The receipt of purchase must indicate the product purchased, price paid, date of purchase, and name of merchant.

To request service under this warranty, contact Quirky at 866-5-QUIRKY or questions@quirky.com and a Quirky representative will provide instruction on how to proceed. This warranty shall be null and void if Quirky determines that the product has been improperly installed, altered or tampered with in any way. This warranty does not protect against normal use, wear and tear, or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow exclusions or limitations on implied warranties or incidental, consequential or other damages, so the above exclusions and limitations may not apply to you.

COPYRIGHT AND TRADEMARK NOTICE

Subject to copyright protection. ©2014. All rights reserved. Quirky is a registered trademark of Quirky, Inc. Apple is a registered trademark of Apple, Inc. Bluetooth is a registered trademark of Bluetooth SIG. iPhone is a registered trademark of Apple, Inc. *Smartphone not included.

SUPPORT

Need help?
questions@quirky.com
1-866-5QUIRKY

R-INS-BEAT-BK01 | rev102414

PAPER SPEC CHANGED 10/16/14