 
 



WHAT TO DO WITH YOUR NEW FOAM BRICK

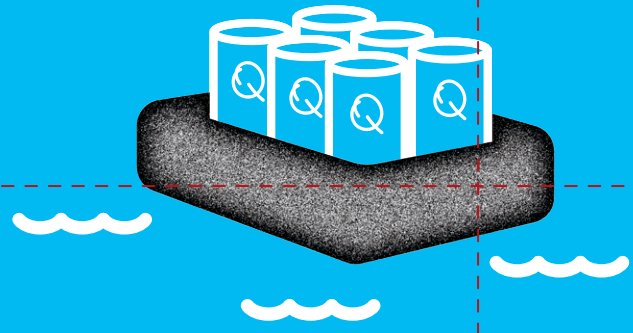


Beverage Barge

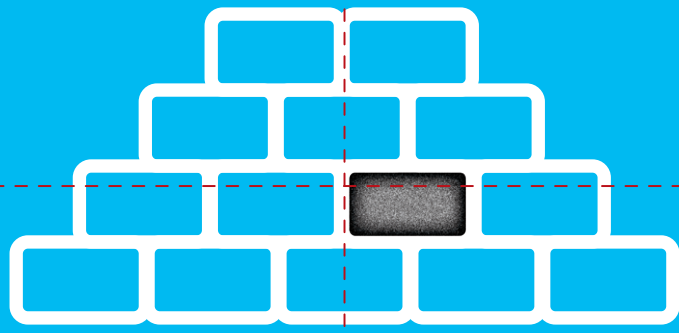

 
Igloo Patch

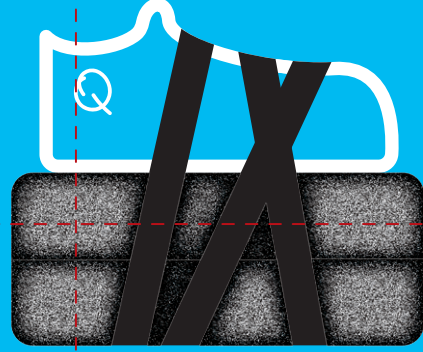


Vertical Optimization Device

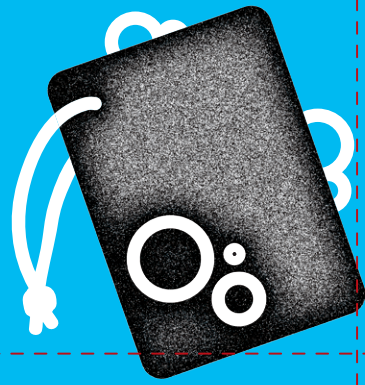 


Goth Loofah

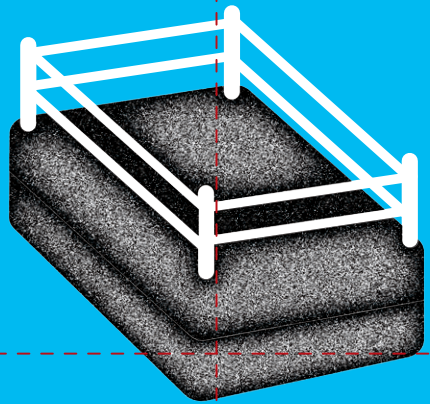 


Hamster Wrestling Ring

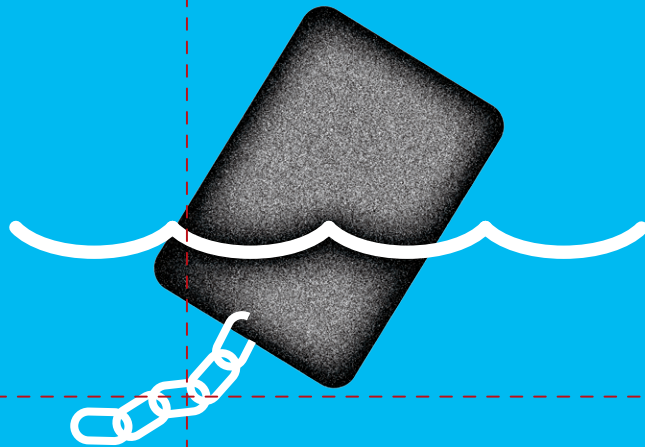 

Horrible Boat Anchor

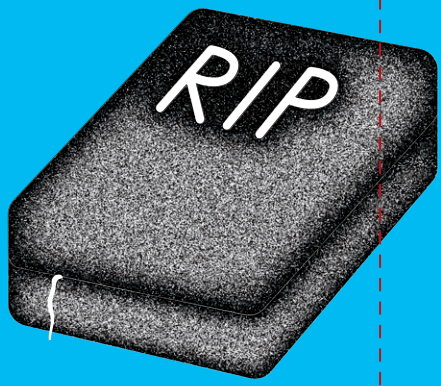 


Pet Coffin

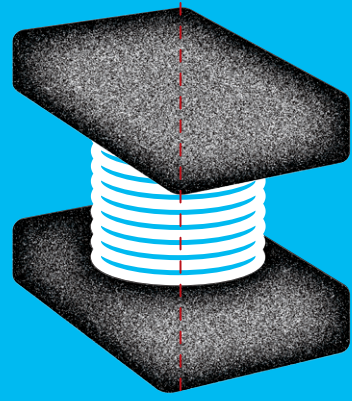 


Tortilla Warmer



 New Friend

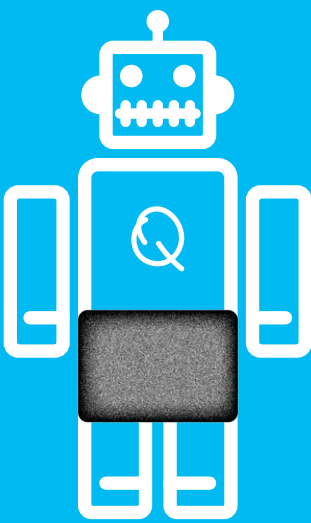

Robot Jockstrap

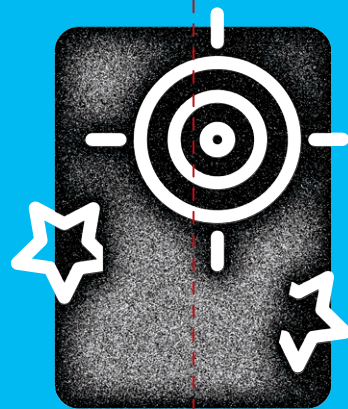 

Ninja Dartboard



Emergency Umbrella

The foam brick you are holding is the end result of an indecisive creative director and two pushed deadlines. In a perfect world, you would be holding a custom-molded foam enclosure with a high-tech, heat-treated texture that mimics Ohm's sleek aesthetic. Basically, it was supposed to look really freaking cool. Instead, you got this weird foam brick. But in the interest of looking at the bright side and saving the world, please consider the above uses to give your weird foam brick a second life.

 
Quirky

PART # : R-INS-OHMM-XUS
STOCK : 157gsm C2S, Matte UV
FLAT DIMS : 332 x 525 mm

— CUT
- - - - - SCORE

Quirky

OHM
portable speaker
+ wireless charging dock

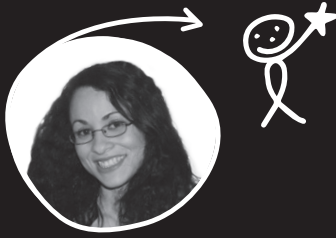

Ohm was invented by
Maria Morrill, a homemaker
from Bayamon, Puerto Rico.

While doing research on which portable
speaker to buy, Maria found herself
underwhelmed by the options.
This busy stay-at-home-mom challenged
herself to invent something better... and
now she and her family take their tunes
to go with Ohm.

Like all Quirky products, Ohm was
invented and influenced by real
people like you.
Ordinary people with extraordinary
imaginings submit ideas to
Quirky every day, then we
collaborate with our online
community to make the best of
those ideas a reality. When a
product is sold, we share a cut of
the revenue with all those who
had an impact.

HOW QUIRKY WORKS

- 1 Submit your idea
 - 2 Help us decide
 - 3 Influence and earn
 - 4 We make it real
 - 5 The world prospers
- Submit your product idea to quirky.com

1901 influencers helped
bring Maria's idea to life.

It all started with
Maria's concept
Submitted to Quirky in May '10



And now you have Ohm!

USING OHM

- To turn on/off: press and hold power button.
- To toggle play/pause: press play/pause button.
- To adjust volume: press +/- button.
(10 volume levels)
- To operate speakerphone:
 - press play/pause button to answer
an incoming call.
 - press and hold play/pause button to
reject an incoming call or end a call.
 - press play/pause button while on a call
to toggle mute/unmute.
- Ohm will make a sound when the battery
reaches 25% charge and 10% charge states.
- Ohm will automatically turn off if the battery
becomes too hot during charge or if the
battery reaches a critical low.
- Ohm's USB charging output will be reduced
from 2.1 A to 1 A if all charging ports are
in use at once.

 
FEATURES AND FUNCTIONS

- 5 watts total power output
- Dual drivers, single passive bass radiators
- Wireless charging docking pad for
Qi compatible devices
- Wirelessly connects to Bluetooth® v4.0
devices for playback
- Integrated microphone for speakerphone
functionality (with dual microphone
noise cancellation)
- Wireless range up to 30 ft.
- 6-8 hours of continuous playback on
fully-charged battery
- 1 high-powered USB port on charging dock
- 1 Micro-USB port on speaker
- Voltage range 100-240V AC (50Hz-60Hz)

ALSO IN THE BOX:

- 2' 3.5mm auxiliary cable
To connect your non-Bluetooth® device
- 1' USB to Micro-USB cable
To charge the speaker without the dock
- AC power adapter wall plug
To power the charging dock

Power button Bluetooth® button Play/Pause button Volume +/- button

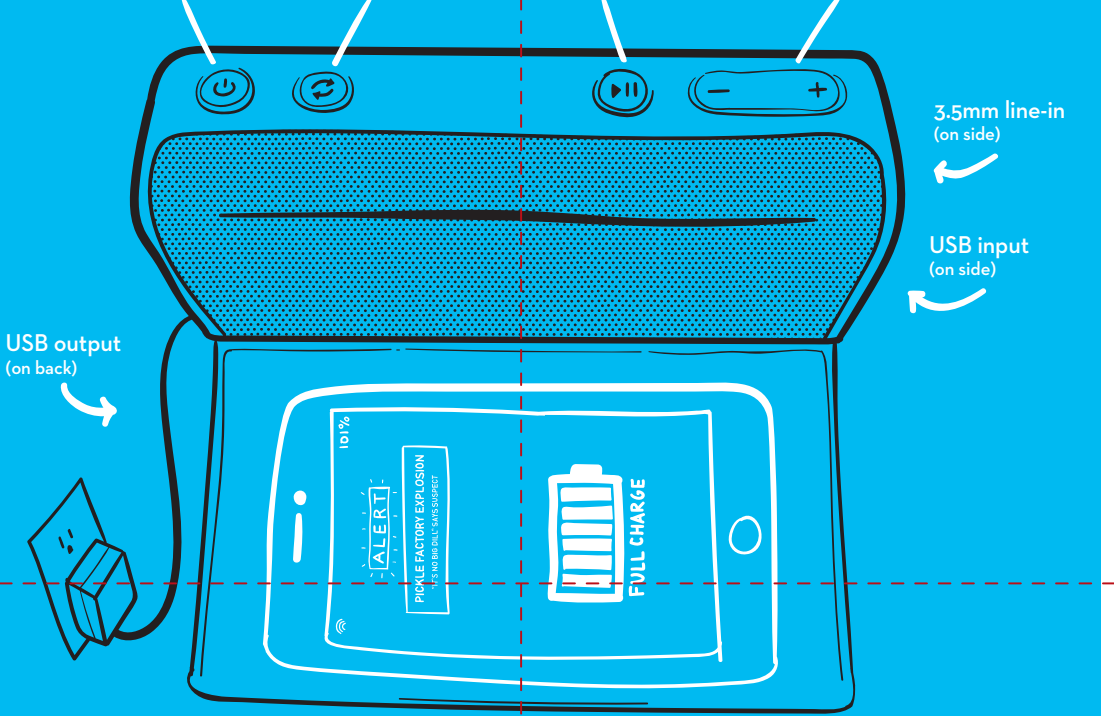

CONNECTING TO YOUR BLUETOOTH® DEVICE

- 1 Turn on Bluetooth® from your device.
- 2 Press and hold the power button on Ohm. You
will hear a sound when it turns on.
- 3 Place your device close to the Ohm speaker.
- 4 Press and hold the Bluetooth® button on the
Ohm speaker until you hear a sound. The
LED light will be flashing as it connects.
- 5 From your device, select "Ohm" from the
list of Bluetooth® devices and wait for a
confirmation sound from Ohm.
- 6 Once you hear the confirmation sound, Ohm
is connected to your device. If Ohm does
not connect, press and hold the Bluetooth®
button to repeat the pairing process.
- 7 Once connected, you will be able to control
music from your device wirelessly within
a 30 ft. range.

CONNECTING TO A NON-BLUETOOTH® DEVICE

- Use the included 3.5mm auxiliary cable to
connect Ohm to your non-Bluetooth® device.

UNDERSTANDING OHM'S SIGNALS

- When Ohm is fully charged and power is ON,
the LED white light will be on.
- When charging, the LED white light will flash evenly.
- If power is turned OFF, the LED light will
remain on for 10 seconds, then fade off.
- After 10 minutes of inactivity, Ohm will
automatically turn off to conserve battery life.
- When the battery becomes too hot or reaches
a critical low, the power light will turn red and
Ohm will turn off.

IMPORTANT SAFETY INFORMATION

Read all instructions and warnings prior to using Ohm.
Failure to comply with instructions and warnings constitutes
improper use of Ohm. Save all instructions.

Quirky, Inc. is not responsible for improper use, which may
result in personal injury or product damage. Quirky, Inc. is
not responsible for any damages one may suffer as a result of
use, intended or unintended.

Keep away from children.

CAUTION: RISK OF ELECTRIC SHOCK.

Do not expose device to liquid, moisture, humidity, or rain.
Do not use near a bathtub, sink, sauna, pool, or steam room.
Do not place objects filled with water, such as a vase, on the
device.

Do not expose to excessive heat such as sunshine, open
flame or other heat sources. Do not dispose of device in fire,
as explosion may occur.

Do not block any ventilation openings.
Clean only with a dry cloth. Do not clean device while
being charged.

Use only accessories and attachments as supplied and
designated in the instructions.

Do not attempt to modify or disassemble device. There are
no user-serviceable parts. Before all servicing to qualified
personnel. Unplug this device during lightning storms or
when unused for long periods of time.

Store in a cool, dry place.

FCC WARNING

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) this
device may not cause harmful interference, and (2) this
device must accept any interference received, including
interference that may cause undesired operation.

Changes or modifications not expressly approved by the
party responsible for compliance could void the user's
authority to operate the equipment.

NOTE: This equipment has been tested and found to comply

with the limits for a Class B digital device, pursuant to Part 15
of the FCC Rules. These limits are designed to provide
reasonable protection against harmful interference in a
residential installation. This equipment generates, uses and
can radiate radio frequency energy and, if not installed and
used in accordance with the instructions, may cause harmful
interference to radio communications. However, there
is no guarantee that interference will not occur in a
particular installation.

If this equipment does cause harmful interference to radio or
television reception, which can be determined by turning the
equipment off and on, the user is encouraged to try to correct
the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV
technician for help.

LIMITED ONE-YEAR WARRANTY

Quirky, Inc. ("Quirky") Original Purchase Product Warranty:
Quirky warrants to the original purchaser ("Purchaser") of this
Quirky product, for the period of one (1) year following the
date on which Purchaser purchases the product, that the
product shall be free of defects in design, assembly, material,
or workmanship.

Quirky will repair or replace, at its option, any defective
product free of charge.
In order to qualify for this warranty, the Purchaser must
provide the defective product and a copy of the original
receipt of purchase to Quirky for inspection. The receipt of
purchase must indicate the product purchased, price paid,
date of purchase, and name of merchant.

To request service under this warranty, contact Quirky at
866-5-QUIRKY or questions@quirky.com and a Quirky
representative will provide instruction on how to proceed.
This warranty shall be null and void if Quirky determines that
the product has been improperly installed, altered or tampered
with in any way. This warranty does not protect against normal
use, wear and tear, or damage due to abuse.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF
QUIRKY. THERE ARE NO OTHER WARRANTIES, EXPRESSED
OR IMPLIED, INCLUDING THE IMPLIED WARRANTY OF
CONDITION OR QUALITY, MERCHANTABILITY OR FITNESS
FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED
WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE
TERM OF THIS WARRANTY. IN NO EVENT SHALL QUIRKY
BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT
OR CONSEQUENTIAL DAMAGES SUCH AS, BUT NOT
LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT
OF THE SALE OR USE OF ANY QUIRKY PRODUCT, EVEN
IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some jurisdictions do not allow exclusions or limitations
on implied warranties or incidental, consequential or other
damages, so the above exclusions and limitations may
not apply to you.

COPYRIGHT AND TRADEMARK NOTICE

Subject to copyright protection. ©2014. All rights reserved.
Quirky is a registered trademark of Quirky, Inc.
Bluetooth® is a registered trademark of Bluetooth® SIG.
Qi is a registered trademark of Wireless Power Consortium.
Image of Motorola Droid Mini is a registered trademark of
Motorola Trademark Holdings, LLC. *Smartphone not included.

SUPPORT

Need help?
questions@quirky.com
1-866-5QUIRKY