


# 成品尺寸:52.5\*65m m / 双面印刷/风琴折页7折8页

## User Manual

### True Wireless Earbuds

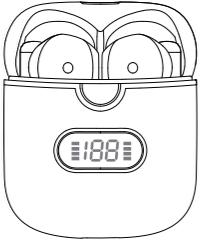

**S18**

### PACKING LIST

Charging Case x1 Earbuds x2  
Type-C Cable x1 User Manual x1

Customer Service:  
soa810252@163.com



Earbuds x2



Charging Case x1




USB Type-C  
Charging cable x1



Manual x1

Cloudless0258@gmail.com  
— 01 —

### OVERVIEW

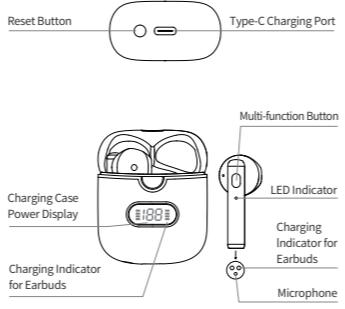


Cloudless0258@gmail.com  
— 02 —

### POWER ON/ OFF

#### Auto Power On/ Off

- When opening the charging case, the earbuds will automatically turn on and start pairing.
- Put the earbuds back into the charging case and close the charging case to turn them off.

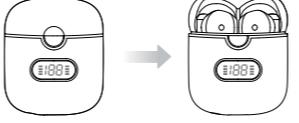


**Note:**  
If the charging case is in low battery status, the earbuds won't turn on/off automatically when you open/close the charging case.

Cloudless0258@gmail.com  
— 03 —

### Approach 2 - Without Charging Case

#### Manual Power On

If the earbuds are not in the charging case, press and hold the button of each earbud for 2 seconds to power on.

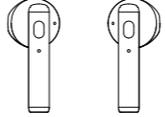

#### Manual Power Off

If the earbuds are not in the charging case, just press and hold the button of either earbud for 8 seconds to power off.

**Note:**  
The earbuds will automatically power off in 5 mins when no device is connected.

Cloudless0258@gmail.com  
— 04 —

### HOW TO CONNECTION

- Open the charging case, and the two earbuds will automatically power on and enter pairing mode.



- Activate the Bluetooth setting on your phone, search and connect "S18".



**Note:**  
The earbuds will reconnect to the last paired device by priority. If you want to pair to the second smartphone, please remove the bluetooth connection on the previous device firstly.

Cloudless0258@gmail.com  
— 05 —

### RESET


#### When to reset?

- When only one side of the earbuds play music.
- When you can't make the two earbuds work together.
- When both of the earbuds fail to pair with each other or other connections issues, etc.

#### How to reset?

Open the charging case, press and hold the reset button at the bottom of the charging case for 5 seconds, until the blue and white lights are on for 2 seconds, the reset is successful.

**Note:**  
Resetting the earbuds will clear the earbuds pairing history on your device, so please reconnect your device with the earbuds after each resetting.

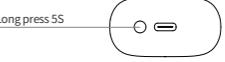

Cloudless0258@gmail.com  
— 06 —

### MULTI-FUNCTION OPERATIONS

#### Music

Play/Pause: Tap once (L/R)

Previous Track: Double Tap (L)

Next Track: Double Tap (R)

Volume Up: Long-press (R)

Volume Down: Long-press (L)

**Note:**  
At mono mode(single-ear mode), the left earbud only supports volume+.

Cloudless0258@gmail.com  
— 07 —

### Incoming Call

Answer: Tap Once (L/R)

Hang Up: Tap Once (L/R)

Reject: Long-Press 2s (L/R)

Volume Up: Long-press (R)

Volume Down: Long-press (L)

#### Voice Assistants

Siri: Triple-tap (L/R)

#### Game Mode

Game Mode: Four Tap (L/R)

Cloudless0258@gmail.com  
— 08 —

### HOW TO CHARGE

#### Charging the Earbuds

Put the earbuds into the charging case and close the case, the earbuds charging indicator for the L/R sides will flash from the 1st grid to the 4th grid to show the charging status of the earbuds.

LED light on: earbuds are charging  
LED light off: Fully charged

#### Charging the Charging Case

Please use 5V/1A adapter with the charging cable to charge the case. (Comes with a USB-C charging cable in the package.)

When the case is charging, the digital display will flash until 100.

Cloudless0258@gmail.com  
— 09 —

### SPECIFICATION

- Model Name: S18
- Bluetooth Version: V5.3
- LED Power Display: Yes
- Charging Port: Type-C
- Transmission Distance: 10m/33ft (without obstacles)
- Supports: HSP/HFP/AVRCP/A2DP/SBC/ACC

**Notice:**  
Low battery reminder, when the earphone power is 10%, it starts to remind, and reminds once every three minutes. (If the battery is too low, turn off either earphone, and the other earphone will be turned off at the same time.)

Cloudless0258@gmail.com  
— 10 —

### PRODUCT MAINTANCE

- Never dismantle or refit the product to avoid malfunction or fire hazards.
- Keep away from corrosive liquids to avoid damage to the product.
- If there is no sound from one earbud, you need to check if the phone & earbud volume is too low. If the phone & earbuds volume is normal, you need to reset the earbuds.
- Never touch the earphone with sharp objects, otherwise it will easily cause scratches.
- Don't use the product in thunderstorm weather to avoid malfunction or electric shock.
- If it has not been used for more than 1 month, please charge and maintain it in time to ensure that it is safe.

Cloudless0258@gmail.com  
— 11 —

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cloudless0258@gmail.com  
— 12 —

Cloudless0258@gmail.com  
— 13 —