


occiam




T9 User Manual
True Wireless Sports Earbuds

What's in the box? OCC

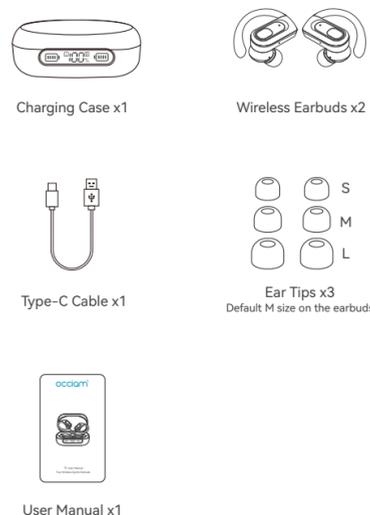

Note: Please remove the protective films from the LED power display and charging contacts before using it.

Overview OCC

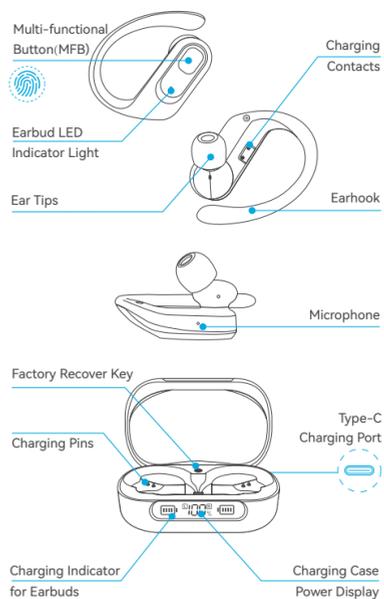

How to Wear? OCC

1. Choose the best comfortable ear tips to wear on the earbuds.



2. Choose the right angle and eartips.



Caution OCC

Please clean the protective grille of both earbuds if the sound becomes low.




Please clean the magnet charging contact on earbud and charging pin on the charging case with alcohol wipes if the headphones can't be charged.



Power On/Off OCC

Manual Power On

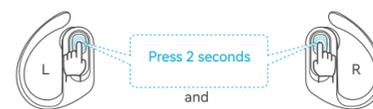

When the earbuds are in the shutdown state and not in the charging case:

- Press and hold the MFB (Multi-Function Button) on the R earbud for 2 seconds to power R earbud on.
- Press and hold the MFB on the L earbud for 2 seconds to power L earbud on.

Manual Power Off



If the earbuds are not in the charging case, press and hold either earbud's MFB for 5 seconds to power off both earbuds.

(Before the first use, please ensure that both the earbuds and the charging case are fully charged.)






1. Take out both earbuds from the charging case. Both earbuds will power on automatically and enter pairing mode.

(P.S. In pairing mode, one earbud indicator will flash red and blue alternately, while the other earbud indicator will flash blue slowly.)


2. Then, search for 'T9' on your device and click to connect.

Note: The earbuds will reconnect to the previously paired device by priority. If you want to pair them with a second device, please disconnect the Bluetooth connection on the paired device. Additionally, if the earbuds are not connected to any devices for over 5 minutes, they will automatically power off.

Music OCC

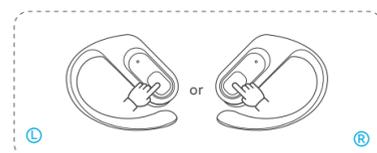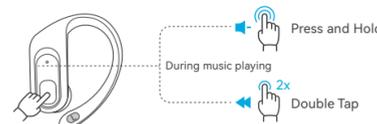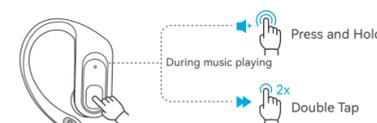


Voice Assistant OCC

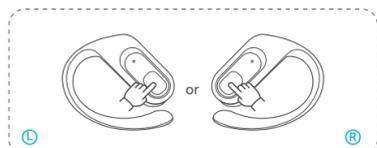

Siri or other voice assistants.
Triple Tap (In non-playing status)

Phone Call OCC

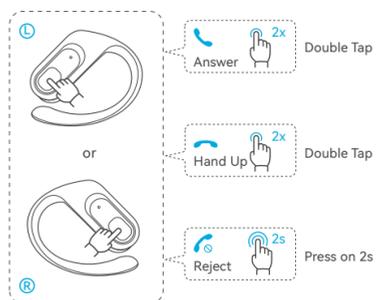

Reset OCC

When should I reset?


When only one side plays music. When you can't use both earbuds together. When both earbuds fail to pair with each other or occur connection related issues.

How to reset T9?

Before resetting, please ensure that the charging case and both earbuds are not in a low battery status.

- Place both earbuds in the case and leave the case open.
- Press and hold the Factory Recovery Key on the case for 5 seconds or until the LED indicator lights on both earbuds flash blue 3 times.

Press and hold for 5 seconds

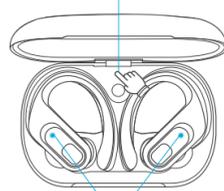


Flash blue lights 3 times.

Charging OCC

Earbuds Charging

The earbuds will alert you with a voice prompt saying 'Low battery, please charge' when the battery level is low. Please place the earbuds inside the charging case, and they will automatically enter charging mode.

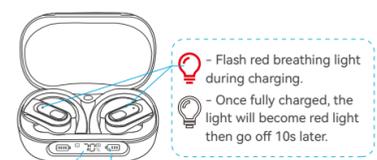

- Flash red breathing light during charging.
- Once fully charged, the light will become red light then go off 10s later.


- LED lights flash from 1st grid to 4th grid repeatedly during charging.
- LED light will turn off once fully charged.

Note: You can check the power level of the earbuds in the Bluetooth list or in the notification bar after connecting them to your phone.

Warning: To avoid charging failures, please clean the charging contacts of the earbuds and the charging pins of the charging case promptly.

Charging Case Charging

After inserting the charging cable into the USB Type-C charging port on the case, the case will automatically start charging.

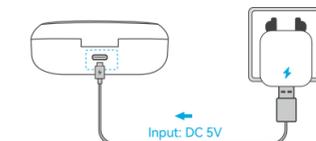

Input: DC 5V



The LED screen will display an incremental change of power from 0 to 100 during charging. When it reaches 100, it indicates a full charge.

How do I check the battery level of the charging case?

The LED on the case indicates the battery level when you place the earbuds into the charging case or when the case is being charged.

Product Parameters OCC

Model No.	T9
Bluetooth Version	5.0
Supports Profile	HSP/HFP/A2DP/AVRCP3
Charging Port	Type-C
Input	5V= 1A
Battery Capacity	Earbuds: 50mAh 3.7V, 0.185Wh Charging Case: 600mAh 3.7V, 2.22Wh
Earbuds Battery Life	8h on single charge
Charging Time	1h-1.5h for earbuds 2h for charging case
Transmission Range	33 feet (with no obstacle)

Battery Warning OCC

Using the wrong battery can cause fire and other hazards (for example, in the case of some lithium battery types).

- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of battery, that can result in an explosion.
- Do not leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Storage and Maintenance OCC

- If the earbuds have been unused for more than 3 months, we recommend that you charge them.
- Please use chargers that are FCC (Federal Communications Commission) approved.
- Do not disassemble Earbuds.
- Adult supervision is required for children age 6 and under.
- Do not expose the earbuds in high or low temperature, do not use the earbuds in a thunderstorm. Avoid falling or violent impact of the device. Keep the device away from fire, do not put the device in water.
- Do not use oil or any volatile liquid to clean this product.

FCC Warning Statement OCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

*** RF warning for Portable device:**
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Any questions, please send message to us, we'll help you solve it as soon as possible. You can choose us with confidence. Thanks.

尺寸: 72*120mm
材质: 128g铜版纸
工艺: 四色印刷