

 
RCA

Television User's Guide

Models 24V510T / 24F530T

Changing Entertainment. Again.

A THOMSON BRAND

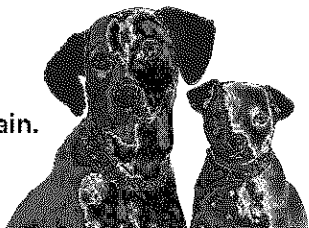

Important Information

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates important instructions accompanying the product.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

The apparatus must not be exposed to dripping or splashing. Objects filled with liquids, such as vases or drinking glasses, must never be placed on the apparatus.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Caution: Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.

Cable TV Installer: This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Product Registration

Please fill out the product registration card (packed separately) and return it immediately. For U.S. customers: Your RCA Consumer Electronics product may also be registered at www.rca.com/productregistration. Registering this product allows us to contact you if needed.

Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers. These numbers are located on the product.

Model No. _____ Serial No. _____ Purchase Date: _____

Dealer/Address/Phone: _____

Chapter 1: Connections & Setup

Things to Consider Before You Connect	3
Protect Against Power Surges	3
Protect Components from Overheating	3
Position Cables Properly to Avoid Audio Interference	3
Important Stand and Base Safety Information	3
Use Indirect Light	3
Cables Needed to Connect Components to Your TV	3
TV + DVD + VCR	4
Explanation of Jacks and Cables	5
ANTENNA IN	5
VIDEO 1 and VIDEO 2	5
Component Video (Y, Pb, Pr), Audio Out, and Subwoofer (model 24F530T only)	5
The Front of Your TV	6
Front Input Jacks	6
Front Panel Buttons	6
Plug in the TV	6
Put batteries in the remote	6
How to Use the Remote Control to Complete the Initial Setup	7
Turn on the TV	7
Using the Menus	7
Complete the Initial Setup	8
Set the Language	8
Complete Auto Channel Search	8

Chapter 2: Using the Remote Control

Button Descriptions for TV Mode	9
Button Descriptions for DVD and VCR Modes	9
Using the INPUT Button	10
Programming the Remote to Operate Other Components	10
Find Out If You Need to Program the Remote	10
Programming the Remote	10
How to Use the Remote After You've Programmed It	12
Remote Control Codes	12

continued on next page

Table of Contents

Chapter 3: Using the TV's Features and Menus

Channel Banner	14
Parental Controls and V-Chip	14
How V-Chip Works	14
USA V-Chip Rating System	14
TV Rating Limit	15
MPAA RATING LIMIT	17
Blocking Specific Content Themes	17
Viewing Specific Content Themes	17
Parental Guide On (Activate V-Chip)	18
V-Chip Movie Rating Limit	18
Child Lock	19
Change Password	19
Picture Menu	20
Sound Menu	20
Timer Menu	21
Function Menu	22
Tuning Menu	23
Parental Guide Menu	23

Chapter 4: Other Information

Troubleshooting	24
Care and Cleaning	26
FCC and Canada Information	26
Limited Warranty	27
Accessories	29

Things to Consider Before You Connect

Protect Against Power Surges

- Connect all components before you plug any of their power cords into the wall outlet.
- Turn off the TV and/or component before you connect or disconnect any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safety Instructions packed separately.

Protect Components from Overheating

- Don't block ventilation holes on any of the components. Arrange the components so that air can circulate freely.
- Don't stack components.
- If you place components in a stand, make sure you allow adequate ventilation.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it won't flow around other components.

Position Cables Properly to Avoid Audio Interference

- Insert each cable firmly into the designated jack.
- If you place components above the TV, route all cables down the side of the back of the TV instead of straight down the middle of the TV.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.

Important Stand and Base Safety Information


Choose the location for your TV carefully. Place the TV on a stand or base that is of adequate size and strength to prevent the TV from being accidentally tipped over, pushed off, or pulled off. This could cause personal injury and/or damage the TV. Refer to the Important Safety Instructions packed separately.

Use Indirect Light

Don't place the TV where sunlight or room lighting will be directed toward the screen. Use soft or indirect lighting.

Cables Needed to Connect Components to Your TV


The pictures below show the cables you may need for the connections represented in this book.

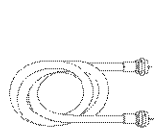 

Coaxial cable



 S-Video cable

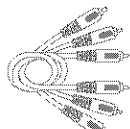


Audio/Video cables



Component Video
(Y•Pb•Pr) cables
(for model 24F530T only)

 Connections and Setup

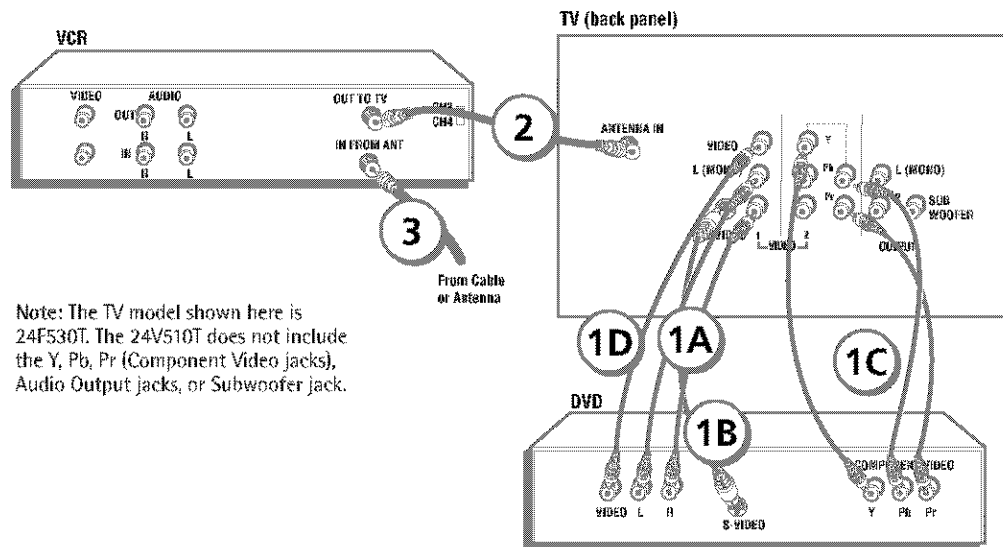

Note: The TV model shown here is 24F530T. The 24V510T does not include the Y, Pb, Pr (Component Video jacks), Audio Output jacks, or Subwoofer jack.

TV + DVD + VCR

1. Connect your DVD Player to your TV.

- Connect the audio (white and red) cables to the VIDEO 1 R and L/MONO AUDIO jacks on the back of the TV and to the Audio Output jacks on the DVD player (sometimes labeled L and R).
- If your DVD player has an S-Video jack, connect an S-Video cable to the S-Video jack on the DVD player and to the S-VIDEO jack on the back of the TV. If your DVD player doesn't have an S-Video jack, go to 1D.

-OR-

- Model 24F530T only:** If your DVD player has a component video jacks (Y,Pb,Pr), connect video grade cables to the Component Video jacks on the DVD player and to the Y, Pb, Pr jacks on the back of the TV. If your DVD player doesn't have component video jacks, go to 1D.

-OR-

- Connect a video cable (yellow) to the Video Output Jack on the DVD player and to the VIDEO jack on the back of the TV.

2. Connect your TV to your VCR

Connect a coaxial cable to the ANTENNA IN jack on your TV and to the RF Output jack on your VCR (sometimes labeled OUT TO TV).

3. Make sure cable or antenna is connected to your VCR.

Connect the coaxial cable from your cable outlet or antenna to the antenna input on the VCR (sometimes labeled In From Antenna).

 
Note: If you do not connect a cable, antenna, or another component to your TV, the TV will automatically shut off after 15 minutes to save power.

Explanation of Jacks and Cables

This section describes the jacks you can use to make connections. There are several ways to connect components to your TV.



ANTENNA IN jack and coaxial cable.

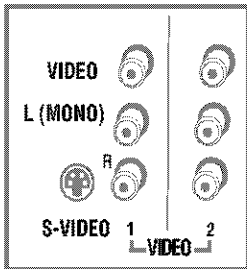



VIDEO 1 and VIDEO 2 jacks, audio/video cables, and S-Video cable.

ANTENNA IN Lets you connect a coaxial cable to receive the signal from the antenna, cable, cable box, or if using the example on page 4, a VCR.

VIDEO 1 and VIDEO 2

VIDEO, AUDIO R and L/MONO Lets you connect a component such as a VCR, DVD player, or laserdisc player.

  - **R (RIGHT) AUDIO** Provides right audio connection. The right audio connector is usually red.
- **L/MONO AUDIO** Provides left audio connection. The left audio connector is usually white.
- **VIDEO** Provides composite video connection. The video connector is usually yellow.
- **S-VIDEO** Provides better picture quality than the video jacks because the color part of the signal is separated from the black and white part of the picture. When using S-VIDEO IN, make sure to connect left and right audio cables to the L/MONO and R AUDIO Input jacks.

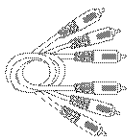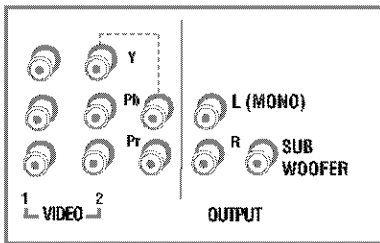

Y, Pb, Pr jacks, audio, subwoofer and component video cables.

Component Video (Y, Pb, Pr), Audio Out, and Subwoofer (model 24F530T only)

Y, Pb, Pr (Component Video) Provides optimum picture quality because the video is separated into three signals. Use three video-grade cables for the connection. These cables are often color-coded (red, blue and green). When using Y, Pb, Pr, make sure you connect left and right audio cables to the R and L AUDIO input jacks.

Note: The Y component video jack is also the composite VIDEO 2 video jack and is colored yellow. Keep this in mind when connecting to the component video jacks.

Audio Output (L and R) Connect an amplifier or audio receiver for improved sound quality.

SUB WOOFER Allows you to connect an external subwoofer for improved bass effects.

Connections and Setup

The Front of Your TV

Front Input Jacks

The TV has front audio/video input jacks for your convenience on the right side of the TV for connecting a camcorder or video game console. To access the component you connected to the front of the TV, press the INPUT button on your remote until *FRONT* appears on the screen.

Note: When connecting a component that has only one audio jack, such as some camcorders, connect the TV's AUDIO L/MONO jack to hear the audio.

VIDEO Receives video from another component such as a camcorder, video game console, or VCR.

L/MONO and R AUDIO Receives audio from another component such as a camcorder, video game console, or VCR.

Front Panel Buttons

If you cannot locate your remote, you can use the front panel buttons of your TV to operate many of the TV's features.

INPUT Toggles the Video Input Channels for a video game system, VCR, etc., connected to the audio/video jacks on the front and back of the TV.

MENU Brings up the Main menu.

VOL- Decreases the volume. In the menu system, acts like the left arrow button on the remote control and adjusts menu controls.

VOL+ Increases the volume. In the menu system, acts like the right arrow button on the remote control and adjusts menu controls.

CH- Scans down through the current channel list. In the menu system, acts like the down arrow button on the remote control and adjusts menu controls.

CH+ Scans up through the channel list. In the menu system, acts like the up arrow button on the remote control and adjusts menu controls.

POWER Turns the TV on and off.

Plug in the TV

Plug the end of the power cord into a grounded wall outlet. Insert the plug completely into the outlet.

Put batteries in the remote

- Remove the battery compartment cover from the back of the remote by pushing down on and sliding off the cover.
- Insert 2 fresh "AAA" batteries. Make sure the polarities (+ and -) are aligned correctly.
- Replace the cover.

How to Use the Remote Control to Complete the Initial Setup

The technical term is “Navigation”—how you move through the on-screen menus. The method is the same throughout the menu screens: highlight your choice and select it.

To highlight a menu item, press the arrow buttons on the remote to highlight one of the menus on the screen. Use the up and down arrow buttons to move up or down. Use the right and left arrow buttons to move right or left.

To change the item that you’ve highlighted, press the right arrow button.

To return to the previous menu, press GO BACK.

Note: Highlighted means that the menu item stands out from other menu items on the list (appears darker, brighter, or a different color).

Turn on the TV

 
Press TV on the remote, or press POWER on the TV’s front panel.

Note: Pressing the TV button not only turns on the TV, but puts the remote into TV mode. “TV mode” means that the buttons on the remote control operate the TV’s functions.

Using the Menus


You might want to make yourself familiar with the menu system. At the top of the screen, you’ll see the following menu icons: Picture, Sound, Timer, Function, Tuning, and Parental Guide.

Press the MENU button to bring up the Main Menu, and press the right arrow button until the icon you want is highlighted. The menu options change as you toggle the icons.

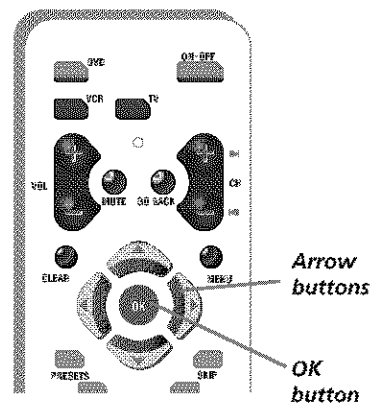

Arrow buttons

 OK button

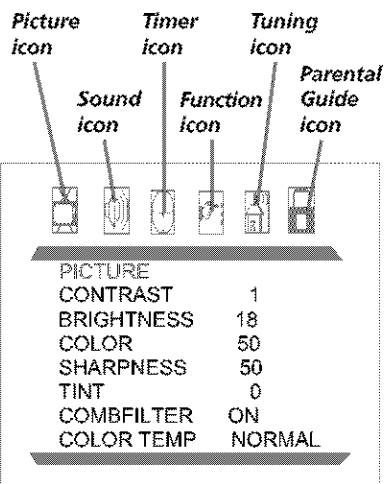

The list of icons at the top of the menus.

Connections and Setup

Function icon




PICTURE	
CONTRAST	1
BRIGHTNESS	18
COLOR	50
SHARPNESS	50
TINT	0
COMBFILTER	ON
COLOR TEMP	NORMAL



FUNCTION	
LANGUAGE	ENGLISH
BACKGROUND	ON
BLACK STRETCH	OFF
NOISE REDUCE	OFF
CLOSE CAPTION	CC1
CC ON MUTE	ON

 Tuning icon



TUNING	
SOURCE	AIR
CHANNEL	18
DELETE CH	NO
FINE TUNE	
AUTO SEARCH	

Complete the Initial Setup

The menu system in your TV allows the TV's features to work properly. You'll need to set a few important menu items the first time you turn on your TV.

Set the Language

The language setting determines the language in which the on-screen displays and menus appear. You can choose from *English, Spanish, or French*. The default is *English*.

1. Press MENU on the remote control (the Main menu appears).
2. Press the right arrow button until the Function icon is highlighted.
3. Press the down arrow button until *LANGUAGE* is highlighted, then press the right arrow button to change the language.
4. When finished, press MENU to exit.

 
Complete Auto Channel Search

This part of the setup allows the TV to search for all channels viewable through your antenna or cable TV system. This is sometimes called auto programming.

1. Press MENU on the remote control (the Main menu appears).
2. Press the right arrow button until the Tuning icon is highlighted.
3. Press the down arrow button until *SOURCE* is highlighted, then press the right arrow button to set the signal type (*CABLE* or *AIR*).
4. Press the down arrow button until *AUTO SEARCH* is highlighted. Press the right arrow button to begin the auto channel search.

To cancel at any time, press OK.

Once the search is complete, you can begin watching TV. For information on customizing your channels or menu options, go to Chapter 3.

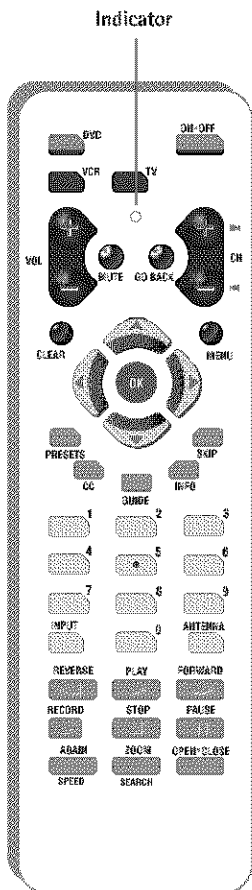

Button Descriptions for TV Mode

Arrows Used to highlight different items in the TV menu and to adjust the menu controls.

Indicator Indicates the programming mode when programming the remote to control components. Lights when you press a valid button on the remote. Flickers when a button is pressed and the batteries are low.

(0-9) Number Buttons Enter channel numbers.

To enter a one-digit channel, enter a zero first. To enter a two-digit channel, press the two digits and expect a few seconds delay. This is if you want to enter a third digit.

CC Makes closed captioning appear or disappear from the screen. Also toggles the subtitles for some compatible RCA, GE, and Proscan DVD players.

CH + or CH - Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels. Also advances to the next/previous chapter or track for some compatible RCA, GE, and Proscan DVD players.

CLEAR Removes any menu or display from the screen and returns you to normal viewing.

GO BACK Returns you to the previous channel.

INFO Brings up the channel banner. Press again to remove the information from the screen.

INPUT Access Video Input Channels (*VID1 (SVID)*, *VID2 (YPbPr)*, *FRONT*, and current channel). (YPbPr is available on model 24F530T only).

MENU Brings up the Main menu.

MUTE Reduces the TV's volume to its minimum level. Press again to restore the volume.

OK When in the menu system, toggles highlighted items.

ON•OFF When in TV mode, turns the TV on and off. If in another mode (VCR, DVD, etc.) and programmed, will turn the component on and off.

PRESETS Brings up picture presets.

SKIP Press once to start Skip (*BROWSE* appears). Press SKIP again to start browsing all available channels. When finished, the TV tunes back to the original channel. Press SKIP at anytime to cancel.

TV Turns on the TV and puts the remote in TV mode.

VOL - or VOL + Decreases or increases the TV's volume.

Button Descriptions for DVD and VCR Modes

AGAIN In DVD mode, replays the last several seconds of the title you're playing for compatible RCA, GE, and Proscan DVD players.

ANTENNA In VCR mode, functions as a TV/VCR button for compatible VCRs.

Using the Remote Control

DVD Turns on a compatible RCA, GE, or Proscan DVD player and sets the remote to control the DVD player. Also used with the ON•OFF button to turn on other compatible DVD players.

GUIDE If you're operating another component that has an electronic program guide, this button accesses the on-screen Guide. Also operates the disc menu for some compatible RCA, GE, and Proscan DVD players.

OPEN•CLOSE In DVD mode, opens or closes the DVD disc tray for some compatible RCA, GE, and Proscan DVD players.

REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE If programmed, provides transport control for some compatible remote-controllable VCRs or DVD players.

SEARCH In VCR mode, accesses Index Search feature for some compatible RCA, GE, and Proscan VCRs.

SPEED In VCR mode, selects a recording speed for some compatible RCA, GE, and Proscan VCRs.

 
VCR Turns on a compatible RCA, GE, or Proscan VCR and sets the remote to control the VCR. Also used with the ON•OFF button to turn on other compatible VCRs.

ZOOM In DVD mode, zooms in on the picture for some compatible RCA, GE, and Proscan DVD players.

Using the INPUT Button

Use the INPUT button to scroll through the available Video Input Channels so you can view content coming from components you have connected to the TV.

1. Make sure the component you want to view is turned ON.
2. Press INPUT to tune to an available video input source and view the component.
3. To return to the previous channel, continue pressing INPUT.

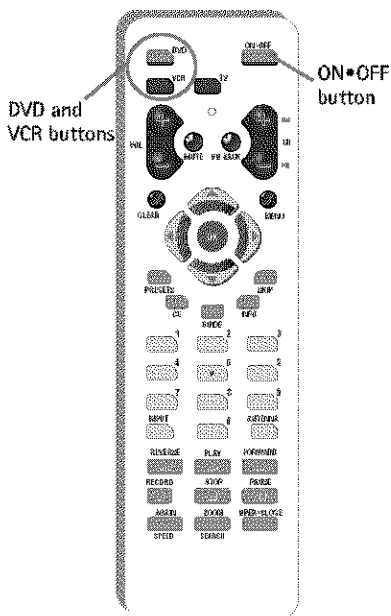

Programming the Remote to Operate Other Components

The universal remote can be programmed to operate some brands of remote controllable VCRs and DVD players. The remote is already programmed to operate most RCA, GE, and Proscan VCRs and DVD players.

Note: The TV button can't be programmed on this remote.

 
Find Out If You Need to Program the Remote

To determine whether the universal remote needs to be programmed for your VCR or DVD player, turn on the component. For example, to program the remote for a VCR, turn on the VCR. Point the remote at the VCR, and press the VCR button. Then press ON•OFF or CH + (channel up) or CH - (channel down) to see if the VCR responds to the remote commands. If the component does not respond, the remote needs to be programmed.

Programming the Remote

There are two ways to program the remote control:

- automatic code search
- direct entry

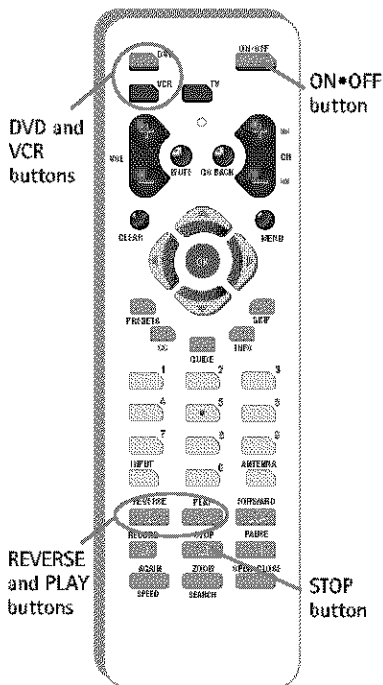

You'll use these buttons when programming the remote.

Using Automatic Code Search

The following instructions can be used to program the remote to operate each of your components. If you want to stop the automatic code search without programming any of your components, press CLEAR until the indicator on the remote turns off.

1. Turn on the component you want to operate (VCR or DVD player)
2. Press and hold the component button you want to program (VCR or DVD). While holding the component button, press and hold ON•OFF until the indicator on the remote turns on, then release both buttons.
3. Point the remote at the component. Press and release PLAY, then wait 5 seconds or until the indicator on the remote stops flashing.

At this point the remote is searching for the correct code to program. If, after 5 seconds, the component you want to operate does not turn off, press PLAY again to tell the remote to search the next set of codes.

Continue pressing PLAY until the component turns off or you have searched through all of the codes. There are 20 total sets of codes. If the component does not turn off after pressing PLAY 20 times, then the remote can't be programmed to operate that component.

If the component you want to operate *does* turn off:

1. Press and release REVERSE, then wait 2 seconds. Repeat this step until the device turns back ON.
2. To finish, press and hold STOP until the indicator on the remote turns off.

Using Direct Entry

1. Turn on the component to be programmed.
 2. Look up the brand and code number(s) for the component on the code list in this section.
 3. Press and hold the component button you want to program on the remote.
 4. Enter the code from the remote control code list on the following pages. If the indicator flashes, you have either entered an invalid code or the button isn't programmable.
 5. Release the component button.
 6. Point the remote at the component. Press ON•OFF to see if the component responds to the command. If it doesn't, try pressing the component button and then ON•OFF again.
- If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote commands.
 - If you try all the codes for your component brand and none work, try the automatic code search method. If automatic code search doesn't find the code, the remote is not compatible with your component.

Using the Remote Control

How to Use the Remote After You've Programmed It

Because this universal remote can operate several different components, it uses operational modes triggered by the component buttons. For example, if you want the remote to operate the TV, you would press the TV button to put the remote into TV mode before you could operate the TV.

1. Press the appropriate component button (DVD, TV, VCR) to set the remote to operate the component.
2. Press ON•OFF to turn the component ON or OFF.
3. Use the remote buttons that apply to that component.

Notes:

- *The remote may not be compatible with all brands and models of components. It also may not operate all functions of the remote that came with your component.*
- *If you keep pressing buttons and nothing happens, the remote is probably in the wrong mode. You must press the component button that matches the component you want to operate (i.e., if you want to operate the VCR, press VCR on the remote control to put the remote in VCR mode.)*

Remote Control Codes

VCR Codes

Programmable for VCR button.

Admiral	2132	Emerson	2012, 2014, 2015, 2021, 2024, 2025,
Adventura	2026	2026, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036,
Aiko	2027	2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2046,
Aiwa	2026	2047, 2065, 2113, 2116, 2117, 2130
Akai	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113	Fisher	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
American High	2021	Fuji	2021, 2119
Asia	2013	Funai	2026
Audio Dynamics	2009, 2010	Garrard	2026
Audiovox	2014	GE	2000, 2001, 2013,
Bell & Howell	2011	2021, 2022, 2053, 2115, 2120, 2131
Beaumarck	2013	Goldstar	2009, 2014, 2018, 2054
Broksonic	2012, 2025	Gradiente	2026
Calix	2014	Harley Davidson	2026
Caadle	2013, 2014, 2015, 2016,	Harman Kardon	2009
.....	2017, 2018, 2019	Harwood	2061
Canon	2021, 2022, 2114	Headquarter	2011
Capehart	2020, 2110	Hitachi	2055, 2056,
Carver	2062	2057, 2107, 2111, 2120, 2122
CCE	2027, 2061	Hi-Q	2023
Citizen	2013, 2014,	Instant Replay	2021
.....	2015, 2016, 2017, 2018, 2019, 2027	JCI	2021
Colorlyme	2009	JC Penney	2009, 2010, 2011, 2013,
Coh	2061	2014, 2021, 2022, 2055, 2056,
Craig	2013, 2014, 2023, 2061	2058, 2059, 2060, 2107, 2118
Curtis-Mathes	2000, 2009, 2013,	Jensen	2055, 2056, 2111
.....	2016, 2018, 2021, 2022, 2024, 2115, 2131	JVC	2009, 2010, 2011, 2018, 2111, 2123
Cybernex	2013	Kenwood	2009, 2010, 2011, 2016, 2018, 2111, 2123
Daewoo	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110	KIJI	2061
Daytron	2110	Kodak	2014, 2021
DBX	2009, 2010	Lloyd	2026
Dimensia	2000, 2131	Logik	2061
Dynatech	2026	LXI	2014
Electrohome	2014, 2029	Magnavox	2021, 2022, 2062,
Electroponic	2014	2063, 2104, 2105, 2108, 2124

VCR Codes continued

Magnin	2013
Marantz	2009, 2010, 2011, 2016, 2018, 2021, 2062, 2064
Marta	2014
Masushita	2021
Mei	2021
Memorex	2011, 2013, 2014, 2021, 2023, 2026, 2104, 2132
MGA	2029, 2065, 2113
MGN Technology	2013
Midland	2053
Minolta	2055, 2056, 2107
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123
Montgomery Ward	2075, 2132
Motorola	2021, 2132
MTC	2013, 2126
Multitech	2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2064, 2076, 2078, 2079, 2111, 2123
Nikko	2014
Noblex	2013
Olympus	2021
Optimus	2014, 2132
Optonica	2096
Panasonic	2021, 2022, 2109, 2125, 2126, 2127, 2016, 2055, 2056, 2107, 2120
Pentax Research	2018
Philco	2021, 2022, 2062, 2063
Philips	2021, 2062, 2096, 2124
Pilot	2014
Pioneer	2010, 2055, 2080, 2081, 2123
Portland	2016, 2017, 2019, 2110
Proscan	2000, 2001, 2131
Protec	2061
Pulsar	2104
Quarter	2011
Quartz	2011
Quasar	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125, 2131, 2133
Radioshack/Realistic	2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2132
Radix	2014
Randex	2014
Ricoh	2128
Runco	2104
Samsung	2005, 2013, 2015, 2033, 2053, 2112
Sanky	2104, 2132
Sansui	2010, 2092, 2111, 2123
Sanyo	2011, 2013, 2023
Scott	2012, 2015, 2025, 2032, 2038, 2065, 2093, 2116
Sears	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
Sharp	2017, 2029, 2094, 2095, 2096, 2097, 2132
Shintom	2004, 2056, 2061, 2098
Shogun	2013
Signature	2132
Singer	2021, 2061, 2128
Sony	2004, 2098, 2099, 2119
STS	2021, 2107
Sylvania	2021, 2022, 2026, 2062, 2063, 2065, 2124
Symphonic	2026
Tandy	2011
Tashiko	2014

Tatung	2111
TEAC	2026, 2085, 2111
Technics	2021, 2109
Teknika	2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
Toshiba	2015, 2049, 2051, 2055, 2065, 2093, 2116
Totevision	2013, 2014
Unitéca	2013
Vector Research	2009, 2010, 2015, 2016
Victor	2010
Video Concepts	2009, 2010, 2015, 2016, 2113
Videosonic	2013
Wards	2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2132
XR-1000	2021, 2026, 2061
Yamaha	2009, 2010, 2011, 2018, 2111
Zenith	2004, 2098, 2104, 2119, 2128

DVD codes

Programmable for DVD button.

Aiwa	3009
Apex	3023, 3024
GE	3000
Hitachi	3008
JVC	3002, 3010
Koaka	3011, 3012
Magnavox	3003
Mitsubishi	3004
Panasonic	3013
Philips	3003, 3019, 3021, 3022
Pioneer	3005
Proscan	3000
RCA	3000, 3001
Samsung	3025
Sanyo	3014
Sony	3006, 3015, 3016
Toshiba	3007, 3017, 3020
Zenith	3018

Channel Banner

There are several items that might appear on-screen when you press the INFO button on the remote. This display is called the Channel Banner. The following list describes the items on the Channel Banner screen (left to right and top to bottom).

<i>SAP</i>	Current channel is broadcasting SAP (Second Audio Program) information.
<i>CC</i>	Closed Captioning is available on the current channel.
<i>Stereo or Mono</i>	Stereo displayed when the current channel is broadcasting in stereo. Mono displayed when the current channel is broadcasting in mono.
<i>BROWSE</i>	Corresponds to the SKIP button. Appears when browsing all available channels.
<i>06 ABCDEF</i>	Current channel and label assigned to the channel.
<i>Mute</i>	Sound is muted.

Parental Controls and V-Chip

The choices in the *PARENTAL GUIDE* menu involve software inside your TV (referred to as V-Chip) which allows you to block TV programs and movies based on violence, sex, or other content you may believe children should not view.

Once you block programs, you can unblock programs by entering a password.

By default, the software inside your TV is turned "off." For instructions to turn on V-Chip, go to page 18.

How V-Chip Works

V-Chip reads the program's age-based rating (TV-MA, TV-14, etc.) and content themes [[Violence (V), Adult Language (L), etc.]]. If you have blocked the rating and/or content themes that the program contains, you will receive a message that it is not available.

Broadcasters are not required to provide content themes, so programs received with no content themes will only be blocked if you block their age-based rating. You can also block out programs that have been given a rating of Not Rated, and programs that are considered unrated. The TV age-based ratings and content themes you can block follow:

USA V-Chip Rating System

TV-MA (Mature Audience Only) Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: crude indecent language (L), explicit sexual activity (S), or graphic violence (V).

TV-14 (Parents Strongly Cautioned) Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).

TV-PG (Parental Guidance Suggested) Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).

TV-G (General Audience) Most parents would find this program suitable for all ages. It contains little or no sexual dialogue (D) or situations (S), no strong language (L), and little or no violence (V).

TV-Y7 (Directed to Children 7 years and older) Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy violence (FV) or comedic violence, or may frighten children under the age of 7.

TV-Y (All Children) Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.



PASSWORD
PASSWORD



TV RATING

RATING		FV	D	L	S	V
TV-Y	>U					
TV-Y7	U	U				
TV-G	U					
TV-PG	U		U	U	U	U
TV-14	U		U	U	U	U
TV-MA	U			U	U	U

TV Rating Limit

The TV Rating Limit lets you decide which TV programs can and cannot be viewed.

To set TV programming limits:

1. Press **MENU** on the remote control (the Main menu appears).
2. Press the right arrow button until the Parental Guide icon is highlighted.
3. Press the down arrow button until the bottom **PASSWORD** is highlighted, then press the right arrow button to access the password entry.
4. Enter your password using the numbers buttons on the remote (the **PARENTAL GUIDE** menu appears).
5. Press the down arrow button until **TV RATING** is highlighted, then press the right arrow button (the **TV RATING** screen appears).
6. Use the down arrow button to select the rating, then press the right arrow button to change the status of a TV program rating or content theme from **U** (Unblock) to **B** (Block).
7. Make sure **PARENTAL GUIDE** is on. Press the **GO BACK** button to return the **PARENTAL GUIDE** menu.
8. Press the down arrow button to highlight **PARENTAL GUIDE OFF**, then press the right arrow button to turn it on. It must be on for rating limits to take effect.

The following sections give you more details about how to change the status of TV program limits.

Note: If you forget your password, you can reset it. Enter 5898 as the password and then change it to a new one.

Using the TV's Features and Menus

The V-Chip Rating Screen

 
The following is an example of where items are located within the *TV RATING LIMIT* screen.

Rating Status Field

Lets you select whether the status of the age-based rating limit to the left is Unblock or Block.

Rating Field

Lets you select from a list of age-based ratings you can block or unblock.

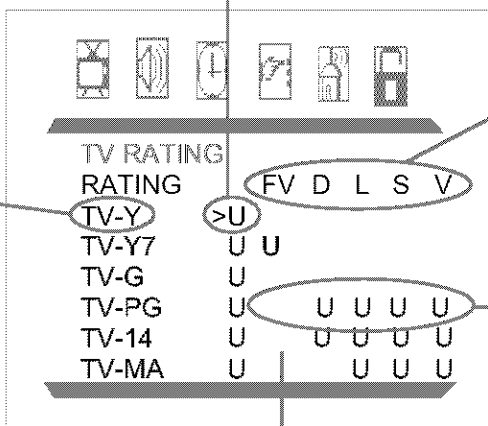

Content Themes

Lets the content themes you can block or unblock.

Content Status Fields

Lets you select which content themes to view for the selected rating, and whether the status of the content theme is currently Unblock (U) or Block (B).

Rating Settings Area

Lets you see the current block/view state of age-based ratings and associated content.

Hierarchy of Age-Based Ratings	
TV-MA	Mature Audience Only
TV-14	Parents Strongly Cautioned
TV-PG	Parental Guidance Suggested
TV-G	General Audience
TV-Y7	Directed to Children 7 years and older
TV-Y	All Children

Blocking Age-Based Ratings

You can automatically block all program ratings above a specified age-based rating level.

To block programs with higher ratings:

1. Press the up or down arrow button to scroll to the rating corresponding with the lowest rating you do not want the child to watch.
2. Press the OK button to toggle between *U* (Unblock) and *B* (Block). The status for the rating listed to the left and all higher ratings automatically changes to *B* (Block).
3. Press the GO BACK button to return the *PARENTAL GUIDE* menu.
4. Press the down arrow button to highlight *PARENTAL GUIDE OFF*, then press the right arrow button to turn it on. It must be on for rating limits to take effect.

Viewing Age-Based Ratings

After you block age-based ratings, you can change some of the ratings back to *Unblock*.

1. Press the up or down arrow button to select the rating with a status of *B* (Block).
2. Press the right arrow button to select *U* (Unblock).

MPAA RATING LIMIT

The *MPAA RATING* menu lets you decide which movies can and can't be viewed according to the age-based rating of the MPAA (Motion Picture Association of America). The TV locks and unlocks the parental control settings using a password you select.

If you want your child to watch movies that have a PG rating and lower (in other words, movies rated PG and G), then you could automatically block out all other movies with higher ratings.

Content Themes	
FV	Fantasy Violence
D	Sexually explicit dialogue
L	Adult language
S	Sexual situations
V	Violence

Blocking Specific Content Themes


You can block programs based on their content. (Content is represented by the FV, D, L, S, and V on your screen.) When you block a content theme for a particular rating, you automatically block that content theme for higher rated programs as well.

To block program content:

1. Determine the content themes you want to block.
2. Press the down arrow button to move the highlight to the content theme status you want to change.
3. Press the right arrow button to change its status to *B* (Block).

Notes: Broadcasters are not required to provide content themes or age-based ratings.

You must remember to activate Parental Guide for rating limits to take effect.




TV RATING	
RATING	FV D L S V
TV-Y	>U
TV-Y7	U U
TV-G	U
TV-PG	U U U U U
TV-14	U U U U U
TV-MA	U U U U

Viewing Specific Content Themes

If you block specific content themes, you have the option of going back and changing some of the content themes back to *U* (Unblock):

1. Determine the content themes you want to change to *U* (Unblock).
2. Press the down arrow button to move the highlight to a content theme status, such as *B* under language (L) corresponding with TV-14.
3. Press the right arrow button to change the status back to *U*. Your child would then be able to watch programs with the TV-14 adult language content, but not programs with TV-MA language content.

 Note: Only the content theme status corresponding to TV-14 (L) language changes to U (Unblock). Higher rated content themes, such as that for TV-MA language, do not change.

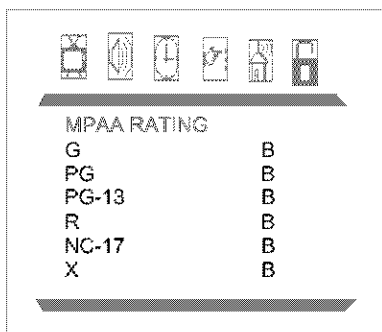

V-Chip Movie Rating Limit

Set movie rating limits by blocking movies rated above a specified level.

To access the *MPAA RATING* (Movie Rating Limit) menu:

1. Press **MENU** on the remote control (the Main menu appears).
2. Press the right arrow button until the Parental Guide icon is highlighted.
3. Press the down arrow button until the bottom *PASSWORD* is highlighted, then press the right arrow button to access the password entry.
4. Enter your password using the numbers buttons on the remote (the *PARENTAL GUIDE* menu appears).
5. Press the down arrow button until *MPAA RATING* is highlighted, then press the right arrow button (the *MPAA RATING* screen appears).
6. Use the down arrow button to select the rating, then press the right arrow button to change the status of a TV program rating or content theme from *U* (Unblock) to *B* (Block).
7. Make sure *PARENTAL GUIDE* is on. Press the **GO BACK** button to return the *PARENTAL GUIDE* menu.
8. Press the down arrow button to highlight *PARENTAL GUIDE OFF*, then press the right arrow button to turn it on. It must be on for rating limits to take effect.

Note: If you forget your password, you can reset it. Enter 5898 as the password and then change it to a new one.

You must remember to activate Parental Guide for rating limits to take effect.

Parental Guide On (Activate V-Chip)

Selecting this option lets you activate and deactivate parental control settings.

1. Press **MENU** on the remote control (the Main menu appears).
2. Press the right arrow button until the Parental Guide icon is highlighted.
3. Press the down arrow button until the bottom *PASSWORD* is highlighted, then press the right arrow button to access the password entry.
4. Enter your password using the numbers buttons on the remote (the *PARENTAL GUIDE* menu appears).
5. Press the down arrow button to highlight *PARENTAL GUIDE OFF*, then press the right arrow button to turn it on. It must be on for rating limits to take effect.

If you do not activate V-Chip, none of the settings for V-Chip will take effect.

If you forget your password, you can reset it. Enter 5898 as the password and then change it to a new one.



PARENTAL GUIDE
PARENTAL GUIDE ON
TV RATING
MPAA RATING
CHILD LOCK OFF
CHANGE PASSWORD

Child Lock

Selecting this option lets you lock (disable) or unlock (enable) the TV's front panel. The remote still tunes to any channel. When using this as a Parental Control method, remove access to any remote that is capable of operating the television.

1. Press MENU on the remote control (the Main menu appears).
2. Press the right arrow button until the Parental Guide icon is highlighted.
3. Press the down arrow button until the bottom *PASSWORD* is highlighted, then press the right arrow button to access the password entry.
4. Enter your password using the numbers buttons on the remote (the *PARENTAL GUIDE* menu appears).
5. Press the down arrow button to highlight *CHILD LOCK*, then press the right arrow button to turn it on.




CHANGE PASSWORD
NEW PASSWORD ----
CONFIRM ----

Change Password

Selecting this option lets you simply create a new password at any time. Once you enter a new password from *CHANGE PASSWORD* in the *PARENTAL GUIDE* menu, it is the password you use until you change it again.


1. Press MENU on the remote control (the Main menu appears).
2. Press the right arrow button until the Parental Guide icon is highlighted.
3. Press the down arrow button until the bottom *PASSWORD* is highlighted, then press the right arrow button to access the password entry.
4. Enter your password using the numbers buttons on the remote (the *PARENTAL GUIDE* menu appears).
5. Press the down arrow button to highlight *CHANGE PASSWORD*, then press the right arrow button to select it.
6. Press the down arrow button to highlight *NEW PASSWORD*, and use the number buttons on the remote to enter the new password. Enter it again in the confirm field to confirm the new password.

Using the TV's Features and Menus



PICTURE	
CONTRAST	1
BRIGHTNESS	18
COLOR	50
SHARPNESS	50
TINT	0
COMBFILTER	ON
COLOR TEMP	NORMAL

Note: The comb filter is only available on model 24F530T and will not appear in the 24V510T PICTURE menu.



SOUND	
MODE	AUTO
PRESET	USER
BASS	50
TREBLE	50
BALANCE	0
SURROUND	OFF

Picture Menu

The **PICTURE** menu options apply to the video for the main TV and video input selections.

Press the up and down arrow buttons to select an item, and then press the right arrow button to change it.

CONTRAST Adjusts the difference between the light and dark areas of the picture.

BRIGHTNESS Adjusts the brightness of the picture.

COLOR Adjusts the richness of the color.

SHARPNESS Adjusts the crispness of the edges in the picture.

TINT Adjusts the balance between the red and green levels.

COMB FILTER (model 24F530T only) Turns the comb filter on and off for improved picture performance.

COLOR TEMP Press the right arrow to scroll through the color adjustments: *Cold* for a more blue palette of picture colors; *Normal*; and *Warm* for a more red palette of picture colors.

Sound Menu

The **SOUND** menu offers enhanced audio options, such as listening to a second audio program (SAP) and general sound quality adjustments.

Press the up and down arrow buttons to select an item, and then press the right arrow button to change it.

MODE Press the right arrow to scroll through the available audio types, which control the way the sound comes through your speakers: **AUTO** detects the type of sound automatically.

MONO plays the sound in mono only. Use this setting when receiving broadcasts with weak stereo signals; and **STEREO** to split the incoming stereo audio signal into left and right channels. Most TV programs and recorded materials have stereo audio. The word *Stereo* appears on the TV when you tune to a program that is broadcast in stereo.

SAP (Second Audio Program) Plays the program's audio in a second language, if one is available. The TV displays the word **SAP** when you tune to a program that is broadcast with SAP information. SAP audio is broadcast in mono. SAP is also used to broadcast a program's audio with descriptions of the video for the visually impaired.

 
PRESET Allows you to choose from 4 preset audio settings (*USER*, *SPEECH*, *THEATER*, and *MUSIC*), depending on what setting is right for you. You'll want to experiment to see which has the best sound for your situation.

BASS Increases or decreases the bass.

TREBLE Increases or decreases the treble.

BALANCE Press the right arrow to increase the audio output in the right speaker; press the left arrow to increase the audio output in the left speaker.

SURROUND Turns on or off the surround sound effect.

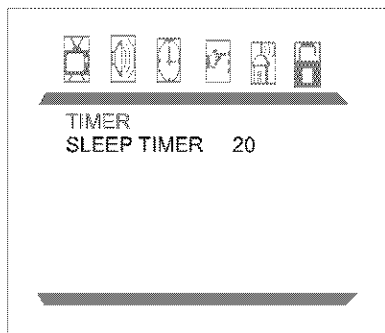


Timer Menu

The *TIMER* menu allows you to set the sleep timer.

Press the up and down arrow buttons to select an item, and then press the right arrow button to change it.

 SLEEP TIMER Lets you set the time you want the TV to turn itself off after a given time. Press the right arrow to add 10 minutes to the clock (up to two hours).

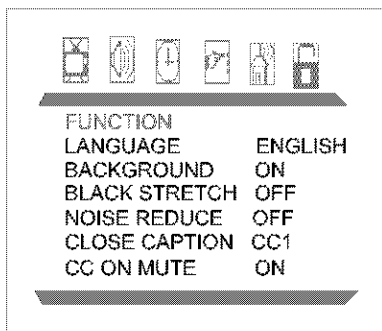

Function Menu

The *FUNCTION* menu lets you set advanced settings, such as menu language, noise reduction, and closed captioning.

Press the up and down arrow buttons to select an item, and then press the right arrow button to change it.

LANGUAGE Lets you select your preferred language for the menus.

BACKGROUND Turns on or off the background function when no signal is received (only when using Video Input Channels).

BLACK STRETCH Turns on or off the black stretch function. Improves contrast so that near black images become a truer black.

NOISE REDUCE Turns noise reduction on and off.

CLOSE CAPTION Many programs are encoded with closed-captioning information, which lets you display the audio portion of a program as text on the TV screen.

Closed captioning is not available on all channels at all times. Only specific programs encoded with closed-captioning information are applicable. When a program is closed captioned, CC is displayed in the channel banner. Go to Chapter 3 for more information about the channel banner. The closed caption options are:

 
CC Display Lets you choose when closed captioning information is shown on the screen.

Off No captioning information displayed.

On Captioning information always appears, when available.

CC Mode Choose which captioning mode is used for displaying captioning information. If you are unsure of the differences among the modes, you may prefer to leave the closed captioned mode set to CC1, which displays complete text of the program in the primary language in your area.

CC ON MUTE When turned on, automatically brings up close captioning when the MUTE button is pressed.

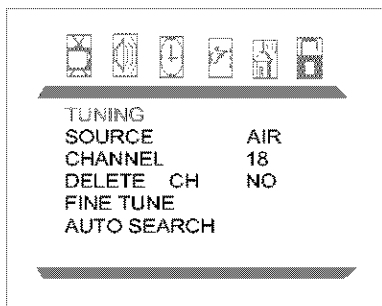

Tuning Menu

The *TUNING* menu lets you edit your channel list and add all available channels.

Press the up and down arrow buttons to select an item, and then press the right arrow button to change it.

 
SOURCE Press the left or right arrow to toggle between the signal source your TV is receiving. Choose *CABLE* if you are currently using cable or a cable box for TV signals. Choose *AIR* if you are currently using an off-air antenna for TV signals.

Adding and Deleting Channels:

CHANNEL Edit the channels in the off-air list. To delete a channel from the channel list, highlight *CHANNEL* and use the left or right arrow to select the channel. Then highlight *DELETE CH* and select YES.

FINE TUNE Allows you to fine tune a channel when the picture is not clear.

AUTO SEARCH Searches for channels the signal is receiving and stores them in the TV's channel list. Go to page 8 for more information.

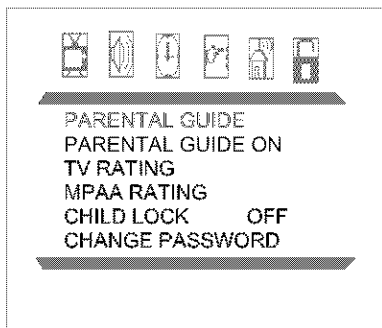

Parental Guide Menu

The *PARENTAL GUIDE* menu was explained earlier in this chapter. Go to page 14 for more information.

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

Note: If you prefer, we can provide you with the name of an Authorized Service Representative who will visit your home for a fee to install your electronic entertainment system and to instruct you in its operation. For details about this service, call 1-888-206-3359. For additional assistance while using your RCA product, please visit www.rca.com/customersupport.

TV Problems

TV won't turn on

- Press the TV button.
- Make sure the TV is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Something might be wrong with your remote control. Press the POWER button on the front of the TV. If the TV turns on, check the remote control solutions on page 25.
- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting CHILD LOCK in the PARENTAL GUIDE menu and press the right arrow button to turn it off.

Buttons don't work

- If you're using the remote control, press the TV button first to make sure the remote is in TV mode.
- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting CHILD LOCK in the PARENTAL GUIDE menu and press the right arrow button to turn it off.
- Unplug the TV for two minutes and then plug it back in. Turn the TV on and try again.

TV turns off unexpectedly

- Sleep timer might have been activated. Go to page 21 for instructions.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high or low.
- Unplug TV. Wait five minutes. Plug it in again.

TV turns on unexpectedly

- You might have pressed CH+, CH- or OK on the remote accidentally.

Blank screen

- Make sure the component connected to the TV is turned on.
- Try another channel.

No sound, picture okay

- Maybe the sound is muted. Try pressing the volume up button to restore sound.
- If using S-Video, remember to also connect the component's left and right audio output jacks to the TV's AUDIO jacks.

Can't select certain channel

- Channel may be blocked or not approved through the V-Chip.
- If using a VCR, check to make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).

Noisy stereo reception

- May be a weak station. Access the *SOUND* menu, highlight *MODE* and then choose *MONO*.

No picture, no sound but TV is on

- Maybe the signal type is set wrong. Go to page 8 for detailed instructions.
- The channel might be blank — change channels.
- If you're watching your VCR and it's connected with coaxial cable to the TV ANT jack, tune the TV to channel 3 or 4 (whichever channel is selected on the 3/4 switch on the back of your VCR). Also check to make sure the TV/VCR button on the VCR is in the correct mode (press the TV/VCR button on your VCR).

Sound okay, picture poor

- Check antenna connections. Make sure all of the cables are firmly connected to the jacks.
- Try adjusting sharpness function to improve weak signals. Go to page 20 for more instructions.

Black box appears on the screen

- Closed caption might be on. Check *Closed Caption* in the *FUNCTION* menu. Go to page 22 for more instructions.

The Remote Control Doesn't Work

- Something might be between the remote and the remote sensor on the component. Make sure there is a clear path.
- Maybe the remote isn't aimed directly at the component (DVD, TV, VCR) that you're trying to operate.
- Maybe remote is not in TV Mode. Press the TV button so remote will control TV.
- Maybe batteries in remote are weak, dead, or installed incorrectly. Put new batteries in the remote. (Note, if you remove the batteries, you may have to reprogram the remote to operate other components.)
- You might need to reset the remote: remove batteries and press the number 1 button for at least 60 seconds. Release the 1 button, replace the batteries, and (if necessary) program the remote again.

Problems with V-Chip/Parental Controls

The rating limits don't work

- You must activate the settings. Press MENU, select *PARENTAL GUIDE*, enter your password, and highlight and turn on *PARENTAL GUIDE*.

I don't remember my password and I want to unlock the TV

- If you forget your password you can reset it. Enter 5898 as the password and then change it to a new one.

Other Information

Care and Cleaning

CAUTION: Turn OFF your TV before cleaning.

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water. Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, never place drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

Caution: Using video games or any external accessory with fixed images for extended periods of time can cause them to be permanently imprinted on the picture tube (or projection TV picture tubes). ALSO, some network/program logos, phone numbers, etc. may cause similar damage. This damage is not covered by your warranty.

FCC and Canada Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003

Limited Warranty

What your warranty covers:

- Defects in material or workmanship.

For how long after your purchase:

- One year from date of purchase for labor charges.
- One year from date of purchase for parts.
- Two years from date of purchase for the picture tubes.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Television Service Center the labor charges to repair your television.
- Pay any Authorized RCA Television Service Center for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.

How you get service:

- For 20" screen size: Take your RCA television to any Authorized RCA Television Service Center and pickup when repairs are complete.
- For screen sizes larger than 20": Request home or pick up, repair and return service from any Authorized RCA Television Service Center, provided that your television is located within the geographic territory covered by an Authorized RCA Television Service Center. If not, you must take your television to the Service Center location at your own expense, or pay for the cost the Service Center may charge to transport your television to and from your home.
- To identify your nearest Authorized RCA Service Center, ask your dealer, visit www.rca.com, look in the Yellow Pages, or call 1-800-336-1900.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your product. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Customer replacement fuses.
- Damage from images burnt onto the screen.
- A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Acts of nature, such as but not limited to lightning damage.
- A television purchased or serviced outside the U.S.A.

Other Information

Product Registration:

- Please complete and mail the Product Registration Card packed with your TV or register on-line at www.rca.com/productregistration. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- **THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**
- **REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the United States:

 
- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.




RCR311TBM2

Remote Control
This is the remote control that came packed with your TV. Replacements or spares can be ordered as needed.



VH47

 2-way Signal Splitter helps you connect to a second TV or VCR.

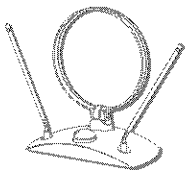

ANT200

 
Amplified VHF/UHF/FM Antenna allows you to easily switch from the antenna signal to cable or satellite easily without disconnecting antenna.



VH81 (3-ft)

VH82 (6-ft)

Screw-on Cable attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. The ends screw onto the connectors for a secure connection.



VH83

Standard Audio/Video cable with RCA-type phono plugs.




VH913

S-Video Cable has multi-pin connectors on each end for connecting S-Video components to your TV.

Description	Part No.	Price
Screw-on antenna cable (3-ft)	VH81	\$3.95
Screw-on antenna cable (6-ft)	VH82	\$4.95
Push-on antenna cable (6-ft)	VH89	\$5.95
Monaural VCR Dubbing Cable (6-ft)	VH83	\$5.95
Stereo VCR Dubbing Cable (6-ft)	VH84	\$9.95
S-Video Cable (6-ft)	VH976	\$7.95
S-Video Cable (12-ft)	VH913	\$14.95
2-way Signal Splitter	VH47	\$3.95
Amplified Antenna	ANT200	\$49.95
Remote Control (RCR311TBM2)	260605	\$24.99
Audio•Video Adapter	228449	\$4.45
Surge Protector	SCTV4000C	\$49.95

 Prices are subject to change without notice.



SCTV4000C

Surge Protector provides eight outlets, coaxial and telephone line protection. Audible alarm for surge failure.

HOW TO ORDER

ON-LINE: Accessories may also be purchased at www.rca.com/accessories (subject to availability).

BY PHONE: To place your order by phone, have your Visa, MasterCard or Discover Card ready and call 1-800-338-0376. Use this number only to place an order for accessory items listed on this page.

BY MAIL: mail money order or check in US currency (made payable to Thomson Inc.), along with ordering information (part numbers), phone number and shipping address, to the following address:

Video Accessories
PO Box 8419
Ronks, PA 17573

All accessories are subject to availability. Where applicable, we will ship a superseding model.

Visit the RCA web site at www.rca.com

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

**Thomson Inc.
10330 North Meridian Street
Indianapolis, IN 46290**

©2003 Thomson Inc.
Trademark(s)® Registered
Marca(s) Registrada(s)
Printed in Thailand
TOCOM 1622307D

