

RCA

DVD Player User's Manual

Changing Entertainment. Again.



RC5225P

Important Information

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

To reduce the risk of fire or shock hazard, do not expose this DVD player to rain or moisture. No objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Note:

This DVD player is designed and manufactured to respond to the Region Management information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play the disc. The Region number for this DVD player is Region No 1.

Note:

This device is protected by U.S. patent numbers 4,631,603 and 4,577,216 and 4,819,098 and other intellectual property rights. The use of Macrovision's copy protection technology in the device must be authorized by Macrovision and is intended for home and other limited pay-per-view uses only, unless otherwise authorized in writing by Macrovision. Reverse engineering or disassembly is prohibited.

FCC NOTE (for U.S.A.):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect this equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital apparatus meets all requirements of the Canadian Interference--Causing Equipment Regulations.

Product Registration

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the player.

Model No. RC5225P

Serial No. _____

Purchase Date: _____

Dealer/Address/Phone: _____

**CLASS 1
LASER
PRODUCT**

Introduction

Your DVD player is equipped with some special features. The following information summarizes some of these features.

The On-Screen Information Display

The Info Display is a menu bar that you can bring up to access certain features while discs are playing. Icons represent the different features supported by your DVD player. By selecting different Info Display icons, you can access features including Scene Snip, Repeat, Audio, Subtitles, Bookmarks and Camera Angle.

Time Search

The Time Search feature lets you go to a point on a disc by entering the elapsed time in the on-screen time display. For example, if your favorite scene in a movie is one hour and twelve minutes after the beginning of the movie, you can enter 01:12:00 into the time display and go right to that point in the movie.

The Bookmarks Feature

You can bookmark a point on a disc that you can go to quickly with the bookmark feature. You can store up to six bookmarks. For example, if you have a favorite scene in a movie, you can bookmark it so you can return to it without having to fast forward or reverse to find the exact scene.

Ratings Limits and Scene Snip

Your DVD player allows you to set ratings limits and passwords. For example, you can set the DVD player so that any movie with a PG-13 rating or above requires a password to be entered. You can use Scene Snip to edit out sections of a disc. When this disc is played, you must have the password to view the original version.

Since not all discs contain ratings, you can also decide if you want to allow free access or require a password to view unrated discs.

Scene Again™

When you are watching a DVD disc, by pressing the GO BACK•AGAIN button on the remote you can replay a scene instantly. The Scene Again™ feature goes back approximately ten seconds and replays both video and audio while turning on the subtitles.

TruSurround

The TruSurround® option can be used to simulate a six-speaker listening experience through two speakers.


SRS/TruSurround and the  symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. TruSurround technology is incorporated under license from SRS Labs, Inc.

Table of Contents

Introduction	1
Chapter 1: Connections & Setup	
Things to Consider Before You Connect	6
Protect Against Power Surges	6
Protect Components from Overheating	6
Position Cables Properly to Avoid Audio Interference	6
Connection Pictures	6
Types of Discs Your DVD Player will Play	6
Choose Your Connection	7
Cables Needed to Connect Components to Your TV	7
DVD Player + TV with Audio/Video Input Jacks	8
DVD Player + TV + VCR	9
DVD Player + TV + Dolby Pro Logic, Dolby Digital® or DTS® Receiver	10
DVD Player + TV + 5.1-Channel Audio/Video Receiver	12
DVD Player + TV + VCR + Satellite Receiver	14
The Jacks on the Back of the DVD Player	16
Install Batteries in the Remote	17
Turn on the TV and DVD Player	17
How to Find Your TV's Video Input Channel	18
How to Move Around the DVD Player's Menu System	19
Set the Menu Language	19
Setting Other Options	19
A Quick Tour of the Remote	20
Component Buttons	20
DVD Buttons	20
Chapter 2: Playing DVDs	
Regional Coding	24
Using Different Menus	24
Loading and Playing Discs	24
Using a Disc Menu	25
Using the On-Screen Info Display	27
Time Display	28
Selecting a Title	28
Selecting a Chapter	28
Using Scene Snip Editing	29
Selecting Subtitles	31
Changing the Audio Language	32
Using the Repeat Feature	33
Using Bookmarks	34
Changing the Camera Angle	35

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.

DTS is a registered trademark of Digital Home Theater Systems, Inc.

Table of Contents

Disc Playback Features Using the Remote	36
Fast Motion Playback (Picture Scan)	36
Freeze Frame and Frame Advance	36
Slow Motion Playback	36
Chapter Advance	36
Scene Again™	37
Subtitles	37
Audio Language	37
Camera Angle	37
Scene Snip Edit	37
Zoom	38

Chapter 3: Playing Audio CDs

Using the Info Display	40
Using the Time Display	40
Selecting a Specific Track	40
Selecting a Play Mode	41
Using the Program Play Feature	41
Editing a Playlist	42
Using the Repeat Feature	42
Using IntroScan	43
Using Bookmarks	44
Dub Assist	45

Chapter 4: Playing Video CDs

What is a Video CD?	48
The Video CD Disc Menu	48
Video CD Information Display	49
Selecting a Specific Track	50
Selecting a Specific Index	50
Using the Repeat Feature	50
Changing the Audio Channel Output	51
Skipping Tracks	51

Chapter 5: The DVD Player's Menu System

The DVD Player Menu System	54
Two Types of Menu Items: Path and Action	54
The Play/Resume Play Option	54
The Play Mode menu	55
Selecting a Play Mode	55
How to Create a Program	56
Creating a Program List for an Audio CD	56
Creating a Program List for a DVD Disc	57
Editing a Program	57
Autoplay	58
Dub Assist	58

Table of Contents

The Lock Menu	59
Locking Your DVD Player	59
Unlocking Your DVD Player	59
Changing Your Password	59
Editing Your Scene Snip Disc Library	60
Setting the Ratings Limit	60
How to Set DVD Limits	60
Changing to a Different Country's Rating System	61
Rated Titles	61
Unrated Titles	62
Front Tray Lock	62
System Test	62
The Display Menu	63
TV Image	63
Front Display	64
On-Screen Displays	64
The Sound Menu	65
Digital Output	65
Analog Output	66
2-Channel Stereo	66
5.1-Channel Out	67
Sound Logic	68
The Languages Menu	69
Changing the Player Menus Language Preference	69
Changing the Disc Menus Language Preference	69
Changing the Audio Language Preference	70
Changing the Subtitle Language Preference	70
Glossary	71
Language Code List	72

Chapter 6: Other Information

Troubleshooting	74
Handling Cautions	77
Maintenance of Cabinet	77
Formation of Condensation	77
Handling Discs	77
Cleaning Discs	77
Universal Remote	78
Program the Remote	78
Operate Components after Programming the Remote	79
Codes	80
Front Panel Controls	81
Front Panel Display	82
Limited Warranty RCA Digital Video Disc (DVD) Player	85
Accessories and Order Form	87
Index	90

Connections & Setup

Chapter Overview:

- Things to Consider Before You Connect
- Choose Your Connection
- The Jacks on the Back of the DVD Player
- Inserting Batteries in the Remote
- How to Find Your TV's Video Input Channel
- How to Move Around the DVD Player's Menu System
- Set the Menu Language
- The Remote Control

Changing Entertainment. Again.



Connections & Setup

Things to Consider Before You Connect

Protect Against Power Surges

- Connect all components before you plug any of their power cords into the wall outlet.
- Turn off the TV and/or components before you connect or disconnect any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safeguards sheet packed with your DVD player.

Protect Components from Overheating

- Don't block ventilation holes on any of the components. Arrange the components so that air can circulate freely.
- Don't stack components.
- When you place components in a stand, make sure you allow adequate ventilation.
- If you connect an audio receiver or amplifier, place it on the top shelf so the heated air from it won't flow around other components.

Position Cables Properly to Avoid Audio Interference

- Insert each cable firmly into the designated jack.
- If you place components above the TV, route all cables down the side of the back of the TV instead of straight down the middle of the back of the TV.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.

Connection Pictures

Audio/video cables are usually bundled together. For better visibility, the connection pictures in this book show each cable separately (audio left, audio right, and video).



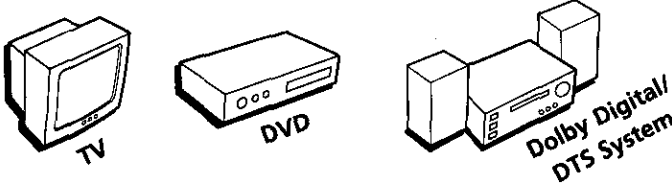
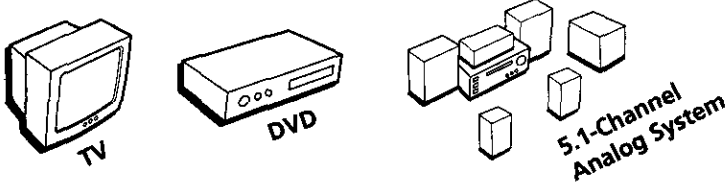
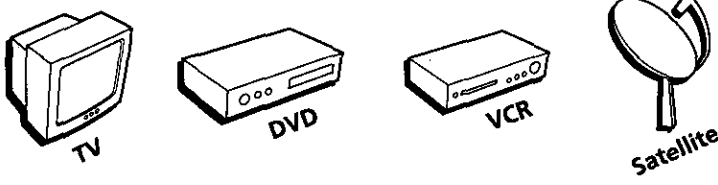
Types of Discs Your DVD Player will Play

- DVD video discs – DVD video discs contain high quality picture and sound content.
- Audio discs – Audio CDs contain musical or sound content only.
- Video CD discs – Like DVD video discs, Video CDs contain picture and sound content. The difference is the amount of information that can be stored on the disc.



Choose Your Connection

There are several ways to connect your DVD player. Please use the following chart to determine which connection is best for you. Turn to the appropriate page and connect your DVD player.

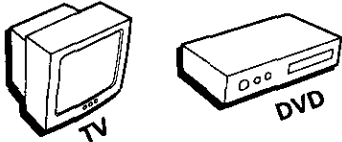Components	Cables Needed	Connection Title	Go to...
	<ul style="list-style-type: none"> • Coaxial • Audio/video • S-Video (optional) • Component video (optional) 	TV + DVD	page 8
	<ul style="list-style-type: none"> • Coaxial • Audio/video • S-Video (optional) • Component video (optional) 	TV + DVD + VCR	page 9
	<ul style="list-style-type: none"> • Coaxial • Audio/video • S-Video (optional) • Component video (optional) 	TV + DVD + Dolby Digital	pages 10-11
	<ul style="list-style-type: none"> • Audio/video • S-Video (optional) • Component video (optional) 	TV + DVD + 5.1-Channel Analog	pages 12-13
	<ul style="list-style-type: none"> • Coaxial • Audio/video • S-Video (optional) • Component video (optional) 	TV + DVD + VCR + Satellite	pages 14-15

Cables Needed to Connect Components to Your TV

The pictures below show the cables needed for the connections represented in this book.

Note: Audio/Video cables (A/V cables for short) are usually sold as a bundled set, but the connection pictures in this book show each cable separately for better visibility.



Audio/Video cables
Component Video cables




Coaxial cable



S-Video cable

Connections & Setup

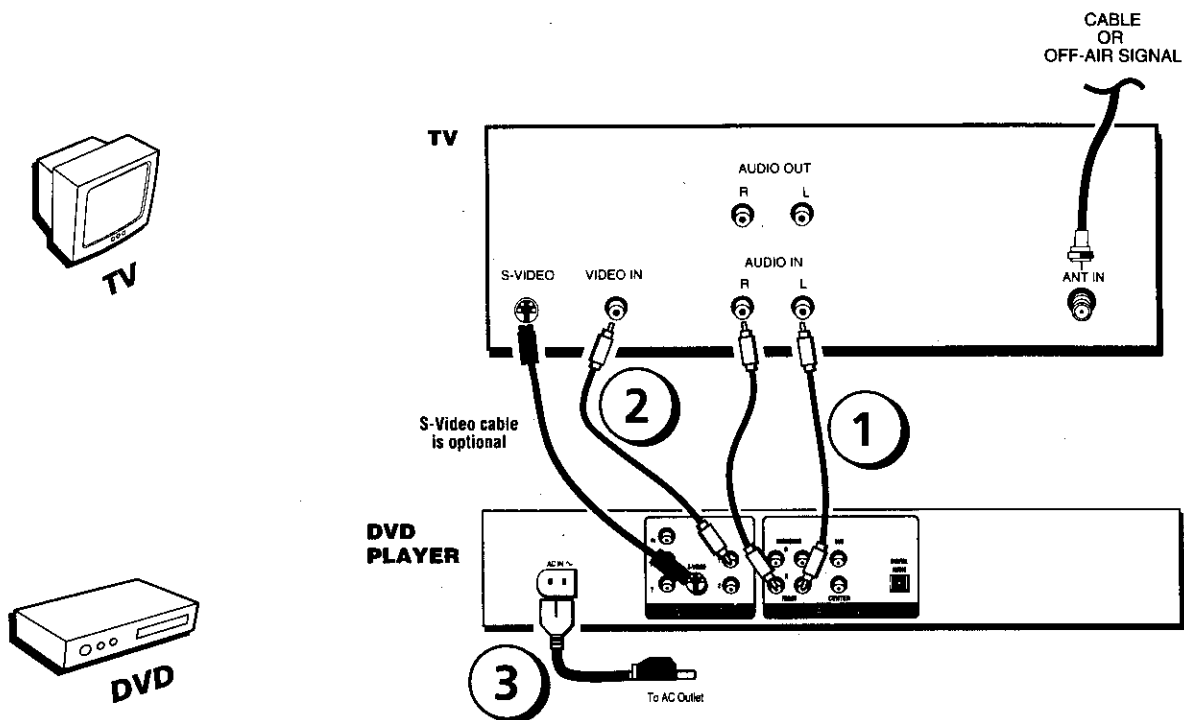


DVD Player + TV with Audio/Video Input Jacks

1. Connect the audio cables to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player, and to the corresponding Audio Input jacks on your TV.
 2. Connect the video cable.
 - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.
- OR**
- **S-Video** (optional) – If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.
- OR**
- **Component video** (optional) – If your TV has component video (Y, P_B, and P_R jacks) use video-grade cables for the Y, P_B, and P_R connections. Note that it is essential to match the color-coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
3. Connect the AC power cord to the AC IN jack on the back of your DVD Player, and plug the other end into an AC outlet.

Note: Your cable or off-air connection to the television should not be affected by this connection. Connect your cable or off-air antenna to your television as you normally would. You may need to consult your television manual for details.

Go to page 17

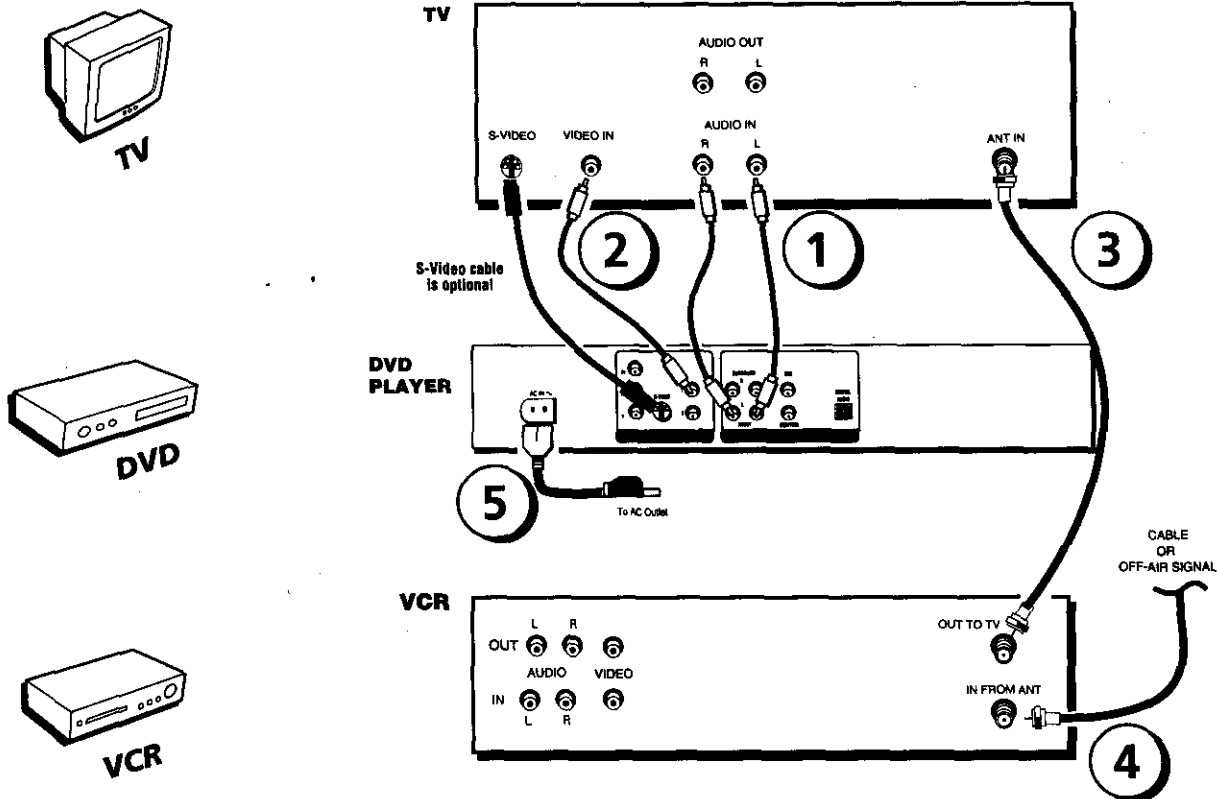

DVD Player + TV + VCR

1. Connect the audio cables to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player, and to the corresponding Audio Input jacks on your TV.
2. Connect the video cable.
 - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

OR


 - **S-Video** (optional) – If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

OR

 - **Component video** (optional) – If your TV has component video (Y, P_B, and P_R jacks) use video-grade cables for the Y, P_B, and P_R connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
3. Connect a coaxial cable to the antenna output jack on the VCR and to the antenna input jack on the television.
4. Connect the antenna or cable to the Antenna Input jack on the VCR.
5. Insert the AC power cord into the AC IN jack on the back of your player and into an AC outlet.

Go to page 17

Connections & Setup

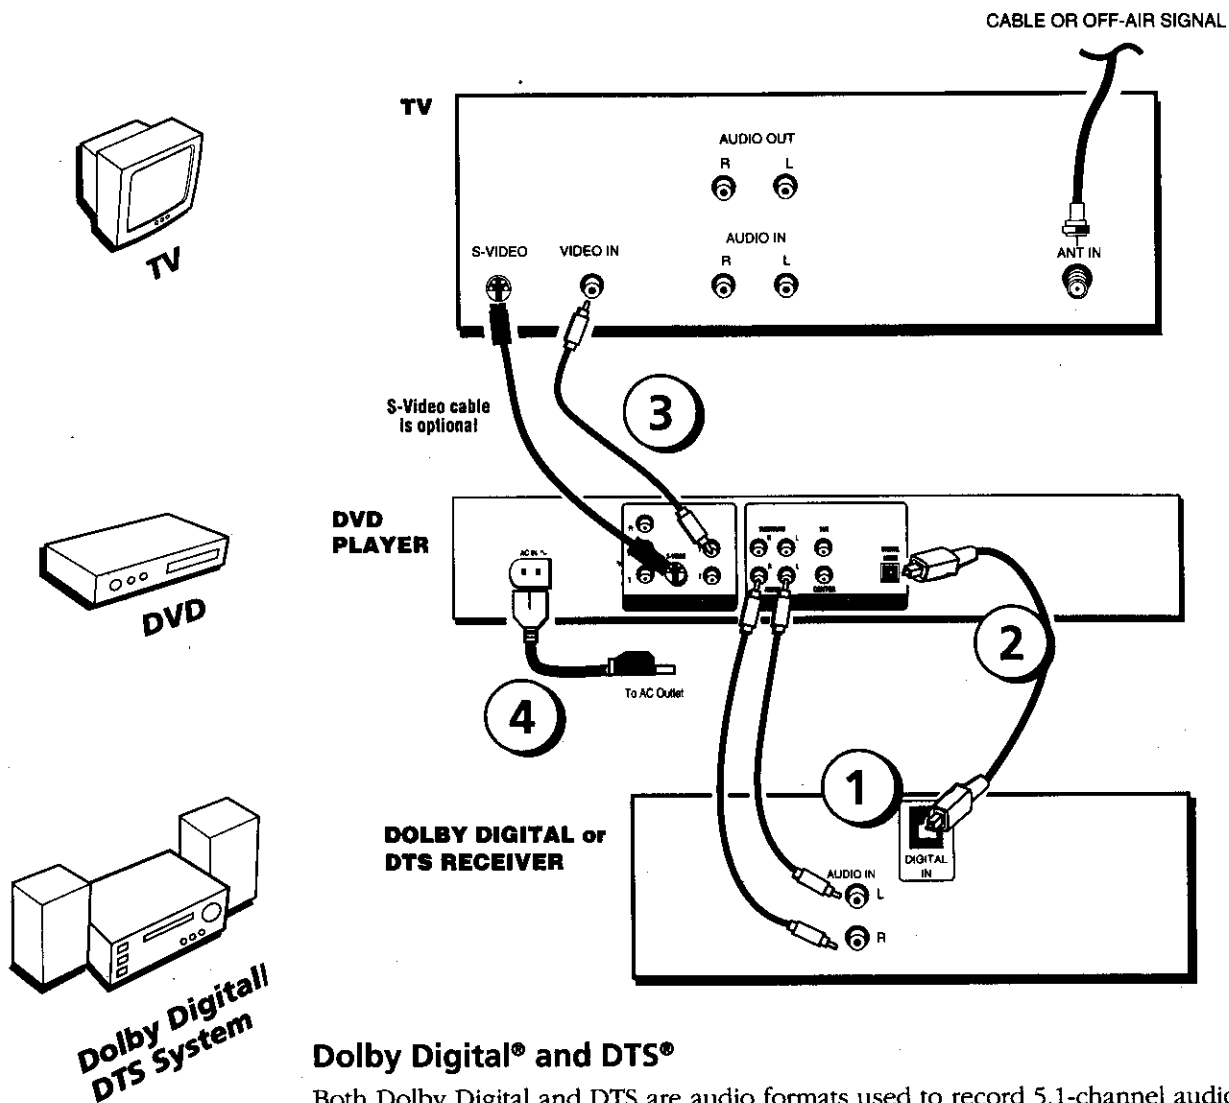

Dolby Digital® and DTS®

Both Dolby Digital and DTS are audio formats used to record 5.1-channel audio signals onto the digital track of film (while the film is being made). Both of these formats provide up to six separate channels: left, right, center, left rear, right rear, and common subwoofer.

The disc will play 5.1-channel sound only if you've connected a DTS or Dolby Digital receiver or decoder and if the original movie the disc was recorded from was encoded in the Dolby Digital or DTS format.

Please Read This Before Using the DIGITAL AUDIO OUT Jack!

This player's digital output jack is designed for a connection to a Dolby Digital or DTS receiver or decoder.

Older digital equipment may not be compatible with the Dolby Digital bitstream. Such a connection can create a high level of noise that may be harmful to your ears, and could damage headphones or speakers.

It is important to choose the correct Digital Output setting in the DVD Player's Sound menu, especially when you use the DIGITAL AUDIO OUT jack. For more information, see chapter 5.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.

DTS is a registered trademark of Digital Home Theater Systems, Inc.

DVD Player + TV + Dolby Pro Logic, Dolby Digital or DTS Receiver

To Connect the DVD Player

1. Connect the left and right audio cables to your audio/video receiver and to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player.
2. If you have a Dolby Digital or DTS receiver, insert an optical digital cable (not provided) to the DIGITAL AUDIO OUT jack on the DVD player to the Digital Input jack on the back of the receiver. You must also set the Digital Output setting in the Sound menu (see chapter 5).
3. Connect the video cable.
 - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.


OR

 - **S-Video** (optional) – If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

OR

 - **Component video** (optional) – If your TV has component video (Y, P_B, and P_R jacks) use video-grade cables for the Y, P_B, and P_R connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
4. Connect the AC power cord to the AC IN jack on the back of your DVD Player, and plug the other end into an AC outlet.

Go to page 17

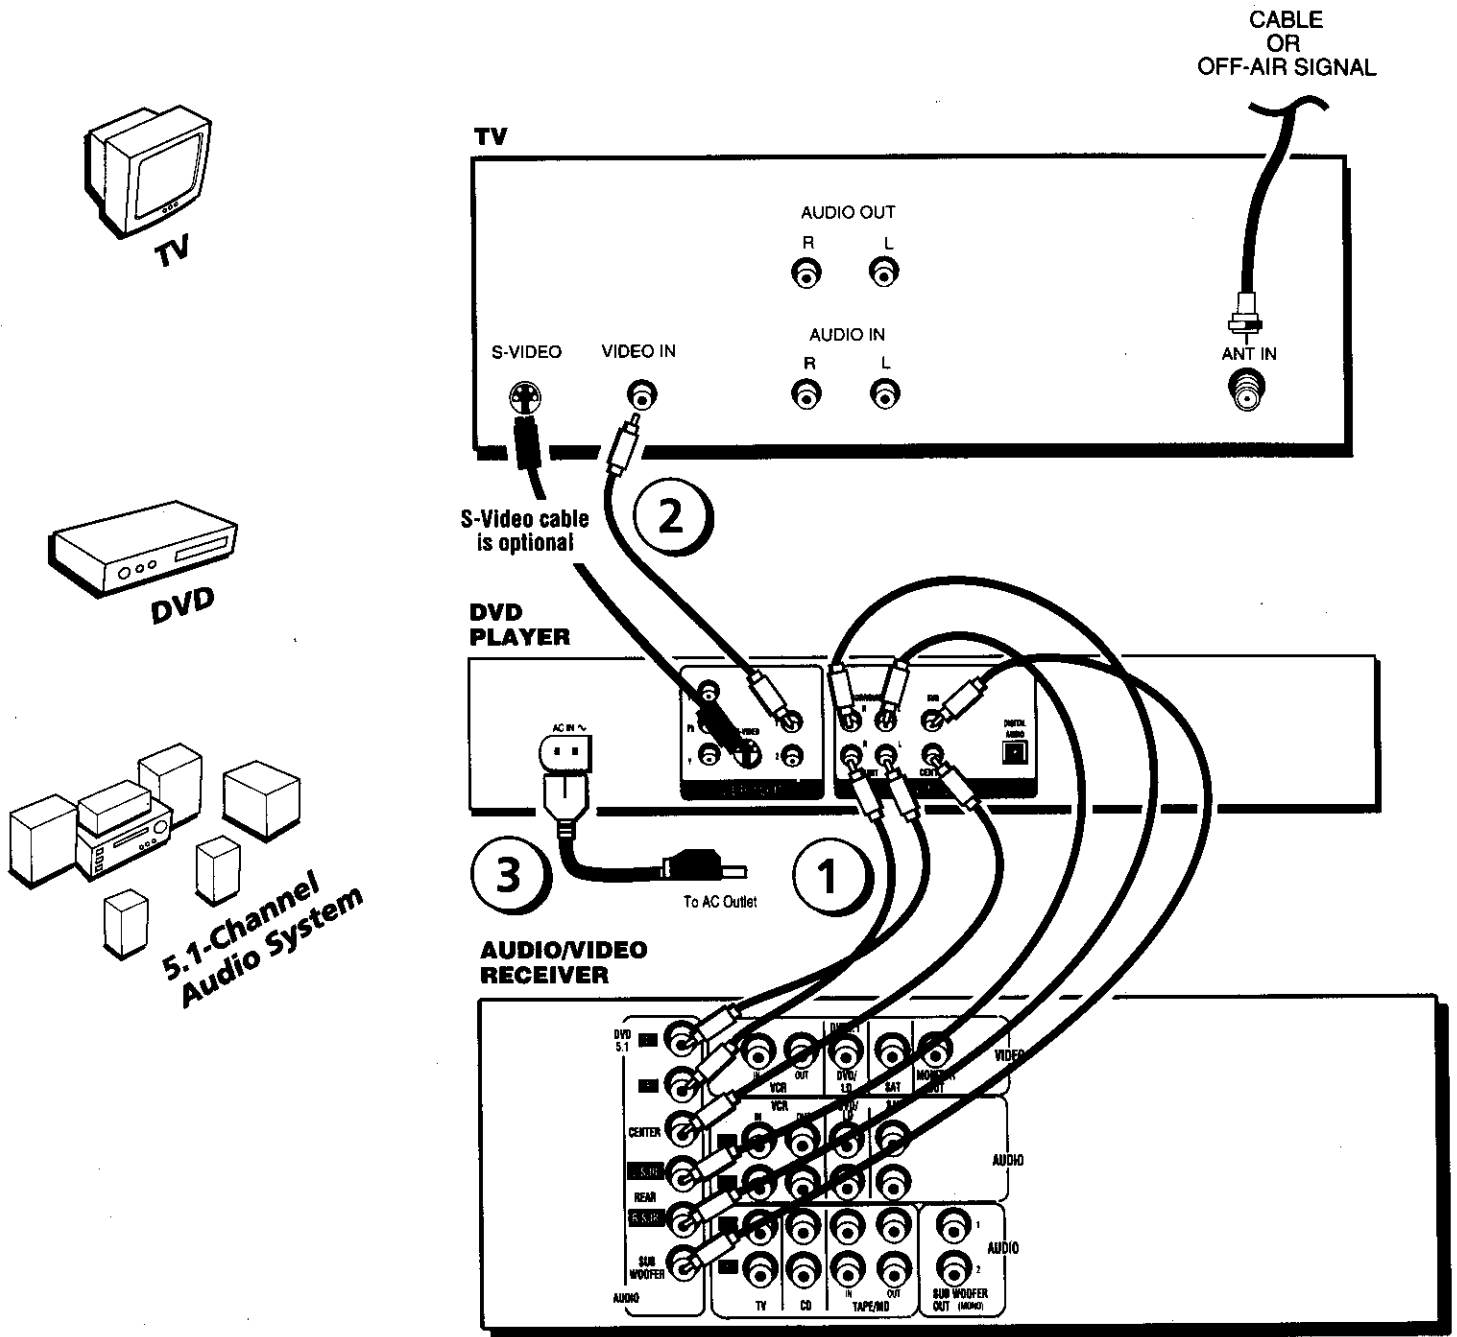

5.1-Channel Out Analog Audio

The 5.1-Channel Out Analog Audio feature lets you connect front, center, subwoofer, and/or surround speakers to your DVD player. You can setup each speaker individually using the *5.1-Channel Setup* option of the *Sound* menu (see chapter 5).

*Note: You **must** change the analog output to 5.1-channel to use the 5.1-channel analog outputs.*

The disc will play 5.1-Channel sound only if you've connected the corresponding speakers and the original movie the disc was recorded from was encoded with 5.1-Channel audio.

DVD Player + TV + 5.1-Channel Audio/Video Receiver

To Connect the DVD Player

1. Connect the audio cables from the AUDIO OUT FRONT R and L, SURROUND R and L, SUB (subwoofer), and/or CENTER jacks on your DVD player to the corresponding Audio Input jacks on your audio/video receiver. Set up the speakers using the *Speaker* menu of the *Analog Output* option of the *Sound* menu (see chapter 5).
2. Connect the video cable.
 - **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

OR


 - **S-Video** (optional) – If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

OR

 - **Component video** (optional) – If your TV has component video (Y, P_B, and P_R jacks) use video-grade cables for the Y, P_B, and P_R connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.
3. Connect the AC power cord to the AC IN jack on the back of your DVD Player, and plug the other end into an AC outlet.

Go to page 17

Connections & Setup

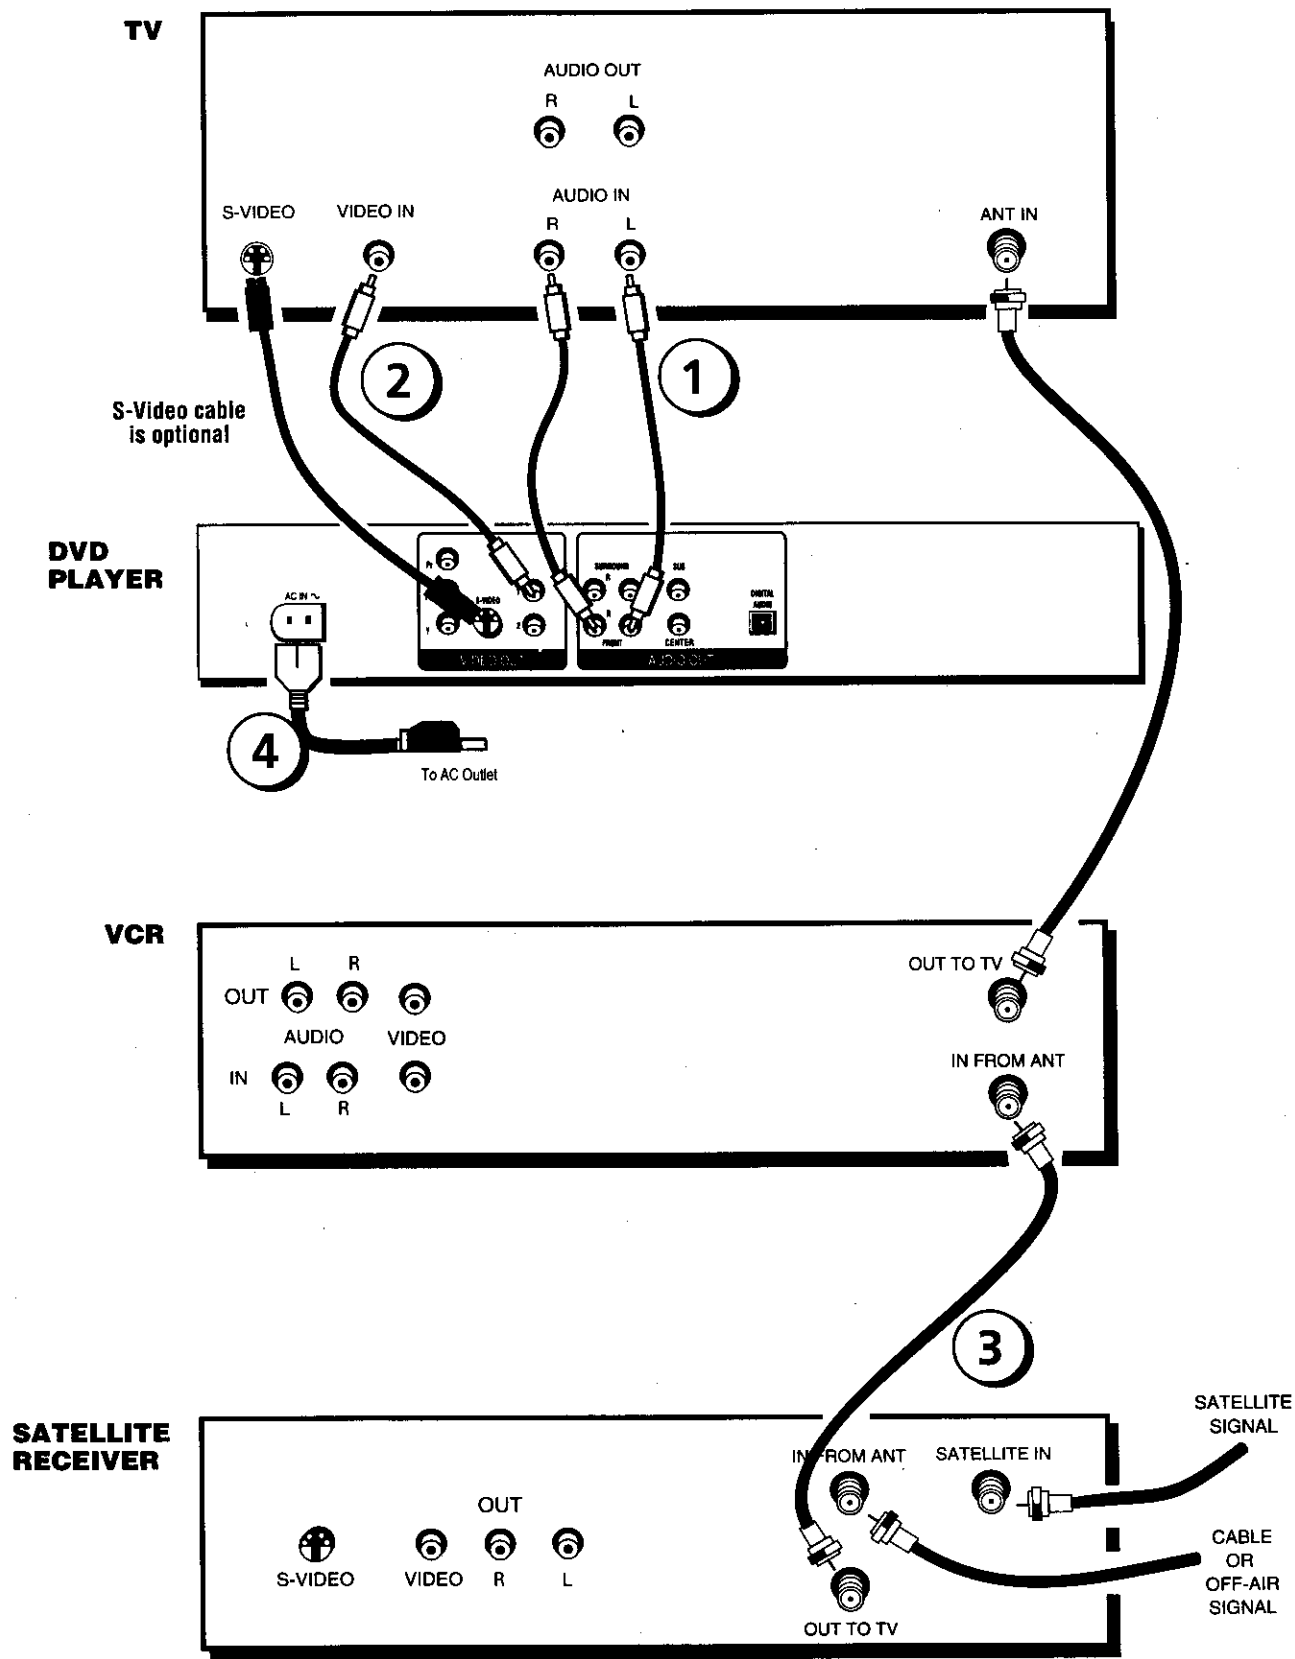

DVD Player + TV + VCR + Satellite Receiver

1. Connect the audio cables to the AUDIO OUT FRONT L (left – white) and R (right – red) jacks on the back of your DVD Player, and to the corresponding Audio Input jacks on your TV.

2. Connect the video cable.

- **Basic video connection** – Connect the video cable (yellow) to the VIDEO OUT jack on the back of your DVD Player, and to the Video Input jack on your TV.

OR

- **S-Video** (optional) – If your TV has an S-Video Input jack, connect the S-Video cable to the S-VIDEO OUT jack on the back of your DVD Player and to the S-Video jack on your TV. If your TV doesn't have S-Video, use the basic video connection listed above.

OR

- **Component video** (optional) – If your TV has component video (Y, P_B, and P_R jacks) use video-grade cables for the Y, P_B, and P_R connections. Note that it is essential to match the color coded connectors with a compatible TV. If your TV doesn't have component video, use the basic video connection listed above.

3. Use a coaxial cable to connect the antenna output on the satellite receiver to the antenna input on the VCR.


4. Insert the AC power cord into the AC IN jack on the back of your player and into an AC outlet.


Go to page 17

Connections & Setup

The Jacks on the Back of the DVD Player

When connecting, make sure you connect Output jacks to Input jacks, Video to Video, Right Audio to Right Audio, etc.

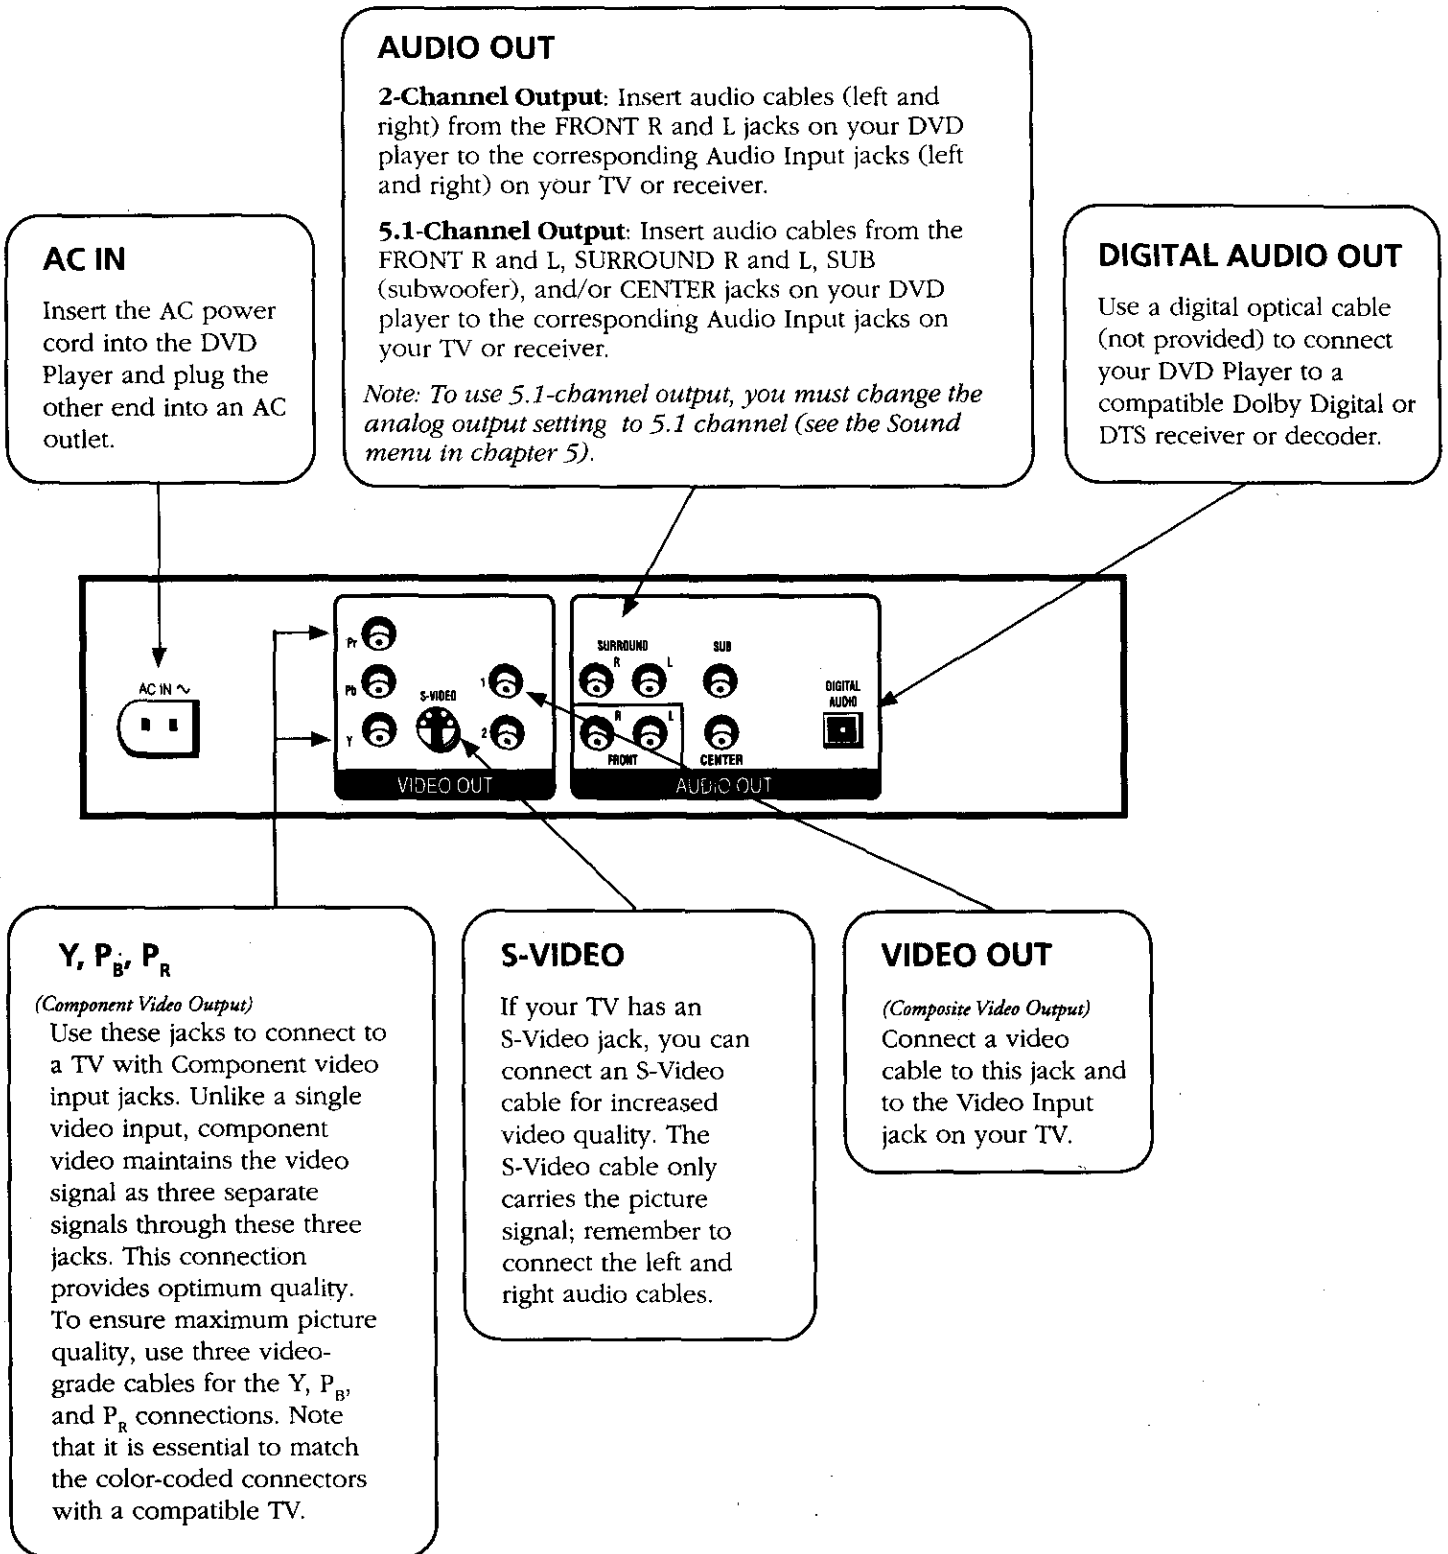

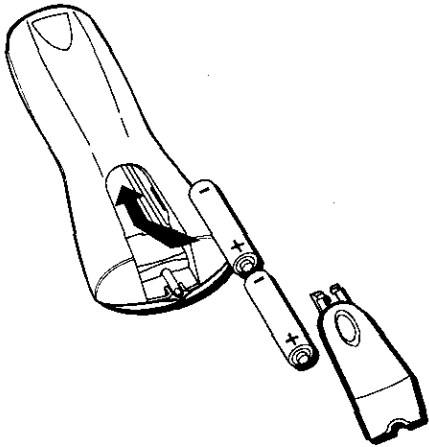

Install Batteries in the Remote

1. Remove the battery compartment cover on the back of the remote.
2. Insert new batteries. Match the polarities (+ and -) on the batteries with the diagram on the remote.
3. Put the battery compartment cover back on the remote.

Important Battery Information

- If you're not going to use the remote for a month or more, be sure to remove the batteries because they can leak and cause damage.
- Dispose of batteries in the proper manner, according to federal, state, and local regulations.
- Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, if all batteries are not replaced at the same time, if disposed of in fire, or if an attempt is made to charge a battery not intended to be recharged.
- Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury.

Point the Remote in the Right Direction

When you want the remote to operate the DVD Player, point the remote at the DVD Player, *not* the TV. The remote has to be pointed in the correct direction and toward the correct component in order for the remote's signal to communicate with the sensor on the component. Make sure there is a clear path between the remote and the component you want to operate so the signal isn't blocked.

Turn on the TV and DVD Player

1. Turn on your TV and tune to the correct video input channel (see following page).
2. Press the DVD button on the DVD remote or the ON•OFF button on the DVD player.

Connections & Setup

How to Find Your TV's Video Input Channel

You need to tune your TV to the Video Input Channel (or S-Video Channel if you connected the S-Video cable to your TV and to your DVD Player) to see the DVD Player's menu and to see the content that's on a disc. The video channel on TVs varies for different brands and different models. In order for your DVD remote to work, your TV must be set on the correct video input channel. Below are some things to try.


- If your TV brand is RCA, GE, or PROSCAN, press the TV button on the remote that came with your TV (not the DVD remote). Then press the INPUT button on the remote.
- If you have another brand, consult your TV's Owner's Manual.

If those options don't work, try one of the following options.


- Press a button on the TV remote (see table below).
- Select it from the TV's menu system.
- Tune directly to the DVD input channel by pressing a specific number (see table below).
- Go through all the channels in the channel list by pressing the channel up/down buttons on the TV.

Some common scenarios are listed in the following table:

Video Input Channel Variations		
Button/Switch on the TV	Button on the TV Remote	Channel #
VIDEO	VID 1	00
SIGNAL	LINE	90
VID 1	VID	91
VID 2	VIDEO	92
S-VID	S-VID	93
S-VIDEO	INPUT	VID 1
	S-VIDEO	VID 2
	SOURCE	
	AUX	

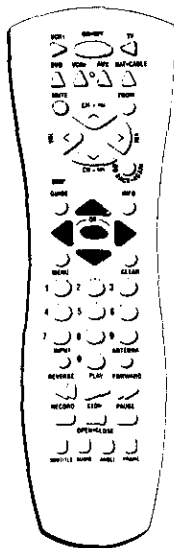

The buttons used for navigation are shown in gray. Use these buttons to highlight an item on the screen.

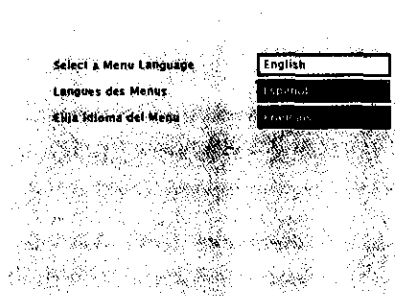


This is the Automatic Language Selection Screen. English is the default language, and automatically appears highlighted when the screen comes up.

How to Move Around the DVD Player's Menu System

The technical term for how you move through the DVD Player's menu system is "Navigation."

This book tells you how to select different menu items, but you can explore the menu system on your own by following a few "navigational rules."

Press the DVD button and then an arrow button on the remote (highlighted in gray on the picture on the left) to highlight different menu items on the screen. (In your DVD Player's menu, a highlighted item appears brighter than the other items on the screen.) To select a menu item, press OK on the remote when the menu item is highlighted.

The invalid symbol  appears on the screen when you press a button that doesn't have any function for that disc.

Set the Menu Language

When you turn on your DVD player for the first time, the Automatic Language Selection Screen appears.

By default, the player's on-screen displays are shown in English. If you want the on-screen menus to appear in English, press OK on the remote.

To change the language:

1. Press the down arrow button on the remote until the appropriate language is highlighted.
2. Press OK on the remote.


This screen sets all language preferences for on-screen displays to the same language. You can use the DVD player menu to set individual language preferences (see chapter 5).

Setting Other Options

The DVD player menu contains many options which can enhance your DVD experience. These options include:

- password control and ratings limits
- language preferences
- audio preferences
- display options

For more information on menu options, see chapter 5.

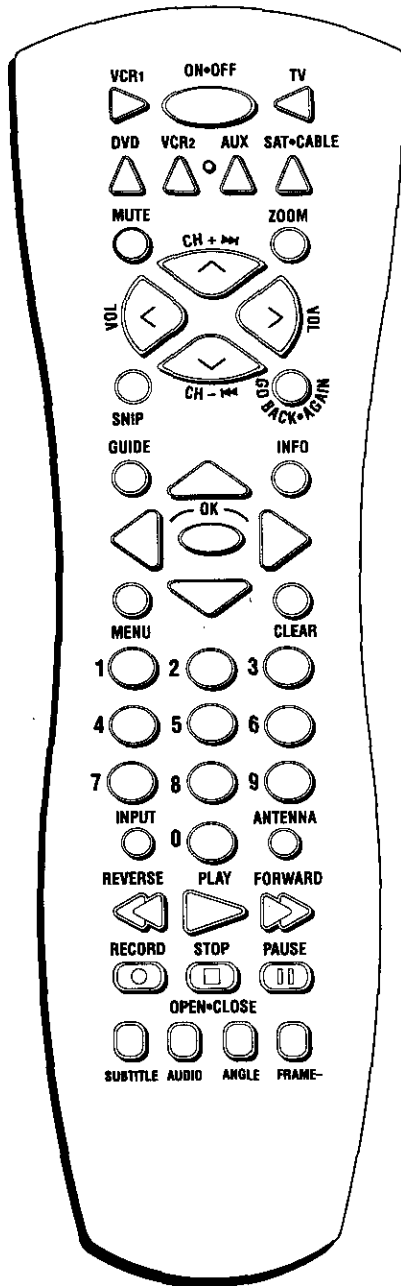

A Quick Tour of The Remote

You can use this remote to control compatible components. The component buttons are programmed to operate some ProScan, RCA and GE components. The buttons must be programmed to operate other brands of components. (See "Programming the Remote" in chapter 6.)

Component Buttons

(Buttons Listed in Alphabetical Order)

Use these buttons to turn on the component and set the remote to control the selected component.

AUX Use this button to turn on a compatible TV, VCR, satellite receiver, or cable box after it has been programmed (see chapter 6). Used with the ON•OFF button to turn on some brands of components.

DVD Use this button to turn on the DVD player and set the remote to control the DVD player.

SAT•CABLE Use this button to turn on a compatible satellite receiver. Used with the ON•OFF button to turn on some brands of satellite receivers.

TV Use this button to turn on a compatible TV and set the remote to control the TV. Used with the ON•OFF button to turn on some brands of TVs.

VCR1 and VCR2 Use this button to turn on a compatible VCR and set the remote to control the VCR. Used with the ON•OFF button to turn on some brands of VCRs.

DVD Buttons

(Buttons Listed in Alphabetical Order)

ANGLE Use this button to access various camera angles on a DVD (if the DVD contains multiple camera angles).

Arrow buttons Use the arrow buttons (left, right, up, and down) to move through on-screen menus. You highlight a menu item by pressing the arrow buttons. You select a highlighted item by pressing the OK button.

AUDIO Use this button to access various audio features while playing a disc.

CH + advances to the next chapter, track or index.

CH - reverses to the preceding chapter, track or index.

CLEAR Allows you to clear information, such as remove the Info display from the screen.

FORWARD Allows you to search forward through a disc while it is in play mode (or slow speed search in pause mode). Press repeatedly to increase speed.

FRAME- Press this button during playback to reverse the disc one frame at a time.

GO BACK•AGAIN When you're using the DVD Player's menu system, press this button to return to the preceding menu screen. When you're watching or listening to a DVD disc, press this button to go back 10 seconds to see/hear missed content.

Note: AGAIN may not be available for some DVD titles.

GUIDE Allows you to see the titles that are available on the current disc (if the disc contains a guide menu).

INFO Press this button while you're playing a disc to see the on-screen Info Display. The Info Display contains various playback features and gives you information about the disc you're playing (press again to remove the Info Display from the screen).

MENU Press this button to see the disc's menu when you're playing a disc (press it again to resume playback).

Number buttons (0-9) Use the number buttons to input information such as chapter numbers, track numbers, or to make selections on some menu screens.

OK Press this button to select a highlighted menu item.

ON•OFF Turns on the player when it is in standby mode or puts the player in standby mode when power is on.

OPEN•CLOSE When the STOP button is held down, opens and closes the disc tray.

PAUSE Pauses disc play. When disc play is paused, press PAUSE again to advance a frame or FRAME - to go back a frame.

PLAY Begins disc play (and closes disc tray if it is open).

REVERSE Allows you to search backward through a disc while it is in play mode (or slow speed search in pause mode).

SNIP Displays the Scene Snip Info Display so you can edit out selected scenes from the DVD disc.

STOP Stops disc play. You can also press STOP to remove the screen saver from the screen to see the DVD Player's main menu. When you hold the STOP button down, it acts as the OPEN•CLOSE button to open and close disc tray.

SUBTITLE Use this feature to turn the subtitles off and on. While the subtitle info area is displayed press the arrow up and down buttons on the remote to change subtitle languages (if available).

ZOOM Use this button to zoom in on certain areas of the screen.

This page left intentionally blank.

Playing DVDs

Chapter Overview:

- Regional Coding
- Using Different Menus
- Loading and Playing a Disc
- Using a Disc Menu
- Using the On-Screen Info Display
- Disc Playback Features



Changing Entertainment. Again.



Playing DVDs

Regional Coding

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes don't match, the disc won't play. This player's code is region 1.

Using Different Menus

Each disc is programmed with different features. There are three separate menu paths that you can use to access features:

- **The Disc menu** – The Disc menu is part of each disc and is separate from the DVD player's menu. The contents of each Disc menu varies according to how the disc was authored and what features are included. The Disc menu is turned on and off (while the disc is playing) with the MENU button on the remote.
- **The DVD player's Info Display** – The Info Display appears as icons across the top of the screen when a disc is playing. It can only be accessed while you are playing a disc. It's turned on and off with the INFO button on the remote.
- **The DVD player menu** – The DVD player's menu system is accessed only when a disc isn't playing. It appears automatically when the STOP button is pressed.

Remember that a feature will only work if the disc was programmed with that feature. For example, if you choose subtitles on the Info Display, the subtitles will only appear if the disc was created with subtitles. If a menu item is "grayed out" it means that item isn't available.

Loading and Playing Discs

Your DVD player plays DVD discs, Video CD discs and Audio CD discs. Before you load a disc, make sure that it is compatible with the player. The following discs CANNOT be used with this player:

- Laserdiscs
- CD-I, CD-ROM (computer-only discs), CD-R, CD-RW, DVD-ROM
- Discs recorded using other broadcast standards (i.e. PAL or SECAM)


Notes:

If the message "Tray Locked" appears on the screen, the retail lock feature has been accidentally engaged. To unlock the disc tray you must press and hold a combination of keys simultaneously:


On the front panel of the DVD Player, at the same time press and hold the SKIP FWD, OPEN•CLOSE, and TS SURROUND buttons for at least 3 seconds.

To Load and Play a Disc

Turn on the TV and your DVD Player (press ON•OFF on the player or press the DVD button on the remote control).

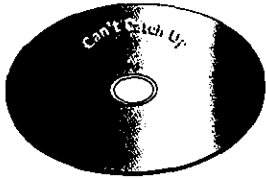

This is an example of a one-sided disc.

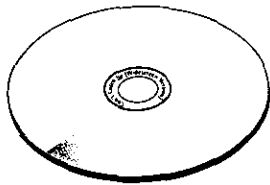

This is an example of a 2-sided disc. The title is in the center.

1. Press the OPEN•CLOSE button on the front of the DVD Player or on the DVD remote. The disc tray opens.
2. Place a disc gently into the tray with the disc's label facing up (double-sided discs have content on both sides, so you can place either side up).
3. Press the OPEN•CLOSE or PLAY button. The disc tray closes.

The DVD Player reads the disc's table of contents, and then one of three things happens depending on how the disc was programmed:


- The disc starts playing.
- The disc menu appears on the screen. One of the options will start disc play. Highlight that option and press OK on the DVD remote.
- The DVD Player's main menu appears on the screen. Highlight the *Play* option and press OK on the DVD remote.

When you stop playing a disc, the DVD player remembers where you stopped. When you start playing the disc again, the player picks up where you left off unless the disc is removed, the player is unplugged, or you pressed the STOP button twice.

Using a Disc Menu

A disc is capable of having an on-screen menu that is separate from the DVD player's menu system and on-screen Info Display. The disc menu might only contain a list of the titles and chapters, or it may allow you to change features such as language and playback settings.

Although the content and operation of disc menus vary from disc to disc, the following example will give you an idea of what to expect.

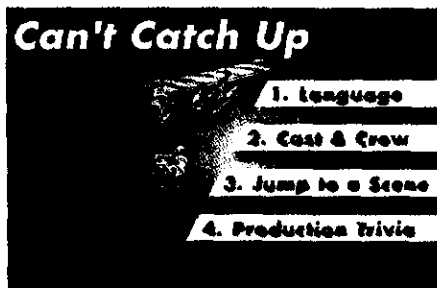


An example of a disc menu. The menus on discs vary because the disc menu is created by the disc's author.

1. While the disc is playing, press the MENU button on the remote. The disc menu appears.

Tip

Many discs skip the disc menu and start playing automatically. To access the disc menu when you're playing a disc, press MENU on the remote.

Playing DVDs

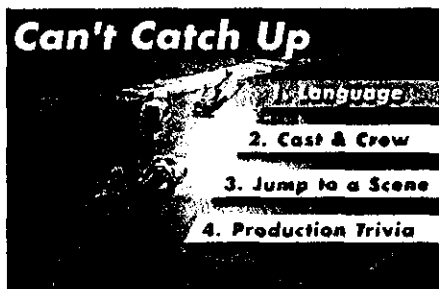

In this example, The *Language* setting is highlighted. To select this option, press OK on the remote.



In the example on the left, English is highlighted. Press OK on the remote to play the disc with English dialog.

2. Press the up/down arrow buttons to highlight the section of the disc menu you want to choose, and press OK on the remote. In the example on the left, *Language* has been selected.

3. Press the up/down arrows to select a language, and press OK on the remote.
4. Press MENU on the remote to resume playback.


Note: Any settings you change on the disc menu only override the default settings in the DVD Player's menu temporarily. Default settings are the settings that you set up in the DVD Player's menu system. To change the default settings, see Chapter 5.


Using the On-Screen Info Display

The on-screen Info Display contains many playback features. To see the Info Display, press the INFO button on the remote while a disc is playing. The Info Display appears across the top of the screen. Each feature is illustrated with an icon. Use the left/right arrow buttons on the remote to move through the different icons in the Info Display.

When an icon is highlighted, use the up/down arrow buttons on the remote to scroll through the choices displayed in the text box under the icons.

Remember, you can only access the Info Display when you're playing a disc. Also, the Info Display features are only available if the disc was created with that particular feature (i.e., if you select the Subtitle icon, you won't be able to change the subtitle language unless the author of the disc created the disc with subtitles).

The invalid symbol  appears on the screen when you press a button that doesn't have any function. If one of the icons is "grayed out," that Info Display feature isn't available for the disc you're playing. To make the Info Display disappear from the screen, press INFO on the remote.

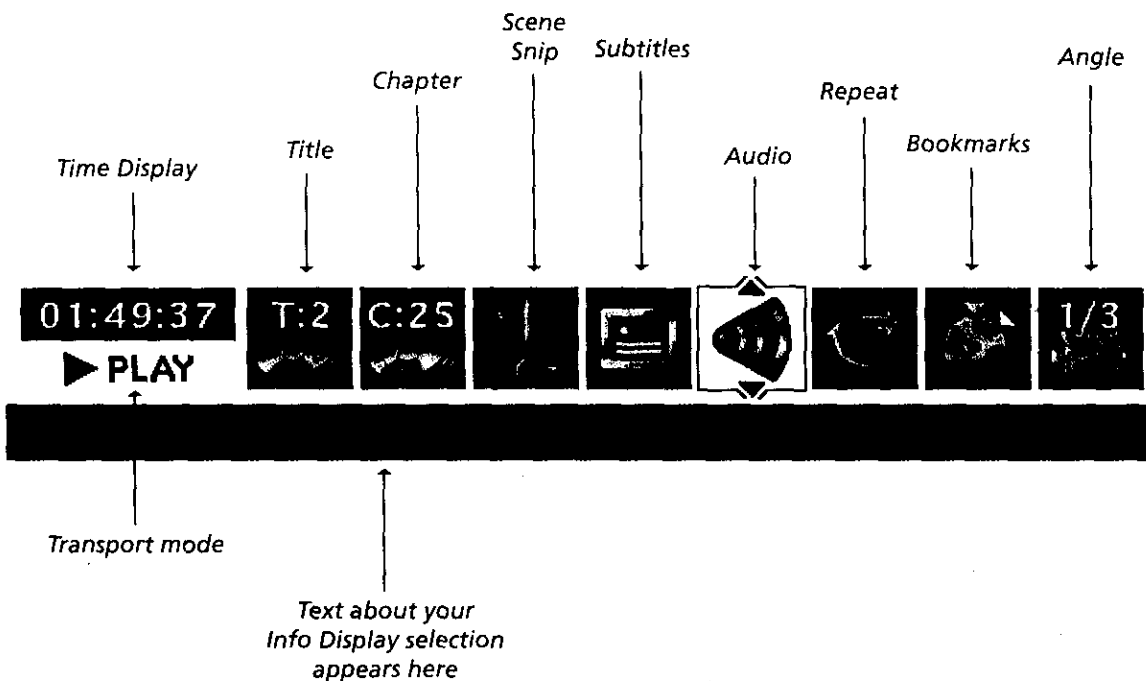

01:49:37

Time Display

This feature displays the audio/video time. For DVD discs, the time displayed refers to the current title time. For Audio CDs, it refers to the current track time.

For DVD video discs, the Time Display also acts as a Time Search feature. This lets you go to a particular scene in a movie by entering the time that scene is played. For example, if you like the dogfight scene in *Top Gun*, you can enter the elapsed time the scene plays and skip right to it. To use Time Search:

Press INFO on the remote to bring up the Info Display. Highlight the Time Display and enter the elapsed time of the scene you wish to go to. For example, enter 01:12:00 to go to the scene that plays at 1 hour and twelve minutes into the movie.

When you've entered the time, Press OK on the remote.



Selecting a Title

Some discs contain more than one title. For example, there might be four movies on one disc (each movie might be considered a title). Each title is divided into chapters. To select a title:

1. While the disc is playing, press INFO on the remote to bring up the Info Display.
2. If the *Title* icon on the Info Display isn't highlighted, use the left/right arrow buttons to highlight it.
3. Use the number button(s) on the remote to enter the title number or press the up/down arrow buttons to go to the next/previous title.
4. Press OK on the remote when the title you want to play appears in the text window.

Note: *Some discs only have one title.*



Selecting a Chapter

Because DVD discs use digital technology, a title can be divided into individual chapters (similar to tracks on a CD). You can skip to a specific chapter by using the Chapter feature in the Info Display.

1. While a disc is playing, press INFO on the remote to bring up the Info Display.
2. Press the arrow buttons to highlight the *Chapter* icon.
3. Use the number buttons on the remote to enter the number of the chapter you want to play or press the up/down arrow buttons to go to the next/previous title.
4. Press OK on the remote.

Notes:

The Chapter feature won't work if the disc isn't formatted with separate chapters.

You can also advance to the next chapter by pressing CH + ► on the remote (SKIP FWD on the front of the player) and go to the preceding chapter by pressing CH - ◀ on the remote (SKIP BACK on the front of the player).



Using Scene Snip Editing


The Scene Snip feature lets you edit out select scenes on a disc. Once you have made edits, the disc's title is stored in the Scene Snip Library so you can play either the edited or unedited version of that disc.

Editing a Disc

1. While the disc is playing, press SNIP on the remote to bring up the *Scene Snip* Info Display.

Note: You can also press INFO on the remote, select the Scene Snip icon (scissors) and press OK.

2. The *Scene Snip* display appears. An available icon will be highlighted (a scissors icon with the word Uncut next to it).

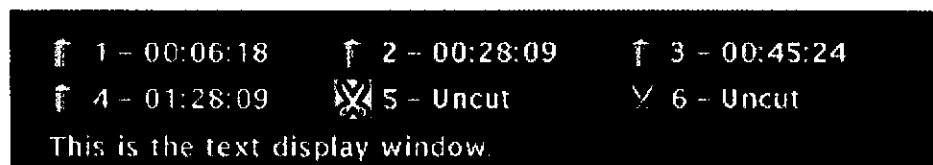

3. When you reach the beginning of the scene you want to edit out, press OK on the remote. The number of the cut and a time display appear next to the icon. For example, in the illustration above, the first cut is indicated by the number 1 followed by the time the cut begins - 00:06:18.
4. When you reach the end of the scene you want to edit out, press the OK button on the remote. The icon changes to a trash can with the cut number and beginning time displayed next to it. The edited version of the disc is added to the Scene Snip library.
5. Press the INFO or CLEAR button on the remote to remove the Scene Snip display from the screen.

Playing DVDs

Using Scene Snip

The DVD Player must be locked to play the edited version of a disc. If you play the disc in an unlocked state, it will play as if there are no edits. The player is locked and unlocked from the DVD player *Lock* menu (see chapter 5).

When the DVD Player is locked, you must enter the password to edit the disc. To play the edited version of a disc:

1. Make sure the DVD Player is locked.
2. When a disc including Scene Snips is inserted, a message box with two options appears:

Play Unedited

Play Edited

3. Highlight and select *Play Edited*. The edited version of the disc is played.

If you want to play an unedited version of a disc that has been assigned Scene Snips, you must enter a password.

Each side of a 2-sided disc must be edited separately.

Note: Random and Program play are not available when Scene Snip is on.

Clearing Scene Snips

To clear an edit while the disc is playing:

1. Press SNIP on the remote to bring up the Scene Snip Display.
2. Highlight the trash can icon next to the edit you want to clear. Press OK.
3. The edit is cleared and the trash can icon changes back to the scissors icon.

If all 6 edits are in use, you can only add a new edit by clearing an existing one.



Selecting Subtitles

By default, subtitles are off. To turn subtitles on:

1. While the disc is playing, press INFO on the remote.
2. Highlight the *Subtitles* icon. The Subtitle icon acts as a toggle to turn subtitles on and off. When subtitles are on, the text box below the icons will display the current subtitle language.

You can also turn on subtitles by pressing the SUBTITLE button on the remote control. When the subtitle info display comes up, press the up/down arrow buttons to change the subtitle language (if available on that disc).

Selecting the Subtitle Language

You can change the Subtitle language while you're watching a DVD disc, but only if the disc was created with subtitles.


1. While the disc is playing, press INFO on the remote.
2. Press the arrow buttons to highlight the *Subtitle* icon and if subtitles are off, press OK to turn them on.
3. Use the up/down arrow buttons to scroll through the subtitle languages that are available on the disc. If subtitles aren't available, the text in the text box will read *Subtitles: Not Available*. If subtitles are available, the language currently showing in the text box is the active selection. The subtitles will be shown in that language.
4. To make the Info Display disappear, press the INFO button on the remote.

Notes:

Changing the subtitle language with the Info Display will only affect the disc currently being played. When the disc is removed or the player is turned off, the subtitle language will revert to the language setting specified through the DVD player main menu.

The subtitle language can also be changed through the DVD player menu.

You can also display the subtitle Info Display by pressing SUBTITLE on the remote. Press SUBTITLE again to toggle subtitles on or off. Use the up/down arrow buttons to select a different subtitle language (if available). Press INFO to remove the Info Display from the screen.

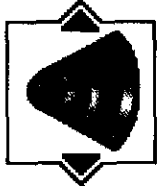

Changing the Audio Language

If the disc was created with different language tracks (recorded in different languages), you can use the Info Display to temporarily change the DVD Player's Audio Language setting.

1. While a disc is playing, press INFO on the remote to bring up the Info Display.
Note: You can also bring up the info display by pressing the AUDIO button on the remote.
2. Highlight the *Audio* icon. The current audio language appears in the text box below the row of icons.
3. Press the up/down arrow buttons to scroll through the audio languages that are available on the disc until the audio language you want to use appears in the text box. Audio will be played in that language.
4. To make the Info Display disappear, press the INFO button on the remote.

Notes:

The language feature only works if the disc was created with multiple audio tracks.

When you choose an audio language from the Info Display, you only override the audio language setting in the DVD Player's main menu temporarily.

The audio language can also be changed through the DVD player menu.



Using the Repeat Feature

The default mode for the Repeat feature is Off. There are four Repeat options:

- Disc – repeats the disc that is playing
- Title – repeats the title that is playing
- Chapter – repeats the chapter that is playing
- A•B – Set the beginning (point A) and the end (point B) to make this part of the movie play repeatedly.

To Use Repeat:

1. While a disc is playing, press INFO on the remote to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Repeat option you want is displayed in the text box.
4. Press OK. The selected repeat option will loop repeatedly until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the Off option.

A•B Repeat

A•B Repeat lets you define a specific segment on the disc that you want to repeat. For example, you might like to watch the dogfight in the movie *Top Gun*. To watch this scene over and over:

1. Find the spot on the disc that is a few seconds **before** the beginning of the scene you want to repeat (this gives you time to access the Info Display and the Repeat feature).
2. Press INFO on the remote and select the *Repeat* icon from the Info Display.
3. Press the up/down arrow buttons until the A•B Repeat option is shown in the text box underneath the icons. The text box reads *Repeat Mode: A-B Press OK to Set A Point*.
4. At the beginning of the scene you want to repeat, press OK to set the A point.
5. When you get to the part of the disc that you want to be the end of the repeated segment (the B point), press OK. The segment will repeat until you turn Repeat off.
6. To make the Info Display disappear from the screen, press the INFO button on the remote.

How to Cancel Repeat

There are three ways to cancel Repeat:

- Press STOP twice.
- Go to the *Repeat* icon in the Info Display and select *Off*.
- Eject the disc.

 


Using Bookmarks

The bookmark feature lets you mark a point on the disc that you can go to quickly. You can store up to 6 bookmarks per disc. When you turn the player off or remove the disc, bookmarks are cleared.

Storing a Bookmark

1. While a disc is playing, press INFO on the remote.
2. Highlight the *Bookmark* icon and press OK.
3. The *Bookmark* Menu appears. An available unmarked icon will be highlighted (a disc with two arrows).



4. When you reach the scene you want to mark, press OK. The unmarked icon changes to two icons (side-by-side):
 - An arrow that is used to activate the bookmark.
 - A trash can that is used to clear the bookmark.Next to the icons, the bookmark start time and chapter are displayed.
5. Press the INFO button on the remote to make the Info Display disappear from the screen.

Using a Bookmark

1. While you're playing a disc, press INFO on the remote. The Info Display appears.
2. Highlight the *Bookmark* icon and Press OK. The *Bookmark* menu appears.
3. Highlight the arrow next to the bookmarked scene you want to activate.
4. Press OK to return to the place you bookmarked.
5. To make the Info Display disappear from the screen, press INFO on the remote.

Clearing a Bookmark

The bookmarks are cleared each time a disc is removed from the player or when the power is turned off. If you want to clear a bookmark while the disc is playing:

1. Press INFO on the remote to bring up the Info Display.
2. Highlight the *Bookmark* icon and press OK.
3. Highlight the trash can icon next to the bookmark you want to clear. Press OK.
4. The bookmark is cleared and the trash can icon changes back to the unmarked disc icon.

If all 6 bookmarks are in use, you can only mark a new scene by clearing an existing bookmark.




Changing the Camera Angle

Some discs contain multiple angles of a particular scene or sequence. If the disc only has one angle, this feature won't work. When multiple angles are available, the *Camera Angle* icon appears in the upper right corner of the screen. To change the camera angle:

1. While a disc is playing, press INFO on the remote. The Info Display appears.
2. The *Camera Angle* icon will display the number of angles available. For example, if there are 3 different angles, the icon will read 1 of 3. This means angle 1 is currently being played.
3. The text box beneath the icons displays *Camera Angle: 1*. Use the up/down arrow buttons to scroll through the camera angle choices. The camera angle number displayed in the text window is automatically shown.
4. To make the Info Display disappear, press the INFO button on the remote.


Note:

You can also display the camera angle Info Display by pressing ANGLE on the remote. Use the up/down arrow buttons to switch between different camera angles. Press INFO to remove the Info Display from the screen.

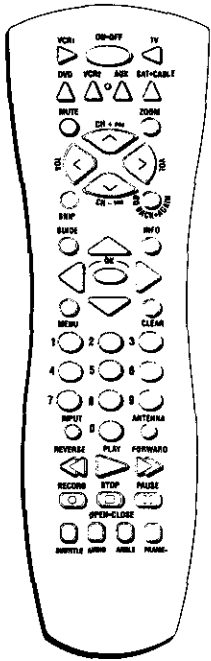

Disc Playback Features Using the Remote

You can use the remote control to activate disc playback features.

Playback features aren't usually available during the opening credits of a movie. If a playback feature isn't available, the invalid symbol  appears on the screen when you press that button.

Fast Motion Playback (Picture Scan)

To scan quickly through the disc when you're playing it, use the Picture Scan feature.

1. Press the REVERSE or FORWARD button on the remote when you're playing a disc.
2. Press the button again to scan at a faster speed. Each time you press the button, the scanning speed increases.
3. Press the PLAY button at any time to resume normal playback.

You can also use the Picture Scan feature by rotating the shuttle on the front of the DVD player. Rotate the shuttle clockwise (forward search) or counterclockwise (backward search). The farther you rotate the shuttle, the faster the speed.

Note: You won't hear the sound (audio) on DVD discs when you're using the picture scan feature.

Freeze Frame and Frame Advance

 

1. Press PAUSE when a disc is playing to freeze the picture.
2. Each time you press the PAUSE button, the picture advances one frame.
 - Press FRAME - on the remote to advance one frame backwards.
3. Press PLAY to resume normal playback.

Slow Motion Playback (in Freeze Frame Mode)

While the disc is in freeze frame mode, you can use slow motion playback.

1. While the disc is playing, press PAUSE on the remote.
2. Press the REVERSE or the FORWARD button.
3. Press the button again to increase the slow motion playback speed.
4. Press PLAY to resume normal playback.

Chapter Advance

While a disc is playing, you can go forward or backward a chapter or track at a time by pressing CH +  or CH -  on the remote.

Scene Again™

When you're watching or listening to a DVD disc, press the GO BACK•AGAIN button on the remote to go back approximately 10 seconds to see and hear missed content. Subtitles will automatically be displayed until the end of the replayed scene (to select the subtitle options, see chapter 5). This feature only works if the disc is encoded with navigation control.

Multiple presses of the GO BACK•AGAIN button will go back further. For example, if you press the GO BACK button three times in rapid succession, play will go back 30 seconds.

Subtitles

When a DVD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen.

1. Press the SUBTITLE button on the remote when you're playing a disc to bring up the Info Display.
2. Press the button again to toggle the subtitle feature on or off.
3. Use the up/down arrows buttons on the remote to switch between different languages (if available).
4. Press INFO to remove the Info Display from the screen.

Audio Language

You can temporarily change the default audio language (if different audio languages are available on that disc).

1. Press AUDIO to bring up the Info Display.
2. Use the up/down arrows buttons to switch between different languages (if available on that disc).
3. Press INFO to remove the Info Display from the screen.

Camera Angle

Some DVDs are recorded using multiple camera angles (if available on that disc).

1. Press ANGLE to display the *Angle* icon.
2. Use the up/down arrows buttons to switch between different camera angles (if available on that disc).
3. Press INFO to remove the *Angle* icon from the screen.

Scene Snip Edit

You can edit out sections of a disc.

1. Press SNIP to bring up the *Scene Snip* display.
2. Select the time you want the first edit to start and press OK. Press OK again where you want the edit to end.
 - You can edit out up to 6 sections of a disc.Press INFO or CLEAR to remove the Info Display from the screen.

Playing DVDs

Zoom

When playing DVD discs and Video CDs, you can magnify the screen during normal playback. For DVD discs, Zoom has 3 levels (1.5x, 2x, 4x). For video CDs, Zoom has 2 levels (1x, 2x). Zoom magnifies from the center of the screen. Once in Zoom mode, you can pan right, left, up or down by using the arrow buttons.

1. Press ZOOM on the remote control to magnify. (The zoom level will be displayed in the corner of the screen. Press CLEAR to clear the zoom info display from the screen.)
2. Press the ZOOM button again to go to the next level of magnification.
3. To turn Zoom off, press the ZOOM button until you cycle through all the levels and return to normal playback.

Note: You can use the 1.5x zoom mode to alter a 16x9 letterbox movie (black bars top and bottom) to a 4x3 format. This will eliminate the black bars at the top and bottom and allow you to use left/right arrow keys to pan and scan.

Playing Audio CDs

Chapter Overview:

- Using the Info Display
- Using the Time Display
- Selecting a Specific Track
- Selecting a Play Mode
- Using the Repeat Feature
- Using IntroScan
- Using Bookmarks
- Dub Assist



Changing Entertainment. Again.




Playing Audio CDs

Using the Info Display

Your DVD player has many of the same features as an audio CD player. The player's on-screen Info Display lets you choose various playback features. This section explains how to play audio CDs in your DVD player and how to use the player's features. For instructions on loading and playing your CDs, see Chapter 2.

To access the Info Display while the CD is playing, press INFO on the remote. The Info Display appears across the top of the screen. Each of the playback features is represented by an icon. To access a feature, use the arrow buttons on the remote to highlight the icon. Each feature that can be accessed from the On-Screen Info Display is described on the following pages. To clear the Info Display from the screen, press INFO on the remote control.

Note: To see the Info Display while playing audio CDs, you must turn on your TV and tune it to its Video Input Channel. For more information about the TV's Video Input Channel, see Chapter 1.

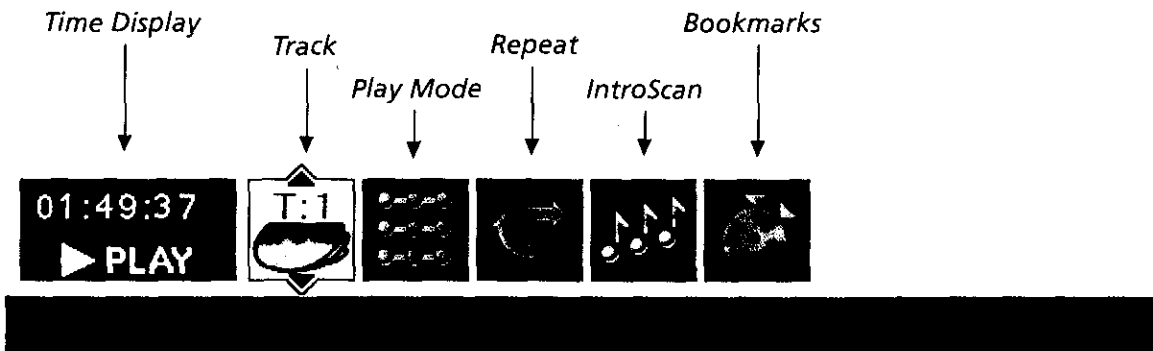

01:49:37

Using the Time Display


The Clock part of the Info Display shows the current disc time. To see the current disc time:

1. Press INFO on the remote (the Info Display appears).
2. Highlight the *Clock* icon. Press OK. The amount of time the track has played appears in the time window.
3. Press INFO to clear the screen.



Selecting a Specific Track

1. Press INFO on the remote (the Info Display appears).
2. Highlight the *Track* icon.
3. Use the number buttons on the remote to enter the track number you want to play, or use the up/down arrow buttons to scroll through the track numbers. You may need to press the OK button on the remote after you enter a single digit track number.

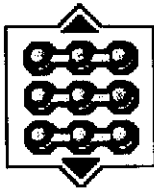

Selecting a Play Mode

The Play Mode feature lets you set up the order in which you want the tracks on the CD to play. There are three options:

Standard: the tracks play in the order listed on the CD (starting with track 1).

Random: the tracks on the CD play in random order.

Program: the tracks on the CD play in the order you've programmed. You must first create a program list in the *Play* menu of the DVD Player's main menu.

Switching between Standard and Random Play


Standard (the order listed on the CD) is the default setting for your player. To change the default setting:

1. Press INFO on the remote while a disc is playing. The Info Display appears.
2. Highlight the *Play Mode* icon. The current play mode appears in the text box underneath the icons. Press the up/down arrow buttons to scroll through the play mode choices until Random appears in the text box. The tracks on the CD will now play in random order.

Note: The player defaults to Standard playback whenever you put a new CD into your player.

Using the Program Play Feature

To use the Program Playback feature, you must enter the order in which you want the tracks on the CD to play by creating a program. This is done from the DVD player's menu.

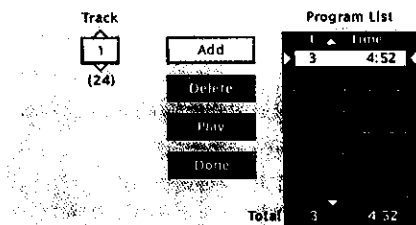

This is where the two lines of context sensitive help will be located.

Use the Edit Program screen to create your own playlist.

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. The *Track* box is highlighted. Use the number buttons on the remote to enter the track you want to play first. The track number you entered appears in the *Track* box and the cursor highlights *Add*.
5. Press OK to add that track to the *Program List*. The cursor jumps to the next spot in the *Program List* section. Make sure the *Track* box is highlighted and enter your next track.
6. Continue adding tracks as explained in steps 4-5 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display. The program will be erased when you remove the disc from the player or the player is turned off.

Playing Audio CDs

Editing a Playlist

1. If the disc is playing, press STOP to stop playback. The DVD player main menu appears.
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Highlight the item in the playlist you want to delete.
5. Highlight *Delete*, and press OK.
6. When you've rearranged the playlist and/or deleted all the tracks necessary, press OK.



Using the Repeat Feature

The default mode for the Repeat feature is Off. There are three Repeat options for Audio CDs:

- Disc – repeats the disc that is playing
- Track – repeats the track that is playing
- A•B – Set the beginning (point A) and the end (point B) to make this part of the CD play repeatedly.

To Use Repeat:

1. While a disc is playing, press INFO on the remote to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Repeat option you want is displayed in the text box.
4. Press OK. The selected repeat option will loop repeatedly until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the Off option.

A•B Repeat


A•B Repeat lets you define a specific segment on the disc that you want to repeat:

1. Find the spot on the disc that is a few seconds **before** the beginning of the part you want to repeat (this gives you time to access the Info Display and the Repeat feature).
2. Press INFO on the remote and select the *Repeat* icon from the Info Display.
3. Press the up/down arrow buttons until the A•B Repeat option is shown in the text box underneath the icons. The text box reads *Repeat Mode: A-B Press OK to Set A Point*.
4. At the beginning of the part you want to repeat, press OK to set the A point.
5. When you get to the part of the disc that you want to be the end of the repeated segment (the B point), press OK. The segment will repeat until you turn Repeat off.
6. To make the Info Display disappear from the screen, press the INFO button on the remote.

How to Cancel Repeat

There are three ways to cancel Repeat:

- Press STOP twice.
- Go to the *Repeat* icon in the Info Display and select *Off*.
- Eject the disc.

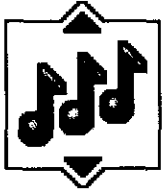

Using IntroScan

IntroScan plays the first ten seconds of each track on the CD (similar to the scan feature that's on many car radios). To use IntroScan:

1. Press INFO on the remote (the Info Display appears).
2. Highlight the *IntroScan* icon. Press OK. The first ten seconds of each track will play.
 - After IntroScan goes through all of the tracks, it stops.
 - If you want to stop IntroScan while it's in progress, press PLAY on the remote. The current track starts playing in its entirety.
 - You can also access IntroScan from the *Play Mode* menu in the DVD Player's main menu.

Playing Audio CDs




Using Bookmarks

The bookmark feature lets you mark a point on the disc that you can go to quickly. You can store up to 6 bookmarks per disc. When you turn the player off or remove the disc, bookmarks are cleared.

Storing a Bookmark

1. While a disc is playing, press INFO on the remote.
2. Highlight the *Bookmark* icon and press OK.
3. The *Bookmark* Menu appears. An available unmarked icon will be highlighted (a disc with two arrows).

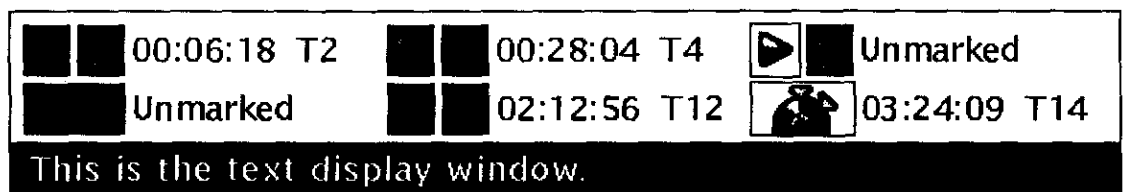

4. When you reach the place you want to mark, press OK. The unmarked icon changes to two icons (side-by-side):
 - An arrow that is used to activate the bookmark.
 - A trashcan that is used to clear the bookmark.Next to the icons, the bookmark start time and track are displayed.
5. Press the INFO button on the remote to make the Info Display disappear from the screen.

Using a Bookmark

1. While you're playing a disc, press INFO on the remote. The Info Display appears.
2. Highlight the *Bookmark* icon and Press OK. The *Bookmark* menu appears.
3. Highlight the arrow next to the bookmark you want to activate.
4. Press OK to activate the bookmark.
5. To make the Info Display disappear from the screen, press INFO on the remote.

Clearing a Bookmark

The bookmarks are cleared each time a disc is removed from the player or when the power is turned off. If you want to clear a bookmark while the disc is playing:


1. Press INFO on the remote to bring up the Info Display.
2. Highlight the *Bookmark* icon and press OK.
3. Highlight the trashcan icon next to the bookmark you want to clear. Press OK.
4. The bookmark is cleared and the trashcan icon changes back to the unmarked disc icon.

If all 6 bookmarks are in use, you can only mark new a scene by clearing an existing bookmark.

Dub Assist

Dub Assist helps you record a CD onto an audio cassette tape by determining the number of tracks that will fit on one side of the tape so you have time to turn the tape over to record on the other side. Dub Assist does not have an icon on the Info Display bar. It is activated through the DVD player's menu.

To use Dub Assist when you're recording a CD onto an audio cassette:

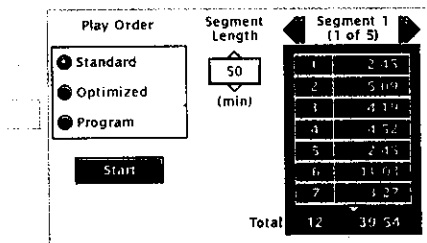

Use the Dub Assist screen to determine how many CD tracks can fit on a cassette.

1. Press STOP if a CD is playing (the DVD Player's main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* options appear).
3. Highlight *Dub Assist* and press OK (the *Dub Assist* screen appears).
4. The highlight should be in the *Play Order* window. Choose *Standard*, *Optimized*, or *Program*.

Standard: This is the default mode. The tracks are recorded in the order on the CD (track 1 is recorded first, track 2 second, etc.)

Optimized: The tracks are recorded in the order that optimizes the number of tracks that can fit on one side of the audio cassette so you have the least amount of dead space at the end of the tape.

Program: The tracks are recorded in the order you program. You must create your program in the *Edit Program* menu that's in the DVD Player's *Play* menu.

5. Use the arrow keys to highlight the *Segment Length* box. When the *Segment Length* box is highlighted, use the up/down arrow buttons to enter the length of one side of the audio cassette.
6. The order the tracks will be recorded in appears in the *Segment Length* box. Use the arrow keys to highlight the *Start* box and press OK.
7. Follow the instructions on the screen to begin recording.

This page left intentionally blank.

Playing Video CDs

Chapter Overview:

- What is Video CD?
- The Video CD Disc menu
- The Video CD Info Display



Changing Entertainment. Again.



Playing Video CDs

What is a Video CD?

Like DVD video discs, Video CDs contain picture and sound content. Video CDs (VCDs) are encoded in a different format. VCDs don't hold as much information as DVD discs and the picture quality is not as high.

VCDs are divided into tracks, and each track is divided into indexes. A track is similar to a title and an index is similar to a chapter.

The Video CD Disc Menu

A Video CD disc is capable of having an on-screen menu that is separate from the DVD player's menu system and on-screen Info Display. If the disc has a menu, the menu will appear after the disc is loaded into the player.

The content and operation of disc menus varies from disc to disc. Check the instructions that accompany the Video CD for more information on how to use the playback control function for that specific disc.

If a disc menu appears:


1. Use the number buttons on the remote to select a track (similar to a title).
2. Press OK or PLAY on the remote to begin playback of the selected track.
3. Press CH + ► or CH - ◀ on the remote (SKIP FWD or SKIP BACK on the player) to scroll through the tracks.
4. Press MENU to stop playback and return to the disc menu or press STOP to stop playback and return to the DVD player menu.

To bring up the disc menu during disc play, press the MENU button on the remote.

Video CD Information Display


Your DVD player gives you several options when playing Video CDs, including skipping tracks and repeat play. You can access these features through the Info Display.

The on-screen Info Display contains many playback features. The Info Display appears across the top of the screen when you press the INFO button on the remote (while a disc is playing). Each feature is illustrated with an icon. Use the arrow buttons to move through the different icons in the Info Display.

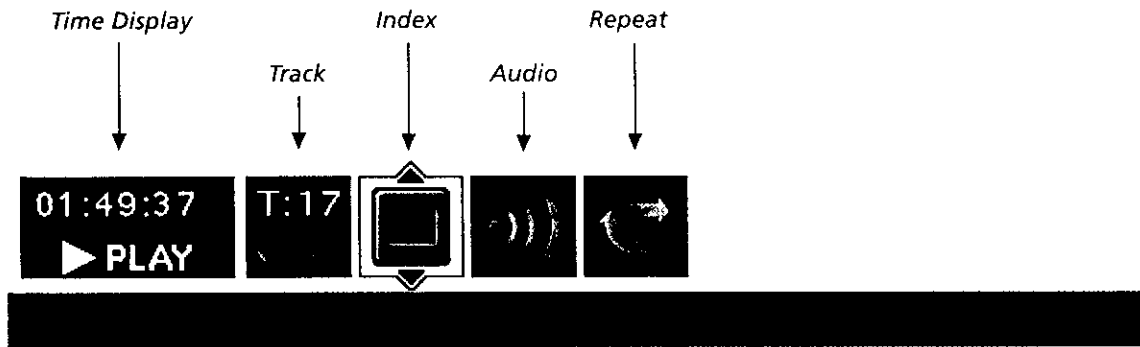

When an icon is highlighted, use the up/down arrow buttons to scroll through choices displayed in the text box.

Remember, you can only access the Info Display when you're playing a disc.

The invalid symbol  appears on the screen when you press a button that doesn't have any function. If one of the icons is "grayed out," the Info Display feature isn't available for the disc you're playing. To bring up the Info Display:


1. Press INFO on the remote. The Video CD Info Display appears across the top of the screen.
2. Press INFO a second time to bring up Help text regarding the current selection.
3. Press INFO a third time to turn the Info Display off.

Playing Video CDs



Selecting a Specific Track

1. Press INFO on the remote to bring up the Info Display.
2. Use the arrow buttons on the remote to highlight the *Track* icon from the Info Display.
3. Use the number button(s) on the remote to enter the track number you want to play, or use the up/down arrows to scroll through the track numbers. When a new track number is entered, that track will begin playing.

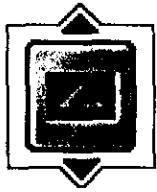

Selecting a Specific Index

1. Press INFO on the remote to bring up the Info Display.
2. Highlight the *Index* icon from the Info Display.
3. Use the number button(s) on the remote to enter the index number you want to play, or use the up/down arrows to scroll through the index numbers. When a new index number is entered, that index will begin playing.



Using the Repeat Feature

You can tell the player to repeat the entire disc, a track, an index or you can set A•B repeat. The default mode for the Repeat feature is Off. There are four Repeat options:

- Disc – repeats the disc that is playing
- Track – repeats the track that is playing
- Index – repeats the index that is playing

To Use Repeat:

1. While a disc is playing, press INFO on the remote to bring up the Info Display.
2. Highlight the *Repeat* icon. The text in the text box below the icons will read *Repeat Mode: Off*.
3. Press the up/down arrow buttons to scroll through the *Repeat* options until the Repeat option you want is displayed in the text box.
4. The selected repeat option will begin immediately and loop repeatedly until you turn Repeat off. Repeat is turned off by completing steps 1 through 3 above, and selecting the Off option.

How to Cancel Repeat

There are three ways to cancel Repeat:

- Press STOP twice.
- Go to the *Repeat* icon in the Info Display and select *Off*.
- Eject the disc.

Note:

Your repeat settings are erased each time you remove a Video CD from the player.






 
Changing the Audio Channel Output

If you are playing a stereo Video CD, you can change the channel output from the player.

1. Press AUDIO (or INFO) on the remote to bring up the Info Display.
2. Highlight the *Audio Channel* icon on the Info Display.
3. The audio channel choices appear in the text box. Use the up/down arrow keys to scroll through the choices: *Stereo*, *Left*, *Right* or *Mono*. Whatever choice is displayed becomes the active choice.

Skipping Tracks

- To skip forward to the beginning of the next track on a VCD, press CH +  on the remote (SKIP FWD on the front of the player). Press the button again to go to the beginning of the next track.
- To skip backward to the beginning of the track that is playing on a Video CD, press CH +  on the remote (SKIP BACK on the front of the player). Press the button again to go to the beginning of the preceding track.

Note: If the VCD disc was authored with Playback Control (indicated by the PBC light on the front panel of the DVD player) navigating with CH +  or CH -  buttons may not work.

This page intentionally left blank.

Using the DVD Player's Menu System

Chapter Overview:

- The DVD Player Menu
- The Play Menu
- The Lock Menu
- The Display Menu
- The Sound Menu
- The Languages Menu
- The Glossary


Changing Entertainment. Again.




Using the DVD Player's Menu System

The DVD Player Menu System


The DVD player menu system is not the same as the disc menu or the Info Display. The DVD player menu comes up when there is no disc playing. If you are playing a disc, press STOP on the remote control to stop playback and bring up the DVD player menu.

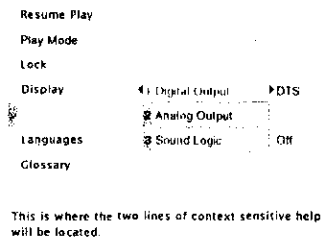

The Sound menu is an example of a path menu item.

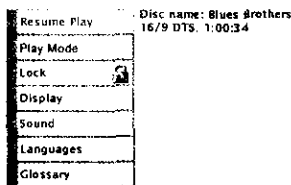

The Play option is an example of an action menu item.

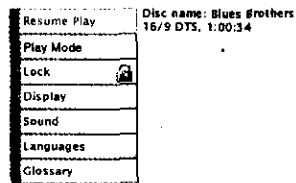

Press OK to clear the screen and resume play.

Two Types of Menu Items: Path and Action

Path Items

A path menu item has an arrow on the right side to let you know this item is a path to MORE options. To see the path menu options, highlight the path menu item and press OK. The next set of menu choices appears to the right of the menu item.

The *Sound* menu is an example of a path menu item—when the *Sound* menu is highlighted, press OK. The Sound options appear on the screen.

Action Items

Action menu items are used in two ways:

With an action menu item, what you see is what you get. When an action menu item is highlighted, press OK and that action is taken. *Resume Play* on your player's menu system is an example of an action menu item. Press OK when *Resume Play* is highlighted; the menu disappears and playback is resumed.

Sometimes an action menu item is used as a "toggle." You highlight the action menu item, press OK, and the selection (shown to the right of the menu item) changes from one choice to another. *Sound Logic* in the *Sound* menu is an example of an action menu item that is a toggle. If you highlight *Sound Logic* and press OK, the selection changes from *On* to *Off* and vice versa, each time you press OK. To return to the previous screen, press the left arrow button.

The Play/Resume Play Option

To get to the DVD Player menu, press STOP on the remote control. The DVD Player menu will appear whenever a disc stops playing. The first item in the main menu is the *Play/Resume Play* option. If there isn't a disc in the player, the option reads *Play* with the prompt *Insert Disc* to the right. If there is a disc in the player and it was previously playing, the option reads *Resume Play* and the name of the disc is displayed on the right.

Any time you stop playback, you will be returned to the DVD player menu, and the *Play* option will read *Resume Play*. To resume play, highlight the option and press OK, or press the PLAY button on the remote.

The Play Mode Menu

The DVD Player's *Play Mode* menu lets you choose different ways to play the disc. To see *Play Mode* menu options, a disc must be in the DVD player.


Selecting a Play Mode

The first three options in the *Play Mode* menu determine in what order the titles or tracks will play on a disc.

Standard Play: plays the disc's titles and chapters in their default order (i.e., chapter 1 of Title 1 plays first, then chapter 2 of Title 1, etc.)

Random Play: plays the chapters of each title in random order.

Program Play: Plays the chapters on the disc in the order you have programmed (you must select *Edit Program* and set up the order in which you want the tracks on the disc to play).

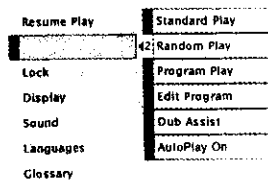

This is where the two lines of context sensitive help will be located.


Selecting *Random Play* plays the disc's tracks in random order.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight the *Play Mode* menu option.
3. Press OK. The *Play Mode* menu items appear.
4. Highlight the desired option and press OK. *Program Play* will not work unless you have created a program list.

Using the DVD Player's Menu System

How to Create a Program

To use the *Program Play* option, you must create a program list to set the order in which you want the tracks (or titles and chapters on a DVD video disc) on the disc to play.

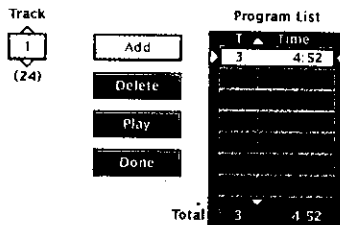

This is where the two lines of context sensitive help will be located.


When the *Track* box is highlighted, enter the track number you want to place in the list.

Creating a Program List for an Audio CD

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. The *Track* box is highlighted. Use the up/down arrows or the number buttons on the remote to enter the track you want to play first. Press OK.
5. The highlight will move to the *Add* box. Press OK to add that track to the *Program List* (the track number and time will appear in the *Program List*).
6. The highlight will move back to the *Track* box so you can enter the next track into the *Program List*. Make sure the *Track* box is highlighted and enter your next track.
7. Continue adding titles as explained in steps 4-5 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display while the disc is playing. The program will be erased when you remove the disc from the player.

Creating a Program List for a DVD Video Disc

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. The *Title* box is highlighted. Use the up/down arrows or the number buttons on the remote to enter the title you want to play first. The title number you entered appears in the *Title* box. The number of chapters available appears under the *Chapter* box.
5. Highlight the *Chapter* box and use the up/down arrows or the number buttons on the remote to enter the chapter you want to play first and press OK. The highlight jumps to the *Add* button.
6. Press OK to add that chapter to the *Program List*. The highlight jumps back to the *Title* box so you can add more titles and/or chapters. Make sure the *Title* box is highlighted and enter your next title and/or chapter.
7. Continue adding titles/chapters as explained in steps 4-6 until your program is complete. You can play your program by highlighting *Play* and pressing OK, or you can save the program by highlighting *Done* and pressing OK. If you save the program, you can select it from the Info Display while the disc is playing. The program will be erased when you remove the disc from the player.

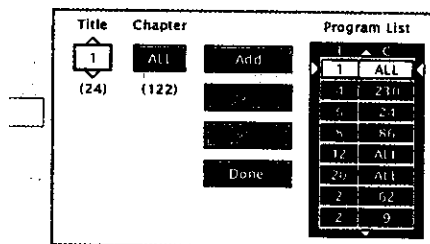

When the *Title* box is highlighted, enter the title number you want to place in the list.


Using the DVD Player's Menu System

Editing a Program

Deleting Chapters

To delete chapters from the playlist:

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Highlight the item in the playlist you want to delete.
5. Highlight *Delete*, and press OK.
6. When you are finished rearranging the playlist, highlight *Done* and press OK.

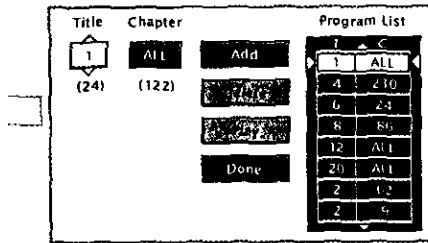

To delete an entry from the playlist, highlight it, then highlight *Delete* and press OK.

Inserting Chapters

To insert chapters into the playlist:

1. If the disc is playing, press STOP to stop playback (the DVD player main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* menu appears).
3. Highlight *Edit Program* and press OK (the *Edit Program* screen appears).
4. Use the left/right arrow keys to move the highlight to the program list. Use the up/down arrow keys to mark the spot in the playlist where you want to insert a chapter (the inserted chapter will be placed *before* the highlighted chapter).
5. Highlight the *Chapter* box and use the up/down arrows or the number buttons on the remote to enter the chapter you want to play first.
6. Highlight *Insert* and press OK.
7. When you are finished rearranging the playlist, highlight *Done* and press OK.

Using the DVD Player's Menu System

Autoplay


You can set the Autoplay option to play your disc automatically after you close the disc tray.

1. From the DVD player's main menu (player ON, no disc playing) highlight the *Play Mode* option and press OK.
2. The Play Mode selections appear. Highlight the Autoplay option and press OK to toggle the option on/off.
3. Press the left arrow button to return to the previous menu or press GO BACK•AGAIN to return to the main menu.

Dub Assist

Dub Assist helps you record a CD onto an audio cassette tape by determining the number of tracks that will fit on one side of the tape so you have time to turn the tape over to record on the other side.

To use Dub Assist when you're recording a CD onto an audio cassette:

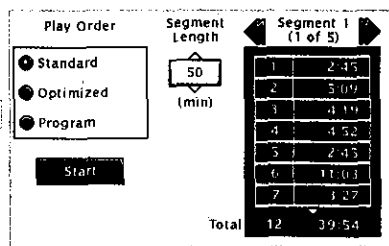

The Dub Assist Screen

1. Press STOP if a CD is playing (the DVD Player's main menu appears).
2. Highlight *Play Mode* and press OK (the *Play Mode* options appear).
3. Highlight *Dub Assist* and press OK (the *Dub Assist* screen appears).
4. The highlight should be in the *Play Order* window. Choose *Standard*, *Optimized*, or *Program*.

Standard: This is the default mode. The tracks are recorded in the order on the CD (track 1 is recorded first, track 2 second, etc.)


Optimized: The tracks are recorded in the order that optimizes the number of tracks that can fit on one side of the audio cassette so you have the least amount of dead space at the end of the tape.


Program: The tracks are recorded in the order you program. You must create your program in the *Edit Program* menu that's in the DVD Player's *Play* menu.

5. Use the arrow keys to highlight the *Segment Length* box. When the *Segment Length* box is highlighted, use the up/down arrow buttons to enter the length of one side of the audio cassette.
6. The order the tracks will be recorded in appears in the *Segment Length* box. Use the arrow keys to highlight the *Start* box and press OK.
7. Follow the instructions on the screen to begin recording.


The Lock Menu

The padlock icon on the front of your DVD player shows whether your player is locked or unlocked.

 **Locked:** A password is needed in order to play discs that aren't included in the rating limits you have set. When the player is locked, no one can access the *Lock* Menu items without entering the password.

 **Unlocked:** A password isn't required to play discs.

Locking Your DVD Player

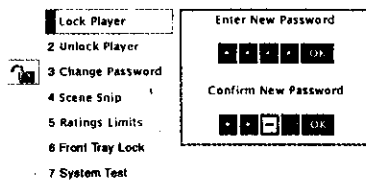

Use the numbers on the remote to enter a password.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK (the *Lock* menu items appear).
3. Highlight *Lock Player* and press OK. The *Enter New Password* screen appears.
4. Press the number keys on the remote to enter the password you want to use (similar to entering your PIN when you use a bank machine).
5. After you've entered the last number in the password, press OK. *Confirm Password* appears.
6. Enter the numbers you entered the first time and press OK when you're finished. You are returned to the main menu.

Unlocking Your DVD Player

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK.
3. The *Enter Password* box appears. Enter your password and press OK (the *Lock* menu options appear).
4. Highlight *Unlock Player* and press OK. The locked icon changes to unlocked.

Changing Your Password

The player must be locked to change the password.


1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK. *Enter Password* appears on the screen. Enter your password.
3. Highlight *Change Password* and press OK. *Enter New Password* appears.
4. Press the number buttons on the remote to enter the new password you want to use and press OK. *Confirm Password* appears.
5. Press the number keys to enter the password again and press OK when you're finished.

Using the DVD Player's Menu System

Editing Your Scene Snip Disc Library

The Disc Library will consist of a numbered list of titles that have been edited. If no disc title is available, the title will be DVD.

How to Edit the Disc Library

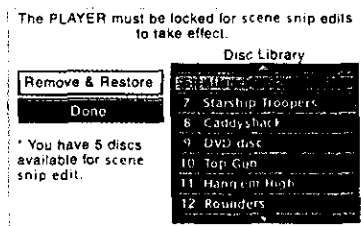

This is where the two lines of context sensitive help will be located.

Select a title and highlight **Remove & Restore** to remove all edits and restore the disc to its original version.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Lock* and press OK (the *Lock* menu appears).
3. Highlight *Scene Snip Edit* and press OK (the Scene Snip Disc Library screen appears).
Note: You must edit a movie before it appears in the Disc Library. Movies you have not edited will not appear in the Library.
4. Highlight the title of the movie you want to remove from the list. Highlight *Remove & Restore* and press OK.
 - A message appears asking if you are sure you want to remove all the edits and restore the disc to the original version.
5. Highlight *Yes* and press OK. The disc will be restored to its original version and removed from the Disc Library.
6. Press the left arrow key to return to the main menu.

Setting the Ratings Limits

The Ratings Limits feature is a rating limit system, sort of like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

*Note: The player alerts you when you try to play a movie with a rating that exceeds the limit you've set. Some discs include a rating override feature. When you play a disc with this feature, the message **Override Limit or Cancel Selection** appears on the screen. If you choose to override the rating limit, you will need to enter your password to begin playback.*

Changing to a Different Country's Rating System

Some countries use different rating systems. The default for this DVD player is the United States. You can change to a different country's rating system through the *Lock* menu.

1. If the disc is playing, press STOP (the DVD Player's main menu is displayed).
2. From the main menu, highlight the *Lock* option and press OK (the *Lock* menu appears).
3. Highlight *Ratings Limits* and press OK (the *Ratings Limits* menu appears).
4. Highlight *Country* and press OK (a list of countries appears).
5. Highlight the country you want to change to and press OK (the country you selected appears next to the *Country* path menu).
6. Press the left arrow key to return to the main menu.

Using the DVD Player's Menu System


Rated Titles

The *Rated Titles* option lets you determine how your player will react to discs that contain movies that are rated (in the U.S.A., the Motion Pictures Association of America rates movies as G, PG, PG-13, etc.).

You decide which ratings require a password and which ones don't. This system ranks the ratings 1 through 8 in order to accommodate different countries' ratings systems (1 is considered a movie title with the least offensive material).

In order for the Rating Level feature to work, the disc must be encoded with rating information. If the author of the disc did not encode rating information, then this feature will not work for that disc.

The DVD Player must be locked in order for it to enforce the settings in the *Ratings Limits* part of the *Lock* menu.

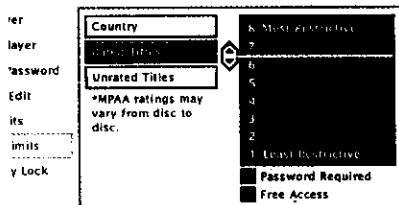


The Rated Titles screen lets you set the Rating Limit

1. From the *Lock* menu, highlight *Ratings Limits* and press OK (the *Ratings Limits* menu is displayed).
2. Highlight *Rated Titles* and press OK (the 8-level rating limits list appears).
3. To change the rating limit, press the up or down arrow button.
 - The ratings that don't require a password (free access) appear under the bar, in the green part of the block.
 - The ratings that require a password appear above the bar, in the red part of the block.
4. When you have moved the bar to the desired setting, press OK. You are returned to the *Rated Titles* screen and the setting appears to the right of the *Rated Titles* option. For example, if you set 3 as the highest rating for Free Access (green), then the *Rated Titles* selection appears as 3 (that's the player's number for PG in the 8-level system) for the movie studio's rating. This means when the player is locked, it will require you to enter the password to play any discs that are rated higher than 3 (i.e., PG-13 or NC-17).
5. Press the left arrow button to return to the main screen.

Using the DVD Player's Menu System

Unrated Titles

Some titles (movies) aren't rated, but may contain material that is unsuitable for children. You decide how you want the *Ratings Limits* feature of your player to handle these discs: free access or password required. To set the *Unrated Titles* option:

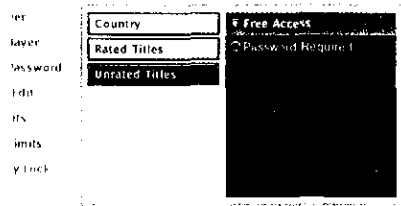

Choose **Unrated Titles** to set free access or require a password for unrated titles.

1. From the *Lock Menu*, highlight *Ratings Limits* and press OK.
2. Highlight *Unrated Titles* and press OK. The *Unrated Titles* options appear.
3. Use the up/down arrow buttons to highlight your choice: *Free Access* or *Password Required*. Press OK. You are returned to the previous screen, and the option you chose is displayed next to the *Unrated Titles* option.
4. Press the left arrow key to return to the main menu.

Front Tray Lock

You can lock the front tray of the DVD player so it can't be opened.

1. From the *Lock* menu, highlight *Front Tray Lock*. Press OK to toggle the *Front Tray Lock* setting *On* or *Off*.
 - "Tray is locked" appears when the Front Tray Lock feature is turned on and you try to open the front tray of the DVD player.
2. Press the left arrow key to return to the main menu.

System Test

1. Highlight *System Test* within the *Lock* menu.
2. Press OK to display the *System Test Results* screen.
3. Press the left arrow key to return to the main menu.

The Display Menu

The *Display* menu contains the settings that affect how disc content looks on your TV and how the front panel of the DVD player looks.

TV Image

The *TV Image* menu adjusts the way a movie appears on your TV. Standard TVs are 4 x 3 format. Depending on the type of television you have, you may want to adjust the screen setting (also called the aspect ratio).



4x3 Letterbox



4x3 Standard



16x9 Widescreen

1. From the DVD Player's main menu (player ON, no disc playing), highlight *Display* and press OK (the *Display* options appear).
 2. Highlight *TV Image*. Press OK. The *TV Image* options appear.
- **4 x 3 Letterbox** – Choose this setting if you want to see movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.

- **4 x 3 Standard** – Choose this setting if you want the movie to fill the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.
Most discs produced in a widescreen format can't be cropped in this fashion. This means the black bars will appear at the top and the bottom of the screen.

- **16 x 9 Widescreen** – Choose this setting if your DVD Player is connected to a widescreen TV. If you choose this setting and you don't have a widescreen TV, the images on the screen may appear distorted due to vertical compression.

If you play a disc recorded in 4 x 3 format on a widescreen TV, the left and right side of the screen will appear black.

Some movies are actually slightly wider than 16x9. In this case, black bars will appear at the top and bottom of the screen even in Widescreen mode.

Note: Some discs are already formatted with black bars so the entire image can be seen on a standard TV screen. If you have a widescreen TV and you are playing this type of disc, you will need to set your TV to expand the image. See your TV User's Manual.

Using the DVD Player's Menu System

Front Display

This feature lets you to choose how the front panel display on your DVD Player appears.

1. From the DVD Player's main menu (player ON, no disc playing), highlight *Display* and press OK (the *Display* menu appears).
2. Highlight *Front Display* and press OK. You can choose from 5 settings:
 - Auto (bright unless player is off)
 - Dim for Movies (dims when disc is playing)
 - Off for Movies (no display when disc is playing)
 - Always Bright
 - Always Dim

The default is Dim for Movies.


3. Highlight the setting you want to use and press OK. Press the left arrow button to return to the previous menu. Your selection is displayed next to the *Front Display* path menu.
4. Press the left arrow button to go back to the main menu.

On-Screen Displays

This feature lets you select whether you want certain on-screen displays to appear on the screen. It contains three choices with check boxes next to them:

- Information Display – When turned on, displays time transport information when you are fast forwarding or reversing playback.
- Angle Indicator – When turned on, displays camera angle icon if more than one camera angle is available.
- Scene Again™ Text – When turned on, displays subtitles when you use the Scene Again™ feature.

The default is to show all on-screen displays. To turn one of the options on or off:

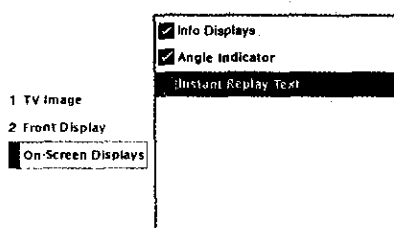

The On-Screen Displays option lets you choose which on-screen display items appear on your TV screen.

1. From the main menu, highlight the *Display* option and press OK (the *Display* menu appears).
2. Highlight the *On-Screen Displays* option and press OK (the three on-screen display options appear on the right).
3. Highlight an option and press OK. This toggles the option on or off.
4. Press the left arrow key to return to the main menu.

The Sound Menu


The *Sound* menu lets you select different sound settings to match the equipment you have connected to your DVD Player.

Digital Output

Digital output lets you choose which type of digital audio is output from your DVD player. If you've used an optical cable to connect a Dolby Pro Logic, Dolby Digital, or DTS receiver, you must adjust this setting. There are two options:

- Dolby Digital: Choose this setting if you connected a Dolby Digital receiver.
- DTS: Choose this setting if you connected a DTS receiver or decoder to your DVD Player.

The default is Dolby Digital. To change the digital output:

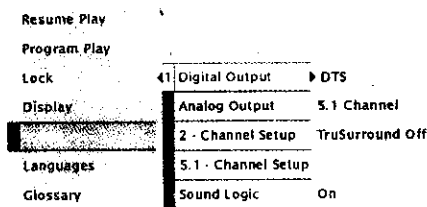

Select the Digital Output option from the Sound menu.

1. From the main menu, highlight and select the *Sound* option and press OK (the *Sound* menu is displayed).
2. Highlight the *Digital Output* option and press OK.
3. Highlight the desired output and press OK.
4. Press the left arrow key to return to the main menu.


Note: If you set *Digital Output* to *DTS*, you must have your DVD Player connected to a receiver or decoder with the *DTS* feature and the disc you play must support the *DTS* audio format. If you choose *DTS* and your receiver or decoder doesn't support *DTS*, you won't hear any audio.

Using the DVD Player's Menu System

Analog Output

Analog output lets you choose which type of analog audio is output from your DVD player. There are two options:

- **2-Channel Stereo:** Choose this setting if you connected the DVD player using 2 audio/video jacks. You can choose to turn the SRS/TruSurround feature on or off (see below).
- **5.1 Channel Output:** Choose this setting if you connected surround speakers using an audio-video receiver to your DVD player. If you select this setting, you will need to set up your speakers through the 5.1-channel setup option in the *Sound* menu.

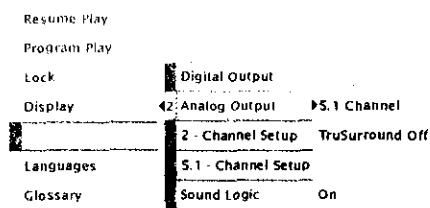

Select Analog Output from the Sound Option of the Main menu.

2-Channel Stereo

The default is 2-Channel Stereo. To change the output:

1. Highlight and select the *Sound* option from the main menu and press OK (the *Sound* menu is displayed).
2. Highlight the *Analog Output* option and press OK.
3. Highlight *5.1-Channel* and press OK.
4. Press the left arrow key to return to the *Sound* menu.

Note: If you choose 5.1 channel output, you can set up your speaker position and distance through the 5.1 - Channel Setup option.

TruSurround®

The TruSurround® option can be used to simulate a six-speaker listening experience through two speakers. It can be turned on or off. The default is Off. Turn the TruSurround option on if you selected 2 channel stereo as your analog output. To turn the TruSurround® option on:

1. From the *Sound* menu, highlight the *2-Channel Setup* option and press OK.
2. Highlight *On* for the *TruSurround®* option, and press OK.
3. Press the left arrow key to return to the previous menu.

Notes:

The TruSurround® option should not be turned on if you are using a Dolby Digital or DTS receiver. Your receiver provides optimum sound quality.

The TS Surround button on the Front Panel of the DVD Player can be also be used to change the TruSurround® setting. Each press of the button toggles the setting between on and off.

If you are playing a DTS CD, you must turn Trusurround off to get sound.

TruSurround and the (●) symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. TruSurround technology is incorporated under license from SRS Labs, Inc.

Using the DVD Player's Menu System


5.1-Channel Out

Select this feature when you have attached several speakers (such as front, center, surround, and/or subwoofer) to your DVD player. The *5.1-Channel Setup* menu lets you set your speaker preferences. The *5.1-Channel Setup* menu has two options:

- *Speaker Setup* – Select the type and size of the speakers you've attached to your DVD player.
- *Distance* – Set the distance of your speakers from your viewing point.

To select the *5.1-Channel Setup* menu:

1. From the main menu, highlight and select the *Sound* option and press OK (the *Sound* menu is displayed).
2. Highlight *5.1-Channel Setup* and press OK (the *5.1-Channel Setup* menu appears).
3. Select the size and distance of the attached speakers (see below).
4. Press the left arrow key to return to the previous menu.

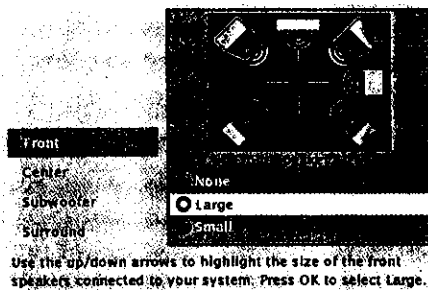

Use this Speakers menu to select and set up your attached speakers.


Speaker Setup

1. From the *Sound* menu, highlight the *5.1-Channel Setup* option and press OK (the *5.1-Channel Setup* menu is displayed).
2. Highlight the *Speakers* option and press OK. (The *Speaker Size* screen will be displayed. Representations of different types of speakers will be displayed on the right side of the screen.)
3. Highlight *Front*, *Center*, *Subwoofer* or *Surround*. The highlighted choice will also be highlighted in the graphic to the right of the list.
4. Use the right arrow button to move to the *Speaker Size* list (underneath the graphic on the right). Select the size of your speakers (or *None* if you don't have that type of speaker hooked up) and press OK.
5. Use the left arrow button to return to the speaker list and select the next type of speaker, repeating the process above.

Using the DVD Player's Menu System

Set the Distance of the Attached Speakers

Use the *Distance* option to set the distance of the attached speakers. By setting the distance, you are letting the speakers know how far the sound has to travel to reach your set listening point. This allows the sound from each speaker to reach the listener at the same time.

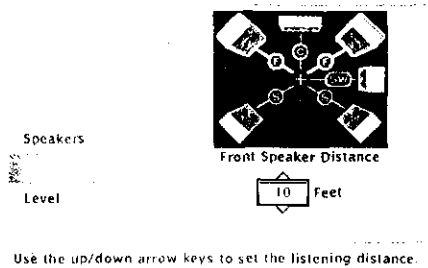

Adjust the Distance and Level of the speakers.


1. From the *Sound* menu, highlight the *5.1-Channel Setup* option and press OK (the *5.1-Channel Setup* menu is displayed).
 2. Highlight and the *Distance* option and press OK. (The *Distance* screen will be displayed. Representations of different types of speakers will be displayed on the right side of the screen.)
 3. Highlight *Front*, *Center*, *Subwoofer* or *Surround*. The highlighted choice will also be highlighted in the graphic to the right of the list. The + symbol in the middle of the graphic represents the distance from the speaker to the listening point.
- Note: If you haven't set up the speaker that is highlighted, it will appear grayed out.*
4. Use the right arrow button to move to the *Feet* box displayed underneath the graphic. Use the up/down arrow keys to adjust the distance for the highlighted speakers. Press OK.
 5. Use the left arrow button to return to the speaker list and select the next type of speaker, repeating the process above.

Note: If you don't want to make any changes, press CLEAR to return to the main menu or GO BACK to return to the Speaker Setup menu.

Sound Logic

The Sound Logic feature compresses the dynamic range (quietest sound to loudest sound) of a disc's soundtrack. For example, action scenes might be very loud, while whispered dialog is quiet. The Sound Logic feature evens out the range of the volume by making loud sounds quieter and soft sounds louder. The Sound Logic option is a toggle, it can be turned on or off.

The default setting is off. To turn the Sound Logic feature on:

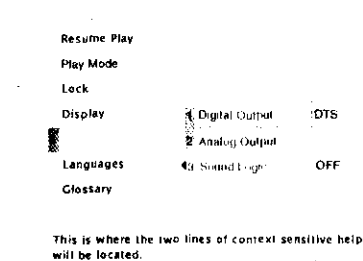

Select the Sound Logic option from the Sound menu and press OK to toggle Sound Logic on or off.

1. From the DVD Player's main menu, highlight *Sound* and press OK (the *Sound* menu appears).
2. Highlight the *Sound Logic* option and press OK.
3. Press the left arrow button to return to the main menu.

Note: The performance of the Sound Logic feature varies depending on the type of equipment you have connected to your DVD Player and the audio format of the disc you're playing.

Using the DVD Player's Menu System

The Languages Menu

The *Languages* menu enables you to choose different language options for audio, subtitles, Disc Menu items and DVD player menu items. The default for all Language menu items is English.

Changing the Player Menus Language Preferences

You can choose one of three languages for the text that appears within the on-screen menu system. The default is English. If you change the Player Menu Language, the entire player menu system will be displayed in the selected language.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Player Menus* and press OK (the language choices for the DVD Player's menu are displayed).
3. Highlight the language you want to use for the menu items and press OK. The menu appears with your selection shown next to *Player Menus*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

Changing the Disc Menus Language Preference

The *Disc Menus* option enables you to choose which language you want to use to display the disc menus.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Disc Menus* and press OK (the *Disc Menus* language options are displayed).
3. Highlight the language you want to use for the disc menus and press OK. Press the left arrow to return to the previous screen. The menu appears with your selection shown next to *Disc Menus*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu screen.

How to Set *Other* as an Disc Menus Language Option

If the language you want to use isn't listed, you can use the *Other* option to select the language of your choice.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Disc Menus* and press OK (the *Disc Menus* language options are displayed).
3. Highlight *Other* and press OK.
4. Enter the code from the Language Codes list at the end of this chapter and press OK (the previous menu appears with your selection shown next to the *Disc Menus* path menu).
5. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu screen.

NOTE: Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

Using the DVD Player's Menu System

Changing the Audio Language Preference

The Audio Language menu enables you to choose which language you want to listen to the movie in.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight *Audio* and press OK (the audio language options are displayed).
3. Highlight the language you want to use for the audio portion of the titles and press OK. Press the left arrow button. The menu appears with your selection shown next to *Audio*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu screen.

How to Set *Other* as an Audio Language Option

If the language you want to use isn't listed, you can use the *Other* option to select the language of your choice.

1. From the *Languages* menu, highlight and select the *Audio* option (the *Audio* menu is displayed).
2. From the *Audio* menu, highlight *Other* and press OK.
3. Enter the code from the Language Codes list at the end of this chapter and press OK. The menu appears with your selection shown next to *Audio*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

NOTE: Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

Changing the Subtitle Language Preference

The *Subtitles* menu lets you choose a preferred language for the subtitles. The default is *Auto*. The *Auto* preference defaults to the same language that has been set as the audio language preference. To change the subtitle language preference:


1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. From the *Languages* menu, highlight *Subtitles* and press OK (the *Subtitle* menu is displayed).
3. Highlight the language you want to use for subtitles and press OK. Press the left arrow button. The menu appears with your selection shown next to *Subtitles*.
4. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

Note: Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

Using the DVD Player's Menu System

How to Set *Other* as the Subtitle Language Preference

If the language you want to use isn't listed, you can use the *Other* option to select the language of your choice.

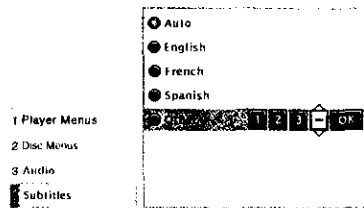


Select *Other* and enter the appropriate language code.

1. From the main menu, highlight and select the *Languages* option (the *Languages* menu is displayed).
2. Highlight and select the *Subtitles* option (the *Subtitles* menu is displayed).
3. From the *Subtitles* menu, highlight *Other* and press OK.
4. Enter the code from the Language Codes list at the end of the chapter and press OK (the previous menu appears with your selection shown next to the *Audio* path menu).
5. Press the left arrow button or press GO BACK•AGAIN to return to the previous menu.

NOTE: Remember, your player can't play the disc in the language you have chosen if the disc wasn't created with that language option.

Glossary

The glossary contains definitions and information about the features and controls on your DVD Player.

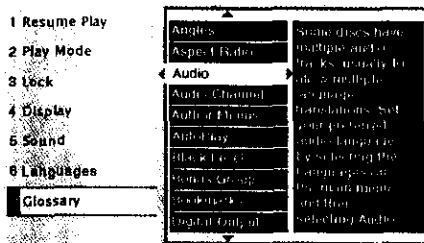

The Glossary explains terms used regarding your DVD player and discs.

1. If the disc is playing, press STOP (the DVD Player's main menu appears).
2. Highlight *Glossary* and press OK (the Glossary appears).
3. Use the arrow buttons on your remote to highlight different terms. The definitions appear on the right side of the screen.

Some glossary definitions are more than one page. The scroll icon appears in the definition box to let you know when there's a second page.

To see the rest of the definition:

- a. Press the right arrow button. The glossary definition is highlighted.
 - b. Press the down arrow button. The second page of the definition appears.
 - c. Press the up arrow button to return to the first page of the definition or press GO BACK•AGAIN to return to the main menu.
4. Press the left arrow button to return to the DVD Player's main menu.

Code List

Don't forget to press the OK button after you enter the code.

Language	Code	Language	Code	Language	Code
Abkhazian	6566	Hungarian	7285	Russian	8285
Afar	6565	Icelandic	7383	Samoaan	8377
Afrikaans	6570	Indonesian	7378	Sangho	8371
Albanian	8381	Interlingua	7365	Sanskrit	8365
Ameharic	6577	Interlingue	7369	Scots Gaelic	7168
Arabic	6582	Inupiak	7375	Serbian	8382
Armenian	7289	Irish	7165	Servo-Croatian	8372
Assamese	6583	Italian	7384	Sesotho	8384
Aymara	6588	Japanese	7465	Setswana	8478
Azerbaijani	6590	Javanese	7487	Shona	8378
Bashkir	6665	Kannada	7578	Sindhi	8368
Basque	6985	Kashmiri	7583	Singhalese	8373
Bengali; Bangla	6678	Kazakh	7575	Siswati	8383
Bhutani	6890	Kinyarwanda	8287	Slovak	8375
Bihari	6672	Kirghiz	7589	Slovenian	8376
Bislama	6673	Kirundi	8278	Somali	8379
Breton	6682	Korean	7579	Spanish	6983
Bulgarian	6671	Kurdish	7585	Sundanese	8385
Burmese	7789	Laothian	7679	Swahili	8387
Byelorussian	6669	Latin	7665	Swedish	8386
Cambodian	7577	Latvian, Lettish	7686	Tagalog	8476
Catalan	6765	Lingala	7678	Tajik	8471
Chinese	9072	Lithuanian	7684	Tamil	8465
Corsican	6779	Macedonian	7775	Tatar	8484
Croatian	7282	Malagsy	7771	Telugu	8469
Czech	6783	Malay	7783	Thai	8472
Danish	6865	Malayalam	7776	Tibetan	6679
Dutch	7876	Maltese	7784	Tigrinya	8473
English	6978	Maori	7773	Tonga	8479
Esperanto	6979	Marathi	7782	Tsonga	8483
Estonian	6984	Moldavian	7779	Turkish	8482
Faroese	7079	Mongolian	7778	Turkmen	8475
Fiji	7074	Naru	7865	Twi	8487
Finnish	7073	Nepali	7869	Ukrainian	8575
French	7082	Norwegian	7879	Urdu	8582
Frisian	7089	Occitan	7967	Uzbek	8590
Galician	7176	Oriya	7982	Vietnamese	8673
Georgian	7565	Oromo (Afan)	7977	Volapük	8679
German	6869	Panjabi	8065	Welsh	6789
Greek	6976	Pashto, Pushto	8083	Wolof	8779
Greenlandic	7576	Persian	7065	Xhosa	8872
Guarani	7178	Polish	8076	Yiddish	7473
Gujarati	7185	Portuguese	8084	Yoruba	8979
Hausa	7265	Quechua	8185	Zulu	9085
Hebrew	7387	Rhaero-Romance	8277		
Hindi	7273	Romanian	8279		

Other Information

Chapter Overview:

- Troubleshooting
- Care and Maintenance
- The Universal Remote
- Front Panel Controls
- Front Panel Display
- Limited Warranty
- Accessory Ordering Information

Changing Entertainment. Again.



Other Information

Troubleshooting

If you are experiencing product operation problems, please review the troubleshooting section before you call for service. Refer to the Limited Warranty for information on how to obtain repair service.

Player won't work

- Reset the DVD Player by unplugging the AC power cord and plugging it back in.

No Power

- Plug in the DVD Player. Make sure both ends of the AC power cord are securely plugged into the player and into an AC outlet.

Disc won't play

- Insert a disc with the label side facing up.
- Check the type of disc you put into the player. This player only plays DVD video discs, Video CDs and audio CDs.
- If the disc is a DTS music CD, it requires a DTS decoder. If you have a DTS receiver hooked up to your DVD player and you are still not getting sound, make sure the TruSurround® option is turned off.
- Both the player and the disc are coded by region. If the regional codes don't match, the disc can't be played. This player is Region No. 1.

Play starts, but then stops immediately

- The disc is dirty. Clean it.
- Condensation has formed. Allow player to dry out.

No picture

- Turn your TV to its Video Input Channel (see chapter 1).
- Turn on the TV.
- Make sure your player is connected properly. Make sure all cables are securely inserted into the appropriate jacks.

No sound or distorted sound

- Make sure your player is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
- You may need to readjust the *Digital Output* or *Analog Output* settings from the *Sound* menu (see chapter 5).
- Turn your TV to its Video Input Channel (see chapter 1).
- Sound is muted during still, frame advance, or slow-motion play.
- If you connected an audio or audio/video receiver to your DVD Player, make sure you chose the correct input setting on the receiver.
- If you are NOT using a stereo TV for your sound source, turn off the *TruSurround®* option (from the *Analog Output* menu or TS SURROUND button on front of DVD player).

Troubleshooting

Remote control won't work

- If you are using a universal remote, you might be in the wrong mode. To operate your DVD Player, press DVD on the remote before you press any other buttons. If you're operating the TV, press the TV button first, etc.
- Insert new batteries in the remote.
- Operate the remote control at a distance of no more than 20 feet.
- Remove any obstacles between the remote and the DVD Player or other component. If your DVD Player is in an entertainment cabinet, the glass doors may be obstructing the remote control from operating the unit. Open the doors.
- Reset the remote. Remove batteries and hold down one or more buttons for about one minute to drain the microprocessor inside the remote to reset it. Reinstall batteries and try the remote again.

Can't advance through a movie

- You can't advance through the opening credits and warning information that appear at the beginning of movies because the disc is programmed to prohibit that action.

The icon appears on screen

- The feature or action cannot be completed at this time because:
 1. The disc's software restricts it.
 2. The disc's software doesn't support that feature (e.g., angles).
 3. The feature is not available at the moment.
 4. You've requested a title or chapter number that is out of range.

The picture is distorted

- Did you connect your VCR to the DVD Player? Disconnect it. See chapter 1 for the correct setup and connection.
- The disc might be damaged. Try another disc.

Picture is distorted during forward and reverse scan

- It is normal for some distortion to appear while scanning.

A screen saver appears on the TV

- Your player is equipped with a screen saver that appears on the TV after your player has been idle for several minutes. Press STOP or GO BACK•AGAIN on the remote to make the screen saver disappear from the screen and return to the player's main menu.

Subtitle and/or audio language is not the one selected from the initial setting

- If the subtitle and/or audio language does not exist on the disc, the initial settings will not be seen/heard. The disc's priority language is selected instead. Set the subtitle and/or audio language manually through the Info Display or the player menu.

The menu is displayed in a foreign language

- The Menu Language preference is set to that language. From the DVD player's main menu, select the *Languages option* (In Spanish, shown as *Idiomas*; in French, as *Langues*). From the Languages menu, select the *Player Menus* option (In Spanish, shown as *Menús del Lector*; in French, as *Menus Lecteur*). Highlight the language you prefer and press OK.

Other Information

Troubleshooting

Play doesn't begin

- The rating of the title on the disc exceeds the rating limit set in the *Ratings Limits* when you press PLAY. Unlock the player or change the rating limit in those menus.

No forward or reverse scan

- Some discs have sections that prohibit rapid scanning, or title and chapter skip.
- If you're trying to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.

Camera angle cannot be changed

- Some discs don't have the multi-camera angle system, and some discs only have it in certain parts of the movie.

Picture is too tall and thin

- Change the aspect ratio using the *TV Image* setting in the Display menu (see chapter 5).

Picture is too short and wide

- Change the aspect ratio using the *TV Image* setting in the Display menu (see chapter 5).

Cannot copy discs to video tape

- You can't record DVD discs onto videocassettes because the discs are encoded with anti-copy protection.

Disc tray won't open

- Disengage the retail lock feature. Press and hold a combination of buttons on the front panel at the same time. Press and hold SKIP FWD, OPEN•CLOSE, and TS SURROUND for at least three seconds.
- Front Tray Lock feature of *Lock* menu is turned on. Unlock the player or turn Tray Lock feature off (see chapter 5).

Full Version of Disc Does Not Play

- If the DVD player is locked, the disc may have been edited using the Scene Snip feature. Unlock the player (see chapter 5).

Forgot password

- Point the remote at the DVD player. Press and hold the STOP button on the front of the DVD Player and the STOP button on the remote control at the same time (hold both buttons down at the same time for at least 3 seconds). The player will unlock. Follow the instructions for locking your player and changing the password in Chapter 5.

Disc won't eject

- When you put a disc into the player, the player may take up to 15 seconds to read the disc. You won't be able to eject the disc during this time. Wait 15 seconds and try again.

Handling Cautions

- Before connecting other components to this player, be sure to turn all components off.
- Don't move the player while a disc is being played. The disc may get scratched or broken, and the player's internal parts may be damaged.
- Don't put any container filled with liquid or any small metal objects on the player.
- Be careful not to put your hand into the disc tray.
- Don't place anything other than the disc in the disc tray.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the ON•OFF button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- Be sure to remove the disc and turn off the player after use.

Maintenance of Cabinet

For safety reasons, when cleaning the cabinet be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Formation of Condensation


- Due to sharp changes in temperature and humidity, condensation may form if warm air comes in contact with any cold parts inside the player.
- When condensation forms inside the player, the player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.
- If condensation forms on a disc, wipe the disc with a soft, dry cloth by moving the cloth from the center hole toward the outer edge.

Handling Discs

- Don't touch the disc's signal surfaces. Hold by the edges or by one edge and the hole in the center.
- Don't affix labels or adhesive tape to label surfaces. Don't scratch or damage the label.
- Do not use damaged (cracked or warped) discs.

Cleaning Discs

- Dirty discs can cause reduced video and audio performance. Always keep discs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a disc becomes very dirty, wet a soft cloth in water, wring it out well. Wipe the dirt away gently, and remove any water drops with a dry cloth.
- Do not use record-cleaning sprays or anti-static agents on discs. Also, never clean the discs with benzene, thinner, or other volatile solvents which may cause damage to the disc surface.

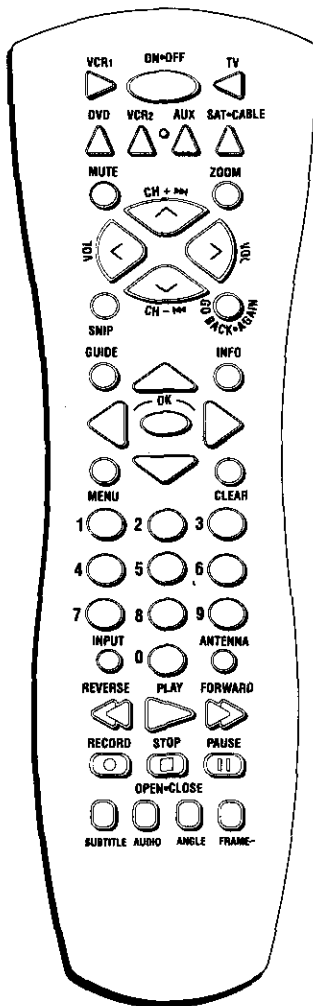

The remote may not operate all models of all brands.

Universal Remote

The universal remote can be programmed to control most brands of remote controllable TVs, VCRs, satellite receivers and cable boxes. The remote is already programmed to control most RCA, PROSCAN, and GE TVs, VCRs, and satellite receivers.

The AUX button can be programmed to control most brands of an additional remote controllable TV, VCR, satellite receiver, or cable box.

Test the Remote

To determine whether the universal remote needs to be programmed, turn a device ON, such as a VCR. Point the remote at the VCR, and press the VCR1 button. Then press ON•OFF or CH + (channel up) or CH - (channel down) to see if the VCR responds to the remote commands. If the component does not respond, the remote needs to be programmed.

Program the Remote

There are two ways to program the remote control:

- automatic code search
- direct entry

Automatic Code Search

The following instructions can be used to program the remote to operate each of the components connected to your DVD Player. If you want to exit the automatic code search without programming any of your components, press CLEAR until the red light on the remote turns off.

1. Turn on the component you want to operate (VCR, TV, etc.)
2. Press and hold the component button you want to program (VCR1, VCR2, etc.). While holding the component button, press and hold ON•OFF until the red light on the remote turns on, then release both buttons.
3. Point the remote at the component. Press and release PLAY, then wait 5 seconds or until the red light on the remote stops flashing.

At this point the remote is searching for the correct code to program. If, after 5 seconds, the component you want to operate does not turn off, press PLAY again to tell the remote to search the next set of codes.

Continue pressing PLAY until the component turns off or you have searched through all of the codes. There are 20 total sets of codes. If the component does not turn off after pressing PLAY 20 times, then the remote cannot be programmed to operate that component.

If the component you want to control *does* turn off:

1. Press and release REVERSE, then wait 2 seconds. Repeat this step until the device turns back ON.
2. To finish, press and hold STOP until the red light on the remote turns off.

Direct Entry

1. Turn on the component to be programmed.
2. Look up the brand and code number(s) for the component on the code list in this section.
3. Point the DVD Player's remote at the component.
4. Press and hold the component button on the remote you want to program.
5. Enter the code from the Remote Control code list on the following pages.
6. Release the component button, and then press ON•OFF to see if the component responds to the command. If it doesn't, try pressing the component button and then ON•OFF again.
7. If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote commands.

Important Tips!

You must continue pressing the component button while you enter the code.

Let's say you have a Zenith TV. To program the universal remote to operate the TV you would:

Press and hold the TV button while you enter the first code listed for Zenith in the TV Codes column.

Release the TV button. Press ON•OFF to see if the TV responds. If it doesn't, follow the same steps, but enter the second code instead of the first.

Operate Components after Programming the Remote

Because this universal remote can control several different components (TV, DVD, VCR, satellite receiver, etc.) it uses operational modes triggered by the component buttons. For example if you want the remote to control the TV, you would press the TV button to put the remote into TV mode before you could control the TV.

1. Press the appropriate component button (DVD, TV, VCR1, VCR2, SAT•CABLE, or AUX) to set the remote to control the component.
2. Press ON•OFF to turn the component ON or OFF.
3. Use the remote buttons that apply to that component.

Note: This remote may not be compatible with all brands and models of components.

Other Information

TV Codes

Abex	1172
Admiral	1001, 1173
Adventura	1174
Aiko	1016
Alleron	1046
Amifron	1038
Akai	1002
Anam National	1003, 1038
AOC	1004, 1005, 1006, 1007, 1175, 1176
Audiovox	1038
Belcor	1004
Bell & Howell	1001, 1083, 1162
Bradford	1038
Brookwood	1004
Candle	1004, 1006, 1008, 1174
Capchart	1175
Celebrity	1002
Centurion	1009
Citizen	1004, 1006, 1008, 1016, 1038, 1105, 1171, 1174, 1177
Clartone	1176
Colortyme	1004, 1006
Concerto	1004, 1006
Contec/Cony	1012, 1013, 1014, 1038, 1176
Craig	1038
Crown	1038, 1171
Curtis Mathes	1000, 1004, 1006, 1015, 1105, 1162, 1171
CXC	1038
Daewoo	1004, 1005, 1006, 1016, 1017, 1018, 1127, 1171
Daytron	1004, 1006, 1171
Dimensia	1000
Dumont	1004, 1151
Dynatech	1178
Electroband	1002, 1176
Electrohome	1003, 1004, 1006, 1019, 1022
Emerson	1004, 1006, 1012, 1014, 1023, 1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033, 1034, 1035, 1036, 1037, 1038, 1039, 1041, 1042, 1043, 1044, 1046, 1047, 1123, 1124, 1162, 1171, 1176, 1177, 1179, 1191
Envision	1004, 1006
Fisher	1048, 1049, 1050, 1051, 1162, 1180
Fujitsu	1046
Funai	1038, 1046
Futuretec	1038
GE	1000, 1003, 1004, 1006, 1022, 1052, 1054, 1055, 1087, 1164, 1165, 1166, 1167, 1168, 1181
Gibraltar	1004, 1151
Goldstar	1004, 1005, 1006, 1012, 1019, 1056, 1057, 1058, 1155, 1156, 1171, 1172
Grundy	1038, 1046, 1171
Hallmark	1004, 1006
Harvard	1038
Hitachi	1004, 1006, 1012, 1013, 1059, 1060, 1061, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1142, 1143, 1144, 1145, 1146, 1148, 1150, 1179
IMA	1038
Infinity	1062
Janeil	1174
JBL	1062
JCB	1002
JC Penny	1000, 1004, 1005, 1006, 1008, 1022, 1052, 1054, 1058, 1063, 1064, 1072, 1087, 1105, 1128, 1171, 1172, 1181
Jensen	1004, 1006
JVC	1012, 1013, 1054, 1060, 1065, 1066, 1067, 1089, 1157, 1158, 1159, 1182
Kawasho	1002, 1004, 1006
Kaypani	1175
Kenwood	1004, 1006, 1019
Kloss Novabeam	1068, 1069, 1174, 1183
KTV	1038, 1070, 1171, 1176, 1177
Loewe	1062
Logik	1083
Luxman	1004, 1006
Lxi	1000, 1006, 1049,

1062, 1071, 1072, 1073, 1162, 1181	
Magnavox	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1089, 1130, 1131, 1132, 1133, 1134, 1183, 1184
Majestic	1083
Marantz	1062
Marantz	1004, 1006, 1062, 1078
Megatron	1006, 1059
Mei	1176
Memorex	1001, 1006, 1082, 1083, 1162
MGA	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1081, 1082, 1125
Midland	1054, 1151, 1171, 1172, 1181
Minutz	1052
Mitsubishi	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1081, 1082, 1125
Montgomery Ward	1083
Motorola	1003, 1173
MTC	1004, 1005, 1006, 1105, 1176, 1178
Multitech	1038, 1178
Multivision	1084
NAD	1006, 1071, 1072, 1185
NEC	1003, 1004, 1005, 1006, 1089
Nikko	1006, 1016
NTC	1016
Onwa	1038
Optimus	1185
Optonica	1095, 1173
Orion	1035, 1191
Panasonic	1003, 1054, 1062, 1170
Philco	1003, 1004, 1005, 1006, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1077, 1183, 1184
Philips	1003, 1004, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1086, 1087, 1088, 1089
Pilot	1004, 1171
Pioneer	1004, 1006, 1090, 1091, 1092, 1179, 1185
Portland	1004, 1005, 1006, 1016, 1171
Price Club	1105
Prism	1054
PROSCAN	1000, 1181
Proton	1004, 1006, 1012, 1093, 1175
Pulsar	1151
Pulser	1004
Quasar	1003, 1054, 1070, 1094
Radio Shack/Realistic	1000, 1004, 1006, 1012, 1038, 1049, 1095, 1162, 1171, 1172
RCA	1000, 1003, 1004, 1005, 1006, 1007, 1019, 1096, 1098, 1099, 1100, 1101, 1102, 1103, 1129, 1179, 1181, 1187
Rhapsody	1176
Ranco	1151
Sampo	1004, 1006, 1171, 1172, 1175
Samsung	1004, 1005, 1006, 1012, 1015, 1019, 1104, 1105, 1106, 1171, 1172
Samsux	1171
Sansui	1191
Sanyo	1004, 1048, 1049, 1050, 1080, 1107, 1108, 1162, 1169, 1180
Scotch	1006
Scott	1004, 1006, 1012, 1024, 1035, 1038, 1046
Sears	1000, 1004, 1006, 1013, 1019, 1046, 1048, 1049, 1050, 1051, 1066, 1071, 1072, 1109, 1110, 1162, 1180, 1181, 1189
Sharp	1004, 1006, 1012, 1029, 1111, 1112, 1113, 1122, 1171, 1173
Shogun	1004
Signature	1001, 1083, 1115
Simpson	1008
Sonic	1176
Sony	1002
Soundesign	1004, 1006, 1008, 1038, 1046
Squareview	1189
SSS	1004, 1038
Starlite	1038
Supremacy	1174
Supreme	1002
Sylvania	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1116, 1161, 1183, 1184

Symphonic	1033, 1038, 1189
Tandy	1173
Tatung	1003, 1178
Technics	1054
Techwood	1004, 1006, 1054
Teknika	1004, 1005, 1006, 1008, 1012, 1013, 1016, 1038, 1046, 1076, 1082, 1083, 1105, 1170, 1171
Telecaption	1117
TMK	1004, 1006
Toshiba	1049, 1071, 1072, 1089, 1105, 1109, 1117, 1118, 1160, 1162
Totevision	1171
Universal	1052, 1087
Victor	1066, 1182
Vidtech	1004, 1005, 1006
Viking	1174
Wards	1000, 1001, 1004, 1005, 1006, 1019, 1024, 1033, 1046, 1052, 1062, 1068, 1069, 1074, 1075, 1076, 1083, 1087, 1088, 1095, 1119, 1120, 1184
Yamaha	1004, 1005, 1006, 1019
Zenith	1004, 1083, 1151, 1152, 1153, 1154

VCR Codes

Admiral	2131
Adventura	2026
Aiko	2027
Aiwa	2002, 2026
Akai	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113
American High	2021
Asha	2013
Audio Dynamics	2009, 2010
Audiovox	2014
Bell & Howell	2011
Beaumont	2013
Broksonic	2012, 2025
Calix	2014
Candle	2013, 2014, 2015, 2016, 2017, 2018, 2019
Canon	2021, 2022, 2114
Capchart	2020, 2110
Carver	2062
CCE	2027, 2061
Citizen	2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027
Colortyme	2009
Colt	2061
Craig	2013, 2014, 2023, 2061
Curtis-Mathes	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
Cybernex	2013
Daewoo	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
Daytron	2110
DBX	2009, 2010
Dimensia	2000
Dynatech	2002, 2026
Electrohome	2014, 2029
Electrohome	2014
Electrophonic	2014
Emerson	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
Fisher	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
Fuji	2021, 2119
Funai	2002, 2026
Garrard	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
Goldstar	2009, 2014, 2018, 2054, 2121
Gradiente	2026
Harley Davidson	2026
Harman Kardon	2009
Harwood	2061
Headquarter	2011
Hitachi	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
Hi-Q	2023

Instant Replay	2021
JCL	2021
JC Penney	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
Jensen	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
Kenwood	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
Kodak	2014, 2021
Lloyd	2002, 2026
Logik	2061
LXI	2014
Magnavox	2021, 2022, 2062, 2063, 2104, 2108, 2124
Magnin	2013
Marantz	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
Marta	2014
Masushita	2021
Mei	2021
Memorex	2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131
MGA	2029, 2065, 2113
MGN Technology	2013
Midland	2053
Minolta	2055, 2056, 2107
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123
Montgomery Ward	2075, 2131
Motorola	2021, 2131
MTC	2002, 2013, 2026
Multitech	2002, 2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
Nikko	2014
Noblex	2013
Olympus	2021
Optimus	2014, 2131
Optonica	2096
Orion	2035
Panasonic	2021, 2022, 2109, 2125, 2126, 2127
Pentax	2016, 2055, 2056, 2107, 2120
Pentax Research	2018
Philco	2021, 2022, 2062, 2063
Philips	2021, 2062, 2096, 2124
Pilot	2014
Pioneer	2010, 2055, 2080, 2081, 2123
Portland	2016, 2017, 2019, 2110
PROSCAN	2000, 2001
Protec	2061
Pulsar	2104
Quarter	2011
Quartz	2011
Quasar	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125
Radioshack/Realistic	2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
Radix	2014
Randex	2014
Ricoh	2128
Runco	2104
Samsung	2005, 2013, 2015, 2033, 2053, 2112
Sanky	2104, 2131

Sansui	2010, 2092, 2111, 2123
Sanyo	2011, 2013, 2023
Scott	2012, 2015, 2025, 2032, 2035, 2038, 2065, 2093, 2116
Sears	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
Sharp	2002, 2017, 2029, 2094, 2095, 2096, 2131
Shintom	2004, 2056, 2061, 2098
Shogun	2013
Signature	2002, 2131
Singer	2021, 2061, 2128
Sony	2002, 2004, 2098, 2099, 2119, 2128
STS	2021, 2107
Sylvania	2002, 2021, 2022, 2026, 2062, 2063, 2065, 2124
Symphonic	2002, 2026
Tandy	2002, 2011
Tashiko	2014
Tatung	2058, 2111
TEAC	2002, 2026, 2058, 2085, 2111
Technics	2021, 2109
Teknika	2002, 2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
Toshiba	2015, 2049, 2051, 2055, 2065, 2093, 2116
Totevision	2013, 2014
Unitech	2013
Vector Research	2009, 2010, 2015, 2016
Victor	2010
Video Concepts	2009, 2010, 2015, 2016, 2113
Videosonic	2013
Wards	2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131
XR-1000	2021, 2026, 2061
Yamaha	2009, 2010, 2011, 2018, 2058, 2111
Zenith	2004, 2098, 2104, 2119, 2128

Cable Box Codes

ABC	5002, 5003, 5004, 5005, 5006, 5007, 5053
Antronix	5008, 5009
Archer	5008, 5009, 5010, 5011
Cabletenna	5008
Cableview	5008
Century	5011
Citizen	5011
Colour Voice	5012, 5013
Comtronics	5014, 5015
Contec	5016
Eastern	5017
Garrard	5011
GE Electronics	5009
Gemini	5018, 5019, 5049
General Instrument	5003
Hamlin	5020, 5021, 5022, 5035, 5045
Hitachi	5003
Hytex	5002
Jasco	5011
Jerold	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
Magnavox	5025
Memorex	5026
Movie Time	5002, 5027, 5028
NSC	5002, 5027, 5028
Oak	5002, 5016, 5029
Panasonic	5048, 5052

Paragon	5026
Philips	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
Pioneer	5033, 5034
Pulsar	5026
RCA	5047, 5049, 5052
Realistic	5009, 5049
Regal	5022, 5035
Regency	5017
Rembrandt	5003
Runco	5026
Samsung	5014, 5034
Scientific Atlanta	5006, 5036, 5037, 5038
Signal	5014, 5018
Signature	5003
SI Marx	5014
Sprucer	5052
Starcom	5007, 5018, 5053
Stargate	5014, 5018
Starquest	5018
Tandy	5040
Televue	5014
Tocom	5004, 5023, 5041
Toshiba	5026
Tusa	5018
TV86	5027
Unika	5008, 5009, 5011
United Artists	5002
United Cable	5053
Universal	5008, 5009, 5010, 5011
Videoway	5044
Viewstar	5015, 5025, 5027, 5040
Zenith	5026, 5050, 5051

Satellite Receiver Codes


Chapparral	5006, 5057
Drake	5058, 5059
GE	5000, 5001
General Instruments	5060, 5061, 5062
Panasonic	5075
Primestar	5076
PROSCAN	5000, 5001
RCA	5000, 5001
Realistic	5063
Sony	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
Toshiba	5068, 5073
Uniden	5069

Audio Codes

RCA and Dimensia	
AM/FM	4003
AUX	4004
Phono	4005
Tape	4006
CD	4007
Sony	4266
Kenwood	4264
Aiwa	4261

Other Information

Front Panel Controls

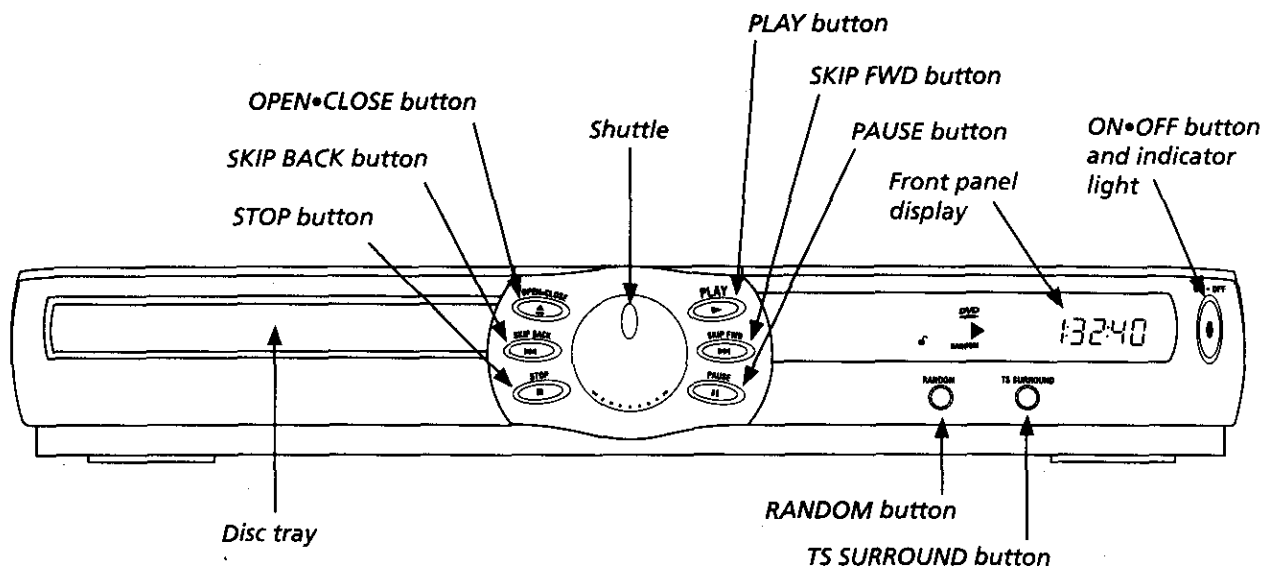

Disc tray Press OPEN•CLOSE to open and close the disc tray.

OPEN•CLOSE Press to open and close the disc tray.

Shuttle Rotate clockwise to search forward through a disc. Rotate counterclockwise to search backward through a disc. The farther you turn the shuttle, the faster the speed of the search.

SKIP BACK Allows you to move to the beginning of the preceding title, chapter, or track on a disc (in effect, "skipping" the title, chapter, or track).

SKIP FWD Allows you to move to the beginning of the next title, chapter, or track on a disc (in effect, "skipping" the title, chapter, or track).

PAUSE Pauses disc play. Advances playback one frame during pause mode.

PLAY Begins disc play (and closes disc tray if it's open).

STOP Stops disc play.

Front panel display (See following page for details.)

RANDOM Changes Play Mode to Random (plays disc tracks or chapters in random order).

TS SURROUND Use the TS SURROUND button to simulate surround sound. Each press of the button toggles the setting between on and off.

ON•OFF button and ON•OFF indicator light Turns the player on and off. The ON•OFF indicator lights when the player is on.

Other Information

Limited Warranty RCA Digital Video Disc (DVD) Player

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- 90 days - Unit exchange, which includes parts and labor.
- 91 days to 1 year - Unit exchange, which includes parts only; you pay the labor.
- The warranty for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

During the initial 90 days:

Exchange the DVD unit with a new or, at our option, refurbished unit.

After the 90 days and within one year:

Exchange the DVD unit with a new or, at our option, refurbished unit. We will bill you a flat exchange charge to replace a defective unit. This charge covers the labor cost for its repair.

How you get service:

- Call 1-800-311-9263 and have your unit's date of purchase and model/serial number ready. The model/serial number information is on the back of your unit.
- A representative will troubleshoot your problem over the phone.
- If the representative determines that you should receive a replacement unit you will be provided with a Return Authorization (RA) number and the location of a nearby exchange point if one exists. No returns will be accepted without the RA number.

To receive a replacement unit before you return yours:

Option 1:

1. Provide your Discover, Mastercard or Visa account number and expiration date to your phone representative. This is for security purposes only and your account will not be charged at this time.
2. We will send you a replacement unit.
3. If you return the unit to us within 14 days from the date you were provided a RA number, only items not covered by warranty will be charged to your account. If your unit is not received within 14 days, the suggested retail value of the receiver will be charged to your credit card. This amount will be credited, less a \$10 handling fee, if the unit is subsequently received.
4. Ship your defective unit back to us using the replacement unit's carton. Shipping instructions will be included on the carton along with your RA number which will allow you to easily ship the unit back to us. Make sure you insure your shipment in case of damage or loss. Include with the shipment:
 - Evidence of purchase date such as a bill of sale.
 - A brief note describing your unit's problem.
 - Your name, address and phone number.

Option II:

1. We will send a replacement unit to our exchange point.
2. The exchange location will notify you of its arrival.
3. Take your unit and evidence of purchase date, such as a bill of sale, to the exchange location and you will be provided the new or refurbished unit. Please retain all accessories such as the remote control hand unit.
4. If the repairs are covered by your warranty, you will not be billed.

Thomson assumes no responsibility for warranty shipments from the customer to the factory if not shipped in the manner prescribed by Thomson.

Return transportation, storage, handling and insurance costs are your responsibility. We accept no responsibility in case of damage or loss.

To receive a replacement unit after we have received your unit:

- Write the RA number on the outside of the carton used to return the unit. Make sure you insure your shipment in case of damage or loss.
- Carefully pack the unit using the original box and packing material if possible. Please retain all accessories that were included with your unit such as the remote control hand unit.
- Include with the shipment:
 1. Evidence of purchase date, such as a bill of sale, to verify your unit's warranty eligibility.
 2. A brief note describing your unit's problem.
 3. Your name, address and phone number.
- The representative will advise the address to mail a cashier's check or money order for payment if there are any out of warranty labor or parts charges, and you elect not to use your credit card.
- After we receive your product, a new or refurbished unit will be shipped to you.

What your warranty does not cover:

- Acts of God, such as but not limited to lightning damage.
- Adjustment of customer controls.
- Damage from misuse or neglect.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- Batteries.
- Units purchased or serviced outside the U.S.A.
- Shipping damage if the unit was not packed and shipped in the manner prescribed by Thomson.
- Storage fees may be charged by the exchange point if you fail to pickup the replacement unit in a timely manner.

Product Registration:

- Please complete and mail the Product Registration Card packed with your DVD product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to warranty:

- This warranty gives you specific legal rights and you may have other rights that vary from state to state.

If you purchased your product outside the United States:

- This warranty does not apply. See your dealer for warranty information.

This page left intentionally blank.

 
Accessories and Order Form




Optical Plug to Optical Plug DV3 (3 ft.) DV6 (6 ft.)



Optical Plug to Mini Plug DV3M (3 ft.) DV6M (6 ft.)



Surge Protector (SCTV160)

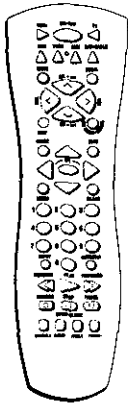

Remote Control (CRK76DG1)

Accessory Order Form for Your DVD Player

Description	Part No.	Price	Qty
Optical Plug to Optical Plug (3 ft.)	DV3	\$15.95	
Optical Plug to Optical Plug (6 ft.)	DV6	\$19.95	
Optical Plug to Mini Plug (3 ft.)	DV3M	\$15.95	
Optical Plug to Mini Plug (6 ft.)	DV6M	\$19.95	
Remote Control (CRK76DG1)	246772	\$19.95	
Surge Protector	SCTV160	\$49.95	

Total Merchandise	\$
Sales Tax	\$
We are required by law to collect the appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent.	
Shipping and Handling	\$ 5.00
Total Amount Enclosed	\$
Use VISA or MasterCard preferably.	
Money order or check must be in U.S. currency only.	
No COD or CASH.	

Prices are subject to change without notice.

All accessories are subject to availability.

Please complete other side also.



Detach Here

Other Information

Charge your order on your VISA, MasterCard, or Discover Card by filling in below

USE YOUR CREDIT CARD

IMPORTANT: Copy complete account number from your VISA card



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

My card expires:

--	--

 /

--	--

IMPORTANT: Copy complete account number from your MasterCard



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Copy Number above your name on MasterCard

--	--	--	--

My card expires:

--	--

 /

--	--

IMPORTANT: Copy complete account number from your Discover Card



--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

My card expires:

--	--

 /

--	--

AUTHORIZED SIGNATURE

(Credit card order will not be processed without signature)

Print or type your name and address clearly.



A complete and correct order will save you days of waiting.

Name: _____
Street: _____
Apt. _____
City: _____
State: _____ Zip: _____
Daytime Telephone No.: _____

Please make sure that both sides of this form have been filled out completely.

- Allow 4-6 weeks for delivery.
- All accessories are subject to availability.
- Prices are subject to change.

To Place an Order

To place your order by phone, have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below.

Use this number only to place an order for accessory items listed on this order form.

1-800-338-0376

To place your order by mail, detach and mail the completed order form with credit card information, money order or check in US currency (made payable to Thomson Consumer Electronics, Inc.) to the following address:

**Video Accessories
PO Box 8419
Ronks, PA 17573**

This page left intentionally blank.

Index

Symbols

- 16 x 9 Widescreen 63
- 2-channel stereo 66
- 4 x 3 Letterbox 63
- 4 x 3 Standard 63
- 5.1-Channel out audio 12, 66, 67

A

- A•B Repeat 33, 42
- AC IN jack 16
- Accessories 87
- Analog Output
 - 2-channel 66
 - 5.1-channel 66, 67
- Angle, camera 35
- Arrow buttons 20
- Aspect ratio 63
- Audio
 - 5.1-channel analog 12, 66, 67
 - Dolby Digital 10
- AUDIO button 20
- Audio CD
 - creating a program 56
 - Playing 40
 - using Dub Assist 46, 58
- Audio channel output
 - Changing, video CD 51
- Audio equipment
 - 5.1-Channel Out 12, 66, 67
 - Dolby Digital 10
 - DTS 10
- Audio language 32, 70
- Automatic code search 78
- AutoPlay menu 58

B

- Batteries, remote 17
- Bookmarks
 - clearing 34, 46
 - recalling 34, 45
 - storing 34, 45
 - using 34, 45

Buttons

- ANGLE 20
- arrow buttons 20
- AUDIO 20
- CH + and CH - 20
- CLEAR 21
- component 20
- DVD 20
- FORWARD 21
- FRAME - 21
- GO BACK•AGAIN 21, 37
- GUIDE 21
- INFO 21
- MENU 21
- Numbers (0-9) 21
- OK 21
- ON•OFF 17, 80
- OPEN•CLOSE 21, 80
- PAUSE 21
- PLAY 21
- REVERSE 21
- SAT•CABLE 20
- SNIP 21, 29, 37
- STOP 21
- SUBTITLE 21, 35
- TV 20
- VCR1 20
- VCR2 20
- ZOOM 21, 38

C

- Camera angle 35, 37
- Cancelling repeat feature 33, 43, 50
- CH + and CH - buttons 20
- Changing Audio Language Preference 70
- Changing Disc Menus Language 69
- Changing Menus Language Preference 69
- Chapter advance 36
- Chapter, selecting 28
- Cleaning discs 77
- CLEAR button 21
- Clearing a bookmark 34, 45
- Codes for remote 80
- Connections
 - 5.1 channel digital audio 12
 - Dolby Digital 11
 - DTS receiver 11
 - DVD Player + TV 8
 - DVD Player + TV + VCR 9
 - DVD player + TV + VCR + Satellite Receiver 15
- Connections, types of 7
- Controls
 - front panel 82
 - remote 20

D

- DIGITAL AUDIO OUT jack 10, 16
- Digital Output
 - Dolby Digital 10, 11, 65
 - DTS 10, 11, 65
- Direct entry 79
- Disc Menus language 69
- Discs
 - cleaning 77
 - digital video discs 25
 - handling 77
 - menu 25
- Display
 - front panel 82
- Display menu 63
- Dolby Digital 10, 11, 66
- Dolby Pro Logic 10, 11, 66
- DTS 10, 11, 66
- DTS Receiver 10, 11, 66
- Dub Assist 45, 58
- DVD disc
 - programming 56

E

- Edit playlist 42
- Editing Program 53
- Enter New Password 59

F

- Fast motion playback 36
- FORWARD button 21
- FRAME - button 21
- Frame advance 36
- Freeze frame (pause) 36
- Front panel controls 82
- Front panel display 83
- Front panel icons
 - angle 83
 - locked 83
 - play direction 83
 - repeat 83
 - unlocked 83
- Front tray lock feature 62

G

- Glossary 71
- GO BACK•AGAIN button 21, 37
- Grayed out 27, 49
- GUIDE button 21

H

- Handling cautions 77
 - discs 77
- How to find your TV's video input channel 18

I

- INFO button 21
- Info Display
 - Audio CD 40
 - picture of 27
 - using 27
 - video CD 49
- Installing batteries 17
- IntroScan 43
- Invalid icon 19, 27, 36, 49

J

- Jacks
 - 5.1-channel out 16
 - AC IN 16
 - AUDIO OUT CENTER 16
 - AUDIO OUT FRONT R L 16
 - AUDIO OUT SUB 16
 - AUDIO OUT SURROUND R L 16
 - DIGITAL AUDIO OUT 16
 - S-VIDEO 16
 - VIDEO OUT 16

L

- Language
 - changing the menu 69
 - subtitles 70
- Languages menu 69
- Lock Menu 59
- Locked icon 82

M

- Main menu items
 - Display menu 63
 - Glossary 71
 - Language 68
 - Lock 57
 - DVD Player menu 52, 54
 - Play Mode 55
 - Sound menu 65
- Maintenance 77
- MENU button 21
- Menus
 - action items 54
 - path items 54
 - types 24
- Modes, remote control 80
- Motion Pictures Association of America 61

N

- Navigation 19
- Number buttons 21

O

- OK button 21
- ON•OFF button 21, 78
- On-screen info display 27, 40
- OPEN•CLOSE button 21, 78
- Operating components
 - after programming remote 79
- Order form, accessories 87

P

- Password 59
- Path menu item 54
- PAUSE button 21, 77
- Picture scan 36
- PLAY button 21, 78
- Play direction icon 83
- Playback features
 - audio language 32, 37
 - bookmarks 34, 45
 - camera angle 35, 37
 - chapter advance 36
 - fast motion 36
 - repeat 33, 42, 50
 - Scene Again™ 37
 - scene snip 29, 37
 - selecting a chapter 28
 - slow motion 36
 - subtitles 37
 - using remote 36
- Playing
 - audio CD 40
 - digital video discs 24
 - Video CD 47
- Play Mode Menu
 - program play 55
 - random play 55
 - standard play 55
- Program
 - creating for an audio CD 56
 - creating for a DVD disc 56
 - editing 57
- Programing the remote 78

R

- RANDOM button 82
- Rated Titles 61
- Rating Limits 60
- Recalling bookmarks 34, 44
- Remote 20,
 - component buttons 20, 78
 - direct entry 78
 - DVD buttons 20
 - installing batteries 17
 - pointing 17
 - programming 78
 - codes 80
 - universal 78
- Repeat 33, 42, 50
 - cancelling 32, 43, 50
- REVERSE button 21

S

- S-VIDEO jack 16
- SAT•CABLE button 20
- Satellite receiver codes 83
- Scene again™ 37
- Scene Snip 29, 37
 - disc library 60
 - storing 30
 - using 30
- Selecting a chapter 28
- Shuttle control 36, 82
- SKIP FWD button 82
- SKIP REV button 82
- Skipping tracks
 - video CD 51
- Slow motion playback 36
- SNIP button 21, 29, 37
- Sound Logic 68
- Sound menu 65
- Speaker setup 67
- Speakers
 - center 67
 - front 67
 - subwoofer 67
 - surround 67
- STOP button 21, 82
- Storing bookmarks 34, 45
- Storing edits 29
- SUBTITLE button 21, 37
- Subtitle language 70
- Subtitles 37, 70
- Surround sound, simulated 66
- System test 62

T

- Title
 - selecting 28
- Track
 - selecting 40, 50
 - skipping, video CD 51
- Trashcan icon 29, 34
- Troubleshooting 76
- TruSurround® sound 1, 66, 82
- TS SURROUND button 82
- TV buttons 20
- TV Image 63
- TV's Video Input Channel 18
- Types of Discs the Player Can Play 6

U

- Universal remote
 - programming to control other brands
 - of components 78
- Unlocked icon 83
- Using bookmarks 34, 44
- Using Scene Snip 29, 60

V

- VCR codes 81
- VCR1 button 20
- VCR2 button 20

Video CD

- description 48
- Disc Menu 48
- Info display 49
- Playing 50
- Video Input Channel 18
- VIDEO OUT jack 16

Z

- ZOOM button 21, 38
- Zoom feature 38

This page left intentionally blank.

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**

10330 North Meridian Street
Indianapolis, IN 46290

©2000 Thomson Consumer Electronics, Inc.

Trademark(s)® Registered

Marca(s) Registrada(s)

Printed in USA

TOCOM 1543630A