



# TV User's Guide

---

*We bring good things to life.*

# Important Information

## WARNING

To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.

## WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN


To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

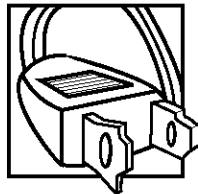

**Caution:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**Attention:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

Refer to the identification/rating label located on the back panel of your product for its proper operating voltage.

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. This damage is not covered by your warranty. Extended viewing of channels displaying these images should be avoided.

**Cable TV Installer:** This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

## Product Registration

Please fill out the product registration card and return it immediately. Returning the card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. The numbers are located on the back of the television.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Dealer/Address/Phone: \_\_\_\_\_

# Table of Contents

<b>Setup and Connections .....</b>	<b>3</b>
Step 1: Unpack the TV .....	4
Step 2: Connect Your TV .....	4
TV Only .....	4
The Basic Connection .....	5
Advanced Connections .....	6
Step 3: Plug in the TV .....	10
Step 4: Place Batteries in Remote .....	10
Step 5: Turn On the TV .....	10
Step 6: Program the TV .....	10
<b>Interactive Setup .....</b>	<b>11</b>
Using Point and Select .....	12
Entering Setup .....	12
Selecting a Language .....	13
Auto Channel Search .....	13
Setting the Time .....	14
Setting the VCR1 Channel (Auto Tuning) .....	14
Setting the VCR2 Channel (Auto Tuning) .....	15
Setting the DVD Channel (Auto Tuning) .....	15
Setting the SAT/CABLE Channel (Auto Tuning) .....	16
Labeling the Channels .....	16
<b>Using the Remote .....</b>	<b>17</b>
Remote Buttons .....	18
Using the WHO• INPUT Button .....	19
Programming the Remote .....	20
Testing the Remote .....	20
Programming the Remote .....	20
Using the Remote to Control a Device .....	21
Front Panel .....	21

# Table of Contents

<b>Using the Menu System</b> .....	<b>23</b>
Menus and Control Panels .....	24
Menus .....	24
Control Panels .....	25
Audio Menu .....	26
Using the Remote to Select an Audio Processor .....	27
Picture Quality Menu .....	28
Screen Menu .....	29
Using Closed Captioning .....	30
Channel Menu .....	31
Time Menu .....	32
<b>Features and Controls</b> .....	<b>33</b>
V-Chip Movie Rating Limit .....	40
V-Chip Unrated Program Block .....	41
Channel Block .....	41
Front Panel Block .....	42
Lock/Unlock Parental Controls .....	42
<b>Reference</b> .....	<b>43</b>
Troubleshooting .....	43
Care and Cleaning .....	45
Warranty .....	46
Accessory Information .....	48
<b>Index</b> .....	<b>51</b>

# Setup and Connections

## Getting Started

This manual is designed to get you started quickly. The first five sections of the manual show you how to get your TV setup and connected, run the interactive setup, program the remote, and use all of the menus, features, and controls of your TV.

The Reference section in the back of the book contains troubleshooting tips, care and cleaning instructions, accessory ordering information and your warranty.

Well...if your TV's out of the box, let's get started.

**1 SETUP AND CONNECTIONS**



**2 INTERACTIVE SETUP**



**3 USING THE REMOTE**



**4 USING THE MENU SYSTEM**



**5 FEATURES AND CONTROLS**



**6 REFERENCE**

**Check out the notes that have been added throughout the manual in these tip boxes. There are some important tips that will help you get the most from your TV.**

# Setup and Connections

## Step 1: Unpack the TV

Make sure to locate the remote control.

## Step 2: Connect Your TV

There are three types of connections outlined in this section:

**TV Only:** If you're only going to connect the TV to your home antenna or cable system.

**The Basic Connection:** If you're going to connect the TV to a VCR or satellite receiver.

**Advanced Connections:** If you're going to make multiple connections, hooking up the TV to a VCR and a satellite receiver.

Cable information and illustrations are given for each type of connection. Once you have completed your desired connection you may skip forward to Step 3.

### TV Only

This is a basic connection from an antenna or cable system to your TV. Connect the cable into the Cable/Antenna jack as shown.


#### Cables

You will use the following cable to make your connection:



**Coaxial Cable:** These cables carry audio and video signals to the TV from an antenna, cable, or cable box.

CABLE, CABLE BOX, OR ANTENNA

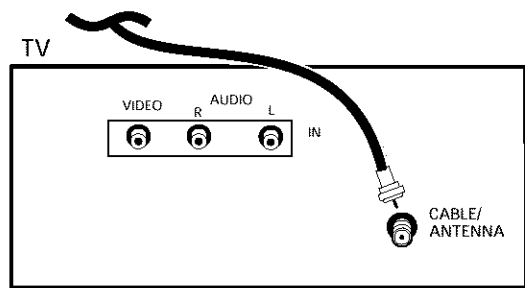

### Important Stand Information

**CAUTION:** Choose the location for your TV carefully. Take precautions that the stand or other furniture on which the TV is placed is properly located (see Important Safeguards sheet) and of adequate size and strength to prevent the TV from accidentally being tipped over, pushed off, or pulled off. This could cause damage to the TV and/or personal injury.

### Before You Connect

Protect against power surges:

- Connect all components before plugging any power cords into the wall outlet.
- Turn off the TV and/or component before connecting or disconnecting any cables.
- Make sure all antennas and cables are properly grounded. Refer to the Important Safeguards sheet packed with your TV.

Once you have completed this connection you may skip to Step 3.

# Setup and Connections

## The Basic Connection

The basic connection below (TV and VCR) is the most common connection and is therefore used to illustrate a single component connection with your TV. For better sound and picture quality and multiple component connection information refer to the description of Advanced Connections, later in this section.

### Cables


You will use the following type of cable to make your connection:



**Coaxial Cables:** In this connection, two coaxial cables are used: one connects from an antenna, cable, or cable box to the VCR, and one connects from the VCR to the TV. These cables carry both audio and video

signals.

CABLE, CABLE BOX, OR ANTENNA

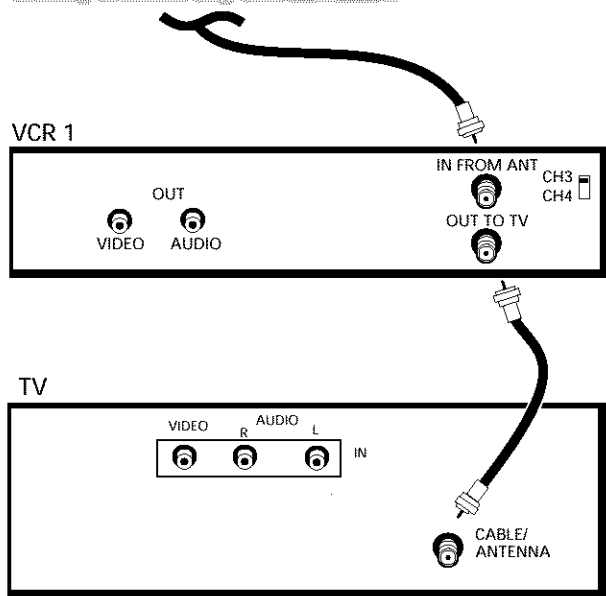

Once you have completed this connection you may skip to Step 3.

### How to View the VCR

To watch the VCR in this connection tune TV to Channel 3 or 4.

Later, in the *Interactive Setup* section you will learn how to program the TV to automatically tune to Channel 3 or 4.

# Setup and Connections

## Advanced Connections

Advanced connections give you better sound and video by separating the audio and video signals and enabling you to connect multiple components.

This section describes the types of inputs available on the back of your TV and suggests ways you can use them for optimum performance.

### Back of the TV

The diagram below describes each of the back panel jacks. When connecting A/V cables, be sure to connect corresponding outputs and inputs (Video to Video, Right Audio to Right Audio, etc.).


Once you have made your connections you will need to program the TV to tune to the correct video input channel in order to see and hear audio and video from the component. You will program this later in the *Interactive Setup* section.

#### Video and Audio Inputs

Connect any one of the following components:

- VCR
- Internet Access Device
- Laserdisc Player
- DVD Player
- Satellite Receiver

To view the component connected to VIDEO, use the WHO•INPUT button on the remote.

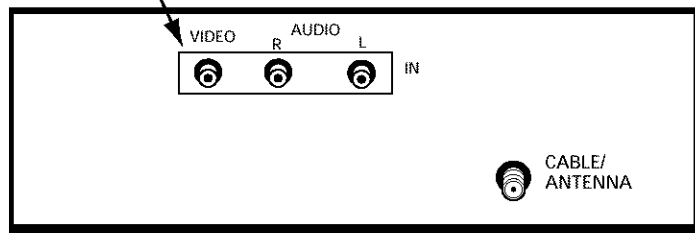

#### Cable/Antenna

Takes the signal input from a cable, cable box, or an off-air antenna. Can also be used for basic component connections.



# Setup and Connections

## Sample Connections

The following are sample connection scenarios you may encounter when connecting components to your TV.

## Cables


You will use the following types of cables to make your connections:



**Coaxial Cables:** Carry the signal from the antenna or cable directly to the television or through a cable box, as needed by your cable system.



**Audio/Video Cables\*:** Carry audio and video from a component to the TV.

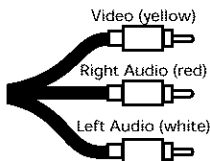

\* Most Audio/Video cables are combined into one cable with three heads on each end. We show individual cables in these sample connections. Either may be used, but you must be sure to connect Video to Video, Right to Right and Left to Left.

## Cautions:

### Position Cables to Avoid Audio Hum or Interference

- Insert all cables firmly into jacks.
- Place the audio/video cables to the sides of the TV's back panel instead of straight down the middle.
- Try not to coil any twin-lead cables and keep them away from the audio/video cables.


### Protect Your Components From Overheating

- Do not block ventilation holes in any of the components. Arrange the components so that air can circulate freely.
- Do not stack components.
- Allow adequate ventilation when placing your components in a stand.
- Place an amplifier on the top shelf of the stand so heated air rising from it will not flow around other components.

# Setup and Connections

## TV and Stereo VCR

Compared to the basic connection, using Audio/Video cables will enhance the sound and picture quality from a component.

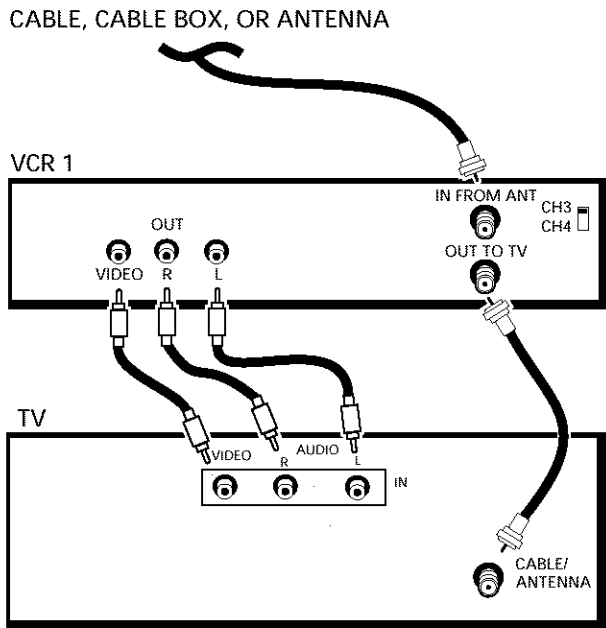


## How to View Your VCR

To watch the VCR in this connection, press TV to put the remote control into TV mode, then press WHO•INPUT to scroll to the video (VID) input.

In the *Interactive Setup* section you will learn how to program the TV to automatically tune to the VID input channel.

# Setup and Connections

## TV, Stereo, and Satellite Receiver

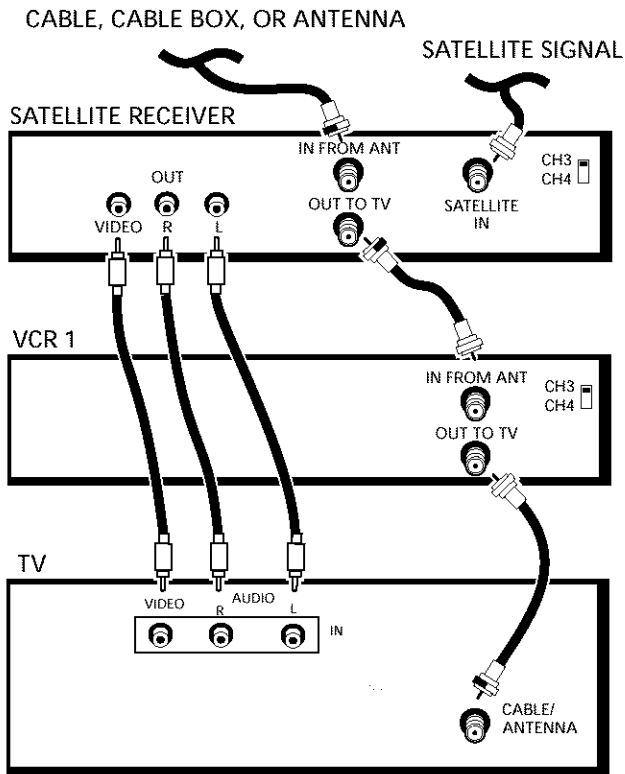

### How to View Your Components

To watch the satellite receiver in this connection, press TV to put the remote control into TV mode, then press WHO•INPUT to scroll to the VID input.

To watch the VCR in this connection, enter 03 to tune to the VCR channel.

In the *Interactive Setup* section, you will learn how to program the TV to automatically tune to the correct input channel.


# Setup and Connections

## Step 3: Plug in the TV

Plug the end into the wall outlet, matching the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.


## Step 4: Place Batteries in Remote

- Remove the battery compartment cover from the back of the remote.
- Insert fresh batteries. Make sure that the polarities (+ and -) are aligned correctly.
- Replace the cover.

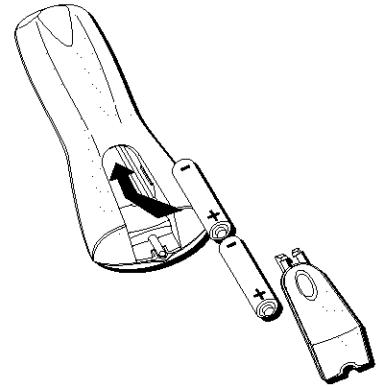

## Step 5: Turn On the TV

Press TV on the remote, or press POWER on the TV itself. Pressing the TV button not only turns on the TV, but puts the remote into TV mode, so that the buttons on the remote will control TV functions.

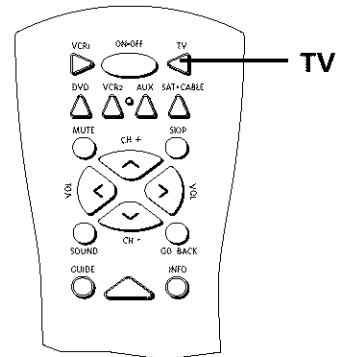

## Step 6: Program the TV

Proceed to the next section, *Interactive Setup*. The interactive setup routine walks you through the steps needed to configure the TV.

# Interactive Setup

## There's an On-Screen Setup Routine

The interactive setup routine helps you through the steps needed to configure the TV:

- Select a menu language
- Search for available channels
- Set the time
- Set the VCR1 channel
- Set the VCR2 channel
- Set the DVD channel
- Set the SAT/CABLE channel
- Make the channel list and labels

**1** SETUP AND CONNECTIONS



**2** INTERACTIVE SETUP



**3** USING THE REMOTE



**4** USING THE MENU SYSTEM



**5** FEATURES AND CONTROLS




**6** REFERENCE

# Interactive Setup

## Using Point and Select

You only need to know one rule when using the remote to access on-screen menus and control panels: point and select. The point and select method has two steps.


- 1. Point** to a menu item using the MOVE arrows on the remote.  
To point up or down, press the up or down arrows. To point left or right, press the left or right arrows.
- 2. Select** a menu item by pressing MENU or OK.  
Selecting an item tells the TV's menu system to go ahead and make the change or go to a place you have indicated.

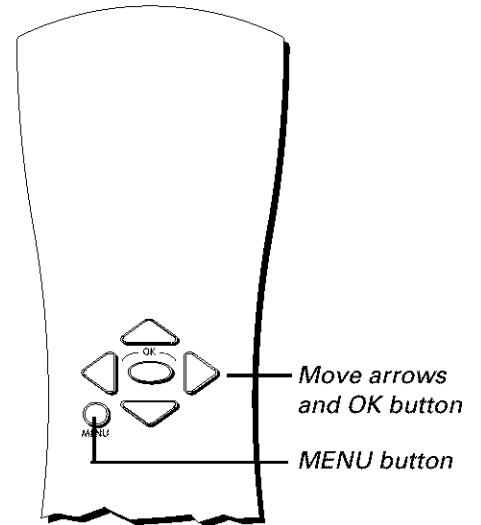

## Entering Setup

The first screen of the Interactive Setup appears automatically when you turn on your TV for the first time or after a power outage.

1. Press MENU to begin setup or CLEAR to exit.

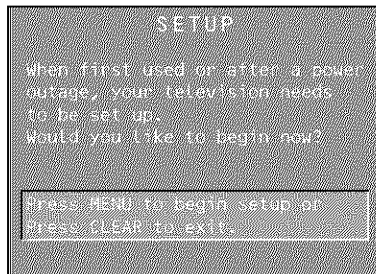

You can also access the Interactive Setup through the Main menu:

1. Press MENU to bring up the Main menu.



2. Point to *Setup* and press MENU or OK. The first Setup screen comes up, asking you to confirm that you want to begin.

You can also select a menu item by entering the item number with the digit buttons on the remote.

Press CLEAR at any time to remove all displays from the screen and return to TV viewing.

Many VCR user manuals refer to a PROGRAM button. The MENU button on this remote works as a PROGRAM button in VCR mode. Other manuals may refer to a SELECT button. The OK button on this remote works as a SELECT button.

# Interactive Setup



3. Point to *Begin setup now* and press MENU or OK.

## Selecting a Language

The first part of the setup routine asks you to select your preferred language for the menu system.



1. Point to your preferred language for the menu system.
2. Press MENU or OK to select that language.

## Auto Channel Search

The next part of the setup routine asks you if you want the TV to search for all channels viewable through your antenna or cable TV system. This is sometimes called “auto programming.”



1. Press MENU or OK to tell the TV to begin searching for channels. When done, press MENU or OK to continue.


**If you skip Auto Channel Search now, you can access it later through the Channel menu. See *Using the Menu System* for more details.**

# Interactive Setup

## Setting the Time

The next step in the Interactive Setup lets you set the time of day.

1. Press MENU or OK to bring up the Set Time control panel.
2. Use the left and right arrows to point to the hour and minutes spaces. Use the digits to enter the numbers and the up and down arrows to change from AM to PM.
3. Press MENU or OK to continue.

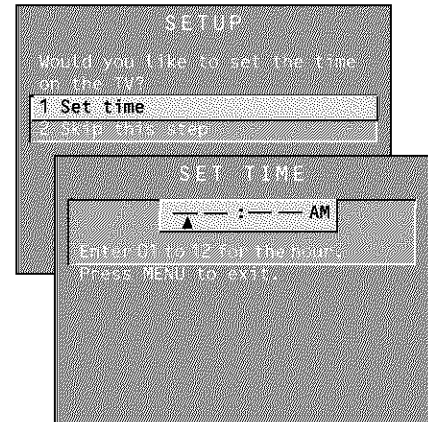


## Setting the VCR1 Channel (Auto Tuning)

The next step lets you set the VCR1 channel. When you set the VCR1 channel, you're telling the TV what channel to tune to when you press the VCR1 button on the remote. This is called auto tuning.

Indicate which input you used to connect the VCR. If you don't have a VCR1 component connected to the TV, skip this step or select *Not Connected* from the VCR1 Channel choice list. (For more, see Auto Tuning in the *Using the Menu System* section.)

1. Press MENU or OK to bring up the VCR1 choice list.
2. Point to the choice that matches the way you have your VCR connected to the TV.
3. Press MENU or OK to continue.

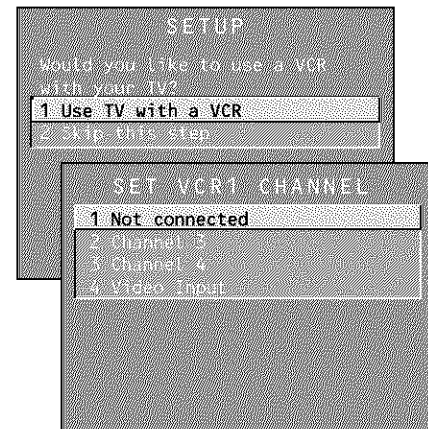




## Setting the VCR2 Channel (Auto Tuning)

The next step lets you set the VCR2 channel. When you set the VCR2 channel, you're telling the TV what channel to tune to when you press the VCR2 button on the remote.

Indicate which input you used to connect a second VCR. If you don't have a second VCR component connected to the TV, skip this step or select *Not Connected* from the VCR2 Channel choice list. (For more, see Auto Tuning in the *Using the Menu System* section.)

1. Press MENU or OK to bring up the VCR2 choice list.
2. Point to the choice that matches the way you have your second VCR connected to the TV.
3. Press MENU or OK to continue.

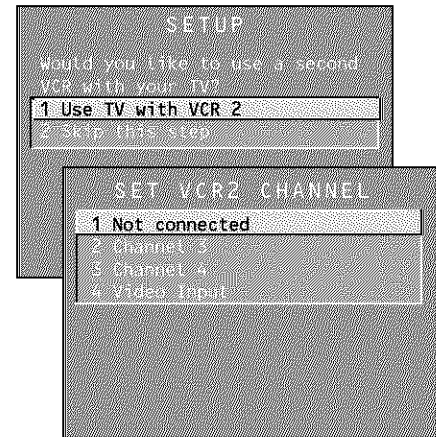

## Setting the DVD Channel (Auto Tuning)

The next step lets you set the DVD channel. When you set the DVD channel, you're telling the TV what channel to tune to when you press the DVD button on the remote.

Indicate which input you used to connect a DVD player. If you don't have a DVD player connected to the TV, skip this step or select *Not Connected* from the DVD Channel choice list. (For more, see Auto Tuning in the *Using the Menu System* section.)

1. Press MENU or OK to bring up the DVD choice list.
2. Point to the choice that matches the way you have your DVD player connected to the TV.
3. Press MENU or OK to continue.




## Setting the SAT/CABLE Channel (Auto Tuning)

The next step lets you set the SAT/CABLE channel. When you set the SAT/CABLE channel, you're telling the TV what channel to tune to when you press the SAT•CABLE button on the remote.

Indicate which input you used to connect a satellite receiver or a cable box. If you don't have a satellite receiver or cable box connected to the TV, skip this step or select *Not Connected* from the SAT/CABLE Channel choice list. (For more, see Auto Tuning in the *Using the Menu System* section.)

1. Press MENU or OK to bring up the SAT/CABLE choice list.
2. Point to the choice that matches the way you have your satellite receiver or cable box connected to the TV.
3. Press MENU or OK to continue.

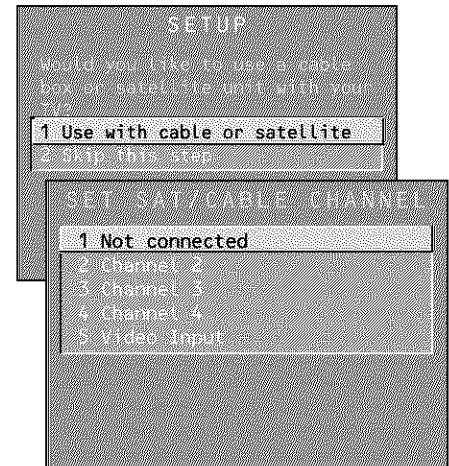


## Labeling the Channels

This last step in the Interactive Setup lets you edit your channel list and label your channels. (For more, see List and Labels in the *Using the Menu System* section.)

1. Press MENU or OK to bring up the List and Labels control panel.
2. Use the left and right arrows to point to the three different areas of the control panel (called "fields").
3. Use the up and down arrows to scroll through the numbers and letters and select *Yes* or *No* in the Normal List field. You may wish to refer to the call letters listed in your newspaper's TV section for ideas on labeling the channels.
4. Repeat this process for each of your channels. Then press MENU or OK to continue. The TV can store up to 27 labels in memory.

The list and labels feature can also be accessed from the Channel menu. Because this procedure can be time consuming, feel free to skip this step and come back to it later.

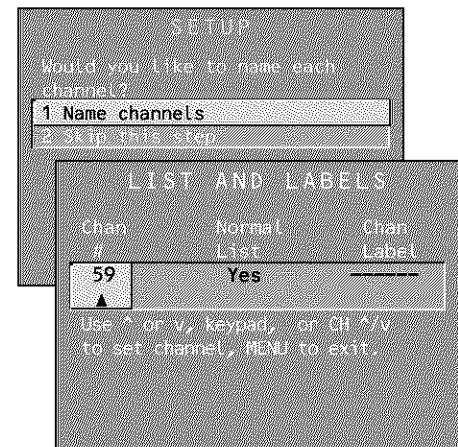

**Use the CH ^ (channel up) or CH v (channel down) buttons to change channels in the Chan # field. This works even if you're not in the Chan # field. Or, enter the channel number directly using the number buttons on the universal remote. To enter a number greater than 99, press and hold "1" to enter the hundreds digit, then press the two remaining numbers.**

# Using the Remote

## How to use Your Universal Remote

This section defines the buttons of the remote and how to program it to control other components.

The universal remote can be programmed to control most brands of remote controllable VCRs, satellite receivers, and cable boxes. If you have an RCA, GE, or PROSCAN component, you probably don't need to program it at all.

**1 SETUP AND CONNECTIONS**



**2 INTERACTIVE SETUP**



**3 USING THE REMOTE**



**4 USING THE MENU SYSTEM**



**5 FEATURES AND CONTROLS**



**6 REFERENCE**

### **Modes of Operation**

Because this universal remote can control several different components (DVD player, VCR, cable box, etc.), it uses operational modes triggered by the component buttons. For example if you want the remote to control the TV, you would press the TV button to put the remote into TV mode before you could control the TV.

# Using the Remote

## Remote Buttons

**ON•OFF** When in TV mode, turns TV on and off. If in another device mode (VCR, DVD, Satellite, etc.) and programmed, will turn the device on and off. When pressed twice within two seconds, all devices that are on will be turned off (this feature only works with most RCA, GE, and PROSCAN products).

**VCR1** Puts the remote in VCR mode and if autotuning is enabled, it will turn on the TV and tune to the correct channel.

**TV** Turns on the TV and puts the remote in TV mode. Also displays channel information.

**DVD** Puts the remote in DVD mode and if Auto Tuning is enabled, it will turn on the TV and tune to the correct channel.

**VCR2** Puts the remote in VCR2 mode and if Auto Tuning is enabled, it will turn on the TV and tune to the correct channel.

**LED** Red light which indicates programming mode when programming the remote. Also displays when a valid remote button is pressed.

**AUX** When pressed, will turn on the RCA, GE, or PROSCAN component you have programmed it to control. Also turns on the TV if Auto Tuning is enabled and the remote is programmed to control a TV.

**SAT•CABLE** Puts the remote in SAT•CABLE mode and if Auto Tuning is enabled, it will turn on the TV and tune to the correct channel.

**MUTE** Reduces the TV's volume to its minimum level. Press again to restore the volume.


**SKIP** Press once before changing channels and the TV will wait 30 seconds before returning you to the original channel. Press repeatedly to add more time.

**CH ^ or CH v** Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels.

**VOL< or VOL>** Decreases or increases the TV's volume.

**SOUND** Press once to display the audio processor choice list. Point and select to choose a different processor or press CLEAR to exit.

**GO BACK** Returns you to the previous channel.

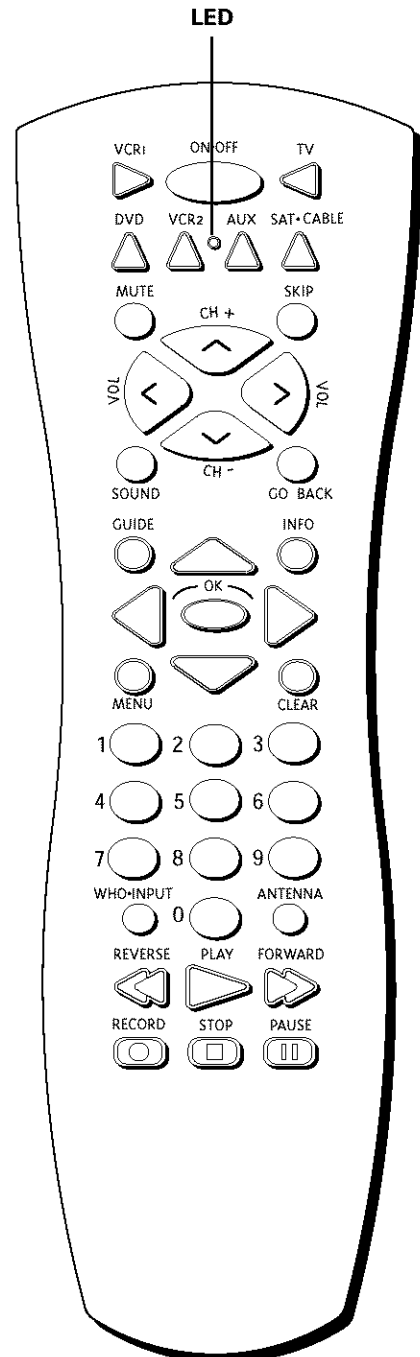

# Using the Remote

**GUIDE** In SAT•CABLE mode, brings up available on-screen guides.

**INFO** Brings up channel information.

**MOVE (Arrows)** Used to point to different items in the menu system.

**OK** When in the menu system, selects highlighted items or returns you to the previous menu.

**MENU** Brings up the Main menu and selects highlighted items. When in VCR mode, it functions as a PROGRAM button.

**CLEAR** Removes any menu or display from the screen and returns you to TV viewing.

**(0-9) Number Buttons** Enters channel numbers, numbers for programming the remote, and time settings directly through the remote control. To enter a two-digit channel, press the two digits. To enter a three-digit channel, press and hold the first digit, release, then add the second two. For example, to tune to channel 123, press and hold 1, release, press 2, then press 3.

**WHO•INPUT** In TV mode, press to toggle through the available input sources (VID and the current channel). In SAT mode, press to select available channel lists.

**ANTENNA** Functions as TV/VCR button in VCR mode and TV/receiver button in SAT•CABLE mode.

**REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE** If programmed, provides transport control for some remote-controllable VCRs, DVD players, laserdisc players, tape decks, and CD players.

## Using the WHO•INPUT Button

Use the WHO•INPUT button to toggle through the available input sources (VID and the current channel) and view the component you have connected to the TV.

1. Press TV to place the remote in TV mode. Make sure that the component you want to view is turned ON.
2. Press WHO•INPUT to tune to the available input source and view the component.
3. Press WHO•INPUT again to tune back to the channel you were previously watching.

### Modes of Operation

Because this universal remote can control several different components (DVD player, VCR, cable box, etc.), it uses operational modes triggered by the component buttons. For example, if you want the remote to control the TV, you would press the TV button to put the remote into TV mode before you could control the TV.

# Using the Remote

## Programming the Remote

The universal remote can be programmed to control most brands of remote controllable VCRs, receivers, etc. The remote is already programmed to control most RCA, GE and PROSCAN TVs, VCRs, DVD players, laserdisc players and satellite receivers.

## Testing the Remote

To determine whether the universal remote needs to be programmed, turn a device ON, such as a VCR, point the remote at the VCR, and press the VCR1 button. Then press ON•OFF or CH ^ (channel up) or CH v (channel down) to see if the VCR responds to the remote commands. If not, the remote needs to be programmed.

## Programming the Remote

### Using Automatic Code Search

The following instructions can be used to program the remote to control each of the devices connected to your TV. If you want to exit the automatic code search without programming any of your devices, press and hold CLEAR until the LED turns off.


1. Turn on the device you want to control (VCR, SAT, etc.).
2. Press and hold the button you want to program (VCR1, VCR2, etc.). Note that the AUX button can only be programmed with direct entry (see the next section for details). While holding the device button, press and hold ON•OFF until the red light on the remote turns on, then release both buttons.
3. Press and release PLAY, then wait five seconds or until the LED stops flashing.

At this point the remote is searching for the correct code to program. If, after five seconds, the device you want to control does not turn off, press PLAY again to tell the remote to search the next set of codes.

Continue pressing PLAY until the device turns off or you have searched through all of the codes. There are 20 total sets of codes. If the device does not turn off after pressing PLAY 20 times, then the remote cannot control that particular device.

If the device you want to control *does* turn off:

1. Press and release REVERSE, then wait two seconds. Repeat this step until the device turns back ON.
2. To finish, press and hold STOP until the red light on the remote turns off.

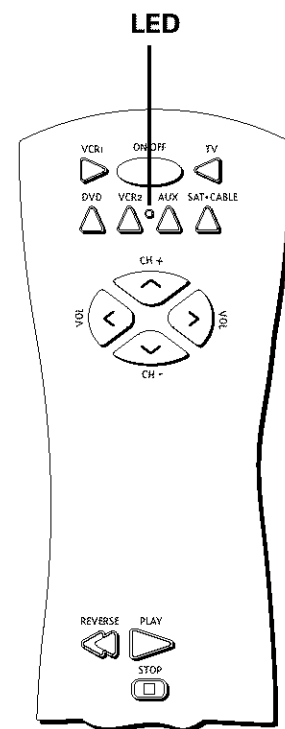

**You'll use these buttons when you program the remote to control any device.**

**The remote may not operate all models of all brands.**

**Note that the AUX button can only be programmed using direct code entry (described next in this section).**

# Using the Remote

## Using Direct Entry

1. Turn on the component to be programmed.
2. Look up the brand and code number(s) for the component on the code list on the last page of this section.
3. Press and hold the button on the remote you want to program.
4. Enter the code from the code list.
5. Release button, and then press ON•OFF to see if the component responds to the remote commands. If it doesn't, try pressing the component button and then ON•OFF again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the component responds to the remote commands.

## Using the Remote to Control a Device

Once the remote has been programmed successfully, you are ready to use it to control your devices. To operate the device:

1. Press the device button (TV, VCR1, VCR2, DVD, or SAT•CABLE) to set the remote to control the device.
2. Press ON•OFF to turn the device on or off.
3. Use the remote buttons that apply to that device.

## Front Panel

If you cannot locate your remote, you can use the front panel of your TV to operate many of the TV's features.

**MENU** Brings up the Main menu. When in the menu system, it selects highlighted items. Also returns you to the previous menu.

**CH v** Scans down through the current channel list. In the menu system, it points down to items and adjusts menu controls.

**CH ^** Scans up through the channel list. In the menu system, it points up to items and adjusts menu controls.


**VOL -** Decreases the volume. When in the menu system, VOL - is used to point left to items and adjust menu controls.

**VOL +** Increases the volume. When in the menu system, VOL + is used to point right to items and adjust menu controls.

**POWER** Turns the TV on and off.

## Modes of Operation

Because this universal remote can control several different components (DVD player, VCR, cable box, etc.), it uses operational modes triggered by the component buttons. For example, if you want the remote to control the TV, you would press the TV button to put the remote into TV mode before you could control the TV.

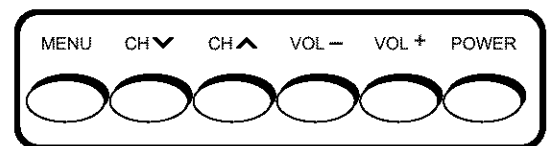

The front panel above shows a typical button layout. The exact look of the buttons may be different from those on the front of your TV.

The front panel block feature disables all front panel buttons if Parental Controls are locked. For more information, see Parental Control, in the *Features and Controls* section.

# Using the Remote

## VCR

Admiral	2131
Adventura	2026
Aiko	2027
Aiwa	2002, 2026
Akai	2003, 2004, 2005, 2007, 2008, 2111, 2112, 2113
American High	2021
Asha	2013
Audio Dynamics	2009, 2010
Audiovox	2014
Bell & Howell	2011
Beaumarck	2013
Broksonic	2012, 2025
Calix	2014
Candle	2013, 2014, 2015, 2016, 2017, 2018, 2019
Canon	2021, 2022, 2114
Capehart	2020, 2110
Carver	2062
CCE	2027, 2061
Citizen	2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027
Colortyme	2009
Coit	2061
Craig	2013, 2014, 2023, 2061
Curtis-Mathes	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
Cybernex	2013
Daewoo	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
Daytron	2110
Dbx	2009, 2010
Dimensia	2000
Dynatech	2002, 2026
Electrohome	2014, 2029
Electroponic	2014
Emerson	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
Fisher	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
Fuji	2021, 2119
Funai	2002, 2026
Garrard	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
Goldstar	2009, 2014, 2018, 2054, 2121
Gradiente	2026
Harley Davidson	2026
Harman Kardon	2009
Harwood	2061
Headquarter	2011
Hitachi	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
Hi-Q	2023
Instant Replay	2021
JCL	2021
JC Penney	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
Jensen	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
Kenwood	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
Kodak	2014, 2021
Lloyd	2002, 2026
Logik	2061
LXI	2014
Magnavox	2021, 2022, 2062, 2063, 2104, 2108, 2124
Magnin	2013
Marantz	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
Marta	2014
Masushita	2021
MEI	2021
Memorex	2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131
MGA	2029, 2065, 2113
MGN Technology	2013
Midland	2053
Minolta	2055, 2056, 2107
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123

Montgomery Ward	2075, 2131
Motorola	2021, 2131
MTC	2002, 2013, 2026
Multitech	2002, 2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
Nikko	2014
Noblex	2013
Olympus	2021
Optimus	2014, 2131
Optonica	2096
Orion	2035
Panasonic	2021, 2022, 2109, 2125, 2126, 2127
Pentax	2016, 2055, 2056, 2107, 2120
Pentax Research	2018
Philco	2021, 2022, 2062, 2063
Philips	2021, 2062, 2096, 2124
Pilot	2014
Pioneer	2010, 2055, 2080, 2081, 2123
Portland	2016, 2017, 2019, 2110
PROSCAN	2000, 2001
Protoc	2061
Pulsar	2104
Quarter	2011
Quartz	2011
Quasar	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125
Radioshack/Realistic	2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
Radix	2014
Randex	2014
Ricoh	2128
Runco	2104
Samsung	2005, 2013, 2015, 2033, 2053, 2112
Sanky	2131, 2104
Sansui	2010, 2092, 2111, 2123
Sanyo	2011, 2013, 2023
Scott	2012, 2015, 2025, 2032, 2035, 2038, 2065, 2093, 2116
Sears	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
Sharp	2002, 2017, 2029, 2094, 2095, 2096, 2131
Shintom	2004, 2056, 2061, 2098
Shogun	2013
Signature	2002, 2131
Singer	2021, 2061, 2128
Sony	2002, 2004, 2098, 2099, 2119, 2128
STS	2021, 2107
Sylvania	2002, 2021, 2022, 2026, 2062, 2063, 2065, 2124
Symphonic	2002, 2026
Tandy	2002, 2011
Tashiko	2014
Tatung	2058, 2111
TEAC	2002, 2026, 2058, 2085, 2111
Technics	2021, 2109
Teknika	2002, 2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
Toshiba	2015, 2049, 2051, 2055, 2065, 2093, 2116
ToteVision	2013, 2014
Unitech	2013
Vector Research	2009, 2010, 2015, 2016
Victor	2010
Video Concepts	2009, 2010, 2015, 2016, 2113
Videosonic	2013
Wards	2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131
XR-1000	2021, 2026, 2061
Yamaha	2009, 2010, 2011, 2018, 2058, 2111
Zenith	2004, 2098, 2104, 2119, 2128

Citizen	5011
Colour Voice	5012, 5013
Comtronics	5014, 5015
Contec	5016
Eastern	5017
Garrard	5011
GC Electronics	5009
Gemini	5018, 5019, 5049
General Instrument	5003
Hamlin	5020, 5021, 5022, 5035, 5045
Hitachi	5003
Hytex	5002
Jasco	5011
Jerrold	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
Magnavox	5025
Memorex	5026
Movie Time	5002, 5027, 5028
NSC	5002, 5027, 5028
Oak	5002, 5016, 5029
Panasonic	5048, 5052
Paragon	5026
Philips	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
Pioneer	5033, 5034
Pulsar	5026
RCA	5047, 5049, 5052
Realistic	5009, 5049
Regal	5022, 5035
Regency	5017
Rembrandt	5003
Runco	5026
Samsung	5014, 5034
Scientific Atlanta	5006, 5036, 5037, 5038
Signal	5014, 5018
Signature	5003
SL Marx	5014
Sprucer	5052
Starcom	5007, 5018, 5053
Stargate	5014, 5018
Starquest	5018
Tandy	5040
Televue	5014
Tocom	5004, 5023, 5041
Toshiba	5026
Tusa	5018
TV86	5027
Unika	5008, 5009, 5011
United Artists	5002
United Cable	5053
Universal	5008, 5009, 5010, 5011
Videoway	5044
Viewstar	5015, 5025, 5027, 5040
Zenith	5026, 5050, 5051

## Satellite Receivers

Chapparral	5056, 5057
Drake	5058, 5059
GE	5000, 5001
General Instruments	5060, 5061, 5062
Panasonic	5075
Primestar	5076
PROSCAN	5000, 5001
RCA	5000, 5001
Realistic	5063
Sony	5072
STS1	5064
STS2	5065
STS3	5066
STS4	5067
Toshiba	5068
Toshiba	5073
Uniden	5069

## Cable Boxes

ABC	5002, 5003, 5004, 5005, 5006, 5007, 5053
Antronix	5008, 5009
Archer	5008, 5009, 5010, 5011
Cableterra	5008
Cableview	5008
Century	5011

## Audio

(For RCA and Dimensia brands only)

AM/FM	4003
Aux	4004
Phono	4005
CD	4007
Tape	4006



# Using the Menu System

## The Menu System

This section explores the menus of your TV—beginning with some information on using menus and control panels.

Each menu is then outlined and special features are detailed to help you get the most from your TV.

**1 SETUP AND CONNECTIONS**



**2 INTERACTIVE SETUP**



**3 USING THE REMOTE**



**4 USING THE MENU SYSTEM**



**5 FEATURES AND CONTROLS**



**6 REFERENCE**

# Using the Menu System

## Menus and Control Panels

Using the buttons on both the remote and front panel enable you to access and make changes to the menus, control panels, and choice lists.

Menus and choice lists use the point and select rule to navigate, but control panels use a variety of methods to adjust features on your TV. The following pages detail how to use these controls to customize the functions of your TV.

## Menus

The first menu is called the Main menu. Press MENU on the remote or on the front panel to bring up the Main menu:



Menus take you to another menu or a control panel. There are two ways to select a choice in a menu:

- Point with the arrows and then select with MENU or OK.
- Press a number button on the remote. For example, in the Main menu press 3 to go straight to the Screen menu.

### Exiting a menu

There are three ways to exit a menu:

- Point to *Exit* and press MENU or OK.
- Press 0 on the remote.
- Press CLEAR. The on-screen displays are cleared from the screen and you return to TV viewing.

**Feel free to explore the menu system. If you're ever unsure where you are in the menu system, or you're just plain tired of exploring, press CLEAR to remove the menus from the screen and start over again.**

# Using the Menu System

## Control Panels


Control panels allow you to adjust the default settings on many features of your TV. You can choose a setting, enter a number, or adjust a level such as tint or brightness. There are three types of control panels: sliders, choice lists, and numeric entry.

### Sliders

Sliders are used to make adjustments to a particular control.

To use a Slider in a menu:


1. Press the up or down arrow to select the slider control for the feature you want to adjust.
2. Press the right or left arrow to adjust the indicator line on the slider.

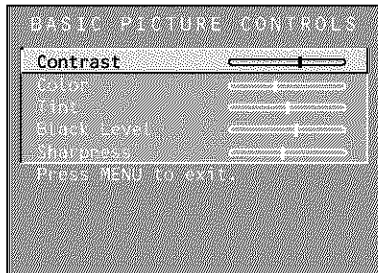


### Numeric Entry

A numeric entry control panel is used to enter numbers or letters.

A pointer appears underneath the column you are changing.

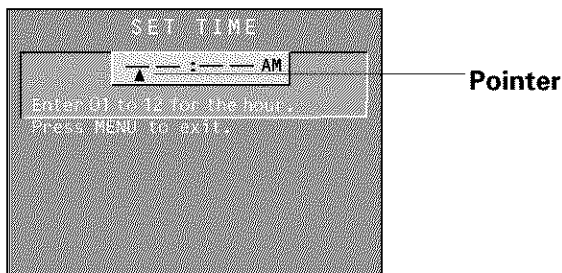

1. Use the digits to enter a number in the column above the pointer.

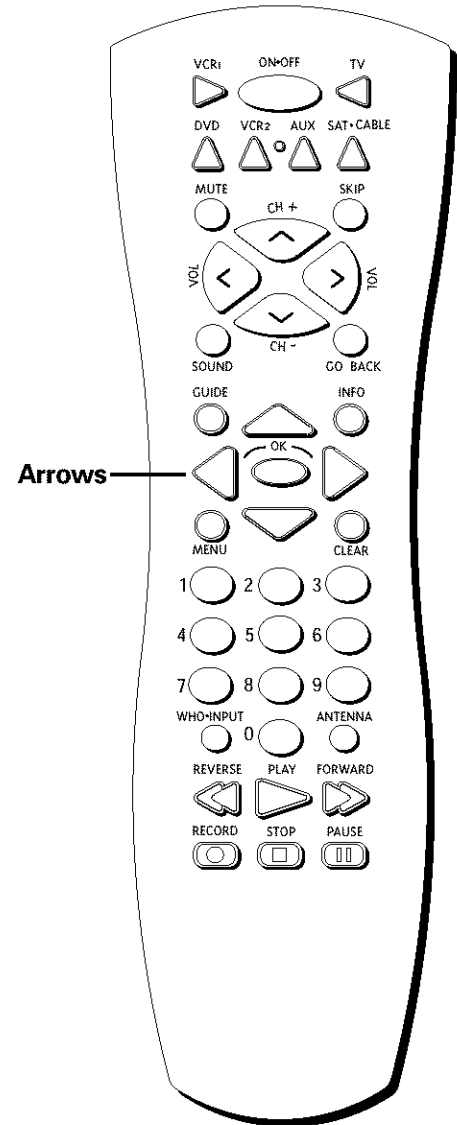

**If the control panel is not set to the current time, use the arrows to go back over the columns and the digits to make changes.**

**You can also enter numbers by using the up and down arrows on the remote.**

# Using the Menu System


2. Press the right arrow to move to the next column, then use the digits to enter a number.
3. When you have finished entering information, press MENU or OK.

## Choice Lists

Choice lists are used to choose a particular setting from a list. When the choice list appears, the highlighted item is the one that is currently selected, or “in use.”

Point to a choice on a menu and press MENU or OK to select that choice. You will then return to the previous screen.

Now that you know how to access the menus and adjust the control panels, the following pages provide a brief explanation of all the menu features. The features are organized in order of their location on the Main menu.

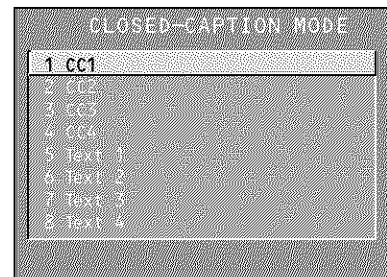

## Audio Menu

**Mute** Press OK to reduce the TV’s volume to its minimum level. Press OK again to restore the volume.


**Tone Controls** Displays the slider controls for adjusting the TV’s treble, bass and balance.

**Audio Processor** Displays a choice list of available audio modes, which control the way the sound comes through your speakers.

**Mono** Plays the sound in mono only. Use this setting when receiving broadcasts with weak stereo signals.

**Stereo** Splits the incoming stereo audio signal into left and right channels. Most TV programs and recorded materials have stereo audio. The TV displays the word STEREO when you tune to a program that is broadcast in stereo.

**Expanded Stereo** Electronically “widens” sound from stereo broadcasts, stereo VCRs, digital satellite systems, DVD players, and laserdisc players for a fuller, more spacious sound.

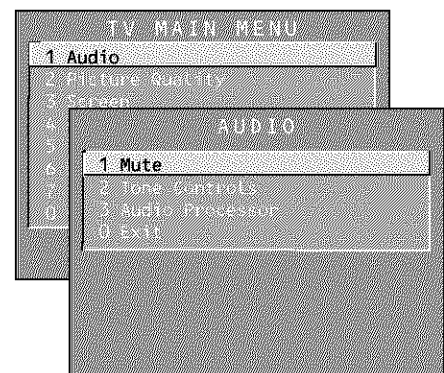

# Using the Menu System


**Sound Logic Stereo** Reduces the annoying blasts in volume during commercial breaks, and also amplifies softer sounds in program material. Eliminates the need to constantly adjust volume control.

**Second Audio Program (SAP)** Plays the program's audio in a second language, if one is available. The TV displays the word SAP when you tune to a program that is broadcast with SAP information. SAP audio is broadcast in mono. SAP is also used to broadcast a program's audio with descriptions of the video for the visually impaired.

## Using the Remote to Select an Audio Processor

You can change the audio processor from the Audio menu, as illustrated above, or by pressing the SOUND button on the remote. To make a selection using the remote:

1. Press SOUND to display the audio processor choice list.
2. Point to and select a different audio processor or press CLEAR to exit.

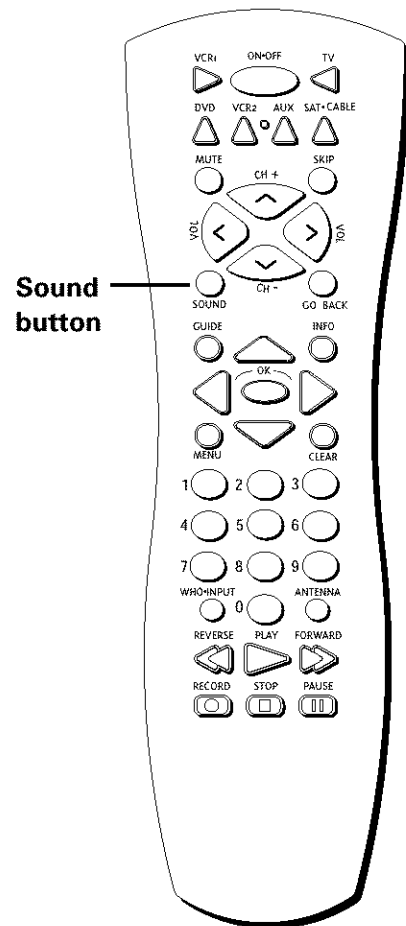

# Using the Menu System

## Picture Quality Menu

**Basic Picture Controls** Displays the five slider controls for adjusting the way the picture looks.

**Contrast** Adjusts the difference between the light and dark areas of the picture.

**Color** Adjusts the richness of the color.

**Tint** Adjusts the balance between the red and green levels.

**Black Level** Adjusts the brightness of the picture.


**Sharpness** Adjusts the crispness of edges in the picture.

When exiting this menu, the *Save Personal Picture Preset* choice list will appear. You can choose either Yes or No. If you save the settings as a Personal Picture Preset, the TV will store the settings so you can reselect them easily if someone changes the settings.

**Picture Presets** Displays a choice list that lets you select one of three preset picture settings: *Bright Lighting*, *Normal Lighting*, *Soft Lighting* or *Personal Picture Preset*. Choose the setting that is best for your viewing environment.

**Auto Color** Displays a choice list that lets you turn on the feature that automatically corrects the color of the picture. (This is especially useful for tracking realistic flesh tone colors as you switch from channel to channel.) Choose *On* or *Off*, depending on your preference.

**Color Warmth** Displays a choice list that lets you set one of three automatic color adjustments: *Cool* for a more blue palette of picture colors; *Normal*; and *Warm* for a more red palette of picture colors. The warm setting corresponds to the NTSC standard of 6500 K.

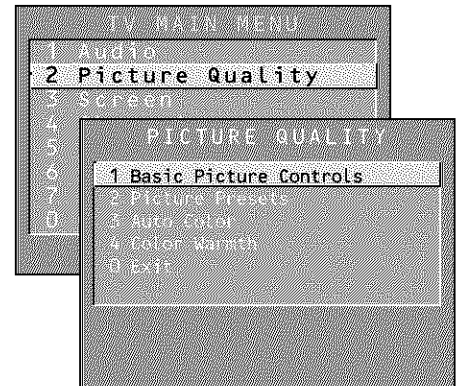

# Using the Menu System

## Screen Menu

**Closed-Caption Display** Displays a choice list that lets you choose the way closed captioning information is shown on the screen.


**Off** No captioning information is displayed.

**On** Captioning information is shown always, when available.

**On When Sound is Muted** Captioning information is shown, when available, whenever the TV's sound is muted. (To mute the sound, press the MUTE button.) The captioning information is not displayed when the sound is not muted.

**Closed-Caption Mode** Displays a choice list that lets you choose which captioning mode is used for displaying captioning information.

**Menu Language** Displays a choice list that lets you select your preferred language for the menus: *English, Spanish or French.*

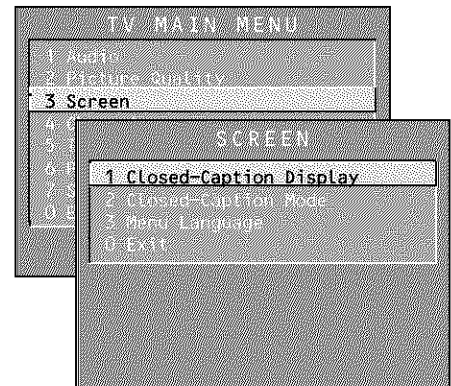

# Using the Menu System

## Using Closed Captioning

Many programs are encoded with closed captioning information, which lets you display the audio portion of a program as text on the TV screen.


Closed captioning is not available on all channels at all times. Only specific programs encoded with closed captioning information are applicable. When a program is closed captioned, the letters CC are displayed in the channel marker. See the section *Features and Controls* for more information about the channel marker.

### Closed Captioning Modes

The TV offers eight closed-captioned modes, including four text modes.

To set the Closed-Captioning Mode:

1. Select *Screen* from the Main menu.
2. Point to *Closed-Caption Mode* and press OK. A choice list displays:

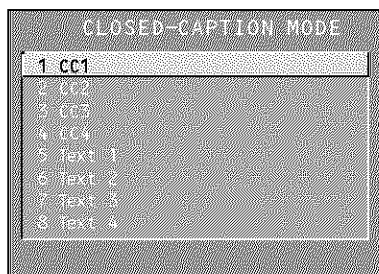

3. Point to your choice and press OK to select it and return to the *Screen* menu.

### Turning off Closed Captioning

1. Select *Screen* from the Main menu.
2. Press OK to select *Closed-Caption Display*.
3. Point to *Off Always* and press OK. The closed captioning is turned off and you are returned to the *Screen* menu.

**If you are unsure of the differences among the modes, you may prefer to leave the closed captioned mode set to CC1, which displays complete text of the program in the primary language in your area.**



# Using the Menu System

## Channel Menu

**Signal Type** Lets you select the current antenna type.

**UHF/VHF Antenna** Choose this if you are currently using an off-air antenna for TV signals.

**Cable TV** Choose this if you are currently using cable or a cable box for TV signals.

**Auto Channel Search** Searches automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the Normal channel list; inactive channels (weak stations or channels with no signal at all) will be removed from the channel list.

**List and Labels** Lets you edit your Normal channel list and choose a six-character label for each channel. Follow the on-screen directions to enter your channels and other information.

**Chan #** Use the up and down arrows to scroll up and down through the channels available via your antenna. You can enter the channel number directly using the number buttons.

**Normal List** Only the channels included in the Normal list are available when you scan up and down using the CH<sup>^</sup>/v buttons. Use the up and down arrows to indicate whether the channel number indicated is included (*Yes*) or is not included (*No*) in the Normal channel list.

**Chan Label** Use the up and down arrows to enter a six-character label for each channel. Hold the button down to scroll quickly through the characters. The TV can store up to 27 labels in memory.


**Auto Tuning** Displays a choice list that let the TV automatically tune to the correct input channel when you press a component button (VCR1, DVD, VCR2, or SAT•CABLE) on the remote.

**Set VCR 1 Channel** Lets you select the channel that the TV tunes to when you press the VCR1 button.

**Set VCR 2 Channel** Lets you select the channel that the TV tunes to when you press the VCR2 button.

**Set DVD Channel** Lets you select the channel that the TV tunes to when you press the DVD button.

**Set SAT/CABLE Channel** Lets you select the channel that the TV tunes to when you press the SAT•CABLE button.

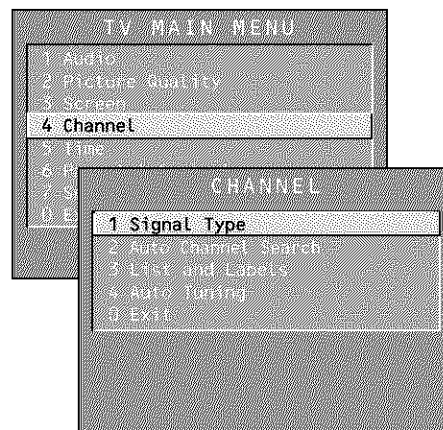

# Using the Menu System


The choices for each screen are:

**Not connected** Choose this if you do not have a component connected to an antenna or video input on the back of the TV, or if you don't want the TV to tune to a channel when the particular component button is pressed.

**Channel 2 (SAT/Cable only)** Choose this if your component is connected to the antenna jack on the back of the TV, and you want the TV to tune to channel 2 when you press the specified component button. Reminder: Make sure the component's Ch 2/3/4 switch is set to channel 2.

**Channel 3** Choose this if your component is connected to the antenna jack on the back of the TV, and you want the TV to tune to channel 3 when you press the specified component button. Reminder: Make sure the component's Ch 3/4 switch is set to channel 3.

**Channel 4** Choose this if your component is connected to the antenna jack on the back of the TV, and you want the TV to tune to channel 4 when you press the specified component button. Reminder: Make sure the component's Ch 3/4 switch is set to channel 4.

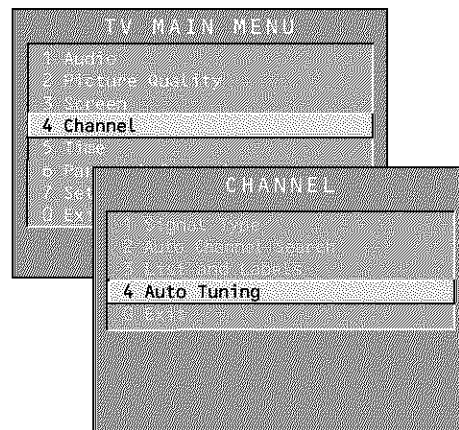


## Time Menu

**Sleep Timer** Displays a control panel that lets you select the amount of time you want to give the TV before it shuts itself off.

**Schedule** Displays a control panel that lets you set up a schedule for turning the TV on and off automatically. **Make sure to turn the schedule on.** The on-screen directions guide you through the steps needed to set the schedule.

**Set Time** Displays a control panel that lets you enter the current time. The on-screen directions guide you through the steps needed to set the time.

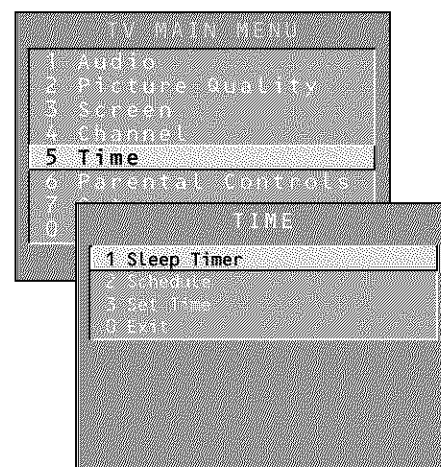

### Other Menus

The rest of the menus—Parental Controls and Setup—are also detailed in this manual. Look for the Setup menu in the section *Interactive Setup*. Descriptions of how to use Parental Controls are in the section *Features and Controls*.

# Features and Controls

## How to use the Features and Controls

This section introduces you to the features and controls with which your TV is equipped. In this section, you will learn how to use:

- The Channel Marker
- Parental controls, including V-Chip rating limits

**1** SETUP AND CONNECTIONS



**2** INTERACTIVE SETUP



**3** USING THE REMOTE



**4** USING THE MENU SYSTEM



**5** FEATURES AND CONTROLS



**6** REFERENCE

## Channel Marker

There are several indicators that may come up when you press the TV, channel up or down, or INFO buttons. This display is called the Channel Marker.

**12:01** Displays the current time.

**CC** Displayed when Closed Captioning is available on the current channel.

**ESPN** Displays the label assigned to the current channel.

**60** Displays the current channel or input channel. Pressing channel up and down changes this channel.

**Mute (or Stereo)** Mute is displayed when you mute the audio. Stereo is displayed when the current channel is broadcasting in Stereo.

**SAP** Displayed when the current channel is broadcasting SAP (Second Audio Program) information.


**Locked** Displayed when Parental Controls are locked.

**Sleep** Displayed when the Sleep Timer has been set.

**00:00** Displayed to count down time left on the commercial skip (SKIP) timer.

You can program the TV to tune to a specific channel when you press the VCR1, SAT-CABLE, DVD and VCR2 buttons.

Check out the Auto Tuning feature in the *Interactive Setup* and *Using the Menu System* sections.

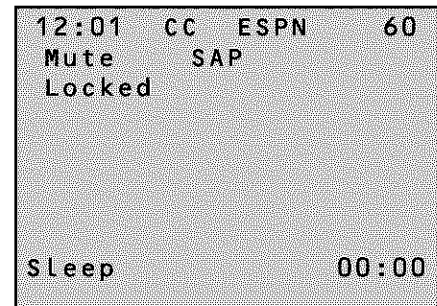


Sample displays on a Channel Marker.

## Parental Controls and V-Chip

The Parental Controls menu allows you to program your TV so children cannot see certain programs, channels, or use the front panel controls. The first three choices in the Parental Controls menu involve software inside your TV (dubbed V-Chip) which allows you to “block” TV programs and movies based on violence, sex, or other content you may believe children should not view. In other words, it lets you program your TV so it will not display certain programs. Once you block programs, you or other adults are not limited to only parent-approved programs; you can “unblock” programs by entering a password.

The V-Chip software inside your TV comes turned “off,” so if you choose not to implement it, you can just ignore it.

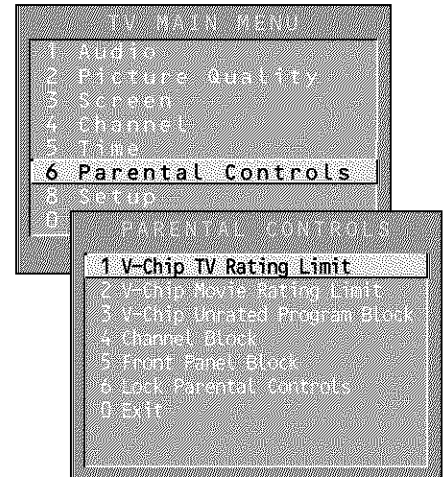

When turned “on,” the software reads a code that most broadcasters send with programs. That code tells the software the program’s age-based rating (TV-MA, TV-14, etc.) and content themes (Violence (V), Adult Language (L), etc.) Broadcasters are not required to provide content themes, so programs received with no content themes will only be blocked if you block their age-based rating. You can also block out programs that have been given a rating of “Not Rated,” and programs that are considered “unrated” because no code has been sent by the broadcaster.

The TV age-based ratings and content themes you can block are listed in the table below.

Age-Based Rating	Description and Content Themes for Age-Based Ratings
TV-MA	Mature Audience Only. Specifically designed to be viewed by adults and may be unsuitable for children under 17. It contains one or more of the following content themes: <b>crude indecent language (L), explicit sexual activity (S), graphic violence (V).</b>
TV-14	Parents Strongly Cautioned. Contains some material that many parents would find unsuitable for children under 14. Parents are strongly urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following content themes: <b>intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).</b>
TV-PG	Parental Guidance Suggested. Contains material that parents may find unsuitable for younger children. Many parents may want to watch it with their younger children. The program contains one or more of the following content themes: <b>some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).</b>
TV-G	General Audience. Most parents would find this program suitable for all ages. It contains <b>little or no sexual dialogue (D), no strong language (L), or situations (S), little or no violence (V).</b>
TV-Y7	Directed to Children 7 years and older. Designed for children ages 7 and above. It may be more appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild <b>fantasy violence (FV)</b> or comedic violence, or may frighten children under the age of 7.
TV-Y	All Children. Themes and elements in this program are designed for a young audience, including children from ages 2-6. It is not expected to frighten younger children.


# Features and Controls

## V-Chip TV Rating Limit

The V-Chip TV Rating Limit lets you decide what TV programs can and cannot be viewed.

To set TV programming limits:

1. Choose *Parental Controls* from the Main menu. If Parental Controls have previously been locked, you must enter your password. If they are not locked, you will get a message reminding you that your limits will not be effective until you lock Parental Controls.
2. Press MENU to continue.
3. Highlight and select *V-Chip TV Rating Limit*.
4. Once you get to the V-Chip TV Rating Limit screen, use the arrows and OK on your remote to change the status of a TV program rating or content theme from *View* to *Block*.

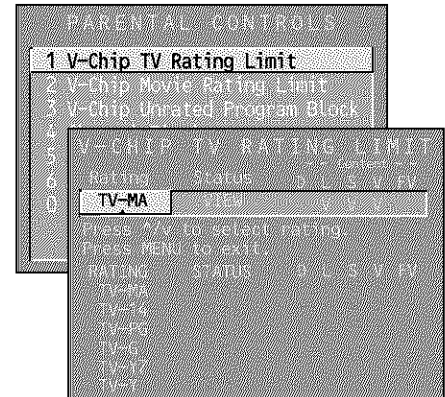

### The Rating Limit Screen


Below is an example of where items are located within the Rating Limit screen.

#### Rating Field

Lets you select from a list of age-based ratings you can block or view.

#### Rating Status Field

Lets you select whether the status of the age-based rating limit to the left is View or Block.

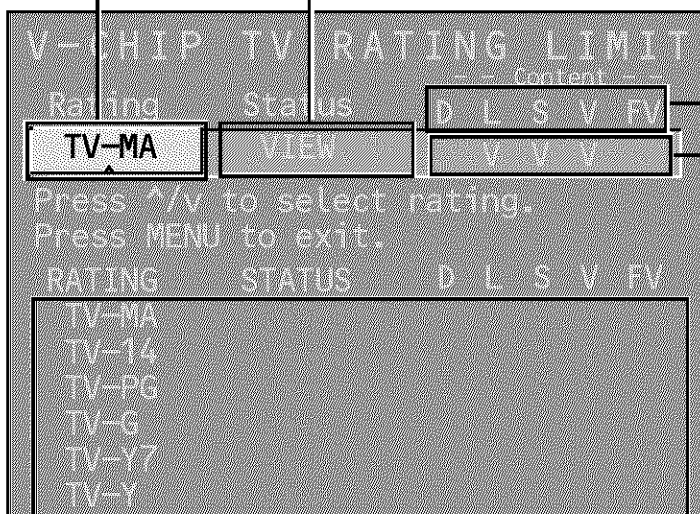

#### Content Themes

Lists the content themes you can block or view.

#### Content Status Fields

Lets you select which content themes to view for the selected rating, and whether the status of the content theme is currently View (V) or Block (B).

#### Rating Settings Area

Lets you see the current block/view state of age-based ratings and associated content. The View (V) settings are coded in green, and the Block (B) settings are coded in red.

# Features and Controls

## Blocking Age-Based Ratings


You can automatically block all program ratings above a specified age-based rating level. For example, if you only want your child to watch programs that have a TV-G rating and lower (in other words, you want the child to watch TV-G, TV-Y7, and TV-Y), then you need to block out other programming with higher ratings.

To block programs with higher ratings:

1. First, determine the lowest level rating you do not want the child to watch.
2. Use the left and right arrows to highlight the Rating Field.
3. Use the up and down arrows on the remote to scroll through the age-based rating limits. Keep scrolling until the rating corresponding with the lowest rating you do not want the child to watch appears.

In the example discussed above, you would scroll through the rating field until TV-PG appears, since the highest rating you want the child to watch is TV-G.

4. Use the right arrow to move the yellow highlight to the rating status field.
5. Press the up or down arrow to toggle between *View* and *Block*. The status for the rating listed to the left and all higher ratings automatically changes to *Block* (and *B*).

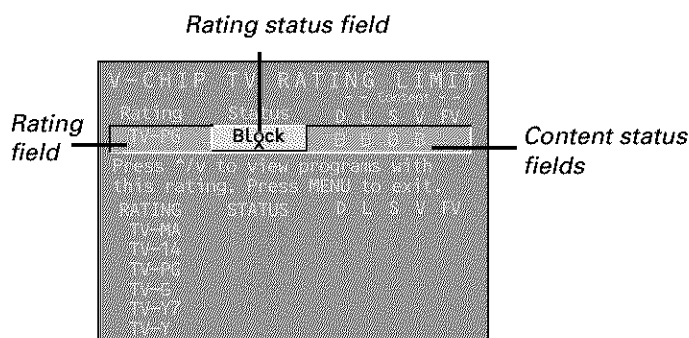

6. Press MENU or OK on the remote to return to the menu or exit the screen when you are finished.
7. Select Lock Parental Controls from the Parental Controls menu. Enter a password, and if you have not already set your password, you will be prompted to enter it again to confirm.

**When you change the status of a rating to *Block*, the system will automatically block higher ratings and all corresponding content themes.**

### Hierarchy of Age-Based Ratings

TV-MA	Mature Audience Only
TV-14	Parents Strongly Cautioned
TV-PG	Parental Guidance Suggested
TV-G	General Audience
TV-Y7	Directed to Children 7 Years and Older
TV-Y	All Children


# Features and Controls

## Viewing Age-Based Ratings

After you block age-based ratings, you have the option of changing some of the ratings back to *View*.

1. Determine which blocked rating you want to view.
2. Use the left and right arrows to highlight the Rating Field.
3. Use the up and down arrows to select the rating whose status is *Block*.
4. Press the right arrow to move the yellow highlight to the rating status field.
5. Press the up/down arrows to toggle from *View* to *Block*.

Note that the content status fields corresponding to the unblocked rating become *View* as well. They and the age-based rating status are the only fields that automatically change back to *View* when you complete this process.

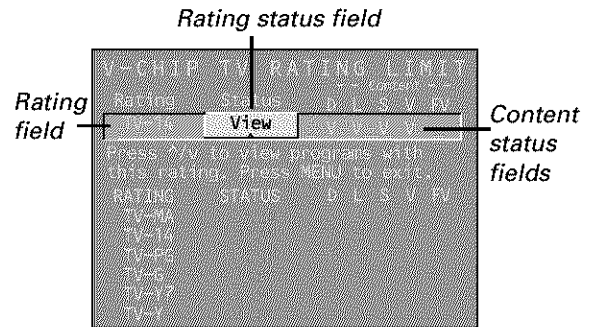

**You must remember to lock Parental Controls for rating limits to take effect.**

## Blocking Specific Content Themes

You can block programs based on their content. (Content is represented by the D, L, S, V, and FV on your screen. See the beginning of this section for details.) When you block a content theme for a particular rating, you automatically block that content theme for higher rated programs as well.

For example, if you do not want your child to watch programs that have adult language (L) rated TV-PG or higher, then you could block out all programming TV-PG and above containing adult language.

To block program content:


1. Determine the lowest level of content you do not want the child to watch.
2. Use the left and right arrows to highlight the Rating Field.
3. Use the up and down arrows on the remote to scroll through the age-based ratings until the rating that corresponds with the lowest content you do not want the child to watch appears. (In the example above, you would scroll through the ratings until the TV-PG rating appeared.)
4. Press the right arrow to move the highlight to the field corresponding with the content theme you wish to block.
5. Press the up or down arrow to change content status from *V* to *B*. All higher ratings' content theme will automatically change to *B*.

Content Themes	
D	Sexually Explicit Dialogue
L	Adult Language
S	Sexual Situations
V	Violence
FV	Fantasy Violence

**Broadcasters are not required to provide content themes or provide age-based ratings. Programs received with no content themes will only be blocked if you block their age-based rating.**



# Features and Controls

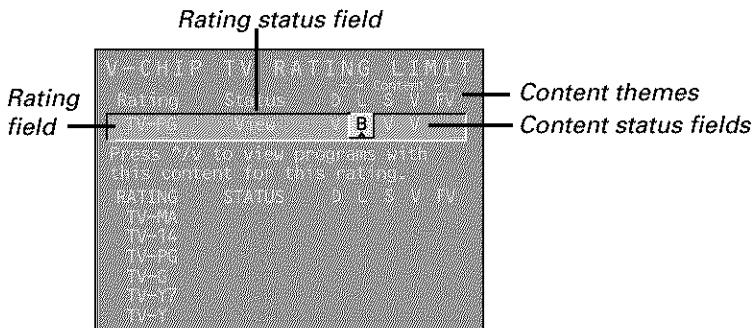


**You must remember to lock Parental Controls for rating limits to take effect.**

6. Press MENU or OK to return to the menu or exit the screen.

## Viewing Specific Content Themes

If you block specific content themes, you have the option of going back and changing some of the content themes back to View (V):

1. Determine the content themes you want to change to View (V).
2. Use the left and right arrows to highlight the Rating Field.
3. Use the up and down arrows to scroll through the age-based ratings until the rating whose content theme you want to change to *View* appears.
4. Press the right arrow to move the yellow highlight to a particular content theme status, such as the *B* under language (L) corresponding with TV-14.
5. Press the up or down arrows to change its status back to *V*. Your child would then be able to watch programs with TV-14 adult language content, but not programs with TV-PG or TV-MA language content.

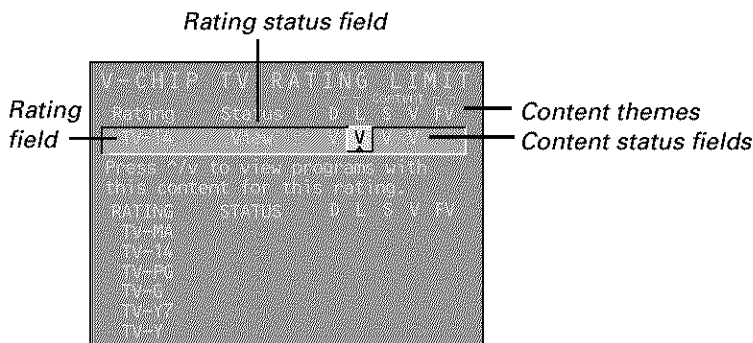

Note that only the content theme status corresponding to TV-14 language (L) changes to View (V). Higher rated content themes, such as that for TV-MA language, do not change.

# Features and Controls


## V-Chip Movie Rating Limit

Set movie rating limits by blocking ratings above a specified level.


### Blocking Movie Ratings

If you only want your child to watch movies that have a PG rating and lower (in other words, movies rated PG and G), then you could automatically block out all other movies with higher ratings:

1. Highlight the rating field and press the up and down arrows to find the rating that is the lowest rating you do not want the child to watch. (In the example above, you would point to the rating status button corresponding to PG-13, since the highest rating you want the child to watch is PG.)
2. Use the right arrow to highlight the rating status field. Press the up and down arrows to change the button from *View* to *Block*. All higher ratings' status of *View* will automatically change to *Block*.

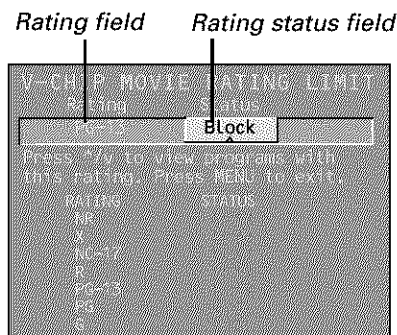

3. Press OK to return to the menu or exit the screen.
4. If Parental Controls are not locked, you must lock them so the movie rating limits will take effect.

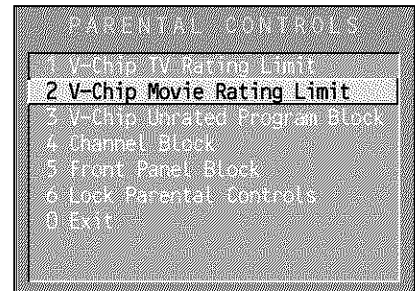

**Some movies may be given a Not Rated (NR) rating. After blocking movie ratings, you must set NR to View separately to view NR movies.**


**You must remember to lock Parental Controls for rating limits to take effect.**

# Features and Controls

## Viewing Movie Ratings

After you block movie ratings, you have the option of changing some of the rating status buttons back to *View*:

1. Highlight the rating field and press the up and down arrows to find the rating you want to view.
2. Use the right arrow to highlight the rating status field. Press the up and down arrows to change the button from *Block* to *View*.
3. Press MENU or OK to return to the menu or exit the screen, and be sure parental controls are locked.

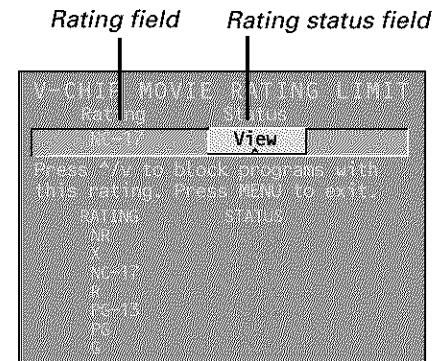

## V-Chip Unrated Program Block


Selecting this option lets you decide if programs that the V-Chip recognizes as “unrated” can be viewed.

**View** All unrated programs are available.

**Block** All unrated programs are not available.

Don't forget to lock parental controls after you change the status of unrated program viewing. If you do not, the block will not take effect.

Note that “unrated” TV programs may include news, sports, political, local and weather programs, emergency bulletins, public announcements, and programs without ratings.

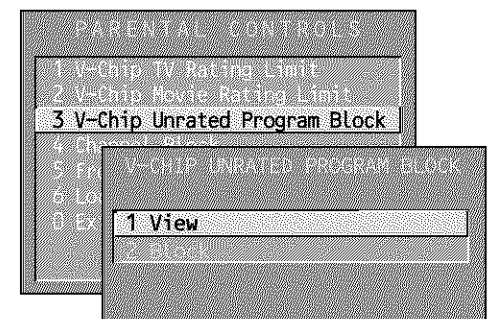


## Channel Block

Selecting this option lets you decide what can be viewed.

**View** Makes the selected channel viewable.

**Block** The front panel channel buttons will tune only to channels that you have marked as *View*. The remote will still tune to the blocked channel if you use the digits to access the channel, but the channel will be blocked.

Don't forget to lock parental controls after you change the status of channel block. If you don't, the block will not take effect.

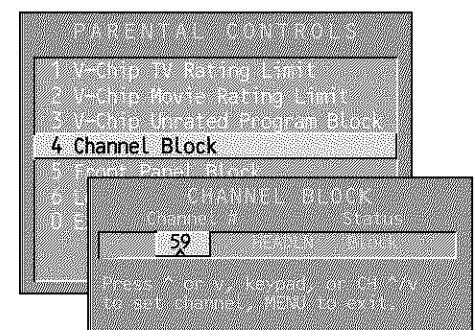

# Features and Controls


## Front Panel Block

Selecting this option lets you block (disable) or view (enable) the TV's front panel. The remote still tunes to any channel.

Front Panel Block can keep children from watching TV when the parent is not present, or keep them from playing with the buttons.


(When using this as a Parental Control method, you should remove access to any remote capable of controlling the TV while you have the front panel blocked.)

Don't forget to lock parental controls after you change the status of front panel block. If you do not, the front panel block will not take effect.

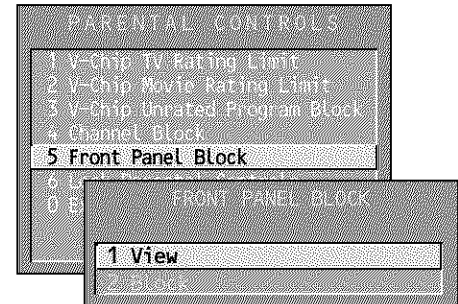

## Lock/Unlock Parental Controls

Selecting this option lets you lock and unlock parental controls settings using a password. **If you do not lock parental controls, none of the settings for V-Chip, Channel Block, or Front Panel Block will take effect.** If you forget your password, press and hold TV on the remote and the MENU button on the television simultaneously for 3 seconds. Parental controls will unlock. You re-enter a password via *Lock Parental Controls*.

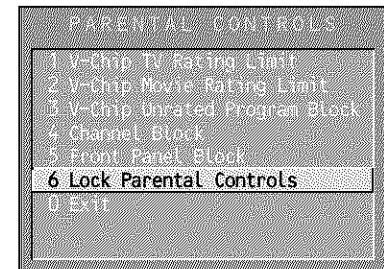

## Troubleshooting

Troubles sometimes are caused by simple “faults” that you can correct without the help of a service technician. If you experience any difficulty with your TV, check a few basic remedies before calling your service technician.

### TV will not turn on

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is “live” by plugging in something else.
- Maybe batteries in remote control are “dead.”
- Maybe remote control is not aimed at remote sensor.
- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting the *Front Panel Block* in the Parental Controls menu and choosing *View*.

### Controls don't work

- If using remote control, make sure remote is in TV mode by first pressing TV button.
- The front panel controls may be locked (disabled). Use the remote control to unlock the front panel controls by selecting the *Front Panel Block* in the Parental Controls menu and choosing *View*.
- Try unplugging set for two minutes and then plug it back in and turn it on again.

### Problems with remote

- Maybe something is between the remote and the remote sensor.
- Maybe the remote is not aimed directly at the component (TV or VCR) you are trying to control.
- Maybe remote is not in TV mode. Press the TV button so remote will control TV.
- Maybe batteries in remote are weak, dead or installed incorrectly. Try replacing batteries. (Note, if you remove the batteries, you may have to reprogram the remote to control other components.)
- Remove batteries and hold number 1 for at least 60 seconds to drain the microprocessor inside the remote. Release number 1, replace the batteries, and (if necessary) reprogram the remote.

## Turns off while playing

- You may have scheduled the TV to turn off via the Schedule function.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high or low.

## Blank screen

- Maybe the component connected to the input jacks is not turned on.
- Try another channel.
- Maybe you have set Parental Controls to block the channel.
- Turn off the TV. Wait five minutes. Turn on again.

## No sound, picture okay

- Maybe sound is muted. Try pressing volume up button to restore sound.

## Can't select certain channel

- The channel may be blocked or not approved in the Parental Controls menu.
- If using a VCR, check to make sure the TV/VCR button on the VCR is in the correct "mode."

## Noisy stereo reception

- May be a weak station. Use SOUND button to change to mono mode instead of stereo.

## No picture, no sound but TV is on

- If watching VCR (connected only through antenna input), make sure TV is tuned to channel 3 or 4 – same as CH3/4 switch on VCR. Also check to make sure the TV/VCR button on the VCR is in the correct "mode."

## Sound okay, picture poor

- Check antenna connections.
- Try adjusting sharpness function to improve weak signals.

Black box appears on the screen

- Captioning may be turned on and in text mode. Check the Closed-Caption Display control panel in the Channel menu.

## Care and Cleaning

**CAUTION: Turn OFF your TV before cleaning.**

You can clean the TV as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

**The TV's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water.**

**Never use strong cleaning agents, such as ammonia-based cleaners, or abrasive powder. These types of cleaners will damage the TV.**

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire or shock hazard or damage to the TV.

**Caution:** If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. This damage is not covered by your warranty. Extended viewing of channels displaying these images should be avoided.

## GE LIMITED WARRANTY

### **What your warranty covers:**

- Any defect in materials or workmanship.

### **For how long after your purchase:**

- 90 days for labor charges.
- One year for parts.
- Two years for the picture tube.

The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### **What we will do:**

- Pay any Authorized GE Television Service Center the labor charges to repair your television.
- Pay any Authorized GE Television Service Center for the new or, at our option, refurbished replacement parts and picture tube required to repair your television.

### **How you get service:**

- For screen sizes of 26" and smaller: Take your GE television to any Authorized GE Television Service Center and pick up when repairs are complete.
- For screens sizes larger than 26": Request home service from any Authorized GE Television Service Center, provided that your television is located within the geographic territory covered by an Authorized GE Television Service Center. If not, you must take your television to the Service Center location at your own expense, or pay for the cost the Service Center may charge to transport your television to and from your home.
- To identify your nearest Authorized GE Television Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-447-1700.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.



**What your warranty does not cover:**

- Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your television.
- Damage from misuse or neglect.
- Batteries.
- Customer replacement fuses.
- Images burned onto the screen.
- A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A television purchased or serviced outside the U.S.A.
- Acts of God, such as but not limited to lightening damage.

**Product registration**

- Please complete and mail the Product Registration Card packed with your TV. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

**How state law relates to this warranty:**

- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

**If you purchased your product outside the United States:**

- This warranty does not apply. Contact your dealer for warranty information.


**Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.**

## Accessory Information

The following accessories are available from most dealers and electronics supply stores in case you want to position your components farther apart or need additional cables.




**Flat 300-ohm** twin-lead cable

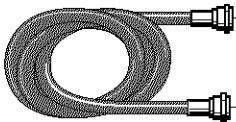


VH81 (3-ft)  
VH82 (6-ft)

 **Screw-on Cable** attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. The ends screw onto the connectors for a secure connection.




VH89 (6-ft)

**Push-on Cable** attaches to the round antenna connectors (called 75-ohm F-type) on the back of your VCR or TV. Ends push on for a quick connection.

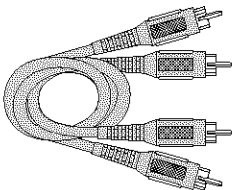

Gold-Tipped cable  
VH83 (6-ft)


**Monaural VCR Dubbing Cable** Double cable that lets you connect the video and audio jacks of two VHS VCRs to duplicate tapes. Can also be used to connect a VCR to your TV. Cable is color-coded and shielded. Has RCA-type phono plugs on each end.

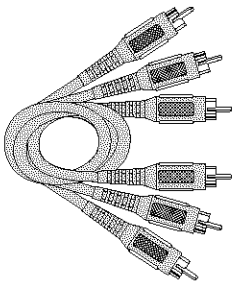

Gold-Tipped cable  
VH84 (6-ft)


**Stereo VCR Dubbing Cable** Triple cable that lets you connect the VIDEO and AUDIO jacks of stereo components.

# Reference

 


CRK76TF1

 **Remote Control** This is the remote control that came packed with your TV. Replacements or spares can be ordered as needed.



Splitter  
VH47

**2-way Signal Splitter** helps you connect to a second TV or VCR.

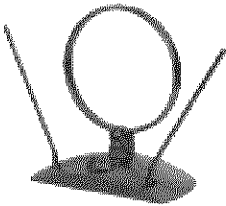

ANT200

**Amplified VHF/UHF/FM Antenna** allows you to easily switch from the antenna signal to cable or satellite easily without disconnecting antenna.

## Accessory Order Form

Description	Part No.	Price	Qty
Screw-on antenna cable (3-ft)	VH81	\$3.95	
Screw-on antenna cable (6-ft)	VH82	\$5.95	
Push-on antenna cable (6-ft)	VH89	\$5.95	
Monaural VCR Dubbing Cable (6-ft)	VH83	\$5.95	
Stereo VCR Dubbing Cable (6-ft)	VH84	\$9.95	
2-way Signal Splitter	VH47	\$3.95	
Amplified Antenna	ANT200	\$49.95	
Antenna Mixer	193984	\$11.15	
Remote Control (CRK76TF1)	245058	\$30.35	
Audio• Video Adapter	228449	\$4.45	

Total Merchandise .....

\$ \_\_\_\_\_

Sales Tax .....

\$ \_\_\_\_\_

We are required by law to collect the appropriate sales tax for each individual state, country, and locality to which the merchandise is being sent.

Shipping and Handling .....

\$ 5.00

Total Amount Enclosed .....

\$ \_\_\_\_\_

Use VISA, MasterCard, or Discover Card preferably.

Money order or check must be in U.S. currency only.

No COD or CASH.



Detach Here

Prices are subject to change without notice.

All accessories are subject to availability.

Where applicable, we will ship a superseding model.

Please complete other side also

# Reference

Charge your order on your VISA, MasterCard, or Discover Card by filling in below

## USE YOUR CREDIT CARD

**IMPORTANT:** Copy complete account number from your VISA card



My card expires:

**IMPORTANT:** Copy complete account number from your MasterCard



Copy Number above your name on MasterCard  My card expires:

**IMPORTANT:** Copy complete account number from your Discover Card



My card expires:

\_\_\_\_\_  
**AUTHORIZED SIGNATURE**  
 (Credit card order will not be processed without signature)

Print or type your name and address clearly.



A complete and correct order will save you days of waiting.

Name: \_\_\_\_\_  
 Street: \_\_\_\_\_  
 \_\_\_\_\_ Apt: \_\_\_\_\_  
 City: \_\_\_\_\_  
 State: \_\_\_\_\_ Zip: \_\_\_\_\_  
 Daytime phone number: \_\_\_\_\_

Please make sure that both sides of this form have been filled out completely.

- Allow 4 weeks for delivery.
- All accessories are subject to availability.
- Prices are subject to change.

## Placing an Order

To place your order by phone, have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below.

Use this number only to place an order for accessory items listed on this order form.

**1-800-338-0376**

To place your order by mail, detach and mail the completed order form with credit card information, money order or check in US currency (made payable to Thomson Consumer Electronics, Inc.) to the following address:

**Video Accessories**  
**PO Box 8419**  
**Ronks, PA 17573**

## A

**Accessories** 48  
**Advanced Connections** 4, 6

**Age-Based**  
Ratings 37

**Audio**  
Audio/Video Cables 7  
Menu 26  
Processor 26

**Auto**  
Channel Search 13, 31  
Color 28  
Tuning 14, 15, 16  
    DVD Channel 15, 31  
    SAT/Cable Channel 16, 31  
    VCR1 Channel 14, 31  
    VCR2 Channel 15, 31

## B

**Back of the TV** 6

**Basic**  
Connection 4, 5  
Picture Controls 28

**Batteries** 10, 43

**Black Level** 28

**Buttons**  
Front Panel 21  
Remote 18

## C

**Cable**  
CABLE/ANTENNA 6  
Coaxial 4  
TV 31

**CC (Closed Captioning)** 29, 30, 34

**Channel**  
Block 41  
Inputs 32  
Labels 16, 31  
Marker 34  
Menu 31  
Number (#) 31  
Search 13

**Choice Lists** 26  
**CLEAR Button** 12, 19  
**Closed Caption** 30, 34  
Display 29

Mode 29, 30  
**Coaxial Cable** 4, 5, 7  
**Color Warmth** 28  
**Connections** 4  
Advanced 4, 6  
Basic 4, 5  
TV and Stereo VCR 8  
TV Only 4  
**Content Themes** 35, 38  
**Contrast** 28  
**Control Panels** 25

## D

**DVD Channel** 15, 31

## F

**Fixed Images** 45  
**Front**  
Panel Block 42  
Panel Buttons 21

## I

**Interactive Setup** 12

## L

**Labels** 16, 31  
**Language** 13, 29  
**List & Labels** 16, 31

## M

**Main Menu** 12, 24  
**Memory** 31  
**Menu** 24  
Button 12, 19  
Language 13, 29  
**Modes of Operation** 17  
**Mono** 26  
**Mute** 26, 29

## N

**Normal List** 31  
**Numeric Entry** 25

## P

### Parental Controls

- Channel Block 41
- Front Panel Block 42
- Locking, Unlocking 42
- Menu 35
- Movie Rating Limits 40
- TV Program Limits 36
- V-Chip 35

### Picture

- Presets 28
- Quality Menu 28

### Point and Select 12

## R

### Rating Limits

- Movie 40
- TV 36
- V-Chip 35

### Remote Control

- Batteries are Dead 43
- Buttons 18
- Installing the Batteries 10

## S

### SAP 27, 34

### SAT/Cable Channel 16, 31

### Schedule 32

### Screen Menu 29

### Second Audio Program (SAP) 27, 34

### Select 12

### Set

- DVD Channel 15, 31
- SAT/CABLE Channel 16, 31
- VCR1 Channel 14, 31
- VCR2 Channel 15, 31

### Set Time 14, 32

### Setup 12

### Sharpness 28

### Signal Type

- UHF/VHF Antenna 31

### Sleep 34

### Sleep Timer 32, 34

### Sliders 25

### SOUND Button 18, 27

### Stereo 26, 34

## T

### Time

- Current 34
- Menu 32
- Set Time 14

### Tint 28

### Tone Controls 26

### Troubleshooting 43

### TV Only Connection 4

## U

### UHF/VHF Antenna 31

### Universal Remote 18

### Unrated Programs 41

## V

### V-Chip 35

- Age-Based Ratings 35, 37
- Blocking Movies 40
- Content Themes 35, 38

### VCR

- 1 Channel 14, 31
- 2 Channel 15, 31

## W

### Warranty 46

---

Please do not send any products to the Indianapolis address listed in this manual or on the carton. This will only add delays in service for your product.

 **THOMSON CONSUMER ELECTRONICS**  
10330 North Meridian Street  
Indianapolis, IN 46290

©2000 Thomson Consumer Electronics, Inc.  
Trademark(s)<sup>®</sup> Registered  
Marca(s) Registrada(s)  
Printed in USA  
**TOCOM 15557540**

The following materials were used in printing this publication:



**60%**

**RECYCLED PAPER**

**MINIMUM 20% POST CONSUMER**

