




150mm

Remote Control Guide

Program Your Universal Cable or Satellite Remote Control to Operate Your New RCA TV!

If you would like to program your other household remote controls to your new RCA television, please consult the User's Manual supplied by your Cable or Satellite provider. The Cable or Satellite providers' User's Manuals should include instructions on how to program their remote to your television.

Below is a list of RCA codes for the most common Cable and Satellite providers. Use the RCA code that is associated with your Cable or Satellite provider (if applicable).

DIRECTV.....	0178,10178
Time Warner Cable.....	0178,10178
Comcast.....	10178
Cox Communications.....	0178
Dish Network.....	627
Fios Verizon.....	0205,0057,0493,0775

If the RCA code associated with your Cable or Satellite provider is not listed above, if the code above does not work, or if you can not locate the instructions for programming your household remote to your television, call your local Cable or Satellite provider's customer service center.