


Remote Control

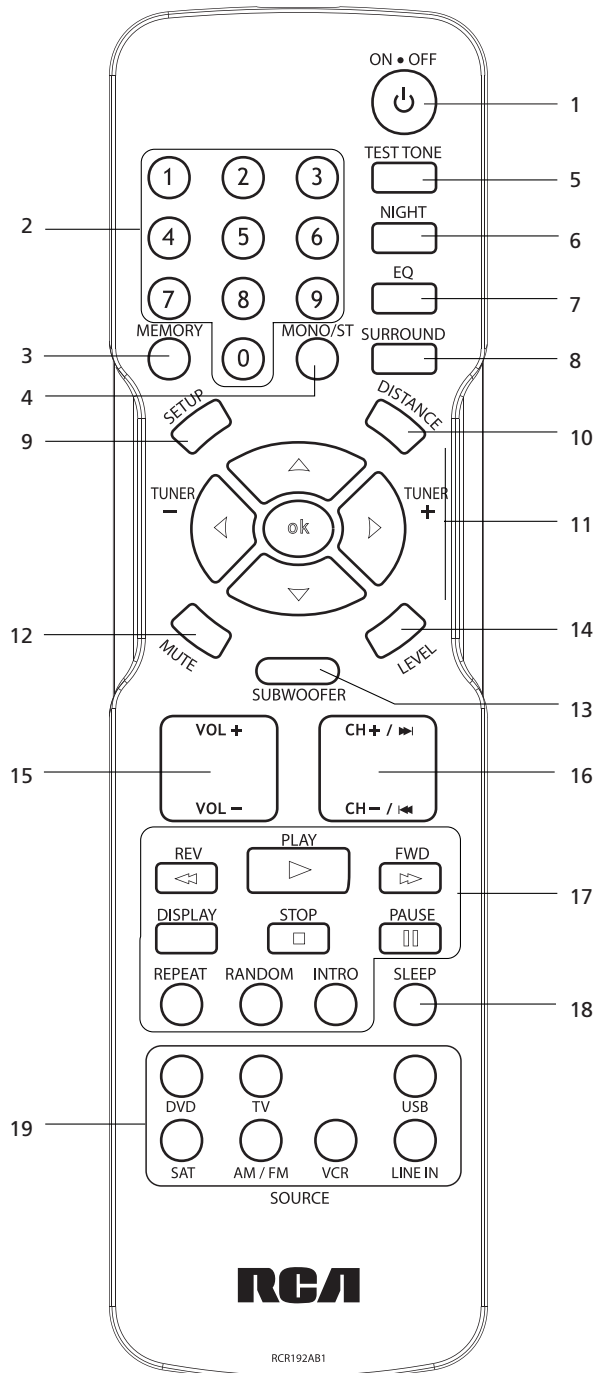

1. Turn on/off the unit	Press ON•OFF
2. Directly access a preset station in AM/FM mode	Press the Number buttons
3. Store station in AM/FM mode	Press MEMORY
4. Select between Stereo and Mono sound in FM mode	Press MONO/ST
5. Test the loudness of the speakers. Refer to "Advanced Sound Control" for details	Press TEST TONE
6. Select among night mode options (DRC OFF, SOFT and ON) which compresses the volume difference between normal voices and sounds such as explosions (Available only during Dolby digital signal playback)	Press NIGHT
7. Select among preset equalizer mode (FLAT, POP, JAZZ, ROCK, CLASSIC, BASS and TREBLE). • Adjust bass or treble level	Press EQ Press ▲ / ▼
8. Select among digital sound processor (STEREO, HALL, CHURCH, CLUB, STADIUM, STUDIO, 3 STEREO, DOLBY PL EMULATION, DOLBY PL II MUSIC and DOLBY PL II MOVIE)	Press SURROUND
9. Enter setup mode	Press SETUP
10. Adjust the speakers' distance	Press DISTANCE
11. Select among setting items in setup mode • Adjust the values when the display shows the setup you want to change • Tune down or up the radio frequency in AM/FM mode	Press ◀ / ▶ Press ▲ / ▼ Press TUNER - and TUNER +
12. Mute all sound	Press MUTE
13. Select among subwoofer sound level (SOFT SUBWOOFER, BALANCE SUBWOOFER, STRONG SUBWOOFER and POWERFUL SUBWOOFER)	Press SUBWOOFER
14. Adjust individual speaker volume. Refer to "Advanced Sound Control" for details	Press LEVEL
15. Adjust the volume	Press VOL + / VOL -
16. Select programmed stations in AM/FM mode or directly access the next or previous file in USB mode	Press CH+ / CH-
17. Start, stop or pause playback (in USB mode only) • Start reverse or forward accelerated play(in USB mode only) • Access MP3/WMA ID3 information and current play time, current play folder and track number, play mode	Press PLAY , STOP or PAUSE to access the relative functions. Press REV or FWD Press DISPLAY
• Access the repeat function • Turn on/off random playback • Enter Intro mode	Press REPEAT Press RANDOM Press INTRO
18. Enter sleep mode and selects sleep time	Press SLEEP
19. Select audio sources	Press SOURCE buttons



QuickStartGuide


RT2770
www.rcaaudiovideo.com


Congratulations on purchasing your new RCA unit.
Please read these instructions for quick tips on using the unit.


Setting up

1. Connecting the Speakers


- Six speakers are provided with the unit:
 - 2 front speakers
 - 1 center speaker
 - 2 rear speakers
 - 1 subwoofer.
- Speaker wires are color-coded to match the terminals.
- Connect the speaker wire to the corresponding color terminal as shown below.
- Press down the tab to open the terminal, insert the wire and release the tab.
- When connecting subwoofer, connect subwoofer control cable (red/black striped) at the back of the subwoofer to the subwoofer control jack on the unit's rear panel, then press **POWER ON/OFF** on the subwoofer speaker to turn it on.

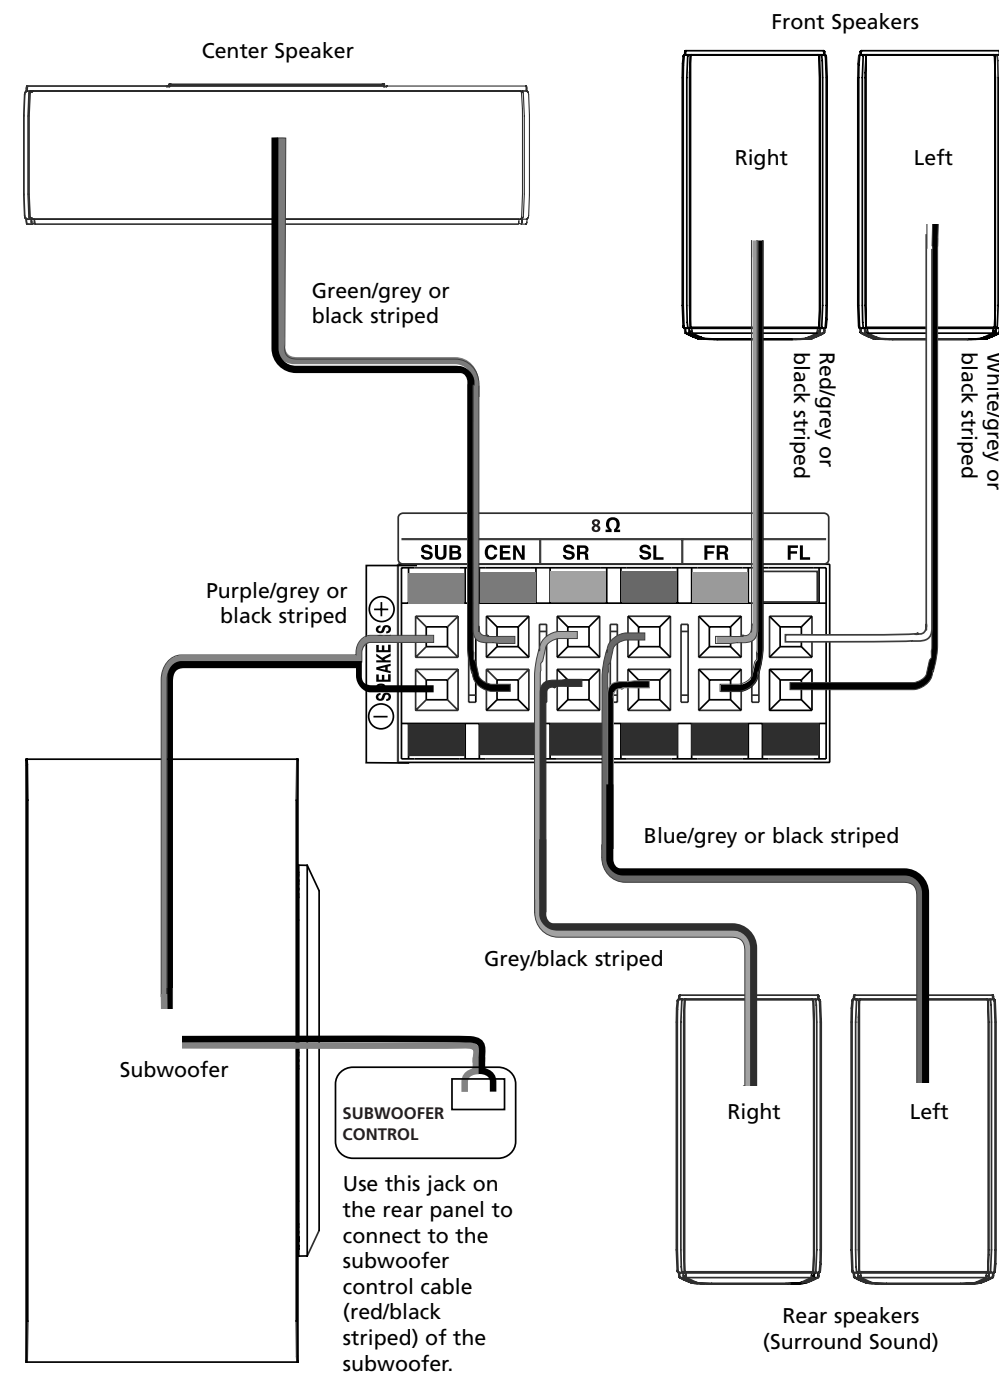


Use this jack on the rear panel to connect another active subwoofer other than the one supplied.

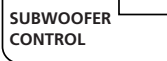
Use this jack on the rear panel to connect to the subwoofer control cable (red/black striped) of the subwoofer.

2. Positioning the Speakers

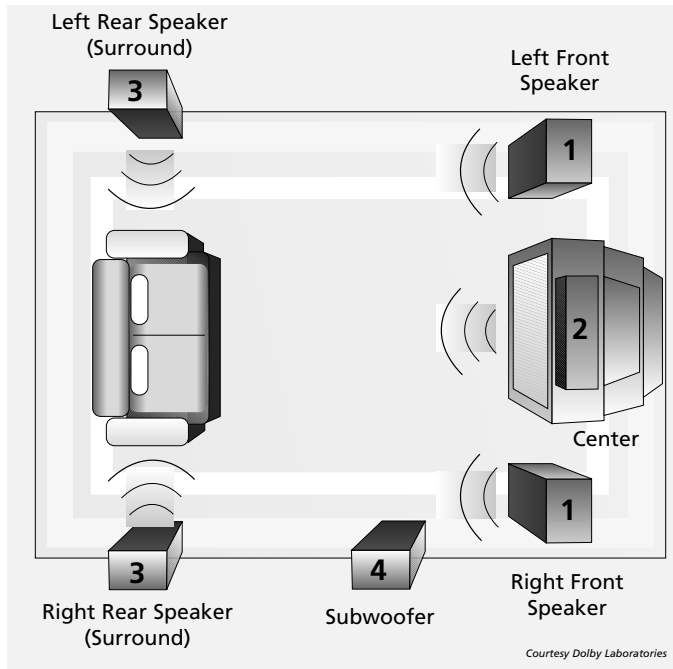

1. Center: In surround mode, the center speaker carries most of the dialog as well as music and effects. It should be set between the left and right speakers.
2. Front Speakers: Front speakers carry primarily music and sound effects.
3. Rear Speakers: The rear speakers' overall sound balance should be as close as possible to the front speakers. Proper placement is vital to establish an evenly distributed sound field.
4. Subwoofer: A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.) which dramatically heighten the action on the screen.



3. Front Surround sound Effect(FSsE) Setting (Optional)

Front Surround sound Effect(FSsE) Setting

If placing the rear speakers (surround speakers) at the back is not a good choice for you, you can use the Front Surround sound Effect(FSsE). Follow the following instruction for setting the speakers.

Mounting the Speakers


1. Match the front left and rear left speakers together and match the front right and rear right speakers together. Place the front speaker upside down.
2. Slide in the hinge to the bottom of the front speaker until the 'click' sound is heard.
3. Slide in the rear speaker to the hinge until the 'click' sound is heard.
4. Attach the four rubber feet provided to the top of the front speaker.

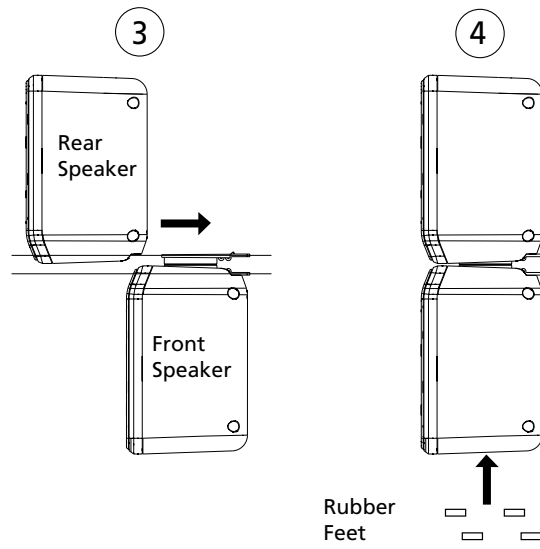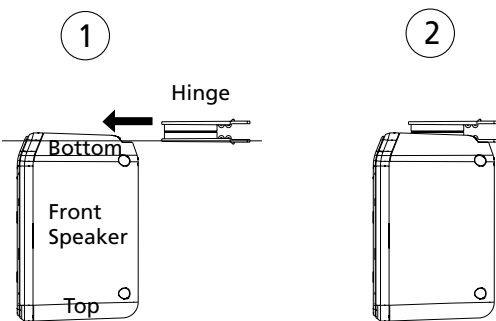


Adjusting the Angle of the Speakers

To achieve the best Front Surround sound Effect (FSsE), adjust the mounted front left and the rear left speakers to the left for an angle of 25° - 45° from the center.


Adjust the mounted front right and rear right speakers to the right in the same way.

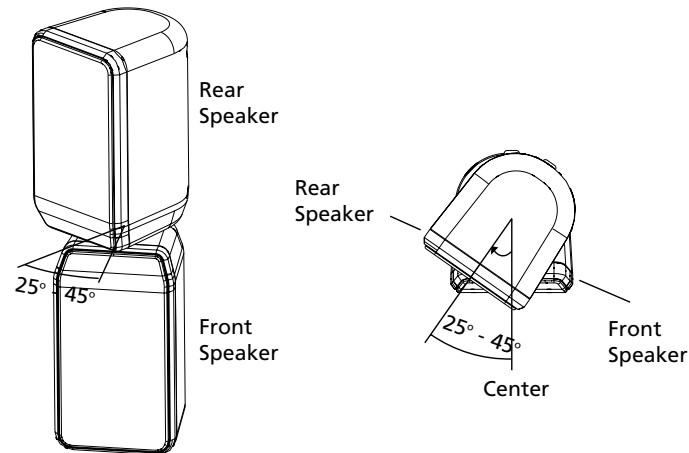

Place the rear speakers and subwoofer a foot or more away from TV. After adjusting the angle, the speaker should look like this illustration.

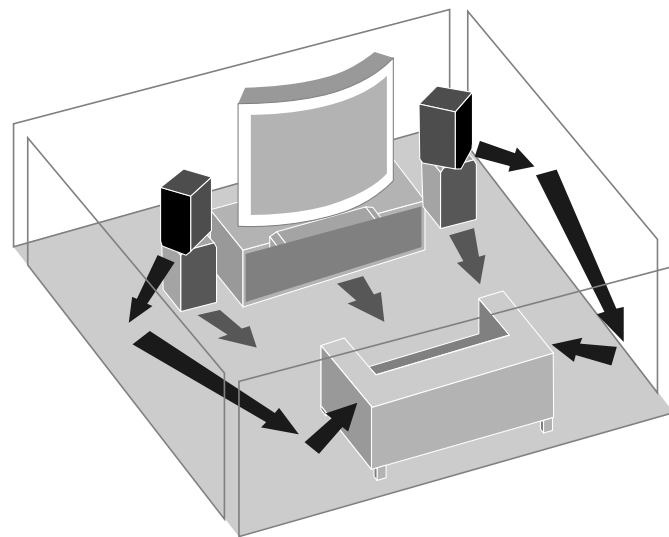


4. Connecting to Audio Components

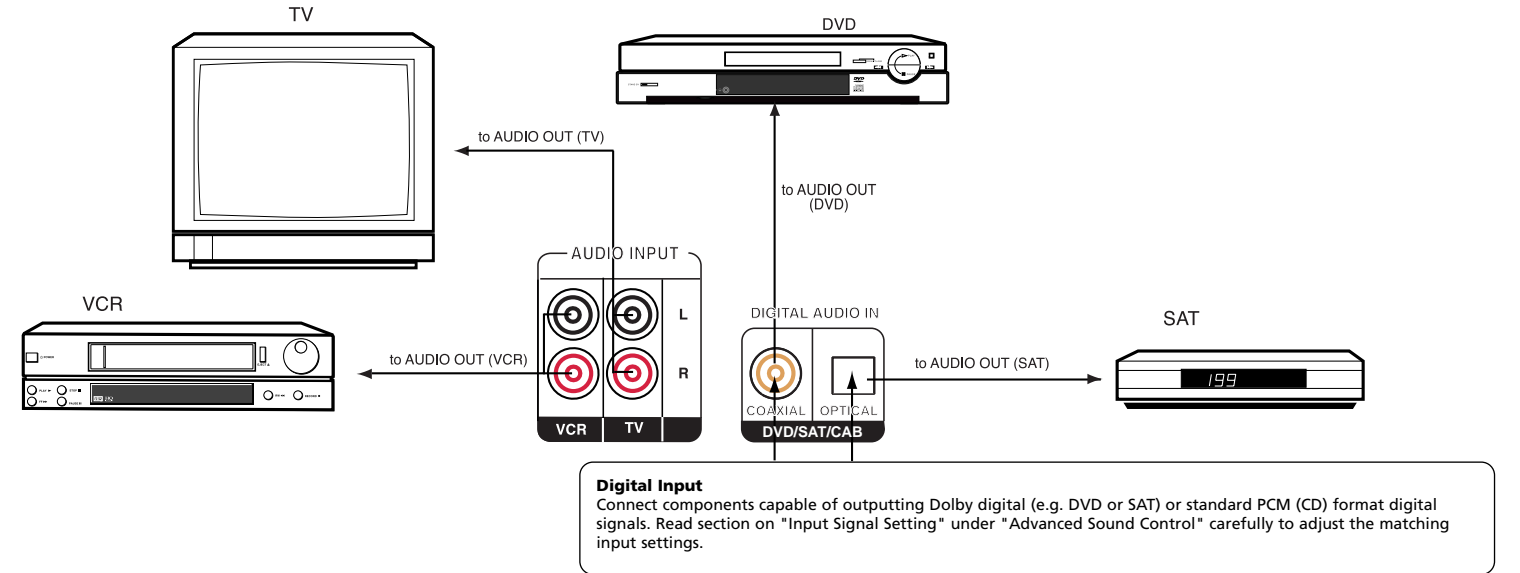

- The jacks on the back of the unit are used to connect to other components. One optical and one coaxial digital input jacks are provided for connection.
- To connect a SAT receiver or a DVD player with a digital output, use an optical digital cable (not included) or a coaxial digital cable (included) to carry the audio signal and enjoy Dolby Digital sound quality.

General controls

Front panel controls

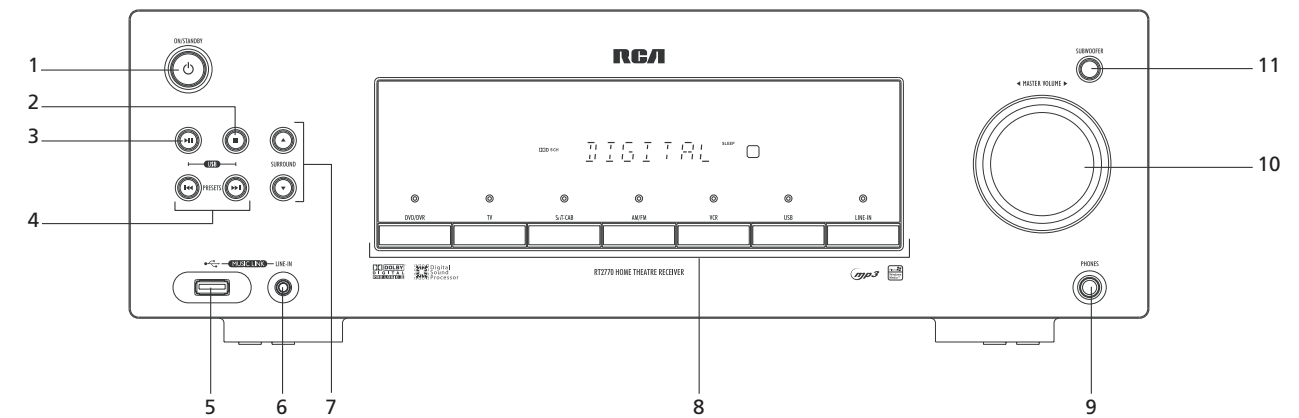

1. ON/STANDBY
Turns on/off the unit. When the unit is turned on, the unit will go to the mode it was in before powered off.
2. PAUSE
Starts and pauses playback in USB mode.
3. STOP
Stops playback in USB mode.
4. PRESET buttons
Selects preset stations in AM/FM mode. Directly accesses the previous or next track in USB mode.
5. USB jack
Connects USB devices.
6. LINE IN
Connects components for audio input.
7. SURROUND buttons
Selects digital sound processor. (STEREO, HALL, CHURCH, CLUB, STADIUM, STUDIO, 3 STEREO, DOLBY PL EMULATION, DOLBY PL II MUSIC, DOLBY PL II MOVIE)
8. DVD/DVR, TV, SAT, CAB, AM/FM, VCR, USB and LINE-IN (SOURCE buttons)
Selects sound source.
9. Headphones jack
10. MASTER VOLUME
Adjusts the volume.
11. SUBWOOFER
Selects among subwoofer output levels. (SOFT SUBWOOFER, BALANCE SUBWOOFER, STRONG SUBWOOFER, POWERFUL SUBWOOFER)