

A58W User Manual

Before use Please read the manual

WELCOME :

Thank you for choosing the WCDMA Digital Mobile Phone. After reading this guide, you will be able to fully master the usage of your phone and appreciate all its thorough functions and simple operation approaches.

DECLARATION :

This manual as a product use instruction does not represent the explanation for the product's software and hardware, the features possibly varies by region.

This mobile is compatible with GSM/GPRS/EDGE/WCDMA technology. Some functions referred in this guide also need the support from a network operator or a service provider.

In order to ensure use in safety, please read the "Safety Notice" in advance.

ICONS :

INDICATES warning for special attention.

INDICATES caution information.

INDICATES special explanation or tip in usage

CONTENTS

1. GETTING TO KNOW YOUR PHONE	1
2. GETTING STARTED.....	6
Install the USIM/SIM card.....	6
Insert the memory card	7
Charging the battery.....	8
Turn your phone on and off.....	9
Password	9
<i>PIN code</i>	<i>9</i>
<i>PIN2 code</i>	<i>9</i>
<i>PUK code</i>	<i>9</i>
<i>PUK2 code</i>	<i>10</i>
3. QUICK START GUIDE.....	11
Standby and Unlock.....	11
<i>Idle Screen and Main Menu</i>	<i>11</i>
<i>Date and Time Setting</i>	<i>11</i>
Make a call	12
<i>Make a call.....</i>	<i>12</i>
<i>Make a call from Contacts</i>	<i>12</i>
<i>Make a call from Call log.....</i>	<i>13</i>

<i>Make an international call</i>	13
<i>Dial an extension number</i>	13
<i>Make an emergence call</i>	13
Answer a call, Check missed calls	14
<i>Answer a call</i>	14
<i>Answer two calls in the same time</i>	14
<i>Check missed calls</i>	14
<i>End call</i>	14
Send a Message	15
Read a new Message.....	15
<i>Read a message</i>	15
4. FUNCTIONS DESCRIPTION	16
Call Log	16
<i>Check call log</i>	16
<i>Call back quickly</i>	18
<i>Delete call log</i>	18
Contacts	18
<i>Add a new contact</i>	20
<i>View contacts information</i>	21

<i>Edit contact information</i>	22
<i>Delete contacts</i>	22
<i>Speed find</i>	23
Message	23
<i>SMS/MMS</i>	23
<i>SMS/MMS settings</i>	25
<i>Email</i>	27
Settings.....	29
<i>Profiles</i>	29
<i>Display</i>	30
<i>Ringtone</i>	30
<i>Phone settings</i>	30
<i>Call settings</i>	31
<i>Networks settings</i>	32
<i>Connectivity settings</i>	32
<i>Security settings</i>	32
<i>Reset default</i>	33
Camera.....	33
<i>Preview</i>	34

<i>Take a photo</i>	34
<i>Record a video</i>	35
File manager	35
Browser	35
Java apps	36
Bluetooth	37
<i>Transmitting document via Bluetooth.</i>	38
<i>Use Bluetooth earphone.</i>	39
Clock.....	39
<i>Alarm</i>	40
<i>World Time</i>	40
<i>Stop watch</i>	40
Calendar	41
<i>New</i>	41
<i>View</i>	41
<i>Weakly/Monthly view</i>	41
<i>Delete</i>	41
<i>Go to date</i>	41
<i>Settings</i>	42
Notes	42

FM Radio	42
Recorder	43
Calculator	44
Converter	45
Text viewer	45
5. INPUT METHOD	46
6. MAINTENANCE	47
Battery Maintenance	47
Phone Maintenance	48
7. TROUBLESHOOTING	49
8. THE ENVIRONMENTAL DESCRIPTION OF THE MOBILE PHONE	53

SAFETY NOTICE:

Before using the phone, please read and follow the rules as below carefully.



If you make or answer a call while driving, please use the hands-free device (e.g. earphone, vehicle hands-free system, mobile hands-free system) or use your phone after parking.



Please switch off your phone where you see signs forbidding phone use. Such signs can be found in medical centers or establishments with medical equipments.



The phone may interfere with the communication network of aero planes, so please make sure your phone is switched off during the flight.



To avoid the risk of any explosion, please switch off the phone at petrol stations and places which are near fuel, chemical solvent or other dangerous substances.



Please switch off your phone in areas where there could be a risk of explosion and where you are asked to switch off bidirectional radios. Notice and adhere to any rules and regulations concerning mobile phone use.



All phones can be subject to interference, which may affect its performance.



In order to ensure high performance and to avoid damaging the phone, please use the original accessories and battery. Avoid using products which are not compatible.



Keep this product away from excessive moisture and extreme temperatures.



Please neither burn the phone battery nor take it as ordinary rubbish, as this could endanger life and contaminate the environment. Please obey the environmental policy of the local government and have them dispose and recycle in time.



If you need to connect your phone to other devices, please read the user guide carefully to ensure the procedure is carried out safely.



Keep small parts (e.g. SIM card) out of the reach of children to prevent batteries from being swallowed or cause other dangers.




Please back up the important information of phone and make sure to have a copy in case data lost from your phone.




Make sure the phone is on and in service before making an emergency call. Then press the call key for your position to be located. Please don't end call unless you are told to do so.

1. Getting to know your phone

Front View

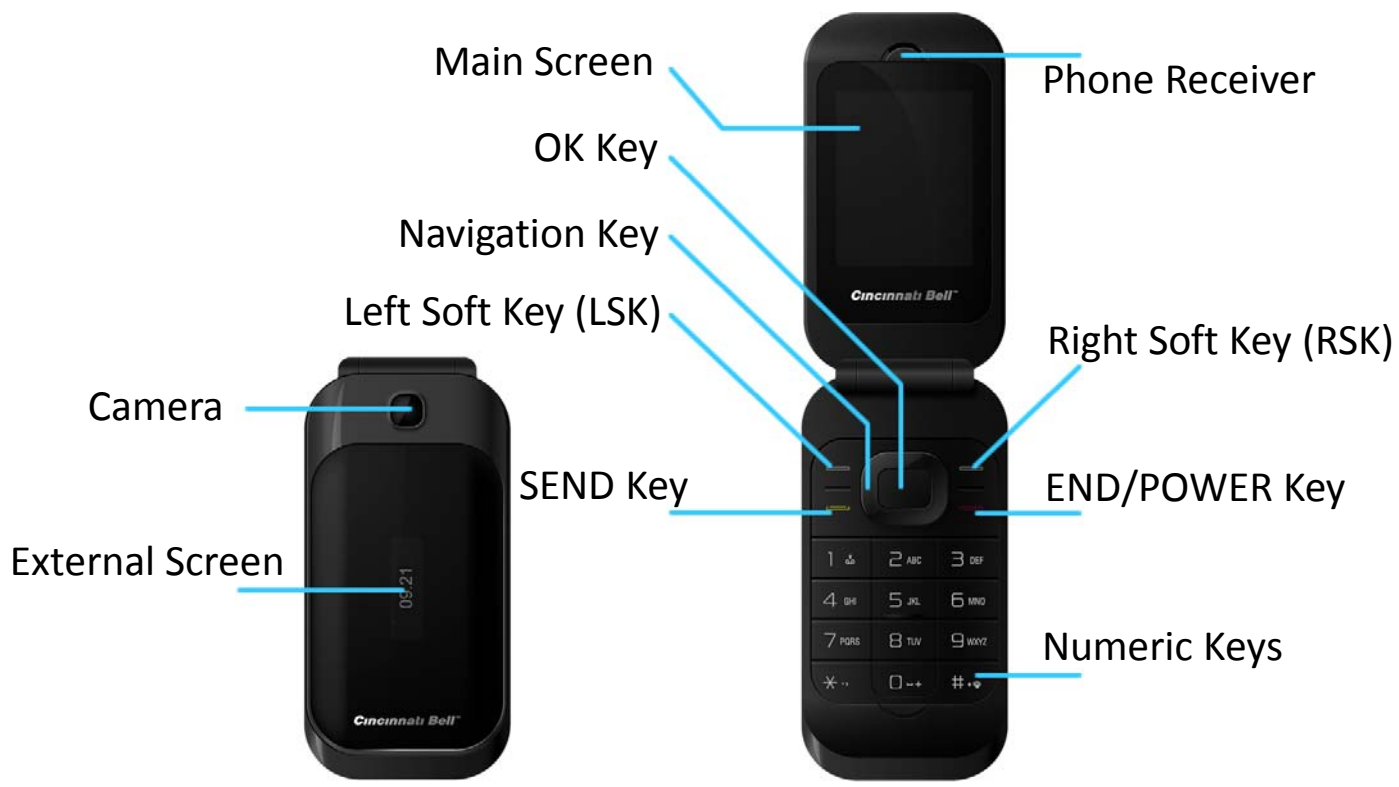

Side View

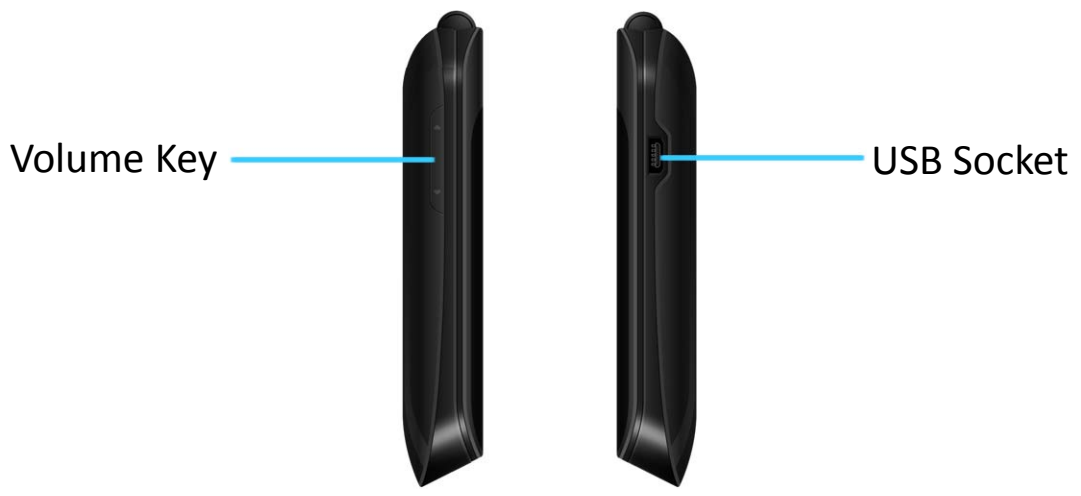






Back View





 


















Keys

Key	Description
OK Key	Confirm selected entries or execute the displayed function.
Navigation Key	4 way navigation allows you to scroll between the menu options.
LSK/RSK	To execute the displayed function.
SEND Key	1) Answer or make a call. 2) Enter call history screen in standby mode.
END/POWER Key	1) Power on/off with a long press. 2) Refuse a coming call/End calling. 3) Exit app and return to IDLE SCREEN.

<p>Volume Key</p>	<ol style="list-style-type: none"> 1) Regulate the ring volume of the current profile. 2) Augment/Lessen Call volume in call. 3) Regulate the volume of Audio/Video when media player is playing on front desk or background.
	<p>Numeric keys for dialing phone numbers;</p>
	<p>Press and hold to call the contact that has been programmed into the speed dial slot.</p>
	<ol style="list-style-type: none"> 1) When inputting text, press 0 for the space bar; 2) Press and hold 0 to input + when dialing;
	<ol style="list-style-type: none"> 1) Pressing * to input symbols when inputting text; 2) Input*/P/W when dialing;
	<ol style="list-style-type: none"> 1) Pressing # to change text input method when inputting text; 2) Press and hold # to change profiles when idle screen.

Status icon

Icon	Function
	Signal strength
	Flight mode
	Battery
	GPRS
	EDGE
	UMTS
	Calling
	Missed call
	Unread SMS
	Unread MMS
	Bluetooth
	Alarm clock

	Memory full
	Bluetooth is on
	U-disk is using
	Music playing background
	FM playing background
	Profile is vibration only
	Profile is silence
	Profile is normal ringing
	Profile is vibration and ringing

2. Getting Started

Install the USIM/SIM card



Always turn off your device before inserting or replacing the USIM/SIM card and battery.

Battery performance depends on various factors, including network configuration, signal strength, the temperature of the environment in which you operate the device, the features and/or settings you select and use, items attached to connecting ports, and your talk time, data transmission, and other software usage patterns.



To reduce risk of fire or burns:

- Do not attempt to open, disassemble, or repair the battery.
- Do not crush, puncture, short-circuit the external connector, or dispose in fire or water.
- Do not expose to temperatures above 60°C (140°F).
- Replace only with the battery designated for this product.
- Recycle or dispose of used battery as stipulated by local regulations.

1. Remove the battery cover and the battery:

If the phone is on, press and hold [END/POWER] key to turn it off.

2. Remove the battery;

3. Insert the SIM card:

Place the SIM card in the phone with the gold-colored contact area facing down.

4. Insert the battery:

Make sure the contacts of the battery face the correct direction, and push the other side of the battery lightly until it is completely fit within the battery compartment.

5. Place back the battery cover.

Insert the memory card

You can insert Micro SD Card to enhance the phone's memory.


Insert the Micro SD Card :

1. Turn off the device;
2. Remove the battery cover and the battery;
3. Open the Micro SD card cover;

4. Make sure the side with the golden contact area is facing down.
5. And then, close the card cover.

Charging the battery

Charging the battery by the travel charger :

1. Connect the USB cable to the travel charger.
2. Insert the USB cable to USB port on the phone carefully, and connect the charger to a standard wall outlet.
3. When the battery is fully charged (the icon  is no longer moving), unplug the travel charger from the power outlet.



New batteries have been pre-charged partially before shipment. Before you start using your device, it is recommended that you insert and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Do not remove the battery from the device while charging.

Turn your phone on and off

After installing your SIM card and battery and charging the battery, you can now power on and start using your device. Press and hold the [END/POWER] key for a few seconds.

Password

PIN code

PIN code (Personal Identification Number) will avoid illegal use on your SIM. PIN code is provided with SIM card. If inputting wrong PIN code for three times, you should unlock it by PUK code. Default PIN code is 1234. For more information, please consult your service provider.

PIN2 code

You need to input PIN2 code in some functions (such as, call costs). If inputting wrong PIN code for three times, you should unlock it by PUK code. For more information, please consult your service provider.

PUK code

When PIN code is locked, PUK is required. Usually, PUK

code is provided with SIM card. If not provided or lost, please buy a new SIM card. The PUK code cannot be changed.

PUK2 code



When PIN2 code is locked, PUK2 is required. PUK2 code is provided with SIM card. If not provided or lost, please buy a new SIM card. The PUK2 code cannot be changed.

3. Quick Start Guide

Learn how to perform basic operations and use the main functions of your mobile phone.

Standby and Unlock

Idle Screen and Main Menu

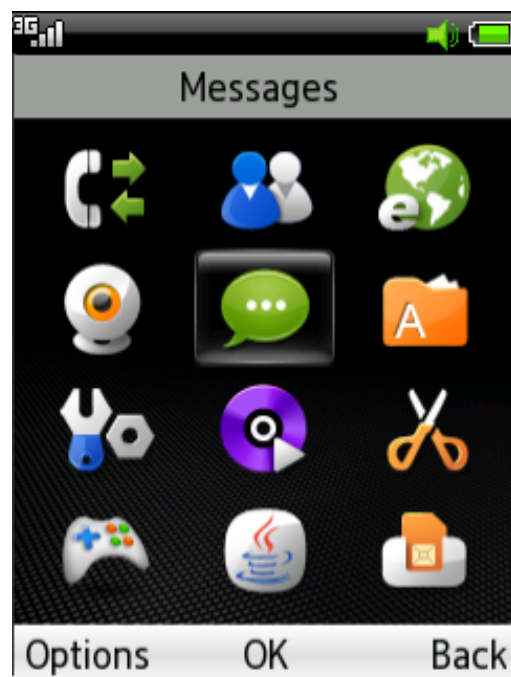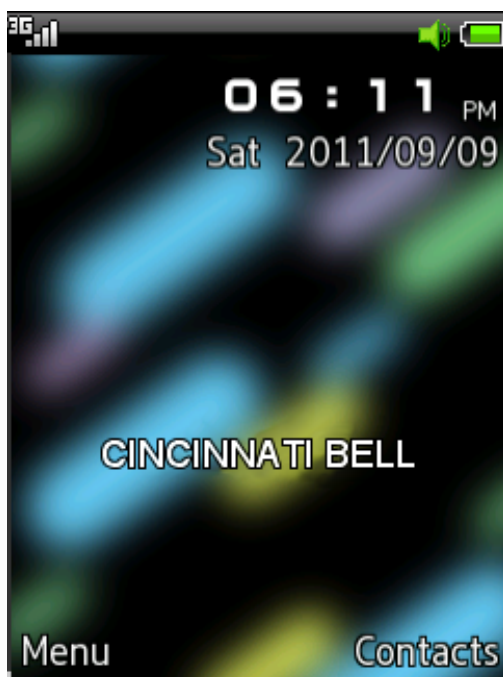

Date and Time Setting

1. < Main Menu > → <Settings> → <Phone settings> → <Time and date>.
2. Choose <Time>, input to adjust the time, and then press [LSK] key to save.

3. Choose <Date>, input to adjust the date, and then press [LSK] key to save.
4. Set <Time zone>, <Use 24-hour format > and <Date format>.
5. Press [RSK] key, the settings will be automatically saved.

Make a call

Make a call

1. In standby or main menu, press any numeric key to enter dial board, input numbers to make a call.
2. Press [END/POWER] key to end the call.

Make a call from Contacts

1. In main menu, select <Contacts> to enter the Contacts menu.
2. Press [Up] key/ [Down] key to search for the contact, or search for a contact through instant searching.
3. Press [SEND] key to make a call.

Make a call from Call log

1. In standby mode, press [SEND] key to enter Call log menu.
2. Press [Up] key / [Down] key search for a Call log.
3. Press [SEND] key to make a call.

Make an international call

1. Pressing and hold [O] key to input “+” in dial board.
2. Input country code and phone number
3. Press [SEND] key to make a call.

Dial an extension number

You should dial the phone number first and then dial the extension number. If you insert “P” between phone number and the extension number, then press [SEND] key, so call to the extension will be made automatically.

Make an emergence call

Input the emergence number and then press [SEND] key.

Answer a call, Check missed calls

Answer a call

When a call comes in, a dialog box will appear, showing the incoming number or a contact, press [SEND] key to answer, or [END/POWER] key to reject the call.

Answer two calls in the same time

If call waiting is on (service from the operator is required), you can follow as below when the second call comes:
Press [SEND] key to answer the second call, the current call will be on hold.

Press [END/POWER] key to reject the second call, the current call continuous.

Check missed calls

Your phone will display a pop-up box to prompt the calls you have missed, to check details, press [LSK] key; to cancel, press [RSK] key, and a missed call icon will appear in status line.

You can also enter the <Call Log> to check missed calls.

End call

Press [END/POWER] key to end call.

Send a Message

Create and send SMS/MMS message from your device.

1. In SMS/MMS screen, choose <New SMS>/<New MMS> to create a new message.
2. Input the contact's number or choose from <Contacts>.
3. Input message text.
4. Press [LSK] key and select <Send> to send it.




In new SMS screen, press [LSK] key - <Insert> to choose and insert Contact info, Text template or Calendar event.

In new MMS screen, press [LSK] key to select to insert picture, video, sound or other material, and add subject, Cc or Bcc.

Read a new Message

Read a message

When you have a new message, a pop-up box appears. To read the message, press [OK]; to cancel, press [RSK], and a missed message icon <  > appears in status bar.

4. Functions Description

Call Log

Call log can record the numbers of all calls, missed calls, dialed calls and answered calls.



Only if the network supports these functions, with the device switched on and located within the network service area, the phone can record missed calls and answered calls.

Check call log

1. In idle screen, press [SEND] key to enter the call log screen.
2. Call logs display the contact's name and the phone number, the times of calling from/ to the same contact and the last time of the incoming / outgoing call. Choose a record you want to enter the detailed call log.
3. If the current number is not recorded in the contacts, you can view the option menu as below:
 - **Voice call** : call this number
 - **Edit before call** : copy the number to the dialer

and edit it before call

- **Send SMS:** enter to send a SMS to this number
- **Send MMS:** enter to send a MMS to this contact
- **Save to contacts:** enter and choose New contact to add this number to a new contact; or choose Existing contact to add this number to an existed contact.
- **Add to blacklist:** press [OK] key to add any number in the list into the blacklist. To manage the blacklist, <Settings> - <Security > - < Blacklist >, enter phone code (default phone code is 0000) to finish the operation.
- **Delete:** press [OK] key to delete the number from the call log.

4. If the current numbers have been recorded in the contacts, you can view the option menu as below:

- **Voice call :** call this number
- **Edit before call :** copy the number to the dialer and edit it before call
- **Send SMS:** enter to send a SMS to this number
- **Send MMS:** enter to send a MMS to this contact
- **Contact detail:** view the details of the contact

- **Add to blacklist:** press [OK] key to add any number in the list into the blacklist. To manage the blacklist, <Settings> - <Security > - <Blacklist >, enter phone code (default phone code is 0000) to finish the operation.
- **Delete:** press [OK] key to delete the number from the call log.

Call back quickly

1. In the call log, select the number and press [SEND] key to call back quickly.

Delete call log

2. In the call log, press [LSK] key, choose <Delete> , press [LSK] key to confirm.
3. If you want to delete more call log, press [LSK] key, choose <Delete more> , select the item you want to delete or < All> , press [LSK] key to delete selected items.

Contacts

You can manage your contact information in contacts menu.



if the contacts are saved in USIM/SIM card , only contact name and one number can be recorded and edited.

4. In main menu, choose <Contacts> to enter the contact list.
5. The contact list can display the contact name and the storage location. You can press [SEND] key to make a call.
6. In the contact list, press [LSK] key, option menu as below:
 - **Add new contact:** enter the new contact's editing screen, choose the contact will be saved in the phone or SIM. And input the contact name, number, email and etc., and then press [LSK] key to save all the information.
 - **Send SMS:** enter to send a SMS to this contact
 - **Send MMS:** enter to send a MMS to this contact
 - **Voice call:** make a voice call with this contact
 - **Edit before call:** copy the number to the dialer and edit it before call
 - **Send as vCard:** send contact as vCard via SMS, via MMS, or via Bluetooth
 - **Group:** view all the contacts in groups and to add new group, send message to a group, edit group and delete
 - **Delete:** delete this number from contacts

- **Move to Phone or SIM card:** move the contact from phone to SIM, or from SIM to phone. After that, the contact will be not in the previous phone or SIM.
- **Copy to Phone or SIM card:** move the contact from phone to SIM, or from SIM to phone.
- **Add to blacklist:** press [OK] key to add any number in the list into the blacklist.
- **Mark:** mark contacts to send SMS/MMS, send as vCard, delete, move to, copy to, add to backlist or export to SD card.
- **Export to SD card:** export contacts from phone to SD card.
- **Import from SD card:** import contacts from SD card to phone.
- **Settings:** includes speed dial, contacts to display, default storage location
- **Memory status:** view all the contact information in the phone, SIM and groups.

Add a new contact

1. In the contact list, press [LSK] key - <Add new contact> to enter the new contact's editing screen.
2. In the editing screen, input the contact name, number,

email and etc., then press [LSK] key to save all the information.



Choose the image to add contact picture from photos or camera. To add more information, you can choose <Add detail>.

View contacts information

1. In the contacts list, click the contact name to view.
2. Press [LSK] key to view option menu as below:
 - **Send SMS:** enter to send a SMS to this contact
 - **Send MMS:** enter to send a MMS to this contact
 - **Edit:** edit the information of this contact
 - **Voice call:** make a voice call with this contact
 - **Edit before call:** copy the number to the dialer and edit it before call
 - **Send as vCard:** via SMS, via MMS, or via Bluetooth.
 - **Delete:** delete this contact from contacts
 - **Move to Phone or SIM card:** move the contact from phone to SIM, or from SIM to phone. After that, the contact will be not in the previous

phone or SIM.

- **Copy to Phone or SIM card:** move the contact from phone to SIM, or from SIM to phone.
- **Duplicate contact:** duplicate this contact in the same phone or SIM
- **Add to speed dial:** add as one of the speed dials and choose a number from 2-9 as the speed dial number for this number.
- **Add to blacklist:** press [OK] key to add any number in the list into the blacklist.
- **Export to SD card:** export contacts from phone to SD card.

Edit contact information

In the contact detailed screen, press [LSK] key, then choose <Edit>.

Delete contacts

In the contact list, press [LSK] key, choose <Delete> , select the item you want to delete or <Delete all> , then press [LSK] key to delete .

Speed find

In the contact list, input the first letter to find the contact.

Message

In message screen, you can create, send, receive, view, edit and set the SMS/ MMS/Email. You can also receive network service message and broadcasting message.



CAUTION SMS, MMS and Email functions require the service from service provider. Only the devices that are compatible with MMS function can receive and display MMS.

In main menu, choose <Message> to enter the message function.

SMS/MMS

Create a SMS

1. In the SMS function screen, choose the <New SMS> on top of the screen to edit a new message.
2. Enter the phone number in the receiver column, or choose <Contacts> to select one or more numbers and press [LSK] key to add them to the receiver list.



Choose <Add from Contacts> to add a receiver.

3. Input the message content in message column.
 - Choose <Insert> to insert Contact info, Text template or Calendar event.
4. Choose <Send> to send the message.
5. Choose <Save to drafts> to save the message in Drafts.

Create a MMS

1. In the MMS function screen, choose the <New MMS> on top of the screen to edit a new message.
2. Enter the phone number in the receiver column, or choose <Contacts> to select one or more numbers and press [LSK] key to add them to the receiver list.
3. Input the message content in message column.
 - Choose <Insert picture/video/ sound/ other>to insert picture/video/sound/other.
 - Choose <Add subject/Cc/Bcc> to add subject/Cc/Bcc to the message.
 - Choose<MMS control> to preview the MMS or remove slide.
 - Choose <Send> to send the message.
 - Choose <Save to drafts> to save the message in Drafts.

Read the message

1. When a new message comes, a dialogue box will appear on the screen. Choose the item to enter the Inbox.
2. Choose unread message to read it.

Inbox

View message list and read/unread status.

Outbox

Save and view/delete messages waiting to be sent

Drafts

Save and view/delete drafts.

Sent

Save and view/delete sent message.

SMS/MMS settings

In SMS function screen, press [Options] - <Settings> to set SMS settings, Text template and Cell Broadcast.

In MMS function screen, press [Options] - <Settings> to set MMS setting and Text template.

SMS settings

- **Service center:** edit the service center's number
- **Delivery report:** when it is on, message center will send you the delivery report
- **SMS Type:** select the type for SMS
- **Validity period:** set the period that messages stay in the message center
- **Save sent SMS:** select on/off

Text template

Edit /delete/add text template.

Cell broadcast

On/off to receive cell broadcast or not and also set channel.

MMS settings

- **Validity period:** Set the period that messages stay in the message center.
- **Priority:** Set the MMS's priority to be low, normal or high.
- **Delivery report:** When it is on, message center will send you the delivery report.
- **Fetch mode:** Set the fetch mode for MMS.

- **Auto-Playback:** Set the MMS's playback to be automatic or manual.
- **Deliver size limit:** Set the max deliver size.
- **Reception size limit:** Set the max reception size.
- **Save sent SMS:** select on/off.

Text template

Edit /delete/add text template.

Email

You may receive and send emails via Email.



You need to set up your own email, and then receive and send the emails.

Receiving and sending emails requires Internet connection. Please consult your service provider for details about setup parameters.

Create an account

1. Press [LSK] key and select <Settings> to enter email accounts list screen.
2. Select an item according to your email type and press [Ok] key, or press [LSK] key and select <Create>to create an account.

3. Edit the account information and do some settings, includes:
 - **User information:** edit user name, E-Mail address, Reply-to address, User ID, Password, SMTP user ID and SMTP password.
 - **Connection:** to set the outgoing and incoming servers, including server name, server port, SSL/TLS and authentication settings.
 - **Msg preference:** to set email's download mode, maximum size, etc.
 - **Signature:** to edit your signature
4. After the settings, back to the Email screen, select to enter Inbox/Outbox/Sent/Drafts or write a new email.

Receive email

After setting the account, enter the Email screen, and select **Inbox** to view the received mails, **Outbox** to view sent mails, **Sent** to view the sending mails, and **Drafts** to view the draft mail.

Create a new email

1. After setting the account, enter the Email screen, choose **New mail** to write and send a new mail.
2. Enter the email address in the receiver column.
3. Enter the subject in the subject column.

4. Input the content in the content area.
5. Press [LSK] key and select <Send> to send the email.

Settings

Profiles

Profile settings can help you to set the ringing tone, message alert tone, volume, notification type and etc. Profiles modes include "Normal", "Silent", "Meeting", "Outdoor", "Offline", "Customised".

Profile setting

1. In <Profiles> menu, select the profile you prefer to set <on>.

Editing Profile

2. In <Profile> menu, Press [LSK] key to select Settings
3. Set the options according to menu prompt.



In Standby mode, the current profile settings and ring mode is displayed in the Status line on the top of screen.

Display

Set the theme, wallpaper, and shortcuts

Ringtone

Include settings of call default ringtone\SIM voice call ringtone\message ringtone.

Phone settings

Time and Date

You can set the time, the date and the format in the menu.



If you remove the battery from the phone or the battery is depleted for a long time, then you may need to reset the time and the date when restarting the phone after charging/reinstalling the battery.

Language

Select the language shown on the phone, including English and Spanish.

Backlight

Adjust backlight, including brightness and backlight duration.

Input setting

To set the input language.

About

View the information of this device.

Call settings

Call control

The call control settings include:

- Send my number: to set Send or Hide your number
- Reject with message: select to turn on/off, and edit the reject message text.
- Reject message text: edit reject message text.
- Call connect tone: select to turn on/off
- Minute minder: select to turn on/off minute minder
- Call end tone: select to turn on/off
- Answer mode: to select answer mode: Normal, Auto answer or Any key.
- Call duration: to set durations of last call, dialed calls and answered calls



The service of “Send my number” requires network

service.

Voice call

Include Call diverting, Call Barring, Call waiting and Auto redial.



The network service and the SIM card are required to activate the call restriction function.

Voice mail

Edit the name and number of the voice mail.

Networks settings

Networks settings menu can help you set the network mode and search the network automatically/manually.

Connectivity settings

Set the connection type for default connection, Browser, JAVA, MMS and data account.

Security settings

Phone lock

Select to turn on/off phone lock. (Default password is "0000".)

Data lock

Functional protection provides password protection for contacts, SMS, MMS and call log. You have to enter the phone code when activating the functional protection for any function.

You have to input the phone code before setting the functional protection.

Blacklist

Manage blacklist. Entering this function requires phone code.

Change phone code

To change the phone code to the one you like. You have to input the phone code before entering the function.

Security

Manage PIN and PIN2 code.

Reset default

You can select the functions to be restored as default value.

Input password. (Default password is "0000".)

Camera

You can use the phone's camera to take photos and adjust the camera's settings. The camera is on the back

of the phone and takes the screen as a viewfinder. The photos taken by the camera are in JPG format. Please use the appropriate software to view them when you upload to the computer.



You need to delete some pictures or other files in “File manager” to release some space in memory if the memory space is not enough for new picture.

Preview

In the preview screen, press [LSK] key to view option menu:

- **Switch mode:** switch between camera and camcorder.
- **Scene mode:** Select Normal, Continuous, MMS or other modes.
- **Exposure value:** adjust Exposure value.
- **Settings:** including settings of Resolution, Timer, White Balance, Effects, ISO, Image quality, Shutter sound and Storage.
- **Album:** view pictures in album.

Take a photo

To a take photo, press [Ok] key when there is no option menu. After shooting, you can delete, send, rename the photo or set it as wallpaper or slideshow or details.

Record a video

To record a video, press [Ok] key when there is no option menu, select <Pause> to pause recording or <Stop> to stop recording. After recording, you can delete, send, rename or replay the video.

File manager

You may manage files including images, videos, sounds, and others.

In the screen of file manager, press [LSK] key to obtain options as below:

- **Delete:** delete the selected file/files.
- **Send via:** MMS, Email or Bluetooth
- **Rename:** rename the selected file
- **Manage:** Move to folder, Copy to folder and New folder
- **List by:** date, name, type, size (largest first)
- **Properties:** view the details of the selected file
- **Memory status:** view the memory status of phone and SD card.

Browser

Your mobile phone supports wireless application protocol WAP and WWW service. Please make sure that

you have launched the mobile Internet services before you use the function. It may be charged to use the internet service. The charge information is provided by the network service providers.

You can access many different Internet services such as news, weather reports, flight information, and others. These services are especially designed for mobile phones and maintained by WAP/WWW service providers.

Network service is necessary for WAP. Please contact your network provider and/or the service provider of the desired service. The service provider will also provide instructions about how to use their service.



The charge information and other specific settings are provided by the network service providers.

Java apps

You can download and view all installed JAVA games and applications in JAVA menu.

Bluetooth

Select <Main menu> → <Extra> → <Bluetooth> to enter the function.

Enter the Bluetooth screen to activate the Bluetooth for more operations.

Activate Bluetooth

Select on/off. “on” accepts other devices to connect to your phone; “off” rejects other devices to connect to your phone.

Device lists

Show the compatible Bluetooth devices.

Press [LSK] key to search device or view option menu.

My phone's visibility

Shown to all or Hidden to decide if the phone can be searched by other devices.

My phone's name

Name phone's name, it will be shown in the other device when it is found.

Service information

Includes hands free, Bluetooth headset, stereo service, basic image, dial up modem connection, file transfer and

object push.



Bluetooth technology enables wireless connections between electronic devices within a range of 10 meters (33 feet). A Bluetooth connection can be used to send images, videos, texts, business cards, calendar notes, or to wirelessly connect to devices using Bluetooth technology.

When Bluetooth technology starts, the distance between phone and Bluetooth device will greatly influence transfer speed and the quality of talk.

Transmitting document via Bluetooth.


1. Activate Bluetooth and set the <My phone's visibility> as <Visible to all> .
2. Enter <Device list>:
 - 1) Press [LSK] key to search device. If you have used Bluetooth before, a list of the previous search results is displayed;
 - 2) Select the devices with which you want to pair, and enter the password. The same password must be inputted to the other device as well.
 - 3) Device pair successfully;
3. Select a document you want to send in file manager ;
4. Press [LSK] key, select <Send via> - <Bluetooth>;
5. Select device you wanted;
6. Press [OK]

Use Bluetooth earphone.

Open the paired devices list and stay within 10 meters in the match statue.

1. Activate Bluetooth and set the <My phone's visibility> as <Visible to all> .
2. Enter <Device list>:
 - 1) Press [LSK] key to search device. If you have used Bluetooth before, a list of the previous search results is displayed;
 - 2) Select the Bluetooth earphone with which you want to pair, and enter the password (Bluetooth earphone password please find in earphone user manual);
 - 3) Device pair successfully, Bluetooth earphone will be shown in the device list, select the earphone, choose <Bluetooth earphone> to active earphone function.
3. Now you can call via Bluetooth phone.



Bluetooth icon  will be shown when the Bluetooth is on.

Clock

Select <Main menu> → <Extra> → <Clock> to enter the function.

Alarm

You can set several alarm clocks at different times and you can set the alarm on or off and delete in this menu.

World Time

You can add a new region of time to the list of world time from the world time map.

Enter the world time to view the existing list of world time.
Press [LSK] key:

- Add: select the region you need to add, and then done. In the world time list, choose <Delete> to delete the time of list.
- Delete: delete the time of region as expected
- Move up: move up the time of region in the expected sequence
- Move down: move down the time of region in the expected sequence

Stop watch

The operations of this function are as follows :

- Start: to start.
- Stop: to record the time, continuous click to record several time points.

- Reset: to restart.

Calendar

The function allows you to view calendar, remind you your schedules by alarm clock and record your schedules.

Select <Main menu> → <Extra> → <Calendar> to enter the function.

New

In this item, you could add new meetings, to-dos and anniversaries in the calendar.

View

In this item, you could view all events, all meetings, all to-dos and all anniversaries.

Weakly/Monthly view

In this item, you could choose weekly view /monthly view.

Delete

In this item, you could delete any schedules in the calendar.

Go to date

In this item, you could choose the date to view in the

calendar.

Settings

1. Calendar alarm ring: choose the calendar alarm ringtones
2. Alarm snooze time: choose the alarm snooze time from 2 to 60 minutes
3. Week starts on: choose Sunday or Monday
4. Default view: choose default view as monthly view or weekly view

Notes

Select <Main menu> → <Extra> → <Notes> to enter the function.

Notes supports the functions: create new, view and delete.

FM Radio

The phone supports FM radio.

Select <Main menu> → <Extra> → <FM Radio> to enter the function.

The following operation in FM Radio :

- **My channels:** list the channels you save
- **All channels:** list all the channels searched

- **Manual tuning:** enter the channel's frequency you like to tune to the channel
- **Fine-tune:** tune the channels every 0.1 MHz by pressing Left/Right key
- **Add to my channels:** add the current channel to my channels list if you like
- **Scan channels:** select to search the channels

Recorder

Select <Main menu> → <Extra> → <Recorder> to enter the function.

You can use the phone's recorder to record sounds and adjust the recorder's settings. The voice clips are taken in AMR format. Please use the appropriate software to use when you upload the voice clips to the computer.

In the main screen of the recorder, press [OK] key to record, press OK key again to stop and this record clip will be saved automatically.

In the main screen of the recorder, press [LSK] key:

- **Voice clips:** In this screen, you could view the voice clips in list. Press option key to have:

The option menu of voice clips:

- ✓ Delete
- ✓ Delete more
- ✓ Rename
- ✓ Send via: MMS, Bluetooth
- ✓ Set as: profile ringtone, caller ringtone
- ✓ Details: to view the name, format, size, date and protect or not

● Settings

- ✓ Record mode: choose normal or MMS
- ✓ Storage location: choose to save the voice clips in the phone or storage card



You need to delete some pictures or other files in “file manager” to release some space in memory if the memory space is not enough for new

Calculator

This supports simple calculation, such as +, -, ×, ÷. The calculator has limited accuracy and is designed only for simple calculations.

Select <Main menu> → <Extra> → <Calculator> to enter the function.

Converter

This supports conversion including currency, area, length, weight, temperature, volume and velocity.

Select <Main menu> → <Extra> → <Converter> to enter the function.

Text viewer

The phone support TXT files.

Select <Main menu> → <Extra> → <Text viewer> to enter the function.

Text viewer can auto-scan TXT files when enter.

The following operation in text viewer :

- **Last read:** read form last read.
- **Recent files:** list all TXT files last searched.
- **Other files:** enter the file manager to find other TXT files.
- **Bookmarks:** go to bookmark list to view or manage.
- **Read history:** view read history.
- **Settings:** set font size, text color, background, brightness, light time-out, default viewscreen, autoview speed, encoding and reset default settings.

5. Input Method

This mobile phone supports English and Spanish input.

You can set default input language and default input method in < Main Menu > → <Settings> → <Phone settings> → <Input settings>.

6. Maintenance

Battery Maintenance

1. Please do not put/throw batteries into a fire, as this will cause the battery to burn and explode.
2. When installing the battery, do not use force or pressure, as this will cause the battery to leak, overheat, crack and burn.
3. Please do not use wires, needles or other metal objects to short-circuit the battery. Also, do not put the battery near necklaces or other metal objects, as this will cause the battery to leak overheat, crack and burn.
4. Please do not solder the contact points of the battery, as this will cause the battery to leak overheat, crack and burn.
5. If the battery overheats, changes color, or becomes distorted in use, charging, or storage, please stop using and replace it with a new battery.
6. If the battery leaks or gives off a strange odor, please remove it from the vicinity of the open fire to avoid a fire or explosion.
7. Please do not use or place batteries in places of high

temperature such as in the sun.

Phone Maintenance

1. Please keep the phone and the spare parts beyond reach of children.
2. Avoid contact with water or other liquids. Liquid in the phone could cause a short circuit, battery leak or other malfunctions.
3. Please keep the phone away from the high temperature, as it will shorten the service life of the phone, and make the plastic damage the battery.
4. Do not disassemble or modify the mobile phone, as it will lead to damage to the phone such as battery leakage or circuitry failure.
5. Do not use acid or alkali substances to clean the phone.
6. Do use the original spare parts. Otherwise it will fail the warranty.

7. Troubleshooting

Problems	Cause
The phone can't be switched on	The battery power is used up; Incorrect battery installation.
(U)SIM card malfunction	<p>(U)SIM card is damaged; Contact your network service provider.</p> <p>(U)SIM card is not properly inserted; Confirm (U)SIM card is properly inserted.</p> <p>There is a foreign substance on the metal surface of the (U)SIM card. Use a clean cloth to wipe off the metal contact point of the (U)SIM card</p>
Poor reception	Using the mobile phone in an area with poor signal such as near tall buildings or in a basement where radio waves cannot be transmitted.
	Using the mobile phone when the network is busy, such as during rush hour, when the lines are full making it impossible to get through.

	<p>Related to the distance from the base station built by the network. You can request the network service provider to provide a service area plan.</p>
Echo or noise	<p>Caused by poor network relay, a regional problem; Some regional problem when calling.</p> <p>Hang up and redial, if the relay is changed then the line may be better.</p>
Unable to make a call	<p>Using the call bar function. Cancel the function.</p> <p>Using the fixed dialing function. Cancel the fixed call setting</p>
Unable to charge	<p>Battery or charger is damaged, Replace the battery or charger.</p> <p>Recharging in the environment of less than -10C or higher than 55C, Change the charging environment.</p> <p>Poor contact, Check if the plug is properly connected</p>
Unable to connect to the network	<p>Expired (U)SIM card. Contact your network service provider.</p> <p>Out of the GSM service area. Consult your network provider within the</p>

	<p>service area.</p> <p>Poor signal. Please move to a place with a better signal and try again</p>
<p>Shortening of the standby time</p>	<p>Standby time is related to the network system.</p> <p>Please temporarily turn off your mobile phone, as you are located in an area with poor signal.</p>
	<p>Batteries need to be replaced.</p>
	<p>When you cannot get a signal, the phone will continue to transmit in order to find a base station, thereby expending large amounts of electricity causes the standby time to decrease. Please move to an area with a strong signal or temporarily turn off your mobile phone.</p>
<p>Incorrect PIN number</p>	<p>Consecutively enter the incorrect password for three times.</p> <p>Contact your network provider.</p>
<p>Unable to add new contact</p>	<p>The storage space of the phone book is full.</p> <p>Delete a portion of the phone number.</p>

Unable to set certain functions	Your network provider does not support this function or you have not applied for it.
	Contact your network provider.

8. The Environmental Description of the Mobile Phone

Parts	Hazardous Substance					
	Pb	Hg	Cd	Cr6+	PBB	PBDE
Phone	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Accessories	X	O	O	O	O	O

O : means the concentration of the hazardous substance in all homogeneous materials in the part is under the limit requirement of the SJ/T 11363-2006 standard.

X : means the concentration of the hazardous substance in at least one kind of homogeneous materials in the part is beyond the limit requirement of the SJ/T 11363-2006 standard.

PS : The reason for the product marked with "X" is : there is no alternative technologies or components at present.

FCC Regulations:

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Information (SAR)

This mobile phone (FCC ID: Z5J-A58W) meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.652 W/kg and when worn on the body, as described in this user guide, is 0.660 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

This device complies with the FCC HAC requirements has also been tested E-Field, H-Field and T-Coil, the worst test result of M rating is M3, the T rating is T3.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not rated. M4 is the better/higher of the two ratings. Your device is rated M3.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing aid's telecoil than phones that are not rated. T4 is the better/higher of the two ratings. Your device is rated T3 .

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID:

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

Please make sure the temperature for production unit will be between -10~50 °C

