 


Attachment J. User's Manual

Instruction Manual	Contents	
RFN-350	Introduction	1
Numeric Pager	Controls	2
FX	Battery replacement	3
US07W00E - 2	Display icons	4
	Turning on/off the pager	5
	Receiving and reading messages	6
	Locking and unlocking messages	9
	Function menu	10
	Setting vibration / alert / silent mode	11
	Reservation of alarm clock	13
	Time setting	15
	Date setting	16
	Automatic power on/off	17
	How to delete messages	19
	Other functions	20

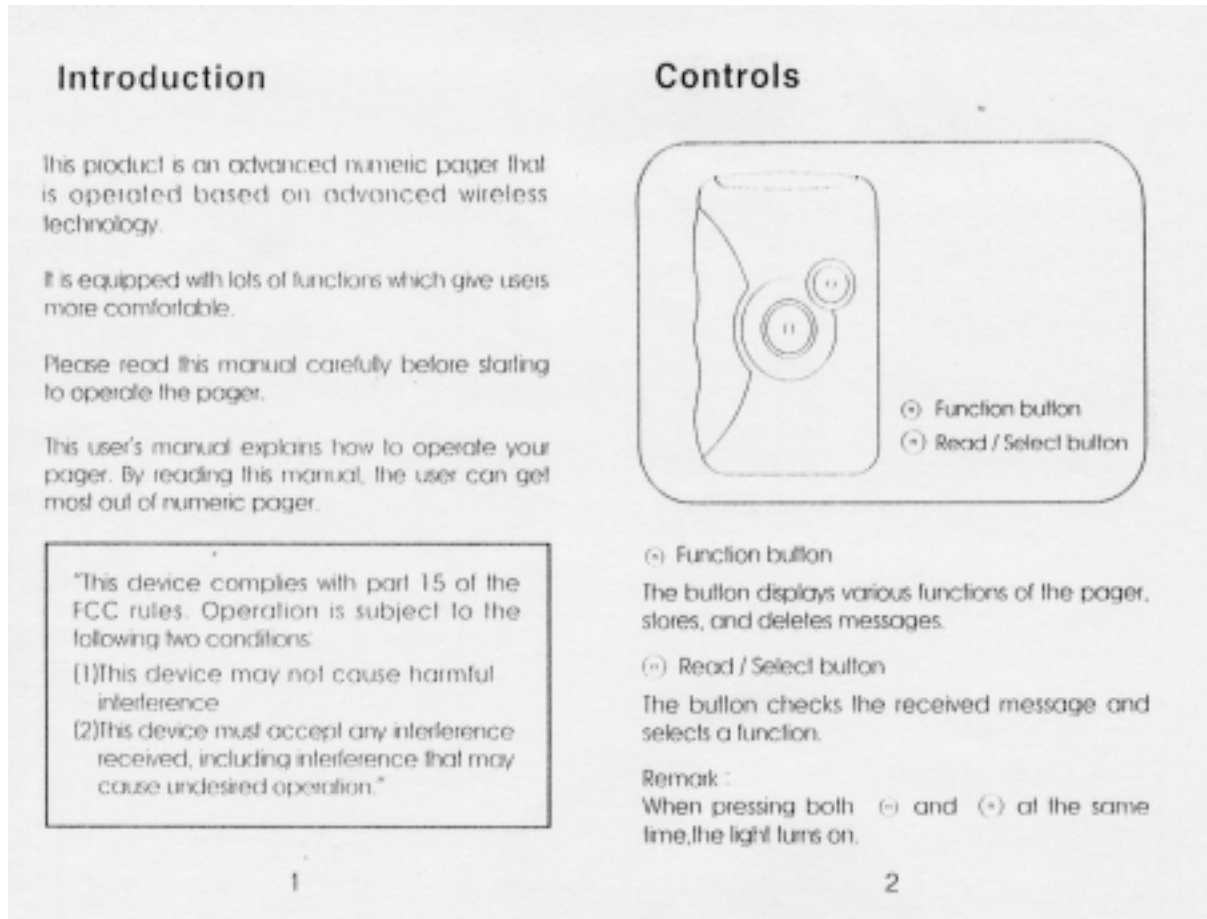

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Battery replacement

The pager adopts "AAA" battery. Replace the battery according to following procedure :

- 1) Release the locker from the battery cover.
- 2) Push battery cover out to arrow direction.(←)
- 3) Remove battery cover completely, and then replace the battery.

Caution :

- 1) During replacing the battery, all stored messages are saved for around one minute.
- 2) Pay attention to the polarity type of battery.

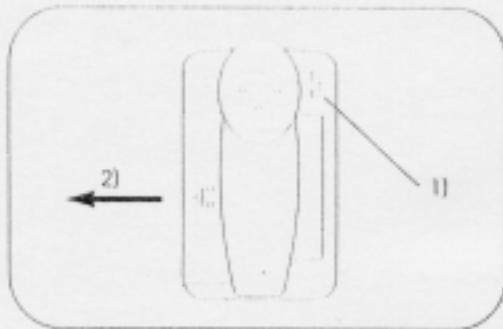

3

Display icons

◆ The icons to display various modes

- 🔔 : Alert sound mode
- 🔔 : Vibration mode (flickering)
- 🎵 : Melody mode
- 🕒 : Alarm clock reservation mode
- 🔌 : Auto power on/off mode


◆ The icons to display various message receiving status


- 📄 : Message's memory page display
- 🔒 : Message lock display
- ▶ : Continuing messages (flickering)
- 📄 : Overlapped message display
- 🔓 : Unlocked message (flickering)

◆ Other icons

- 🔋 : Battery replacement (Low battery)


4

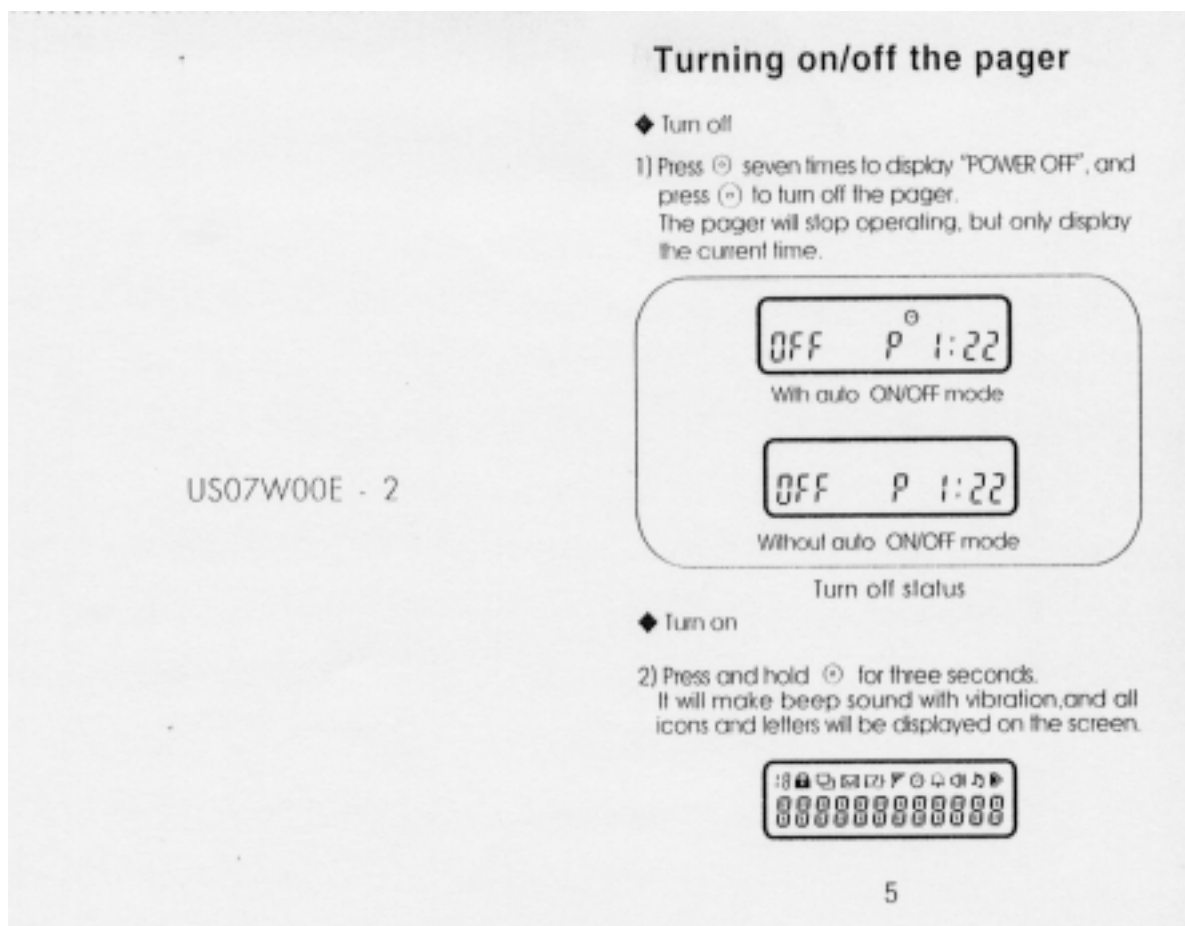

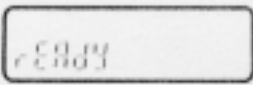

When power is supplied


Both date and time are displayed on the screen, and the pager is under standby for receiving message.

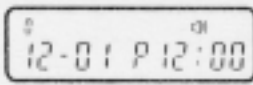

Standby for receiving message


Receiving and reading messages

During the message receiving, the message number and  icon are displayed on the screen with either alarm sound or vibration.

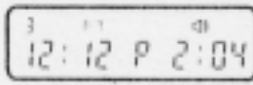

Checking message


Press (M) at standby screen. It will display messages from the latest one. In case of no stored message, "NO INFO" will be displayed.

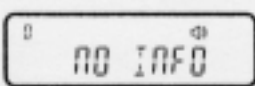

The screen under no stored message


Remark :

A) During checking the message, icon  on the screen means that the message is more than 12 characters has been received.

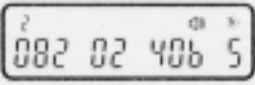

Message checking screen [1]


B) Press (M) to check the remained message.

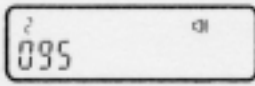

Message checking screen [2]

C) Under the above screen, press (M) again to check the additional information.

6
7

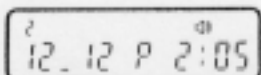


Message checking screen (3)

(The phone number of 082 02 406 5095 was received at 2:05 PM)

D) Press (⊖) to check other messages.

◆ The received time, function code and ID number are stored with the message.

In case that pager's memory is full, the icon  will be displayed at the left upper screen. If a message is additionally received, oldest message will be erased and new message will be stored.

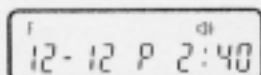


Memory capacity is full

Remark : In case of overlapped messages, the icon  is displayed. It is showing that the messages have been received repeatedly. The latest receiving time is also displayed.

Locking and unlocking messages


◆ To avoid the messages deletion, maximum 10 messages can be protected.

1) When a message is displayed, press (⊖) to display "LOC-UNLOC". At this moment, press (⊕) to lock the message, and icon  is displayed.

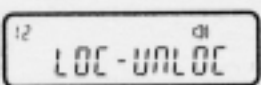

The locking message

2) To release the locked message, press (⊖) to display "LOC-UNLOC". At this moment, press (⊕). The icon will be disappeared, and the locking message will be released.

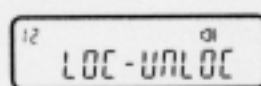


The unlocking message


8

9

2) Press (M) to display "MELODY" and press (M) .

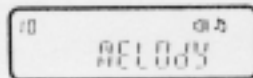

3) By pressing (M), you can change the corresponding melody sound. Each melody makes different sound for 15 seconds, and melody number will be displayed. Choose the one of melodies by pressing (M) to store this new melody and return to standby screen marked the icon (M) .

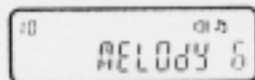


4) Selected melody is played during message receiving.

Remark : Melody 1 – melody 4 : Alert
Melody 5 – melody 9 : Melody


◆ Selecting silent mode

1) Press (M) and "ALERT SET" will be displayed. press (M) .

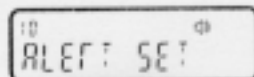

12

2) Press (M) until showing "SILENT" on the screen. press (M) and standby screen will be displayed without any icon.

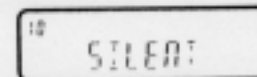


When a message is received, there are no vibration and no sound.

Reservation of alarm clock


◆ This mode can make an alarm every day or a particular time.

1) Press (M) two times, and "ALARM SET" will be displayed. Press (M) .

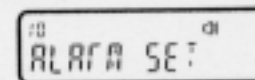


13

2) Press  to select from OFF, TONE or MOTO and set by pressing  .

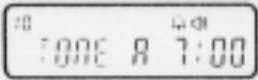


3) You can select and set AM/PM, hour and minute by press  and  .

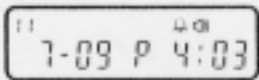


4) Press  to return to standby screen marked icon  .

5) When the reserved time is reached, the alarm sound is made together with "ALARM" sign.

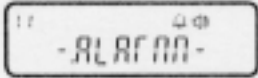


Time setting




1) Press  three times, and "SET TIME" will be displayed.

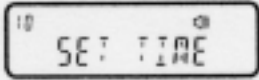

2) Press  for selection, and select "PM" or "AM" by pressing  .

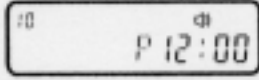

3) Press  and  to set hour.

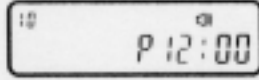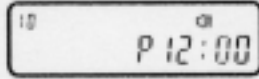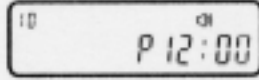




14
15


4) By same method, select minute, and return to the standby screen by pressing (-).

Date setting


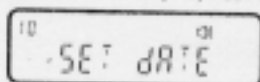
1) Press (-) four times to display "SET dATE".



2) Press (-) to select, and (+) to set "month". Press (-) to confirm.

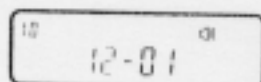

3) Press (-) to set "date", and return to the standby screen by pressing (-).

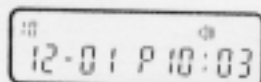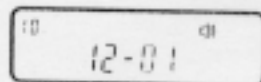


16

Automatic power ON/OFF


◆ You can set automatic power ON/OFF when you do not use the pager.

During this time, the messages are saved.

1) Press (-) five times to display "SET AUTO".

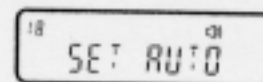


2) Press (-) to display the following mode.

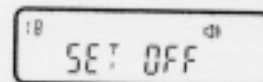

3) Press (-) to select either ON or OFF, and press (+) to select turning on time (However, when DISAbLE is selected, the mode returns to the standby screen).


4) Select AM or PM by pressing (-), and set by pressing (+).

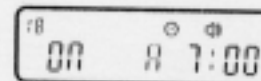


ON TIME SCREEN

17

5) Select hour by pressing (→) and set by pressing (←). Then, select minute by pressing (→) and set by pressing (←).

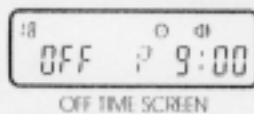

6) Press (→) to select off time. By same method setting, you can set up off time.

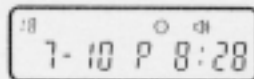

7) After finishing the time setting, press (→) and the mode returns to the standby screen. At this time, the icon (di) will be displayed at the standby screen.

Remark : You can designate time same as "Time Setting".


18

How to delete messages

◆ The message may be deleted in the following two ways :

First, how to delete all messages

1) When pressing (→) six times at standby screen and then "DELETE ALL" mode is displayed.

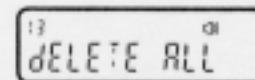

"Delete all"

2) At this time, if you press (→), all of unlocked messages shall be deleted.

Remark : "Delete all" mode does not delete unchecked messages.

19

