 


# **Tablet PC**

## User Manual

## 1. Outlook description

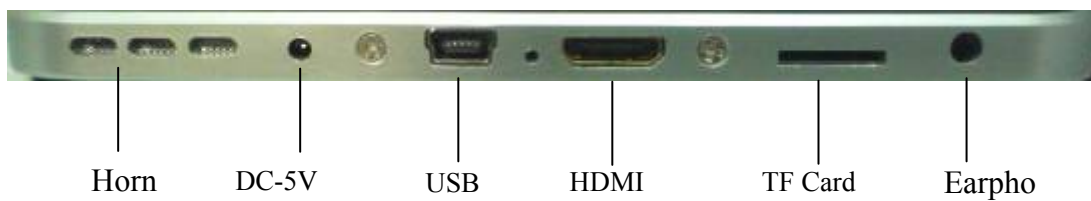

## 2. Power button usage

**Starting up:** Long press the power button for 3 seconds.

**Power off:** Long press the power button for 3 seconds → click power off → click confirm

**Screen off and on :** Short press power button to turn off or turn on screen

**Mandatory shutdown:** If the device has no response, long press the power button for 6 seconds to perform mandatory power off

**Notice:** In case of no necessary conditions, It's better not use mandatory power off . Power off should be performed normally according to the standard steps.

**Reset button:** Press “reset” only for power off, and users need to power on again after “ reset”.

### 3. Touch Screen

According to following user guide, and know how to use touch screen.

**Click:** Click an optional icon on screen as your choice.

**Longer press:** chose one icon and press longer, can drag then show the icon on desktop menu.


**Dragging:** Icons can be put into different screen interfaces by dragging the icon between different screen interfaces.

☆ To protect the screen ,please don't put any objects above the screen surface.

### 4. Wi-Fi network settings

1.Since many functions need Wi - Fi connection to be enforced ,Set Wi-Fi network before using .



2. Click  setting → **Wireless&Netword settings** .

3. Choose and open Wi-Fi menu to enter Wi-Fi settings.

4.Then all usable **Wi-Fi** networks can be automatic searched and displyed .If showed as



among the **Wi-Fi** networks.

And then input password to connection

**Click the Wi-Fi network you need → If need password then input it →Click link**

 
 
5. Press HOME button to back desktop

☆ If the Wi-Fi set is hidden ,wont be searched out of itself. Need to click add Wi - Fi network, then input relevant information to add your Wi - Fi

 
### 5. 3G settings

1. Connect the 3G USB dongle to the USB host of table pc. After connection is made, the LED will be on from the dongle.



2. Make the connection settings of the local operation. Click the “settings” on the screen of the device.

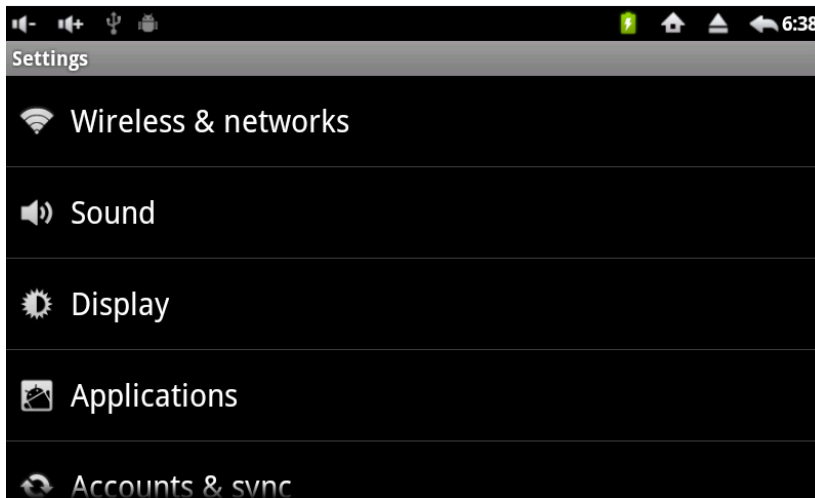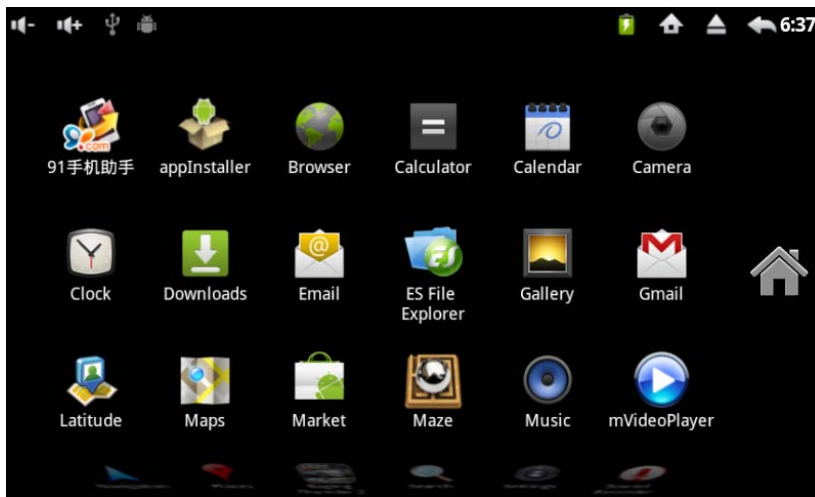

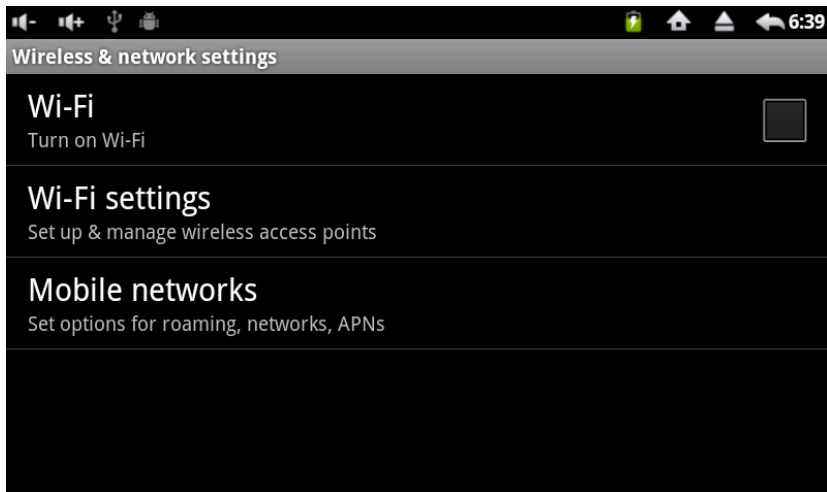

  
3. Choose below screen “Wireless & networks”, Choose below screen “Mobile networks”

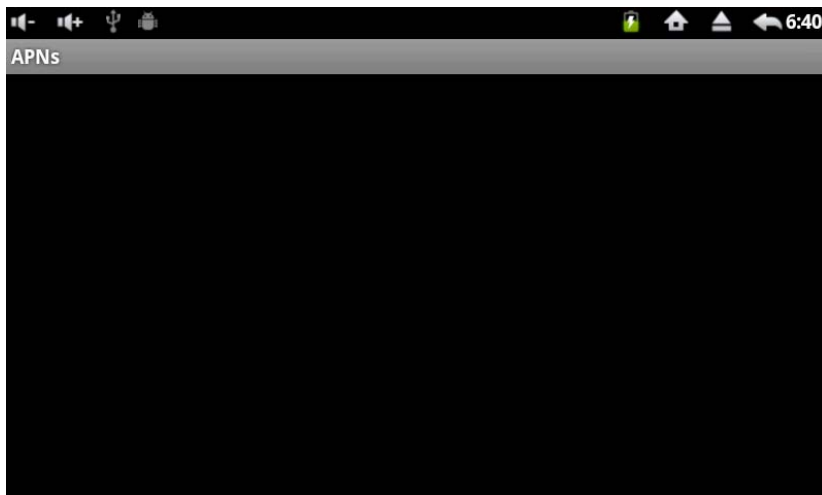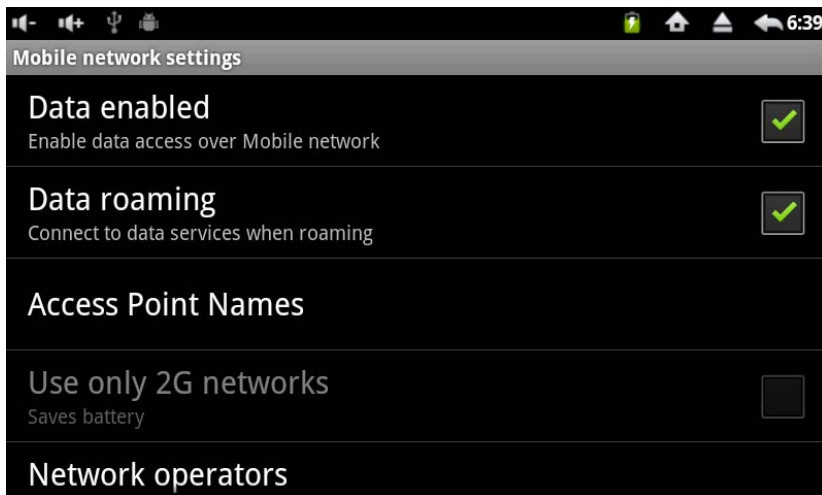


4. Choose below “Access Point Names”, Then there is below screen:



  5. Click the “menu” (right upper corner icon , or the device  to press “MENU” button), There is a below menu, and choose “New APN”, There is a blow menu in the screen:

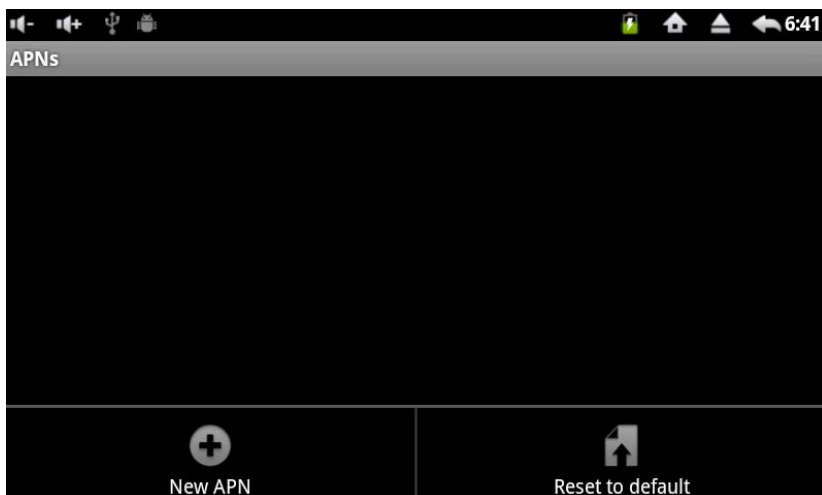


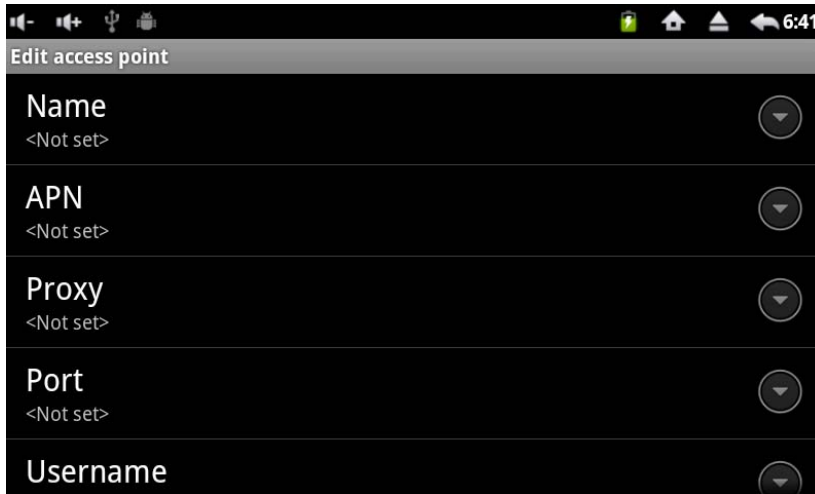

6. For WCDMA, we take our Chinese WCDMA mobile operator as example to set the following: (for your country WCDMA, please refer to your local standard to set the above)

<b>Name:</b> 3GWAP	<b>Username:</b> Not set	<b>MMS proxy:</b> Not set	<b>Authentication type:</b> Not set
<b>APN:</b> 3gnet	<b>Password:</b> Not set	<b>MMS port:</b> Not set	<b>APN type:</b> Not set
<b>Proxy:</b> Not set	<b>Server:</b> Not set	<b>MMC:</b> 460	
<b>port:</b> 80	<b>MMSC:</b> Not set	<b>MNC:</b> 01	

 
7. After the setting is done, and press the “menu” button again, there will be a below screen as shown, and click “save”, The setting is finished for the 3G USB dongle.

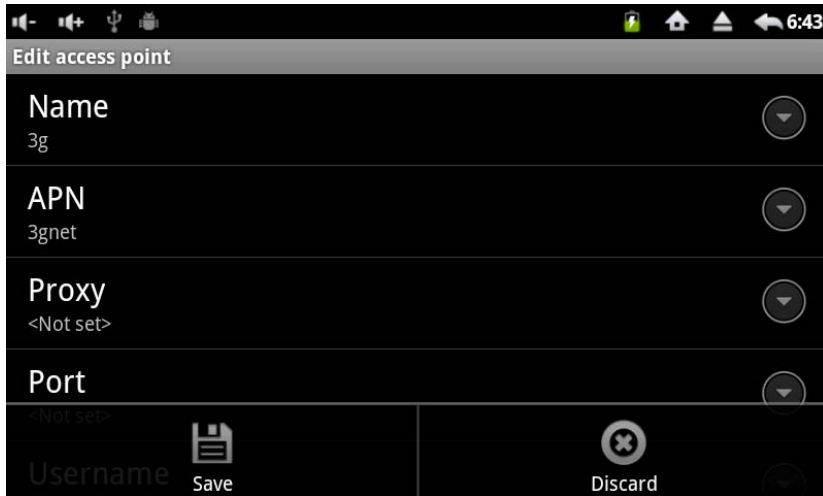


8. Return to the main screen of desk, There is a “3G” icon in the right upper corner, and it means the connection is successful.




## 6. Desktop

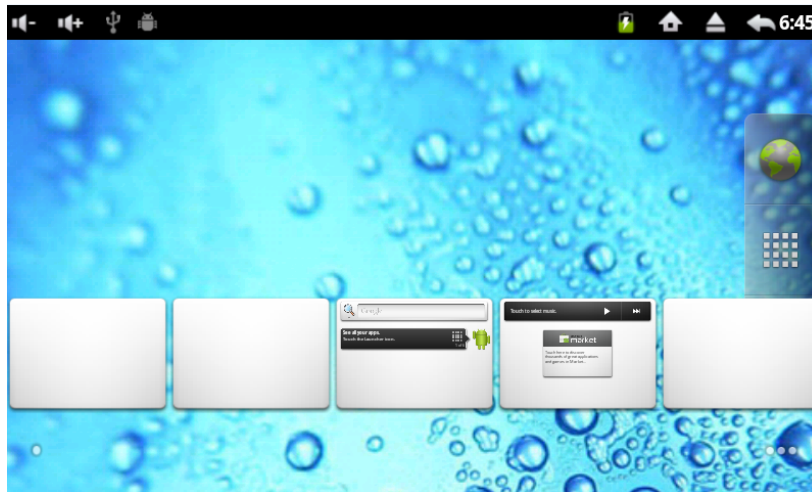 


- ☆ Click on any program icon to run it.
- ☆ Long press and drag icon, move it to other parts of the screen .
- ☆ press longer and drag icon to  move it from the desktop cleanup.


## 7. ScreenLock interface

 Can install automatic lock screen or quickly press down the power button to achieve manual lock screen. Lock screen interface shown below:

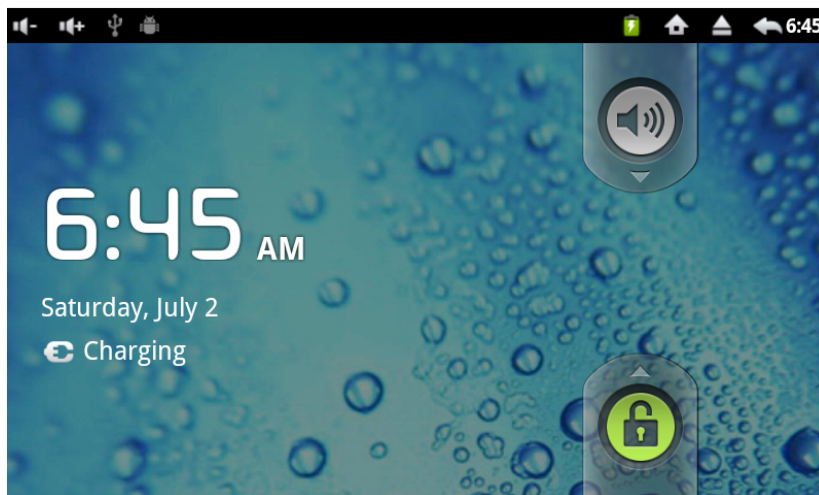


## 8. Programming interface

 Click  on the desktop to enter Programm interface

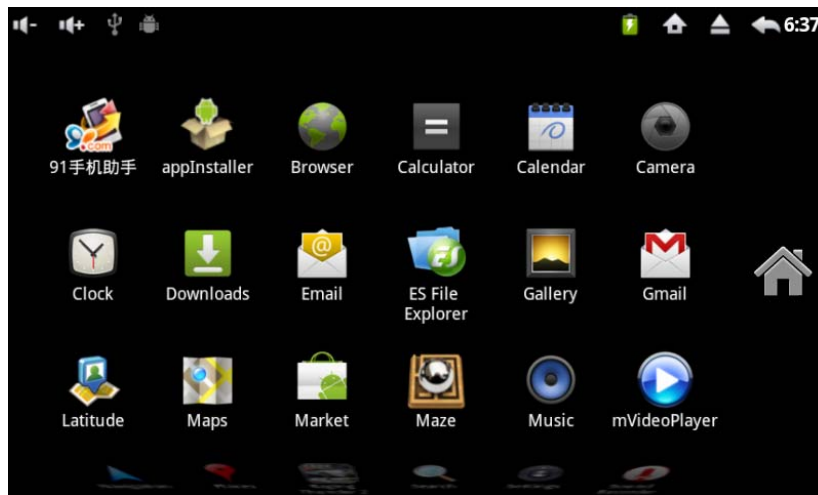


☆ To move a icon to desktop, need long press and drag icon, until it appear on the desktop to release.

 ☆ Long press and drag icon, move it to other parts of the screen .


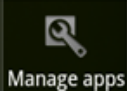

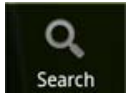

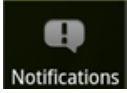
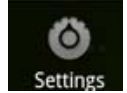
☆ Long press and drag icon to , remove it from the desktop cleanup.

## 9. desktop menu functions

Click MENU button on your desktop to enforce MENU function .

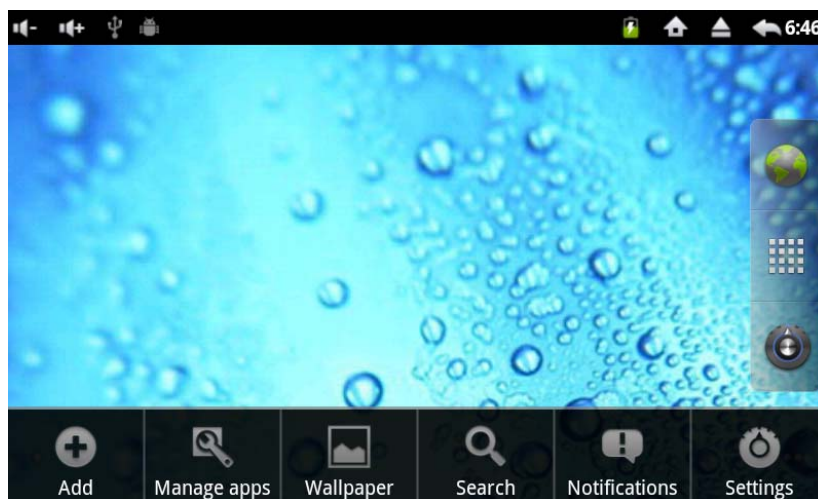



	Shortcuts	<p>Add in the desktop applications, setting and quick bookmark, etc.</p> <p>☆ if you choose the shortcut on the desktop before as your need item then they will be replicated, namely same multiple icon will be produced.</p>
	widget	<p>Analog clock: add a round-shade analog clock.</p> <p>Calendar: add a calendar small tools, show the current date and time.</p> <p>Music player: add a music small tools, quickly begin to play music, without having to start the music in application.</p>
	folder	<p>New folder : can add empty folder, all contact folder, have added star mark contact folders, have the phone number contact folder.</p>
	Application management	Can apply device to achieve installing, uninstalling, closing ,etc.
		choose wallpaper from the picture and wallpaper repository .
		<p>Can undertake rapid search.</p> <p>Click the input items → input content you want to search</p> <p>→click </p>
		Display notification message (including new mail, calendar, etc.)
		See "Settings" for more information.

## 10. program management

### Installation program

☆ can find many interesting and free Android applications. Only need to start the browser, and do "Android applications" search that can be available

The Android applications you buy or download that can be installed to the device

1. Copy the **.apk** files you want to install to SD card or device RAM , or install the applications in the computer by the third party software.
2. Choose a **.apk** files → install.

Applications will be installed and the application icon will be displayed in all applications interface.

3. Click open, program will be operated directly, or click finish to return to main interface

## Download program directly from the network.

You can download Android applications directly and can install it to device quickly and conveniently.



1. Click the **browser** program icon to connect to the network .

2. Input the website, click the download link in device program which you want to installed

3. Download finished , long hold the downloaded files (in downloaded record interface), - click open - install .

## Uninstall program

Android program can be quickly and conveniently uninstalled

1. Click Settings applications →management application.

2. Click uninstall applications →unloading.

3. Click ok for unloading.

## 11. Clock



Click the clock program icon. Can see the current date and time

Alarm clock .

several alarm clock can be set in device



☆ When icon appears above the screen namely on the status bar that mean at least one current alarm clock will ring .

alarm clock

1. Enter the clock interface, press the MENU button, select "add alarm".

2. Set the alarm clock you need

3. Click start using alarm clock.

4. Click finish

## Close alarm clock hint

1. When reach the alarm clock time it will popup a window of alarm clock name.


2. If you want to ring once in 10 minutes , can click it as suspended ring again.

3. Click cancel to stop hints.

4. Start using alarm clock




5. The alarm that has been set as repeat alarm clock means you want to temporarily cancel enable alarm

clock but not delete the alarm clock.



6. In the alarm clock interface, click the  icon you want to start using behind the alarm clock

7. Click  to restart
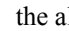
## Edit alarm clock

1. Click  the clock program icon, → click .
2. Click  the alarm you want to edit into → for editing.

## Delete alarm clock

1. Click  the clock program icon, → click .
2. Click the alarm you want to delete then enter
3. Click the delete alarm clock.

 
## 12. Online software installation

There are a lot of quick software installation program, you can quickly and easy download them to equipment.

Download program

download and install the application from the Android markets .

First time to run the system require use Android market GMAIL E-mail accounts to login (if not GAMIL mail account, please in <http://gmail.google.com> to apply for )

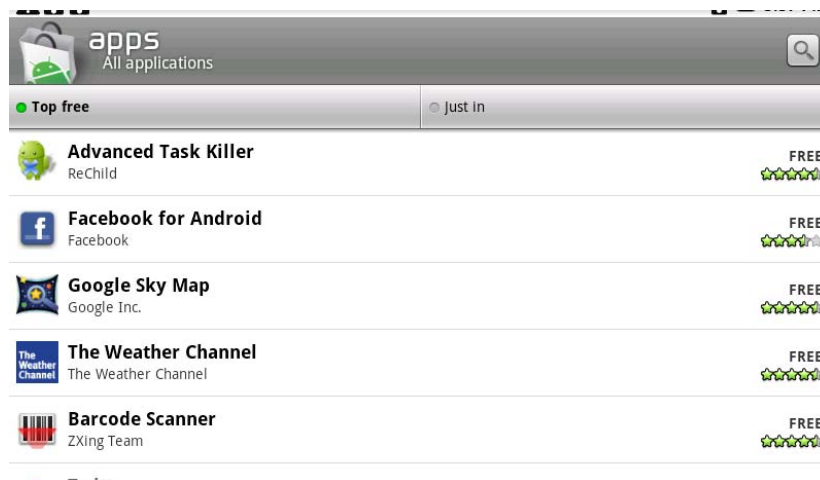

Enter the market, select the desired games or program, device will be automatically download and installed.




when download installation completed, can use this program.

### 13. Browser

 Users can connect to the Internet via a browser



Click desktop browser icon: can open network browsing

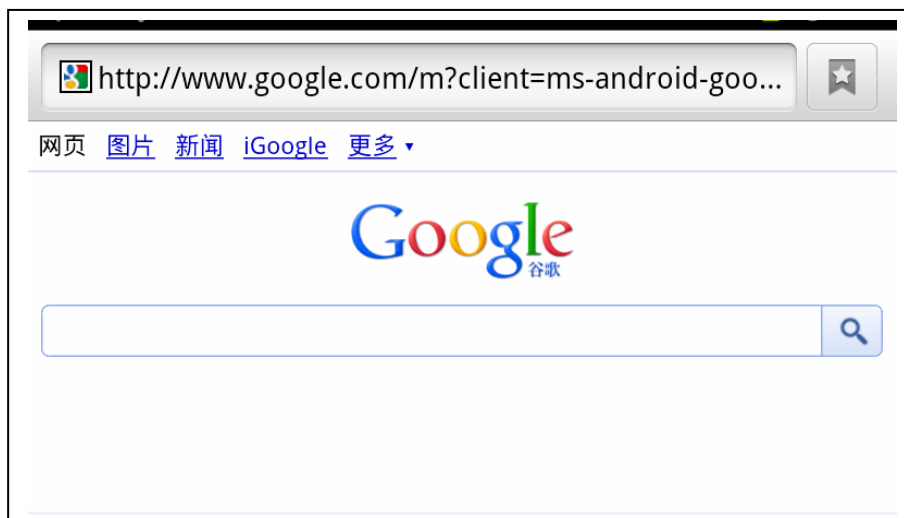

### 14. Calendar



Click the calendar program icon.

First used calendar, need to add a Exchange account. Input account email address and password. Click on next, according to the prompt complete account configuration, after that the calendar can be used

#### New activities

1. In the calendar interface, click new event dates you want to build.

2.Choose activity time - input relevant activity details in every field

3.click **finish**

☆color display for gray date mean there are agenda on the day .

## 14. Camera



1. Click camera program icon to start.



2.click to make photo

3.Pictures will be kept

Note: before use the camera please insert the memory card.

### Menu functions

follow the menu button to display the camera's menu functions.

Switch to video function

Switch to video mode, can record video.

### Photo Gallery

Show all photographs made by this camera

## 15 . Calculator



1.Click the calculator program icon

2.Click on the calculator program icon

3.Click remove to remove all display

## 16. E-mail

☆Supports POP3 and SMTP accounts

### Add E-mail account

You can enter one or more electronic mail address on device to use



1.Click E-mail program icon.

2.In your account interface, click next.

3. Click E-mail address options, → input your E-mail address.

4.In the password options, → enter your E-mail passwords.

5. Click finish

Manual Settings (optional) : the server Settings is according to your email account gmail automatic filling and suppliers (i.e. j com, etc.), while if you need to change server Settings, click the manual Settings and make the necessary changes.

1. Click next

2. Optional: input account name.

3. Input the sending message name, click finish

☆ After Settings, if you cannot connect to a free email account, please contact with your email providers to confirm if their server support (POP) and (SMTP) transmission agreement.

## Sets the default email account

You must always have an account designated as the default account, thus if you have multiple E-mail account, you can choose any one as the default.



1. Click E-mail program icon.

 
2. In your inbox interface click MENU → account Settings.

 
3. Click the default account to select.

☆ If you delete the setting default account, the list of within next E-mail account will automatically become the default account.

## 17. Data storage

In standby state, connect device with usb data cable, drop-down on the state bar on the top of the table

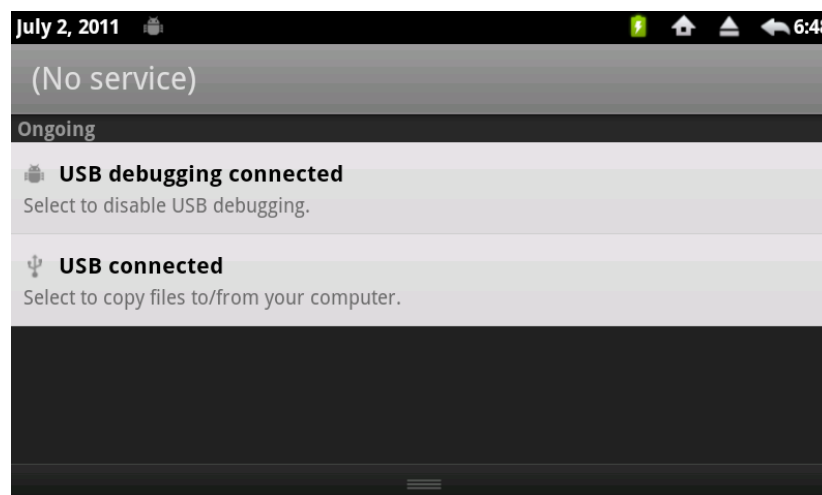

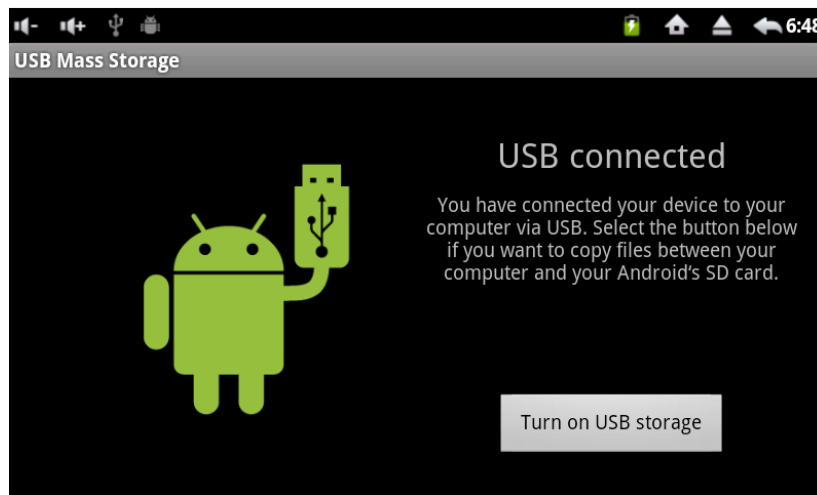

Click "USB connected", in the verification dialog, choose "Turn on the USB storage", click OK to confirm, then use PC or TF CARD files to manager .


Operation is completed, click "Turn off USB storage," exit of equipment in PC or document management in TF CARD, can pull out USB line to off the link with PC

## 18. Music

☆ support audio format: MP2, MP3, WAV, WMA, and AAC

### Play music



 
1. Click  my music program icon.

2. From all/album/artist/directory/my favorite/custom playlist of select you want to play music.

3. Click suspended  icon to stop music.

4. To music while playing on an interface, can press Return or press the HOME returns to the desktop.


Click on the right lower corner images into the music player, Interface shown below:

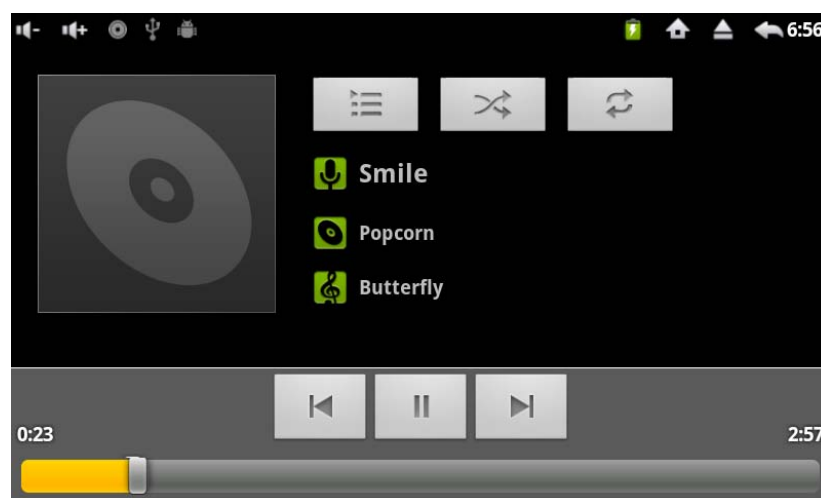

In the interface, user can undertake check lyrics, the play/pause, switching to a/next song, add to my favorite, looping and random broadcasting operations.

### Playlist operation

#### Add playlist

1. Click on the left icon .
2. Input the name of the playlist.
3. Click add.
4. Rename or delete playlists
5. Lasting press playlist → click renaming or deleting

### Add music to playlist

1. Click and press the music you want to increase - click add
2. Choose the music project in the list to add (if you don't want to add, can click cancel)

### Cancel music

Click the music you want to cancel → **click cancel**

## 19. Photo Gallery

can see all the pictures and video in photo gallery



Click the photo gallery program icon, enter the Gallery.



### Picture



1. Click the photo gallery program icon into the Gallery → choose photos groups to browse.

2. If you want to see a picture in any photo groups, click  and press return to back to pictures group interface.

### Video

1. Click the photo gallery program icon → click on a video group
2. Click the video you want to view
3. Click the screen to video related regulation
4. Press return key to back the photo gallery interface.



## Delete pictures or video

 





1. Click the photo gallery program icon → click a picture group or video group.
2. Press Menu button → multiple choose
3. Click the images or video that you want to delete .
4. Click the delete → confirm delete operation.
5. Press the HOME button, return to the photo gallery interface

## 20. Settings

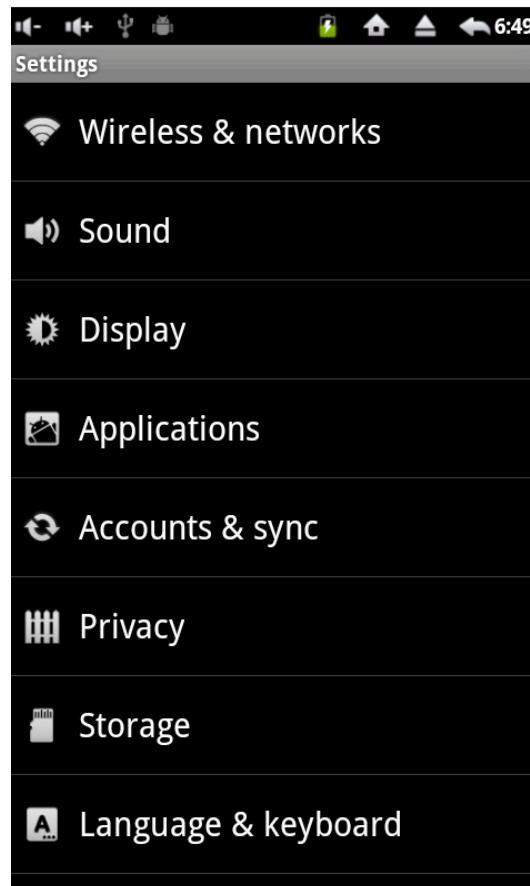

Click on Settings icon to enter setup interface.



Wireless and network	Wi-Fi	Open Wi-Fi
	Wi-Fi settings	Setup and manage wireless access points
	Flight patterns	Disuse all wireless connection
	3G network settings	Set 3G network (additional 3G USB dongle is required)
Voice	Silent patterns	Except the media and the alarm clock sounds, all are set to mute
	volume	Adjust media volume, alarm clock volume, and inform the volume. Click and remove  slider, and then click ok
	Inform ringtones	Select the desired inform rings.
	Select operated sound	When selecting screens broadcasting sound
	Prompt screen lock	When locking and unlocking screen to playing sounds
display	Output Settings	Choose the HDMI output patterns
	brightness	Click and remove slider  to adjust screen brightness, and then click ok
	Automatic rotating screen	When make checked, the screen will be automatically switch between screen and vertical screen according to equipment drection of rotation
	<b>cartoon</b>	Show all cartoon Settings in windows
	Screen overtime	Adjustment a delayed time for automatically locked screen
applications	Unknown sources	Allow to install the applications from the non-Android market
	Management application	Manage and delete installation applications
	Running services	Check and control the currently running services.
	The use of storage space	View the used storage space in application
	Power usage	power consumption situation
	development	Setup application development options
Account and synchronization	Background data	Applications can always synchronize, send and receive data
	Self- synchronizing	Applications to automatically synchronize data
privacy	Recovery factory Settings	Click will remove all the data on device. Click reset device will be reset, or click  to cancel and return to a screen <b>Warning!</b> The following will delete all the data from equipment: ~ Google account ~ system and the application's data and Settings ~To download applications

		The following won't because the reset to be delete: ~ the current system software and bind application ~ SD documents, such as music or photos
storage	storage	*NAND setting *TF card setting *SCSI settings
	Internal storage	Check your usable storage space
Language and keyboard	choose Language	According to your location select the corresponding language
	<b>Android Keyboard</b>	Screen keyboard Settings
	User dictionaries	User can add words to user dictionaries
Screen calibration		touch screen calibration
Date and time	<b>set date</b>	Set date
	Select time zone	Select time zone
	<b>Set time</b>	Set time
	Using 24 hour format	Can choose to use 24 hours format or 12 hour format
	Choose the date format	User can choose the date format
Automatic power off		Automatic power off when time Settings
about equipment		Check status messages, and power usage, legal information, model, Android version, kernel version and the version number

## 21. Battery management

The battery is not fully charged when packaged , advise you to make battery fully charging for 4 hours at least before you use the device.

Rechargeable battery life, generally depend on the number times of charging and discharging . However, you can also play through the following Suggestions to extend the battery life:

- To use the device at least once a week
- Regularly for battery fully charge.
- Don't let the battery in long time no power
- Always keep device and battery far away from heat objects

### Battery charging

One end of the power adapter meet socket, another end connect to DC interface of device to

charge ,when the battery in charging will display as : Four hours to fully charging

☆ can also use a USB cable to connect the PC to charge .

When the battery is fully charged, battery ICONS displayed as:



## 22. Safety tips

When using your equipment please obey the following basic security matters need attention. This will reduce fire, electric shock and risk of injury.

- Don't let the product itself get wet in the rain or become damp.
- Please keep device away from direct sunlight and heat objects
- protect power cable. when connect the power cable, please don't let it be stepped on or above placed items, avoid to be extrusion. Pay special attention to protection of equipment connector.
- Please use the original power adapter for charging, using other charger may cause damage
- Don't dismantle the equipment or repair yourself.

### Cleaning equipment

Touch the screen gently. To clean the fingerprint or dust on the screen, it is better to use such as camera use soft cloth but not gauze to clear the dust.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.