



MULTIMEDIA SPEAKER SYSTEM

PS-2643



Thank you for choosing our product!
Please read the Manual carefully before using.

SPECIFICATIONS

Output Power (RMS): 80 Watts + 30 Watts X 2

Power Supply: ~110V 60Hz

Speaker Units: 2 X 6.5" Woofer, 4 X 2.5" Tweeter

Frequency Response: Woofer 20Hz - 170Hz

Tweeter 120Hz - 20KHz

Separation: ≥ 40 dB

S/N: ≥ 70 dB

Distortion Rate: $\leq 0.5\%$ (1K, 1W)

Dimensions: Speaker: W215xH820xD279 (mm)

- High-Quality Multimedia Speaker with built-in Amplifier.
- Full Audio Spectrum Performance, Ideal for your Favorite Entertainments
- Specially Designed Woofer Cabinet For Excellent Performance of Bass
- Remote Controller & 3.5mm Stereo Cable included


Package Contents:

Speaker	1 PCS
Wired Microphone	1 PCS
Remote Controller	1 PCS
3.5mm Input Cable	1 PCS
FM Antenna	1 PCS
User Manual	1 PCS

NO.1

PLAYBACK CONTROLLER

1. **ST-BY/TUN-**
2. **▶▶/TUN+**
3. **ST-BY/▶▶**
4. **SOURCE**
5. **VOLUME-**
6. **VOLUME+**

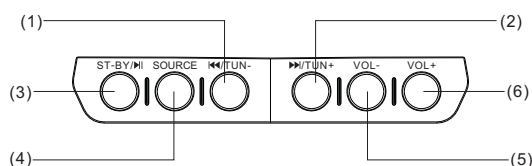

ST-BY/PLAY/PAUSE-----Press to turn on speaker, long press into stand-by.
PLAY/PAUSE on the MEMORY CARD/BT mode.

SOURCE-----Change the input mode.


VOLUME-/+ -----Volume down/up.

TUNING+/NEXT -----Press once to increase the FM frequency 0.1M,
long press to the semi-automatic search for radio.
In MEMORY CARD/BT mode, press "NEXT" play next song.

TUNING-/PREVIOUS -----Press once to reduce the FM frequency 0.1M,
long press to the semi-automatic search for radio. In MEMORY CARD/BT mode, press
"PREVIOUS" play previous song.

NO.2

HOW TO USE THE REMOTE CONTROLLER?

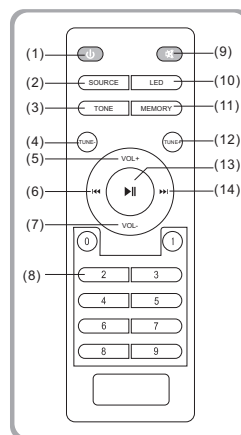

1. ST-BY
2. SOURCE
3. TONE
4. TUNING-
5. VOL+
6. PREVIOUS
7. VOL-
8. 0~9
9. MUTE
10. LED effect
11. MEMORY
12. TUNING+
13. PLAY/PAUSE
14. NEXT

1. Press "ST-BY" LED showing "AU18", it is AUX mode playing state.
2. "MUTE" means to activate or deactivate mute.
3. "SOURCE" means you can choose AUX, Multi-media, MEMORY CARD, FM, BT input mode, at the same time, the LED will show "Au18" means AUX mode, "Du18" means Multi-media mode. "87.5" means FM mode, "B118" means BT mode.
4. "TONE" means you can choose "TREBLE" and "BASS" "VOL+/-" means you can increase or decrease volume of "TREBLE" or "BASS".
5. When enter into FM mode, press "MEMORY" the number on the LED will Blink. this means the machine is under save channel state. You can change the blinking number by pressing "NEXT" or "PREV", press "PLAY/PAUSE" you can save the channel into same number. it will enter into automatic search channel and automatic save channel when pressing "MEMORY" for 3-5 seconds (noted: the channel which you saved before will be deleted when you press "MEMORY" for 3-5 seconds).

NO.3

FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC Part 15.21 Warning Statement

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105 Warning Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.