

Followings shall be filled into by the user with the assistance of sales.

Tel: _____
 Fax: _____
 P.C.: _____

Followings shall be filled into by the sales.

(Valid after stamping) Date of sale: _____ Year _____ Month _____ Date
 Invoice number: _____
 Tel: _____ Installation and test date: _____ Month _____ Date

Technical Specification:

1. Output impedance: 8 ohm
2. Input impedance: 47 K ohm
3. Frequency response: 40Hz - 20KHz
4. FM Frequency response: 87. 5MHz - 108MHz
5. Sensitivity: 500 mV
6. SNR: ≥85dB

BT:

BT Mode: When chose the BT mode, after pressing the button to the right, the unit will sent out a beep. At the same time, the BT indicate will go twinkle. Then it will search the BT signal. Open the BT of mobilephone. Find the BT name of the unit called "QS-806" to connect. Then enter the password for "0000". After a successful match, you can play the music in mobilephone. When playing the music, you switch the other mode, you can press the play button to continue the music without reconnect the BT.

Note:

As the product is constantly update, the Company reserves the right without prior notice to the product changes modify. Are subject to change without prior notice!

ADDRESS:
 448 S LOS ANGELES STREET, SUITE4, LOS ANGELES, CA90013-1472
 TEL: 213-627-8813

QS-806

Ridgeway

User Manual




Dear User:

Thank you very much for buying this speaker box, please kindly read instruction manual before operating the product.


Portable Amplified Speaker System

System resolution:

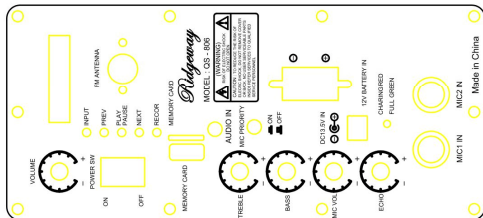

1. LED Displayer.
2. Mode Button: Press this button to select between the 5 built-in modes. Inputs (Line in, Memory, BT, FM).
3. Previous Track Button: When on Memory card and Bluetooth mode, short press this button to move to the previous track for Memory card and Bluetooth. When on FM mode, short press this button to move to the previous channel.
4. Play/Pause Button: The play /pause button will only control the Memory card and Bluetooth. When on the mode of FM, Press this button to auto scan all channels.
5. Next Track Button: When on Memory and Bluetooth mode, short press this button to move to the next track for Memory and Bluetooth. When on FM mode, short press this button to move to the next channel.
6. RECOR: Record In Memory mode is Memory card option.
7. Memory card slot: Connect your Memory card memory storage (flash drive) device here. The maximum size of the Memory card can not exceed 16GB. The speaker will only play .mp3 & .wma files from the Memory card input. Do not connect your computer to this input as it will not play files directly from a computer.
8. Volume: Adjust the size of volume knob to change the volume of phonetic notation.
9. Power Switch Button: Press this button to power the unit on or off.
10. TREBLE: MUSIC Treble Control, Turn this knob to adjust the music Treble.
11. BASS: MUSIC Bass Control, Turn this knob to adjust the music Bass.
12. MIC VOL: Adjust the microphone volume knob to change the handset volume .
13. ECHO: In the use of microphone is adjust reverberation knob can adjust microphone sound field echo effect.
14. MIC1/MIC2: Used for microphone signal input.
15. AUX input: press the input button to external input when begin to work.
16. Mic priority mode selector: Press the button down to enter the Mic priority mode. press again to enter the Mic priority OFF.
17. 12V BATTERY IN is for connecting to 12V external battery if needed.
18. Power Supply: The power switch should be set to the off connector power supply.
19. Antenna is for receiving the FM signal. Before use, pull up the telescopic FM antenna. After use, pack up the FM antenna to better protect it.

Remote Control:

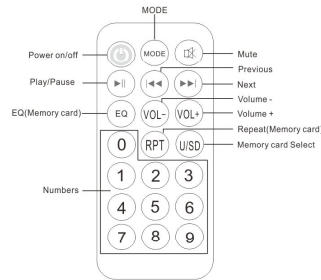

1. POWER: Power ON/OFF.
2. MODE: Input MODE Button: Press this button to toggle between the various inputs (Line in, Memory, BT, FM).
3. MUTE: Mute button.
4. PLAY/PAUSE: play pause button. When on the mode of FM, Press this button to auto scan all channels.
5. PREVIOUS: MP3/Bluetooth previous song and FM CH- button.
6. NEXT: MP3/Bluetooth next song and FM CH+ button.
7. EQ: Mp3 and Bluetooth mode : (Normal/Pop/Rock/Jazz/Classic/Cut/Bass)
8. VOL - : Volume reduce button.
9. VOL +: Volume increase button.
10. REPEAT: Repeat function in Memory card mode all songs and single songs repeat.
11. U/SD: In Memory mode is Memory card select.
12. "0-9" songs select button. In Memory card mode can select songs directly can select in Memory card by numbers 0-9. For example: if you want No. 9 song by playing songs in Memory card, just need to press 9, and if you want No.19 song, just need to press 1+9. In FM mode can select FM channels directly (input channel frequency to select channels) : a. Can select auto-kept channels by pressing 0- 9 (make sure channels were already kept). For example: in FM mode, you want to listen No.3 channel, just need to press 3, and if you want No.19 channels, just need to press 1+9. b. Select frequency directly for channels by numbers 0- 9. For example: in FM mode, you want to hear 98.5 MHz channel, just need to press 9+8+5.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.