

www.randmcnally.com/support
877-446-4863



CD100-092122_V1

展开尺寸：279.4*88.9mm，
装订后尺寸：139.7*88.9mm

尺 寸 公 差			要求	品名	耳机 B080(CD100) RM 快速指南		比例	1 : 1	日 期 DATE	2020.10.09
位 数	尺 寸	角 度	128g双铜，4色印刷， 过光油， 骑马订（打2个钉）， 共28页（封2印内容， 封3空白页）， ROHS							
X / X . X	±1mm	±0.5°		料号	40611000009775	设 计 DESIGNED	周真伟	审 核 CHECKED		
X . XX	±0.5mm	±0.5°								
				版 本 FORMAT	A	制 图 DRAWN		批 准 APPROVED		
				深圳奥尼电子股份有限公司 SHENZHEN AONI ELECTRONIC CO., LTD						
记 事		变更NO.	年/月/日							

Contents

What's in the box	2
ClearDryve® Parts.....	3
Function Button Layout.....	4
Getting Started with ClearDryve®	6
Charge the Battery	6
Power ClearDryve® On and Off	7
Pair With a Device over Bluetooth®	7
Call Mode.....	9
Quick Access	9
Answer an Incoming Call	10
End a Call.....	10
Ignore an Incoming Call.....	10
Redial the Last Number.....	11
Mute/Unmute a Call	11
Turn the Volume Up and Down	12

 
Streaming Music	13
Quick Access	13
Play and Pause.....	13
Turn the Volume Up and Down	14
Go to the Next/Previous Song	14
Connect to a Wired Device	15
More Functions	16
Add/Remove the Stereo Earpiece	17
Reset to Factory Settings.....	18
Troubleshooting & FAQ.....	19
Help and Support.....	20
Warnings, End-User License Agreement, and Warranty.....	21

What's in the Box

In-box contents includes:


- ClearDryve® 100 headphones
- Audio cable
- Charging cable
- Hard case
- Detachable headpad

ClearDryve® Parts

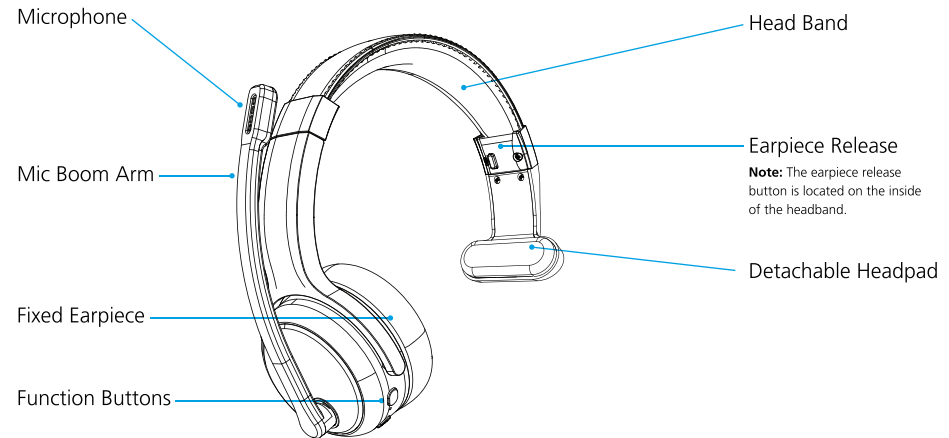

Dimensions: approx. 7.5" x 7.3" x 3.3"

 Function Button Layout

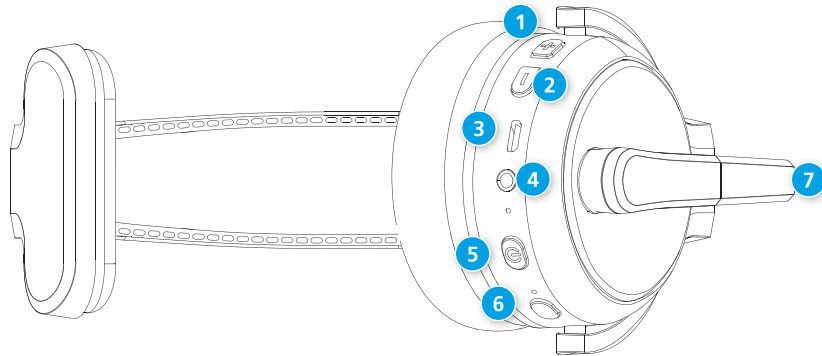

The Mic Boom Arm can swing either direction from the Head Band so you can wear the Fixed Earpiece on either side of your head.

1. **Vol +** button
2. **Vol -** button
3. Micro-USB port
4. 3.5mm audio input
5. **Multi-function button (MFB)**
6. **EQ** preset button
7. Mic Boom Arm

You can press, long-press, and hold the buttons on ClearDryve®. Each does a different function:

1. **Press:** Press the button firmly and release it immediately.
2. **Long-press:** Press the button firmly, and keep it depressed for about a second.
3. **Hold:** Press and hold the button down for the amount of time listed.

Getting Started with ClearDryve®

To get started using ClearDryve®, first you need to charge the battery. Once you power it on you can pair ClearDryve® to your Bluetooth®-enabled phone, tablet or laptop. Once ClearDryve® is paired, you can immediately start taking and managing calls or listening to music.

Charge the Battery

- ✓ Before first use you must charge the battery on ClearDryve®.
- ✓ Connect the USB cable to the micro-USB port on ClearDryve®. Connect the other end to a charger.
- ✓ When you turn ClearDryve® on, it announces the battery level as a percentage of its capacity.
- ✓ If the battery level is low when you power on ClearDryve®, you will hear an intermittent “beep” up to 5 times, as a reminder to charge it.

Power ClearDryve® On and Off

To turn ClearDryve® on and off:

1. To power ClearDryve® on, press the **MFB**.
2. You will hear “Power on.”
3. To power ClearDryve® off, press and hold the **MFB**.
4. You will hear “Power off.”

When you power ClearDryve® on for the first time, it automatically enters pairing mode. The next time you turn it on, it will automatically attempt to connect with the most recently paired device.

Pair with a Device over Bluetooth®

When you power ClearDryve® on for the first time, it automatically enters pairing mode. In pairing mode, the LED indicator blinks red and blue, and you will hear “Pairing.”

Once a device is paired, the LED stays solid blue. ClearDryve® will reconnect automatically when Bluetooth® is enabled and the device is within range.

To pair ClearDryve® with a BT device:

- 1. **Power** on ClearDryve®.
- 2. Enable **Bluetooth®** on your device.
- 3. ClearDryve® will display on your device as ClearDryve® 100. **Select it.**
- 4. The **LED** will change to solid blue.

You can pair ClearDryve® to a new device at any time by entering pairing mode again.

To enter pairing mode again:

- 1. If the headset is on, turn it off by pressing and holding the **MFB**.
- 2. Press and hold the **MFB**.
- 2. The **LED** indicator blinks blue and red, and you will hear **“Pairing.”**

As soon as it is paired with a device, ClearDryve® is ready to make calls or stream music.

Note: When ClearDryve® is turned on and not in pairing mode, it will automatically connect with the most recently paired device when it is on.

Call Mode


In Call Mode, you can answer incoming calls and use your smartphone’s voice assistant to make hands-free calls.

Quick Access

Answer a call	Press the MFB .
End a call	Press the MFB .
Ignore a call	Press and hold the MFB . Note: The duration of the press should more than 1 second but less than 3 seconds. Holding down the MFB for too long (i.e., over 3 seconds) will cause ClearDryve® to power down.
Redial	Double-press the MFB
Mute/Unmute	Rotate the mic arm up (to mute) or down (to unmute)
Adjust volume	Press Vol + or Vol -

Answer an Incoming Call

 To answer an incoming call:

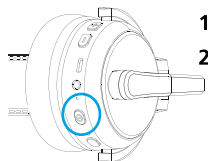

1. Press the **MFB**.
2. ClearDryve® **will beep once** to confirm. The call will be live immediately.



Note: Make sure the mic boom arm is down.

End a Call

To end a call:

1. Press the **MFB** to hang up.
2. ClearDryve® **will beep once** to confirm.

Ignore an Incoming Call

To ignore an incoming call:

1. Press and hold the **MFB** for about 3 seconds.
2. ClearDryve® **will beep once** to confirm.

Note: Holding down the MFB for too long (i.e., over 5 seconds) will cause ClearDryve® to power down.

Redial the Last Number

To redial the last connected number:

1. Quickly press the **MFB** twice.
2. ClearDryve® **will beep once** to confirm.

Mute/Unmute a Call

 
The moveable mic arm provides an easy way to mute or unmute the mic when you are on a call.

To mute the call:

1. **Move the mic arm up** and away from your mouth, to about 30 degrees or more above horizontal.
2. ClearDryve® **will beep once** to confirm.

To unmute the call:

1. **Move the mic arm back down** in front of your mouth.
2. ClearDryve® **will beep once** to confirm.

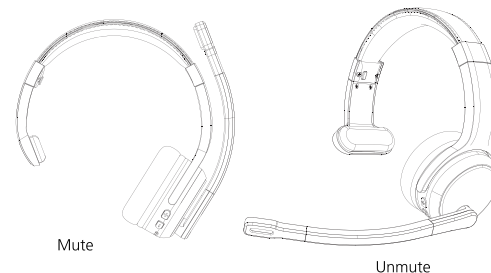


Note: You can use ClearDryve® with the mic arm on either ear. These steps work the same on both sides. To switch sides, rotate the mic arm all the way around.

Turn the Volume Up and Down

At any time, you can press the volume buttons to turn the volume of the call up or down. There are 16 different volume levels available.

To change the volume:

 1. Press **Vol +** to increase the volume.
2. Press **Vol -** to decrease the volume.
3. ClearDryve® will **beep** when you reach the lowest or highest volume settings.

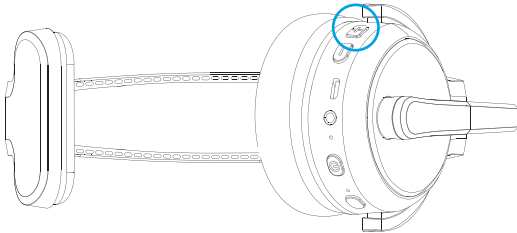

Note: Depending on your device, the volume buttons may behave differently. On some devices the ClearDryve™ volume buttons may control the device volume instead of ClearDryve® volume.

Streaming Music

Quick Access

Play/Pause	Press the MFB
Adjust volume	Press Vol + or Vol -
Next/Previous	Long-press Vol + or Vol -

Play and Pause

To play or pause music press the **MFB** while in Music Mode.

Note: ClearDryve® does not have a “Stop” function.

Go to the Next/Previous Song

To switch to a different song:

1. Long-press **Vol +** to advance to the next song.
2. Long-press **Vol –** to go back to the beginning of the current song. Long-press again to go to the previous song.

Note: Depending on your device, the volume buttons may behave differently. On some devices the ClearDryve® volume buttons control the device volume instead of ClearDryve® volume.

Connect to a Wired Device

You can connect ClearDryve® to any standard 3.5mm audio aux jack.

1. **Connect** the included 3.5mm audio cable to the audio-in jack on ClearDryve®.
2. **Connect** the cable to the headphones or aux-out port on your music device.

Note: You must use the included aux cable to connect your device to ClearDryve®. When using ClearDryve® in wired mode, Bluetooth® functions including volume control on the headphones will not work.

More Functions

EQ Preset

Your ClearDryve allows you to pick from 5 preset equalizer (EQ) settings. This allows you to pick the ideal settings for the specific type of audio you are listening to. When you first turn on power to your ClearDryve, the first equalizer setting (EQ1) is active by default. Pressing the EQ button will advance to the next setting. Keep tapping on the EQ button to toggle through the presets until you find one that delivers the best sound quality.

Add/Remove the Optional Detachable Stereo Earpiece

ClearDryve® can convert from mono (one earpiece plus headpad) to stereo (two earpieces). The detachable headpad can be replaced with the earpiece* for stereo configuration.

 
To remove the earpiece or the headpad:

1. **Hold** the black earpiece release tab.
2. **Slide** the headpad off.

To attach the earpiece or the headpad:

3. **Slide** the earpiece/headpad onto the ClearDryve® head band.
4. The earpiece will **click** when connected.

* Earpiece can be bought separately.

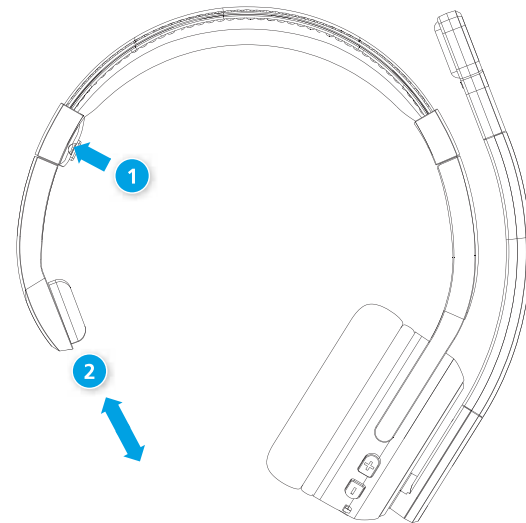

Reset to Factory Settings

You may need to restore ClearDryve® back to its factory state, typically when switching over to newer model smartphones / laptops for daily use. Clearing the “pairing history” on your headphones can help improve connection times between your headphones and new devices.

To reset ClearDryve™:

1. Make sure ClearDryve® is **powered** off. Now press and hold **MFB** to place it in **pairing mode**.
2. Press and hold **Vol -** and **MFB** at the same time until you hear **2 beeps**.

Your ClearDryve®’s pairing history is now cleared and it is in pairing mode. You can turn off the headphones or proceed to pair it with your device(s).

Note: The next time you turn on the device, it will automatically be in pairing mode.

Troubleshooting & FAQ

Question	Answer
Can I connect more than one device to my headset?	Yes, your headset can be simultaneously connected to more than one device. To add new connections after connecting to the first device, turn off the headset, then press and hold the MFB . The headset will enter pairing mode. Follow the steps for your unique device (smartphone, laptop, tablet) to connect to the headset.
Why don't my fully-charged batteries seem to work?	In the rare event that your headset “locks up,” it can be “rebooted” by simply plugging in a micro-USB cable into the charging port of your ClearDryve®. The other end of the cable should be plugged into to a USB power source. ClearDryve® will turn off and start charging. Let it charge for around 15 minutes, unplug and turn it on to resume operation.

Help and Support

Contact Rand McNally customer support for assistance:

- By phone: **1-877-446-4863**
- By email: support@randmcnally.com
- On the web: randmcnally.com/support

Warnings, End-User License Agreement, and Warranty

WARNING: Safe Driving Practices

Never attend to or handle the headphones while driving. Always use your best judgment and exercise common sense when the vehicle is in motion and do not allow yourself to be distracted by the headphones while driving. Pull over in a safe and legal manner before attempting to attend to or handle the headphones.

End-User License Agreement

Rand McNally hereby grants you ("User") a single-user non-exclusive, non-transferable license to use the software and associated data incorporated in the headphones and related documentation (collectively referred to herein as the "Software Materials") for User's own business or personal use and not for resale, sublicense or commercial use. The Software Materials are furnished under license and may be used only in accordance with this license. Except as permitted by such license, the Software Materials may not be disclosed to any third party, copied or duplicated in any form, in whole or in part, without the prior written permission of Rand McNally. The Software Materials contain proprietary and confidential information of Rand McNally and its licensors. Rand McNally grants User a limited license for use of this product and the Software Materials for its normal operation. By using the Software Materials, User acknowledges that such Software Materials are the property of Rand McNally and its licensors and are protected by U.S. copyright, trademark and patent laws and international treaties.

THE USER MAY NOT:

- Use the Software Materials on a network or file server, for time-sharing or to process data for third parties.
- Copy, loan or otherwise transfer or sublicense the Software Materials or any of its content.
- Modify, adapt, decompile, disassemble, reverse engineer or reduce to human readable form the Software Materials for any purpose whatsoever.
- Alter, remove or obscure any copyright notice, trademark notice, or proprietary legend from the product, the Software Materials or its content.

This license will terminate automatically if User fails to comply with any of the terms of this license and, in such case, User agrees to immediately stop using the Software Materials. Rand McNally may revise or update the product or Software Materials, but is not obligated to furnish any revisions or updates to User.

Warranty

Rand McNally warrants that the product and the component parts thereof, will be free of defects in workmanship and materials for a period of one (1) year from the date of purchase. This warranty may be enforced by the first consumer purchaser ("Customer") only, provided that the product is utilized within the U.S.A. or Canada. During the warranty period, Rand McNally will, without charge, repair or replace (with a new or newly reconditioned unit), at its option, a defective product or component part. For repair or replacement of a defective product, Customer must contact Rand McNally at 877-446-4863 for return authorization and instructions. Customer will be required to provide proof of date of first Customer purchase, such as a duplicate copy of the original sales receipt, for the warranty to be valid. The Customer must pay any initial shipping charges required to ship the product for warranty service, but if the product is under warranty, the return charges will be at Rand McNally's expense. Repairs or replacements have a 90-day warranty. If the product is still under its original warranty, then the new warranty is 90 days or to the end of the original one (1) year warranty, whichever is longer. This warranty gives the Customer specific rights. Other rights may be available to Customer, which vary from state to state.

Exclusions: This limited warranty does not apply: 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; or 4) if the owner of the product resides outside of the U.S.A. or Canada.

RAND McNALLY AND ITS LICENSORS DO NOT MAKE ANY OTHER WARRANTY OR REPRESENTATION, EITHER EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCT, INCLUDING ANY WARRANTY AS TO MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUALITY, PERFORMANCE, TITLE OR NON- INFRINGEMENT. IN NO EVENT WILL RAND McNALLY OR ITS LICENSORS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to some consumers.

©2022 Rand McNally. All rights reserved. Rand McNally, the Rand McNally globe logo and ClearDryve are trademarks of RM Acquisition, LLC, d/b/a Rand McNally.

Notes:

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes:

[illegible]

FCC Caution:

Part 15.21

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Part 15.105

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This radio is designed for and classified as "General population/uncontrolled Use", the guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

Body and limbs operation; this device was tested for typical body and limbs operations kept 0mm for body worn. To maintain compliance with RF exposure requirements, use accessories that maintain a 0mm for body worn.