

SOUND DOME**PORTABLE WIRELESS
DUAL STEREO SPEAKERS**

QUICK START GUIDE



Please read the manual before using the device.

CHARGING THE SPEAKERS

⚡ Charge the speakers before using them for the first time.

🕒 Plug in the cable to the micro USB port and charge for 1 hour



↑ Connect the charging cable to charging ports

USING AS DUAL STEREO SPEAK


Your speaker will work best if it is within 30ft of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. If the speakers are not paired with a device after 5 minutes, they will turn off automatically. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.



1 Turn on both speakers by flipping the Power Switch to the 'ON' position. Both of the speakers will 'prompt' when they are ready to connect to each other.



2 Wait 3 seconds, the speakers will automatically pair to each other and one speaker will 'prompt' to indicate it is paired with the second speaker.

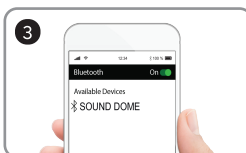


3 From your smart phone or tablet, find a list of nearby devices and choose 'SOUND DOME', enter '0000' if asked. The speaker will 'prompt' again when pairing is completed.

USING SPEAKER INDIVIDUALLY FOR DIFFERENT

The speakers can be paired to different devices. For example, you can use one speaker with a smart phone and the other speaker with a tablet.



1 Turn on one speaker by flipping the Power Switch to the 'ON' position. The first speaker will 'prompt' when it is ready to pair. Leave the second speaker turned off. Pair one device at a time to your multiple devices.

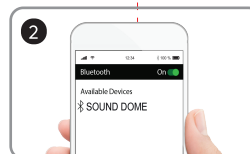

2 From your smart phone or tablet, find a list of nearby devices and choose 'SOUND DOME', enter '0000' if asked. The speaker will 'prompt' again when pairing is completed.



3 To pair the second speaker, repeat steps 1 and 2 with your second device. Ensure that you are far enough away from the first speaker and device to avoid a signal error.

WARNING

Keep away from water and moisture. Keep away from heat sources. Do not disassemble.

CONNECTION LOST?

- If pairing two speakers does not work, turn off the speakers and repeat the steps again 'Using speakers as a pair'.
- Make sure your speakers are within range of your smart device.
- If you hear a long prompt, you need to recharge your speakers. Connection may be lost due to low battery.
- When charging your speakers, only use the enclosed USB cable.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE 2: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.