

Avoid Hearing Damage

To prevent possible hearing damage, do not use the SWITCH at high volume for a long period of time and always lower the volume level of the device you connect to the SWITCH Audio Input port before connecting.

FCC ID: WZ5-SWITCH

Model : SWITCH and SWITCH RACER.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Modification of this device to receive cellular radio telephone service signals is prohibited under FCC rules and Federal Law.

The complete declaration is available online at: www.racingelectronics.com



www.RacingElectronics.com
1-800-272-7111

SWITCH



- ① Power On/Off Button
- ② Volume or Channel Up/Down Buttons
- ③ Programming Button
- ④ Channel 1 Preset Button
- ⑤ Channel 2 Preset Button
- ⑥ Scanning modes Button
- ⑦ IN (Auxiliary Audio Input), OUT (Earphone Jack)
- ⑧ Channel or Sub Channel Indicator
- ⑨ Channel Number Display
- ⑩ Volume Level Bars
- ⑪ Communication Indicator
- ⑫ Low Battery Indicator
- ⑬ Frequency Display
- ⑭ Preset or Scan Mode Selection Indicator

OPERATION MODES

Channel 1 Preset Listening

- Press **1** to hold on the preset 1 channel.
- Long press **1** to display the preset 1 sub channel info on the display.




Channel 2 Preset Listening

- Press **2** to hold on the preset 2 channel.
- Long press **2** to display the preset 2 sub channel info on the display.




Scanning

- Press **SCAN** to scan between Preset 1 and 2.

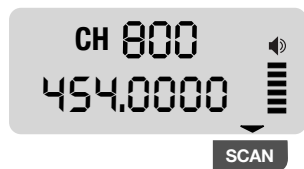

Scanning with Priority

- Hold **SCAN** and then press **1** or **2** at the same time to set the preset 1 or 2 as a priority on the scanning process.
- The preset 1 or 2 selection indicator is blinking when the priority is set.

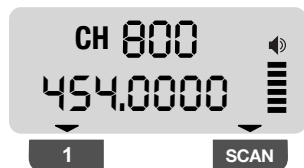

PROGRAMMING STEPS

1 Channel Programming

- Long Press on the Prog **○**.
- The channel number is blinking.



2 Navigate through the Channels

- Scroll up or down with **▲ ▼** to select a channel.
- Long press to skip up by 100.
- Press Prog **○** for sub channel programming or long press on **1** or **2** to save the frequency as a preset 1 or 2.



3 Navigate through the Sub Channels

- Scroll up or down with **▲ ▼** to select a sub channel.
- Long press to skip up by 10.



Note: OFF = Not Considered

4 Save Channel and Exit Programming Mode

- Long Press on **1** or **2** to save the frequency as a Preset 1 or 2.
- Exit programming mode by pressing the Prog **○**.

