

ACCURIAN™



12-362

FM Transmitter



Connect to your iPod

IMPORTANT SAFETY INFORMATION

Connect and operate this product BEFORE operating your vehicle and pay attention to the road. Attempting to drive and scan your set at the same time can cause a serious traffic accident! Drive responsibly.

Step 1: Connect the Transmitter

Plug the FM transmitter into the iPod dock connector and begin playing music, the FM transmitter powers on and displays the last used frequency.

To change the frequency, press ▲ or ▼.

Note: If your FM transmitter does not power on after connecting to the iPod, press ► on your iPod twice.

Step 2: Tune Your Radio

Tune your FM radio to the frequency displayed on the transmitter.

Step 3: Listen to Your Music

To listen to your music, use the volume controls on the radio to adjust the volume.

Note: The volume control on your iPod does not control the sound on the radio.



To charge your iPod, connect the supplied USB cable to the transmitter and to your computer.

Saving Frequencies

1. Press ▲ or ▼ to tune the desired frequency.
2. Press and hold **M** until **M1** flashes.
3. To save a frequency in M2, press ▲ or ▼ to select M2 and hold **M** to store the memory location. Then, tune a frequency and Press and hold **M** until **M2** flashes.

Selecting a Saved Frequency

1. Press **M** once for M1, **M1** and its frequency appear.
2. Press **M** again for M2, **M2** and its frequency appear.

Thank you for purchasing your FM transmitter from **RadioShack**. Please read this user's guide before installing, setting up, or using your new FM transmitter.

What's Included

FM Transmitter

USB Cable

User's Guide

Specifications

Audio input 30-pin connector from iPod
Transmitting freq..... 88.1-107.9 MHz with 0.2 MHz step
Modulation..... FM stereo
Operating range 10 - 30 feet
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

RF Emissions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local **RadioShack** store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Limited 90-Day Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from authorized **RadioShack** dealers. For complete warranty details and exclusions, check with your dealer or contact **RadioShack** directly.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

04/04