

# CONTENTS

Preparation .....	8
Power Sources .....	8
Installing Batteries .....	8
Important Information About the External Power Jacks .....	9
Using Standard AC Power .....	10
Using Vehicle Battery Power .....	11
Charging Nickel-Cadmium Batteries .....	12
Connecting the Antenna .....	13
Connecting an Optional Antenna .....	13
Connecting an Earphone/Headphones .....	14
Listening Safely .....	14
Traffic Safety .....	14
Connecting an Extension Speaker .....	15
Using the Belt Clip .....	15
Understanding Your Scanner .....	16
A Look at the Keypad .....	16
A Look at the Display .....	17
Banks and Memories .....	19
Channel-Storage Banks .....	19
Monitor Memories .....	19
Operation .....	20
Turning On the Scanner and Setting Squelch .....	20
Storing Frequencies .....	20
Searching For and Temporarily Storing	
Active Frequencies .....	21
Limit Search .....	22
Direct Search .....	23
Listening to Monitor Memories .....	24
Moving a Frequency from a Monitor Memory	
to a Channel .....	24
Manually Selecting a Channel .....	25
Special Features .....	26
Using the Keypad .....	26
Locking Out Channels .....	27
Turning Channel-Storage Banks On and Off .....	27
Search Skip Memory .....	27
Priority .....	28
Using the Display Backlight .....	28
Listening to the Weather Band .....	29

FCC ID: AA02000311A

A General Guide to Scanning .....	30
Guide to Frequencies .....	30
National Weather Frequencies .....	30
Canadian Weather Frequencies .....	30
Guide to the Action Bands .....	31
Band Allocation .....	33
Avoiding Image Frequencies .....	37
Frequency Conversion .....	37
Troubleshooting .....	38
Resetting the Scanner .....	39
Care and Maintenance .....	40
Specifications .....	41

*Not Finalized*

*See Attached Page 40*

*This contains the required wording per FCC Part 15.21*

*2 RKA 4/4/99*

## CARE AND MAINTENANCE



Keep the scanner dry. If it gets wet, wipe it dry immediately. Liquids can contain minerals that can corrode the electronic circuits.



Use only batteries of the recommended size and type. Always remove old and weak batteries. They can leak chemicals that destroy electronic circuits.



Handle the scanner gently and carefully. Dropping it can damage circuit boards and cases and can cause the scanner to work improperly.



Use and store the scanner only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the scanner away from dust and dirt, which can cause premature wear of parts.



Wipe the scanner with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the scanner.

Modifying or tampering with the scanner's internal components can cause a malfunction, invalidate your scanner's warranty and void your FCC authorization to operate it. If your scanner is not operating as it should, take it to your local RadioShack store for assistance.