

DRAFT OF BLISTER CARD OF 21-1849

March 13, 2002

Prepared By Headline I & C Ltd.,

These radios make keeping in touch fun and easy. Whether playing inside or outdoors, these license-free, 2way radios fit nicely in the palm of your hand. You can talk to your friends in the next room, next door and around the neighborhood. Use them at shopping malls, amusement parks or sports events to stay in touch with family and friends. These cool radios feature "auto-squelch", which means you will not hear anything on the channel unless someone is transmitting nearby on the same channel. The radio automatically switches to sleep mode if not used for six seconds, and wakes up when it receives a transmission or you press any key.

Installing batteries,

Your radio uses three "AAA" batteries for power, For the best performance, we recommend RadioShack alkaline batteries.

Note ; You can also use NI-CD/Ni-MH rechargeable batteries in the radio and recharge them, using a separate battery charger, available at your local RadioShack store.

1. The way to exist the menu, a) when press PTT button b) when press Call button c) when no button touching for 30 seconds d) when go through the end of the menu.
2. Install the batteries, matching the polarity symbols(+ and -) inside.
3. Replace the cover

The radio's range decreases as the battery power decreases, To ensure maximum range, keep fresh batteries in the radio.

WARNING : Dispose of old batteries promptly and properly. Do not burn or bury them.

CAUTION : Do not mix old and new batteries, different types of batteries(standard, alkaline or rechargeable) or rechargeable batteries of different capacities.

Using the radio

1. To turn on the radio, press power button for 2 seconds
2. Adjust the volume to the desired listening level by pressing up/down button.
3. To enter to the memu mode and select CH, press Mode button once and then press up/down button for the channel you want.
4. To make the melody ON or OFF, press Mode button two times and then press up/down button.
5. To make confirmation tone ON or OFF, press Mode button three times and then press up/down button.
6. To talk, hold down PTT. When the TX/BATT indicator lights, speak in to the microphone.

Note : If Low Battery blinks when PTT is not held down, replace the batteries.

When you finish speaking, release PTT.

Talk confirmation

You can set the radio so a confirmation tone sounds when you release PTT. The tone alerts another person you are talking to that you have finished talking.

The belt clip

To attach the belt clip, slide it down until it locks into place. To remove the belt clip, pull the tab and slide the belt clip up.

Using a wrist strap

You can attach an optional wrist strap or pager chain(neither supplied) to the wrist strap hole

behind OFF.

Auto power save

Your radio saves battery life by reducing the power the radio uses until it receives a signal or you press a key. Because the receiving radio might be using power save mode, wait about 5 seconds after pressing PTT to allow the receiving radio to come to full power before speaking into the microphone.

FCC information

Important : Do not open your radio to make any internal adjustments. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments made to your radio must be made by a qualified technician using the proper test equipment. To be safe and sure: Never open your radio's case. Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by: Moving your radio away from the receiver. Calling your local RadioShack store for help.

Using your transceiver as described in this manual exposes you to FR energy well below the FCC's recommended limits.

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Care

To enjoy your radio for a long time, keep the radio dry. If it gets wet, wipe it dry immediately. Use and store the radio only in normal temperature environments. Handle the radio gently and carefully. Do not drop it. Keep the radio away from dust and dirt. Wipe the radio with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the radio's internal components can cause a malfunction and might invalidate the radio's warranty and void your FCC authorization to operate it. If your radio is not performing as it should, take it to your local RadioShack store for assistance.

Specifications

Channel 14

Power output 500mW ERP operating temperature - 4 to + 122'f(-20 to +50'c)

Frequency 462.5625 ~ 467.7125MHz. Weight (with batteries) 4.2 oz. (119g)

Battery Life :

Transmit mode		Standby mode	
Alkaline	3 hours(1050mAh)	Alkaline	18 hours(1050mAh)
Ni-Cd	1 hours(300mAh)	Ni- Cd	5 hours(300mAh)
Ni-MH	2 hours(600mAh)	Ni-MH	10 hours(600mAh)

Specifications are typical : individual units might vary. Specifications are subject to change and improvement without notice