

900MHz Rechargeable Wireless Stereo Headphones

33-1196

 
OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !
 If an icon appears at the end of a paragraph, go to the box on the side of that page with the corresponding icon for pertinent information.
 ⚠ — Signifies a **Warning**
 ⚡ — Signifies a **Caution**
 ! — Signifies **Important text**

Thank you for purchasing RadioShack Rechargeable 900MHz Wireless Stereo Headphones. Your headphones use the 900MHz band to deliver high-quality stereo sound to almost anywhere in or around your home. Your headphones use PLL (Phase-Locked Loop) circuitry and have a built-in antenna to give you precise tuning, so you can enjoy your favorite sounds without disturbing others anywhere around your yard or house — up to 150 feet away from your stereo.

CONTENTS

Choosing a Location	2
Using AC Power	2
Installing Batteries	2
Charging Rechargeable Batteries	3
Recycling Ni-Cd Batteries	4
Connecting to an Audio Source	4
Listening Safely	5
Using Your Headphones	5
Troubleshooting	6
The FCC Wants You to Know	6
Care	7
Service and Repair	7
Specifications	7
Parts and Accessories	8

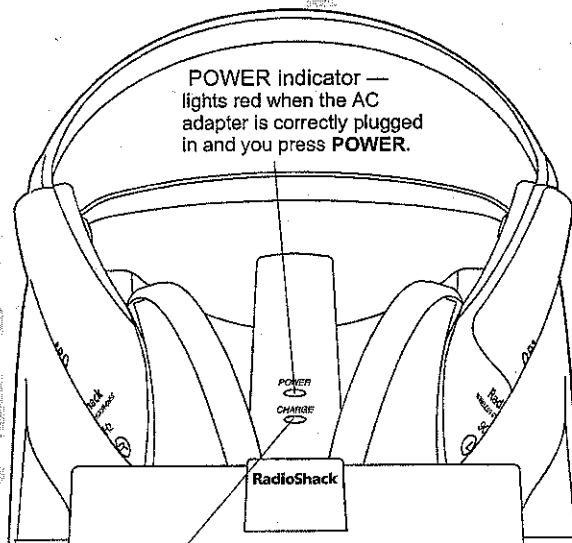

POWER Indicator — lights red when the AC adapter is correctly plugged in and you press **POWER**.

CHARGE Indicator — lights green when the batteries are charging.



RadioShack®

www.radioshack.com™

© 2002 RadioShack Corporation.
 All Rights Reserved.
 RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

CAUTION

- You must use a Class 2 power source that supplies 12 volts DC and delivers at least 250mA. Its center tip must be set to positive and its plug must fit the transmitter's DC IN 12V jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the transmitter or the adapter.
- Always connect the AC adapter to the transmitter before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the transmitter.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the headphones for a week or longer, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

CHOOSING A LOCATION

Many factors affect the range of your system. To achieve the best performance:

- Position the transmitter as far as possible from other electronic devices such as TVs, receivers, or VCRs. Radio interference from these devices could affect your system's performance.
- Position the transmitter away from large metal objects, as these could block your transmitter's signals.
- Try several locations for the transmitter. Select the location that provides the best performance.

Your system's overall performance depends on your home's construction method, the other devices near the system, and other radio frequency sources in your home (such as cordless telephones).

USING AC POWER

 
Use the supplied 12V, 250mA AC adapter to connect the transmitter to AC power.

Plug the supplied AC adapter's barrel plug into the transmitter's DC IN 12V jack, then plug the adapter into a standard AC outlet.

INSTALLING BATTERIES

Your headphones require three AAA alkaline batteries or rechargeable batteries (neither supplied) for power.

1. Remove the battery compartment cover on the left earpiece by pulling the side of the cover and lifting the cover off.

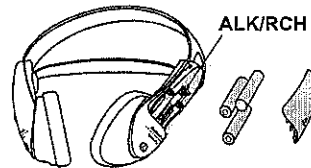

2. *If you are using alkaline batteries*, set ALK/RCH inside the compartment to ALK.

If you are using rechargeable batteries, set ALK/RCH to RCH.

 
3. Place the batteries in the compartment according to the polarity symbols (+ and -) marked in the compartment.
4. Slide the cover back on until it clicks into place.

If the headphones' range decreases, you do not hear sound from the audio source, or the headphones' POWER/BATT LOW indicator is blinking, replace the alkaline batteries or recharge the rechargeable batteries. ⚠

CHARGING RECHARGEABLE BATTERIES

Your transmitter has a built-in charger to charge rechargeable batteries. When the headphones are not in use, the rechargeable battery can be continuously charged over several days. The batteries can be charged with the transmitter set to on or off.

1. Turn off the headphones and remove the battery compartment cover on the left earpiece. !
2. Select ALK/RCH to RCH.
3. Place the rechargeable batteries in the compartment according to the polarity symbols (+ and -) marked in the compartment.
4. Replace the cover.
5. Lift the charging compartment cover on the back of transmitter to open and pull out the charging cord. ⚠

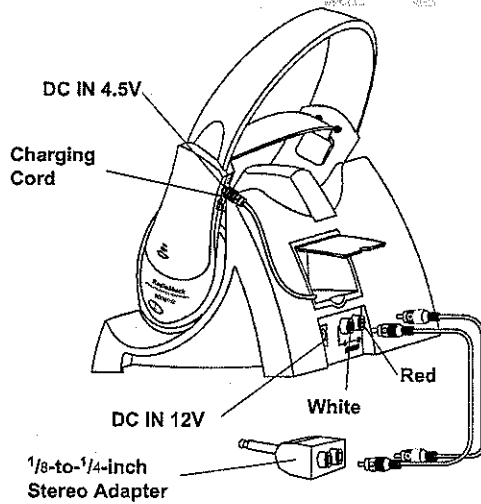

6. Plug the charging barrel plug into the DC IN 4.5V jack on the left earpiece.

⚠ WARNING ⚠

Dispose of old batteries promptly and properly. Do not burn or bury them.

! IMPORTANT !

You can only charge rechargeable batteries. Do not attempt to charge alkaline batteries.

Charging Rechargeable Batteries

⚠ CAUTION ⚠

The charging compartment cover on the transmitter is hinged. Do not attempt to remove it.