

33-1253

2.4GHz Wireless Headphones

Thank you for purchasing your 2.4GHz Wireless Headphones from RadioShack. Your headphones let you comfortably enjoy your music with greater mobility than wired headphones.



what's included

2.4GHz Wireless Headphones 1-to-2 Charging Hub User's Guide Universal Dongle AC adapter


Please read this user's guide before installing, setting up and using your new product www.radioshack.com

©2005 RadioShack Corporation. All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

AO0256AAA1 33-1253 12A05 Printed in China

charging the headphones and dongle

Your headphones and dongle are each powered by a built-in NiMH rechargeable battery, which you can charge with the supplied 1-to-2 charging hub.

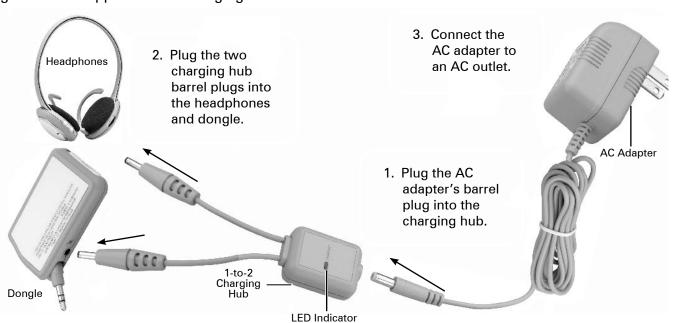

NOTES


- The LED on the charging hub lights amber during charging and changes to green when the headphones and dongle are fully charged.
- To optimize rechargeable battery life, discharge all power in the batteries before recharging your headphones and dongle.

using the headphones

1. Connect the dongle to the audio output jack of an audio source, and slide the dongle power switch forward. The green LED will light.



 Place the headphone ear hooks over your ears with the connecting band behind your neck.

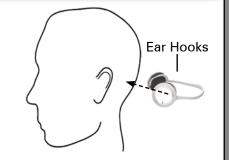

 Play your music, and adjust your headphone volume.



- Keep your headphones within 32 feet (about 10 meters) within sight of the dongle. To avoid interference, use only one set of headphones within the active dongle's operating range.
- If the headphone or dongle LED do not light up when turned on, recharge the batteries.
- · Use only one headphone with one dongle.

2. Slide the headphones power switch

forward. The green LED will light.

listening and traffic safety

To protect your hearing, follow these guidelines when you use headphones:

- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting before you begin listening. Then, adjust the volume to a comfortable level. After you set the volume, do not increase it.
- Do not wear headphones while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and is illegal in some areas.

RF Emissions Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires you to stop using the headphones.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

specifications

Operating Frequency	2.4GHz
Operating Range	up to 32 feet
Headphones Playtime	about 7 hours
Frequency Response (6dB)	
Audio S/Ń	70dB
Audio Resolution	
Audio Sample Rate	44.1KHz
Charging Time(dongle and headphone) 4 hours	

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations 300 RadioShack Circle, Fort Worth, TX 76102

04/04

3-1253.120105.indd 1 12/02/2005 9:57:45 AM